





Axelent X-Guard Assembly Guide L22-00-0

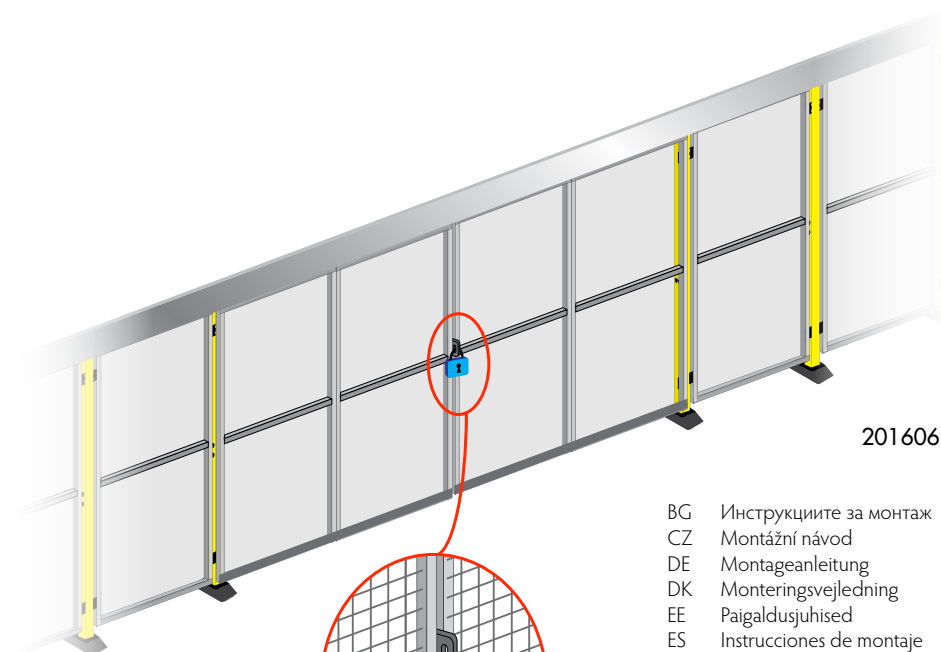

20160616

BG Инструкции за монтаж
CZ Montážní návod
DE Montageanleitung
DK Monteringsvejledning
EE Paigaldusjuhised
ES Instrucciones de montaje
FI Kokoamisohje
FR Les instructions d'assemblage
GB Assembly instructions
GR οδηγίες συναρμολόγησης
HU Összeszerelési utasítások
IE Teoracha cóimeála
IT Istruzioni di montaggio
LT Surinkimo instrukcija
LV Montāžas instrukcijas
MT Assemblagg istruzzjonijiet
NL Montagehandleiding
PL Instrukcja montażu
PT Instruções de montagem
RO Instrucțiunile de asamblare
SE Monteringsanvisning
SI Sestavljanje navodila
SK Montážny návod

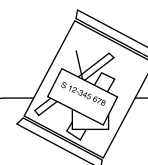

L22-00-0

x 1



x 2 A



x 2 B



x 2 C



Axelent AB
Box 1 · Kävsjövägen 17
SE-330 33 Hillerstorp
Axelent Direct. 0370-37 37 37
Fax. 0370-37 37 47
E-mail. sales@axelent.se
Internet. www.axelent.se

