





Axelent X-Guard Assembly Guide L22-00-0

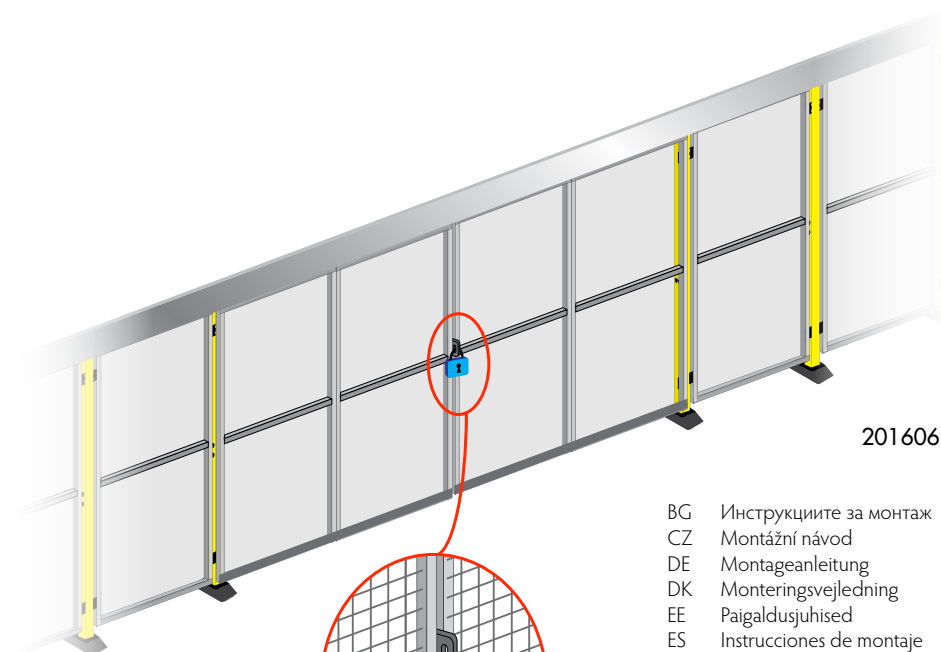

20160616

BG Инструкции за монтаж
 CZ Montážní návod
 DE Montageanleitung
 DK Monteringsvejledning
 EE Paigaldusjuhised
 ES Instrucciones de montaje
 FI Kokoamisohje
 FR Les instructions d'assemblage
 GB Assembly instructions
 GR οδηγίες συναρμολόγησης
 HU Összeszerelési utasítások
 IE Teoracha cóimeála
 IT Istruzioni di montaggio
 LT Surinkimo instrukcija
 LV Montāžas instrukcijas
 MT Assemblagg istruzzjonijiet
 NL Montagehandleiding
 PL Instrukcja montażu
 PT Instruções de montagem
 RO Instrucțiunile de asamblare
 SE Monteringsanvisning
 SI Sestavljanje navodila
 SK Montážny návod

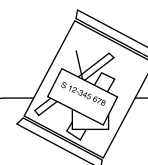

L22-00-0

x 1



x 2 A



x 2 B



x 2 C



Axelent AB
 Box 1 · Kävsjövägen 17
 SE-330 33 Hillerstorp
 Axelent Direct. 0370-37 37 37
 Fax. 0370-37 37 47
 E-mail. sales@axelent.se
 Internet. www.axelent.se

