



Assembly Guide




Axelent X-It



























(X-It for X-Guard's hinge door)

- BG** инструкции за монтаж
- CZ** Montážní návod
- DE** Montageanleitungen
- DK** Monteringsvejledning
- EE** Paigaldusjuhendid
- ES** Instrucciones de montaje
- FI** Kokoamisohje
- FR** Les instructions d'assemblage
- GR** οδηγίες συναρμολόγησης
- HU** Összeszerelési utasítások
- IE** Treoracha cóimeála

                        
 
- IT** Istruzioni di montaggio
- LT** Montavimo instrukcijos
- LV** Montāžas instrukcijas
- MT** Istruzzjonijiet għall-immuntar
- NL** Montage-instructies
- PL** Instrukcje składowania
- PT** Instruções de montagem
- RO** Instrucțiunile de asamblare
- SE** Monteringsanvisningar
- SI** Navodila za montažo
- SK** Návod na montáž

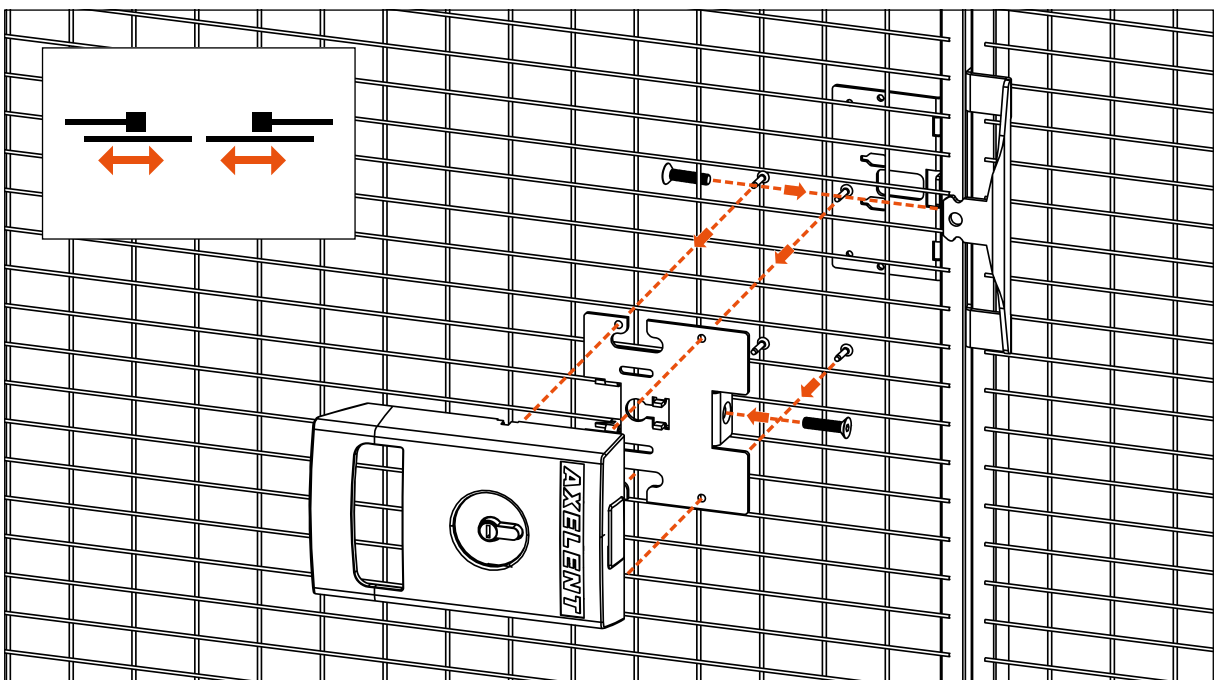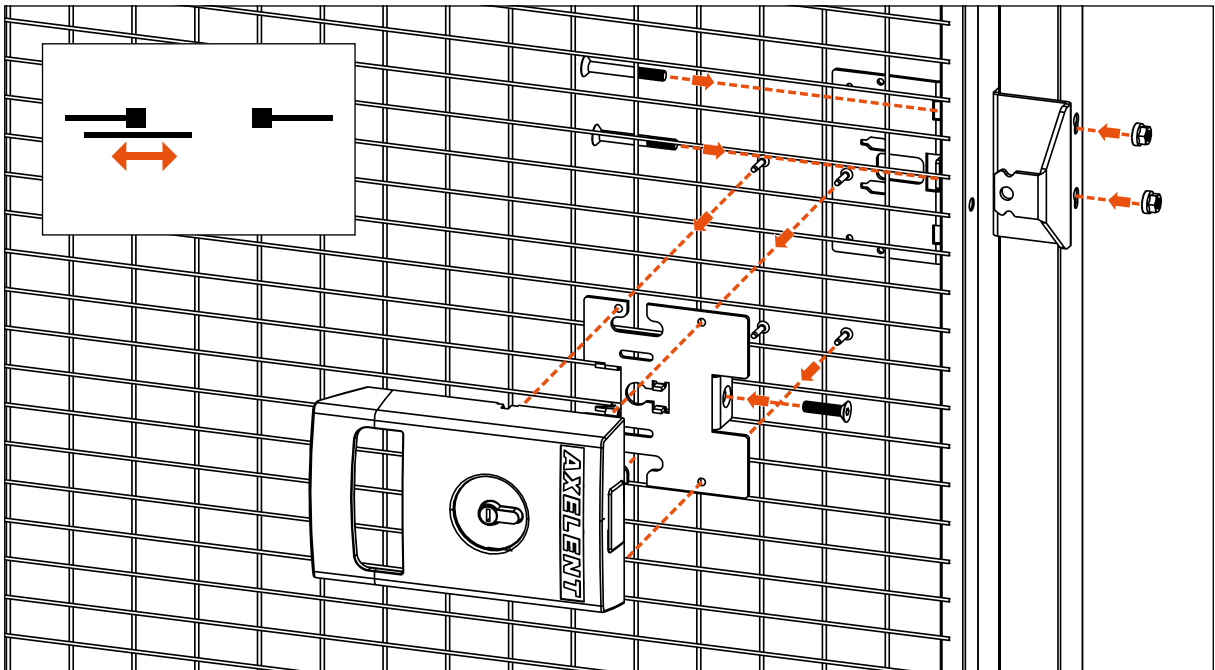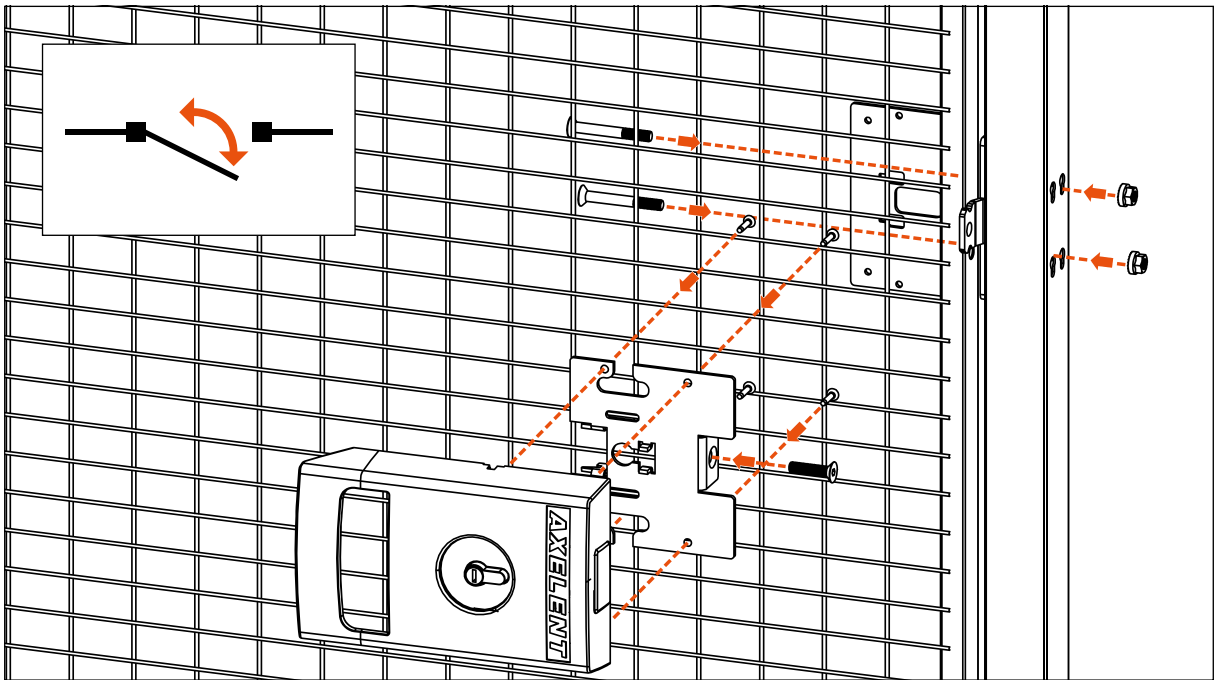

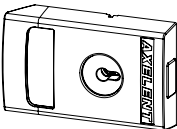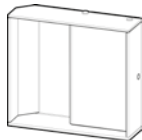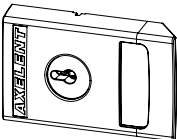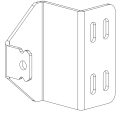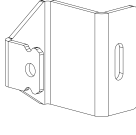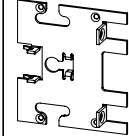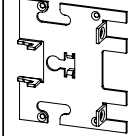
XIT-L01-000 *(-L02-)	 x1	 x1	 x4	 x1	*XIT-002-001 X-Guard  x1			
XIT-R01-000 *(-R02-)	 x1	 x1	 x4	 x1				
XIT-0XX-X01 X-Guard	 x1	 x1	 XIT-000-101	 x1	 XIT-000-301	 x1	 XIT-000-401	x1
XIT-0XX-X02 X-Store	 x1	 x1	 XIT-000-102	 x1	 XIT-000-302	 x1	 XIT-000-402	x1
XIT-0XX-103 F		 x1	 x1	 x1				
XIT-0XX-104 FK		 x1	 x1	 x1				
B00-022	 M8x34 x2	 M8x17 x2						

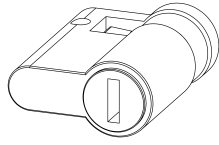      	 x1	T01-26  x1  x2
---	--	---




 
 
1

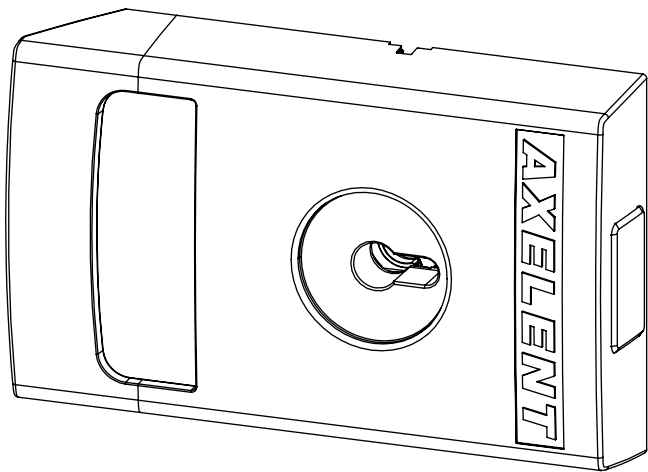


2

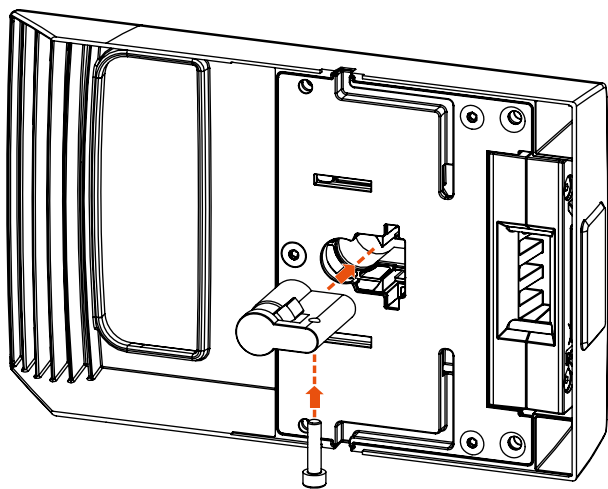 


3

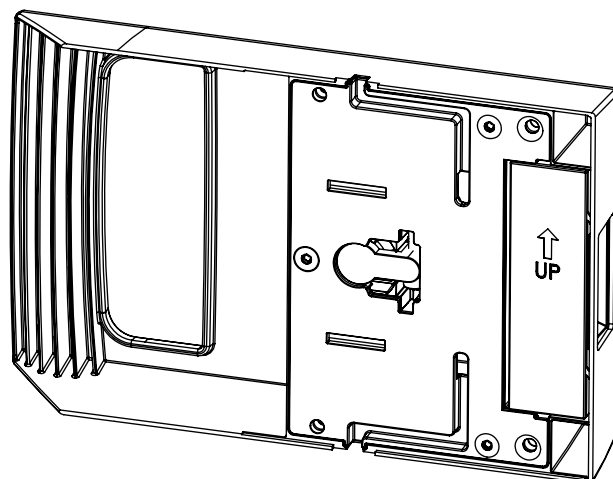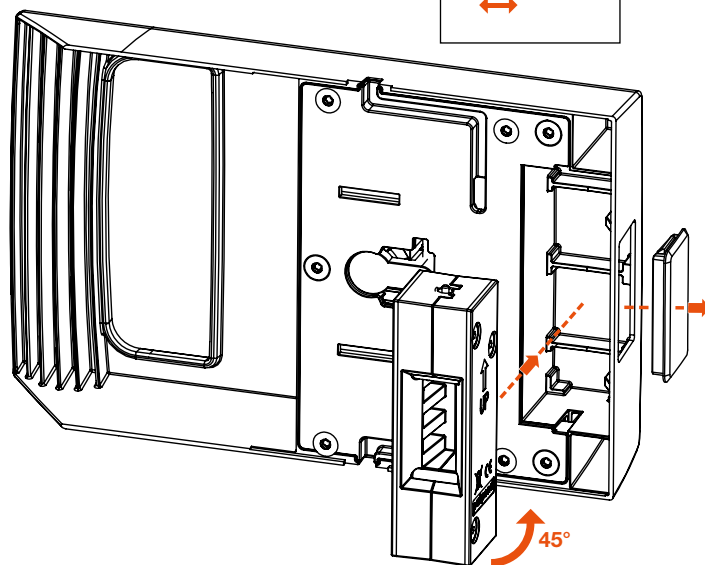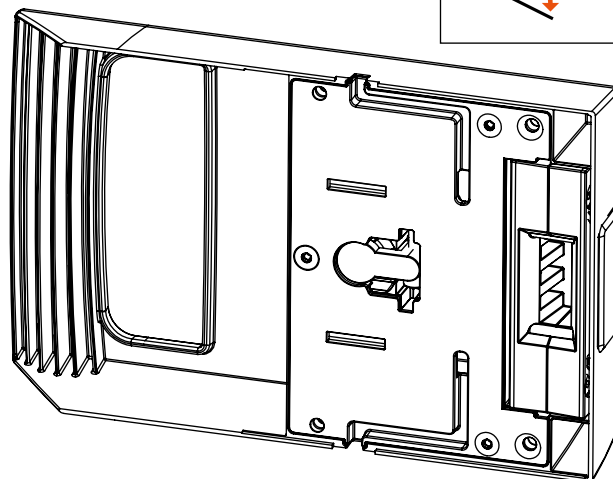     

4

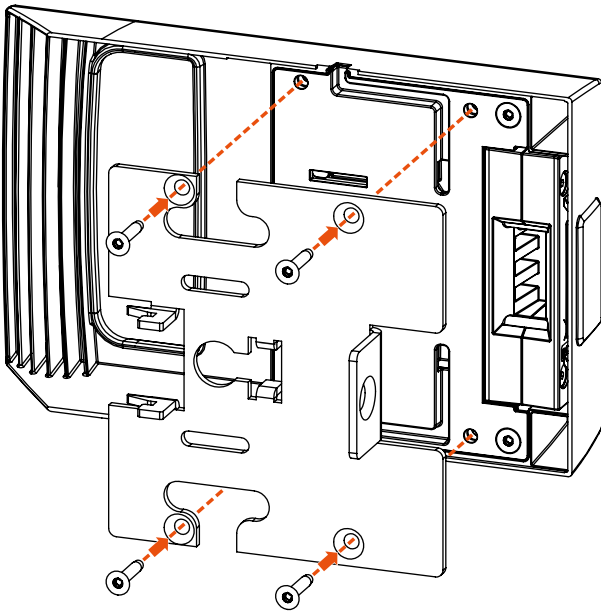 

5

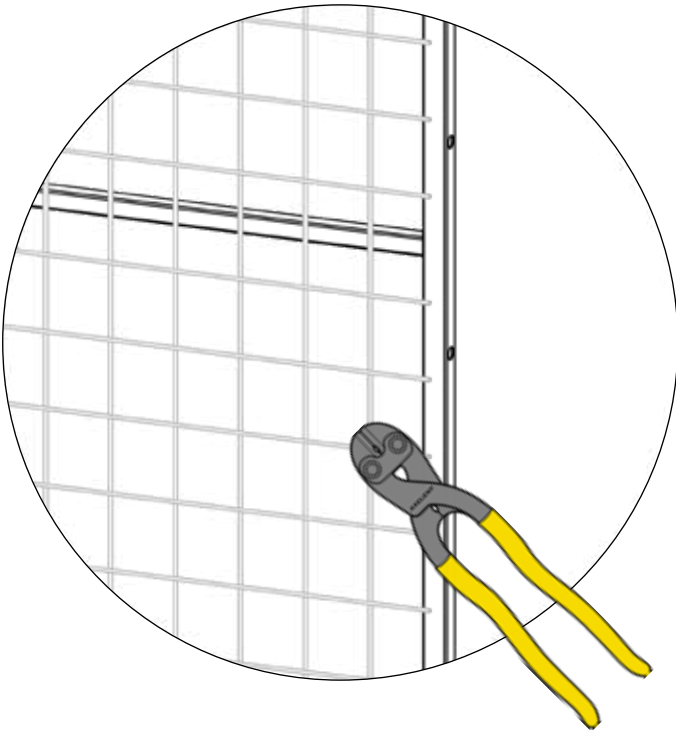 

X-Guard Page 6

 
X-Store Page 7

F/FK Page 9




XIT-002-001 Page 10

X-Guard


1





2

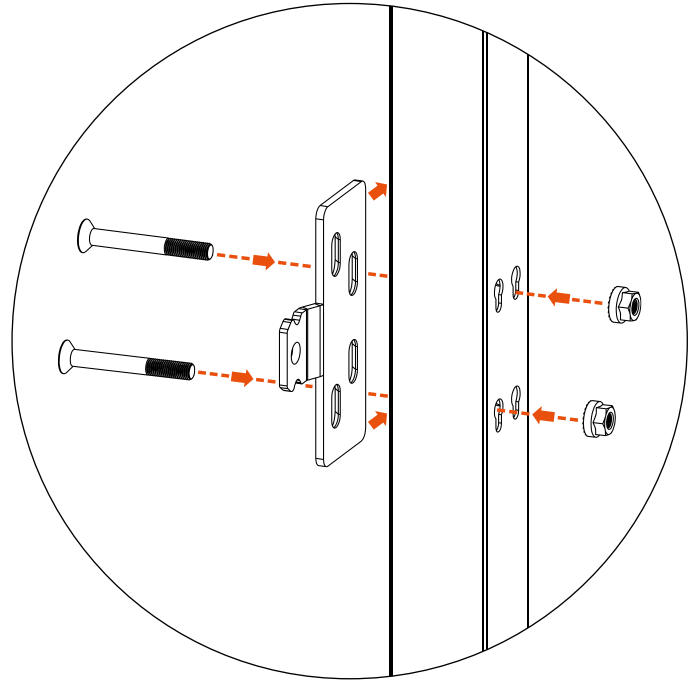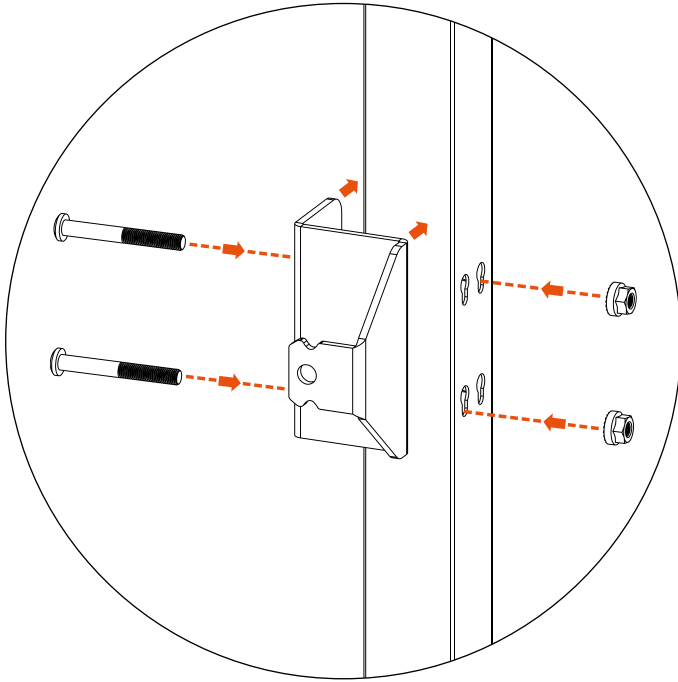   


3

 


4

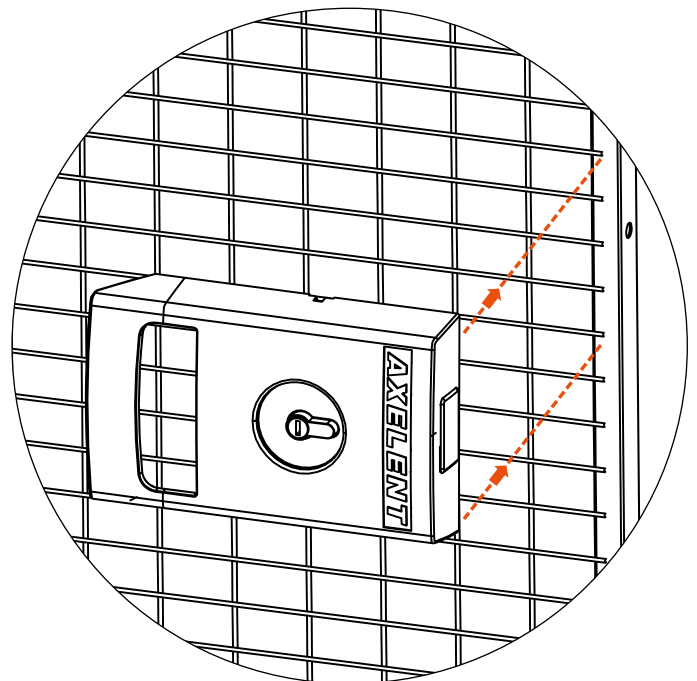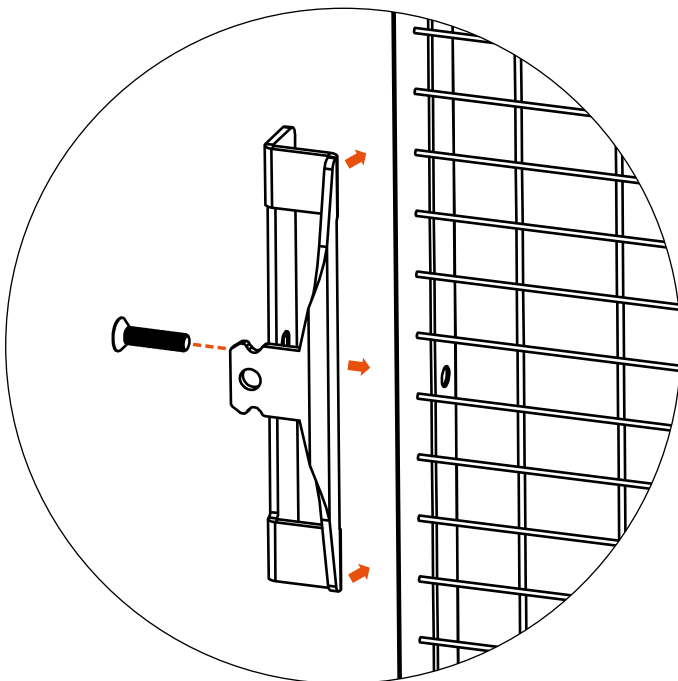  

5

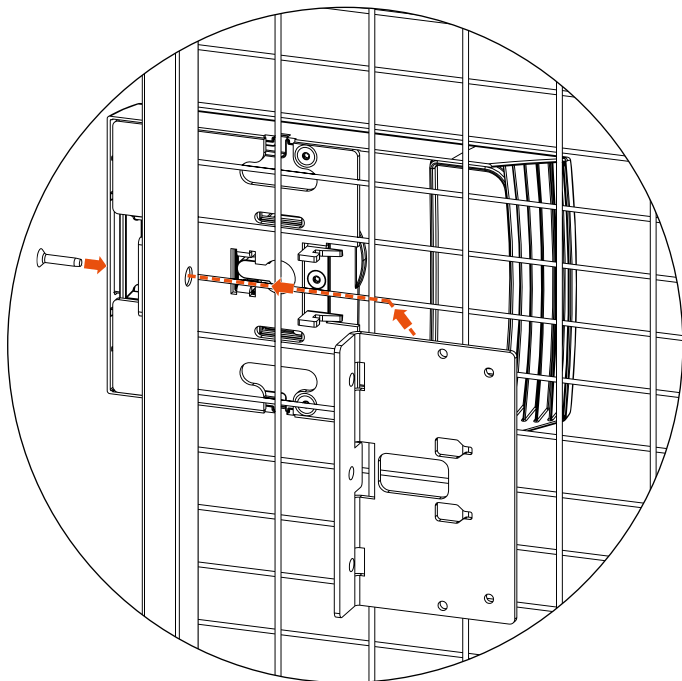 


6



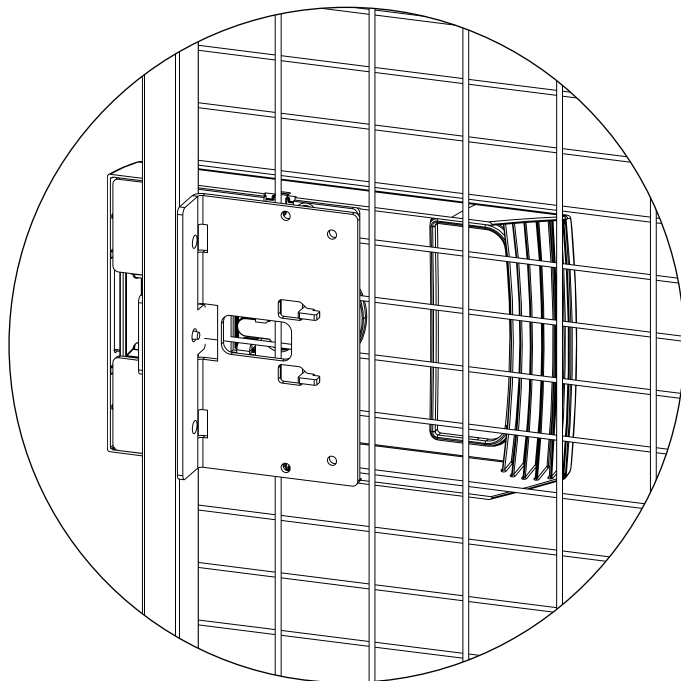 


X-Store


 
1




2

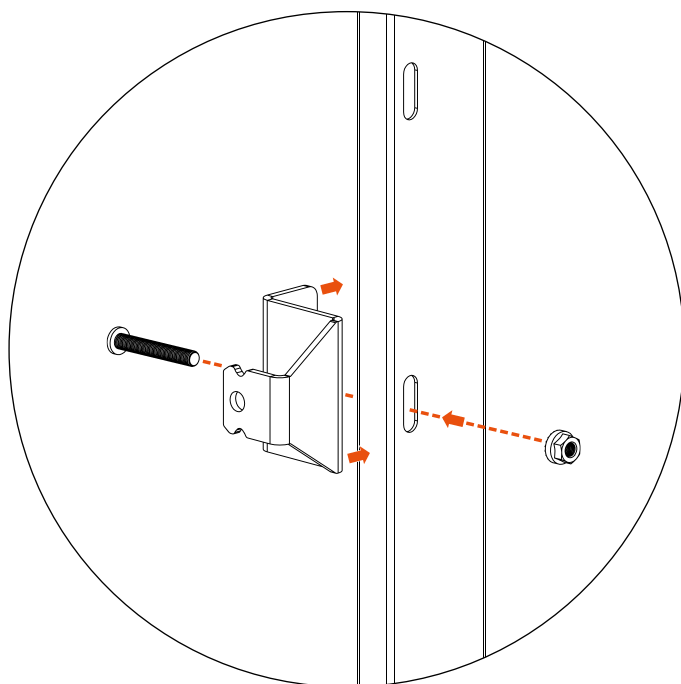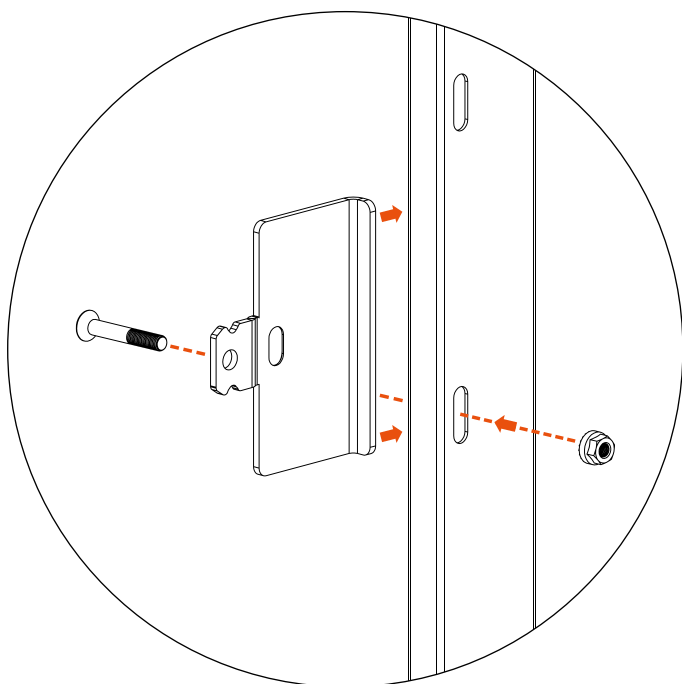   


3

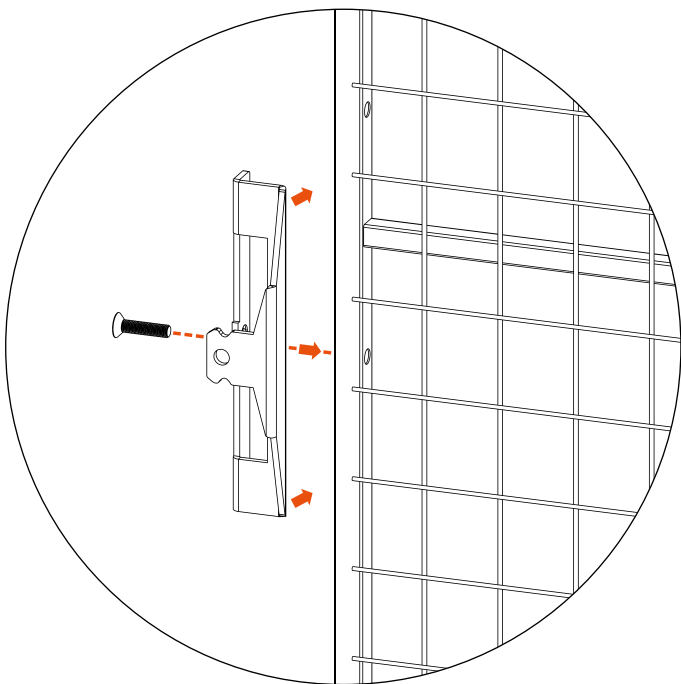  


4

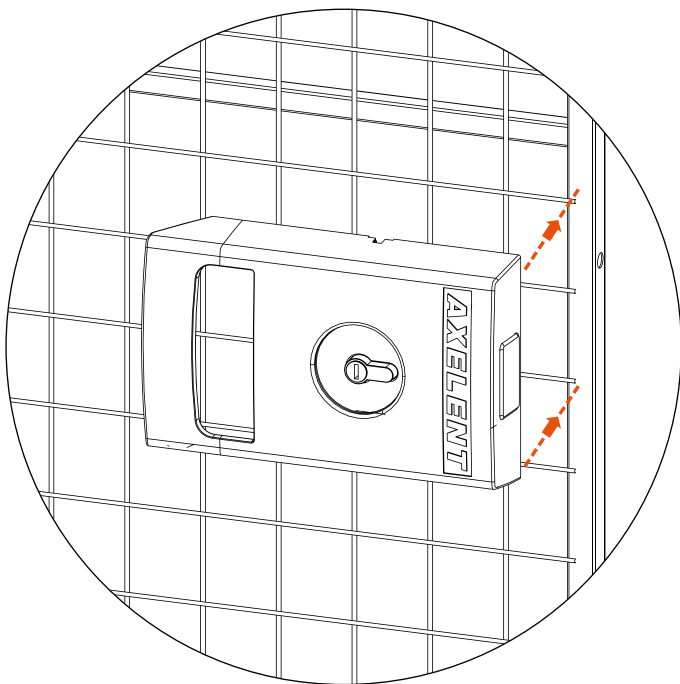 

5

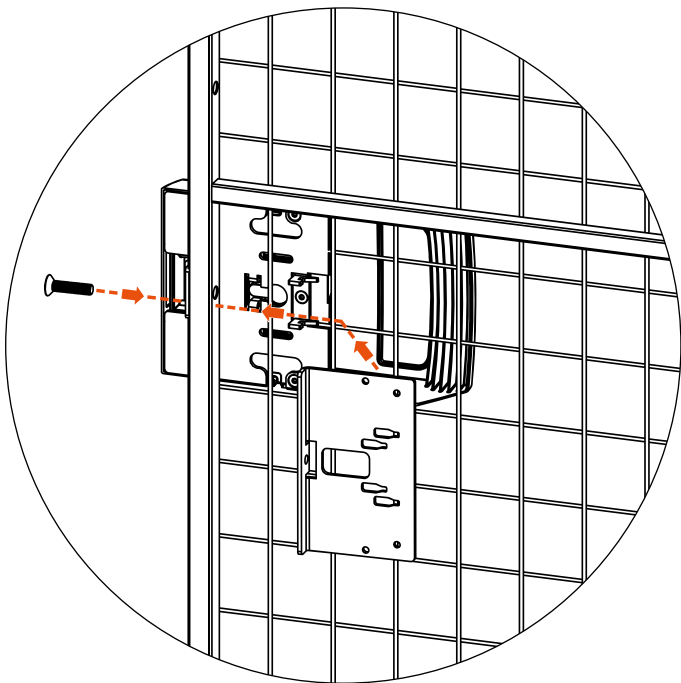 


6

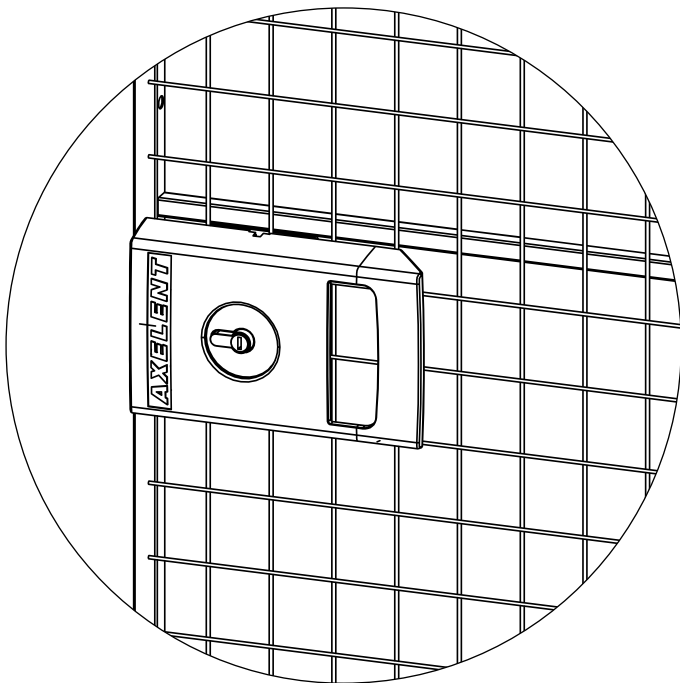 


F/FK

 
1




2

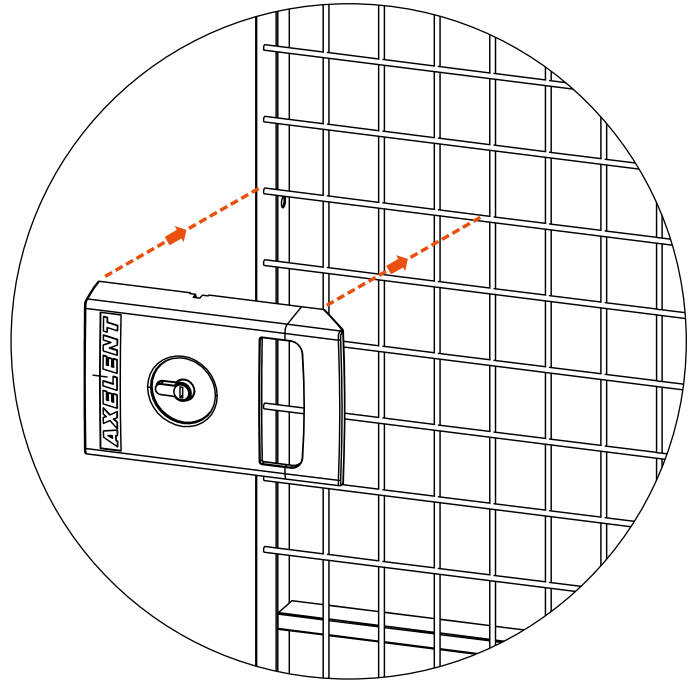 

3

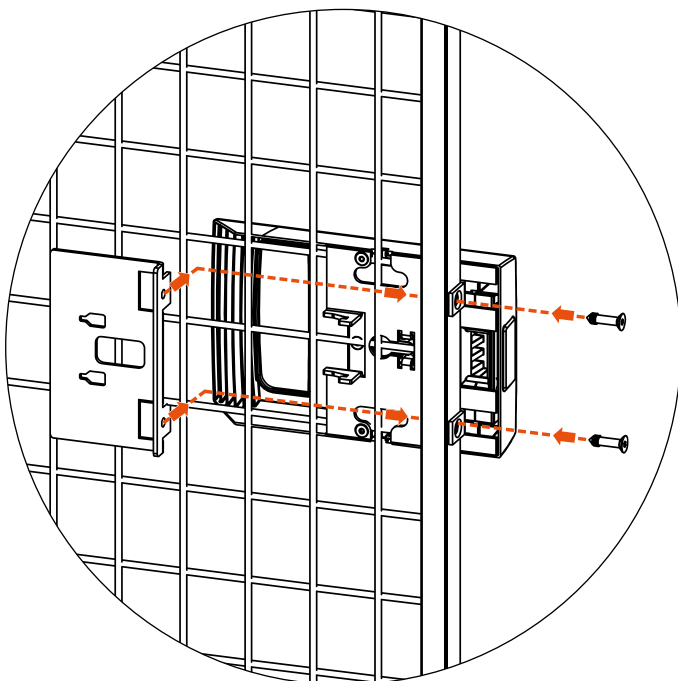 


4

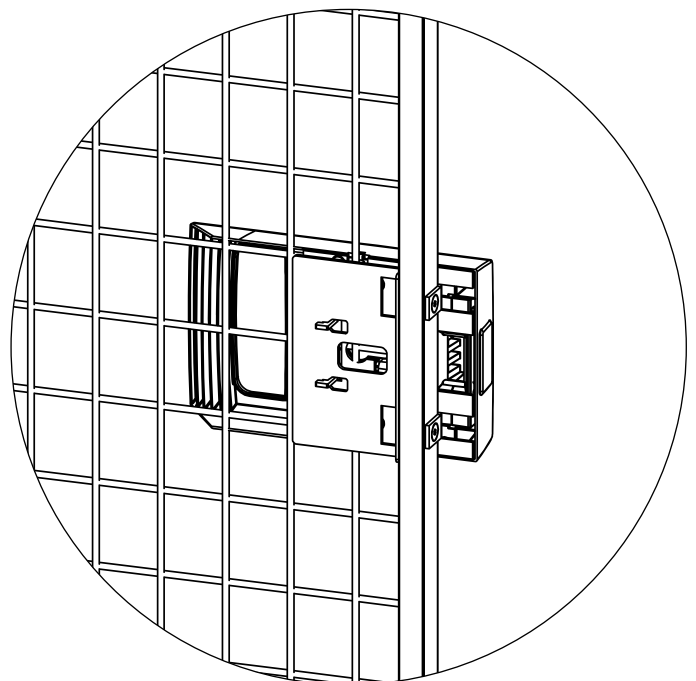 


XIT-002-001

 1

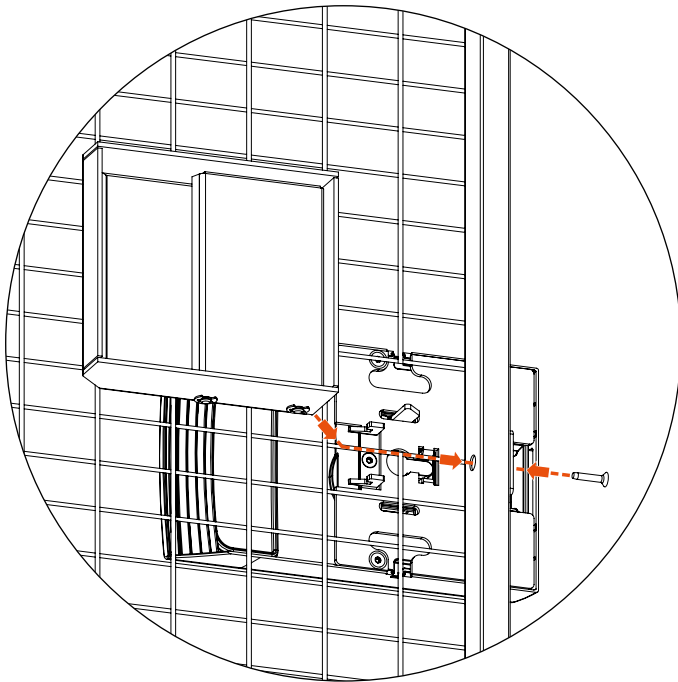

2

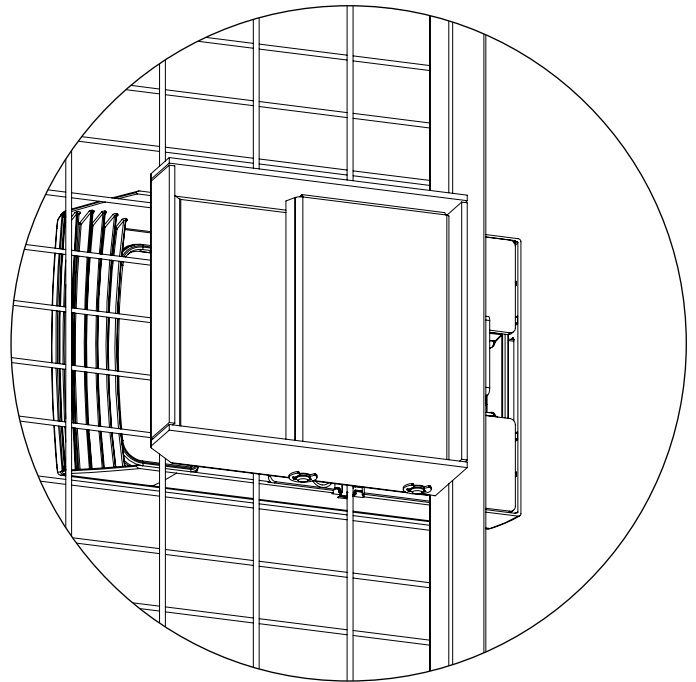 

Welcome to a safe world!

Made in Hillerstorp. Works worldwide

Axelent's head office is in Hillerstorp, Sweden. All product development, production, storage and packaging is carried out here. Our production is high grade automated to manage high volumes and speedy deliveries. Our machines are specially designed to meet our high efficiency, quality and intelligent flow demands. As all our standard products are in stock, we can ship your order the same day as we get it.



AXELEN'T AB · BOX 1 · KÄVSJÖVÄGEN 17 · 335 04 HILLERSTORP, SWEDEN
+46 370 37 37 30 · SALES@AXELEN'T.SE · WWW.AXELEN'T.SE