For Dry Air, Pilot Operated

2 Port Solenoid Valve Series VQ20/30

Compact & lightweight with large flow capacity

	Weight (g)	Effective area (mm²)
VQ20	46	9 (Ne/min 491)
VQ30	80	17.5 (Ne/min 981)



Series VQ30



High frequency operation possible and long operating life

High speed response 7ms or less (VQ20), 20ms or less (VQ30) (Without indicator light and surge voltage suppressor, at 0.5MPa of supply pressure)

Easy piping with built-in One-touch fittings

Dust and jet proof enclosure (IP65) available with DIN connector

Applications: Air-blow, Blow-off of work piece, etc.

^Precautions

Be sure to read before handling. Refer to p.0-33 to 0-36 for Safety Instructions and common precautions.

⚠ Warning

Selection

1. Air quality

This product is for dry air. Drain, oil, etc. in the air may result in faulty operation. Use clean (dry) air.

2. Pressure differential

 
If a restrictor (nozzle, etc.) is mounted on the outlet side, the outlet side pressure differential at the inlet side is smaller. Be sure the pressure differential when ON does not drop below 0.01 MPa.

Marning


Manual Override

Regardless of electric signals to the solenoid valve, the manual override is used for switching the main valve. (DIN connector only.)

Locking slotted style




 Push the manual override button with a small screw driver until it stops. Turn it in the counter-clockwise direction at 90°, and it is locked. Turn it right to release.



⚠ Caution

Connection and Electrical Circuit

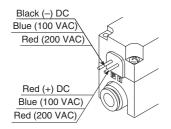

With DC voltage power-saving circuit (with polarity)

Lead wire color DIN connector

Red 1 (+)

Black 2 (-) LED SOL

i1: Inrush current, i2: Holding current

 
DC (with power-saving circuit) specifications is designed to reduce the power consumption at holding to achieve power-saving by circuit shown above.

Refer to below power wave form.


A Caution

Connection and Electrical Circuit


Power wave form of power-saving type (Rated voltage at 24 VDC)



AC circuit

 

△ CautionValve Mounting

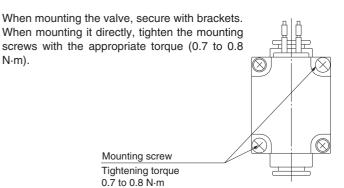

△ Caution

When Energizing Continuously for Long Period of Time

When energizing continuously, choose the option of an energysaving circuit specifications. High speed response type (with no energy-saving circuit) cannot be energized continuously.

How to Wire DIN Terminal

⚠ Caution

ISO#: Based on DIN 43650C (Pin gap 8 mm) Connection

- Loosen the tightening screw and pull the connector off of the solenoid valve.
- After removing the tightening screw, divide the terminal block and housing by prying open the slot area of the lower part of the terminal block open with a screwdriver.
- 3. Loosen the terminal screws of the block and insert stripped lead wires in accordance with the wiring diagram. Secure each wire by re-tightening the terminal screw (In the case of terminal 1: (+), 2: (-) DC)
- **4.** Tighten the ground nut to secure the cable wire.

Change of electrical entry

Wire entry can be changed by mounting the housing in either direction (four directions at every 90°) after dividing the terminal block and the housing.

* For the indicator lighted type, be careful not to damage the light with the lead wire of the cable.


Precautions

Insert a connector straight or pull it out straight, using caution it does not be tilted.

Applicable cable

Cord O.D.: ø3.5 to ø7

(Reference) 0.5 mm² 2-core and 3-core wire equivalent to JIS C 3306.

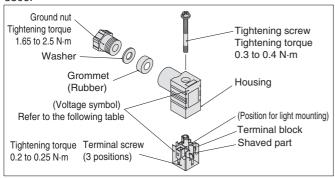

DIN (EN175301-803) Terminal

Without indicator light

This DIN terminal corresponds to the Form C DIN connector with an 8 mm terminal pitch, which complies with EN175301-803B.




SY100-82-4

DIN Terminal Part No. (Based on DIN)

With Indicator Light									
Rated voltage	Voltage symbol	Part no.							
24 VDC	24 V	SY100-82-3-05							
12 VDC	12 V	SY100-82-3-06							
100 VAC	100 V	SY100-82-2-01							
200 VAC	200 V	SY100-82-2-02							
110 VAC	110 V	SY100-82-2-03							
220 VAC	220 V	SY100-82-2-04							

How to Wire DIN Terminal

DIN Terminal Circuit with Indicator Light

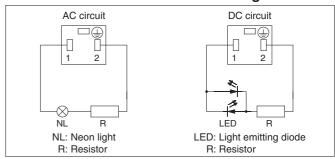

Manifold

How to Mount/Remove from DIN Rail

⚠ Caution


Removing procedure

- Loosen the clamp screw on the "A" side of both ends of the manifold.
- 2. Lift the "A" side of the manifold off the DIN rail and slide it in the direction of the arrow.

Mounting procedure

- Hook the mounting hook on the " B" side of the manifold base to the DIN rail.
- 2. Press down side "A" and mount the end plate on the DIN rail. Tighten the clamp screw on side "B" of the end plate.


(Tightening torque: 0.3 to 0.4 N·m).

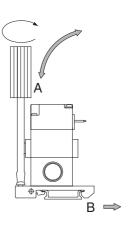

Valve Mounting

A Caution


After confirming the gasket is correctly placed under the valve, tighten the mounting screws with the appropriate torque (0.7 to 0.8 N·m).

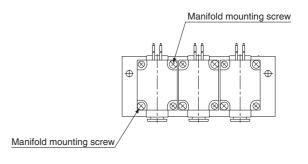

For Dry Air, Pilot Operated


2 Port Solenoid Valve Series VQ20/30 Single Unit


How to Order Valve

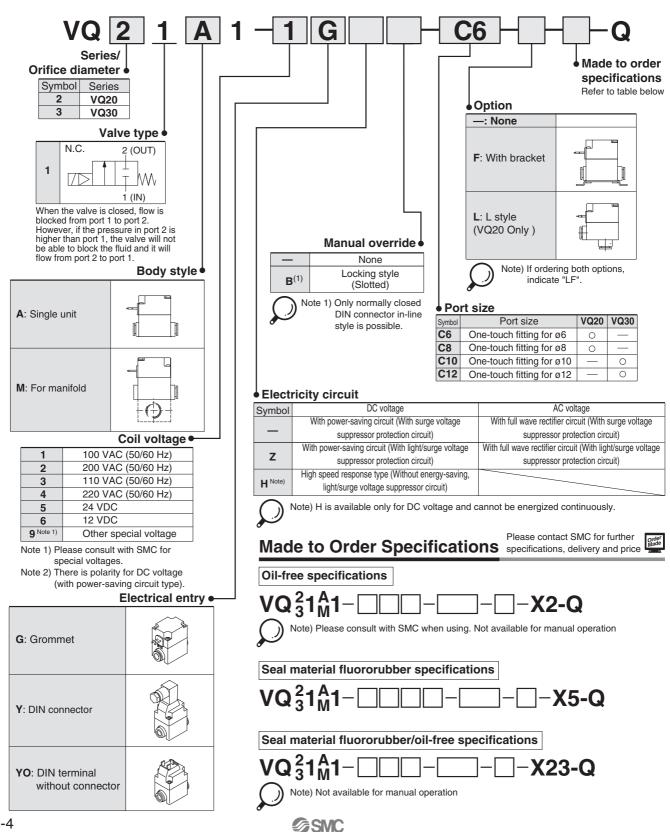

For Dry Air, Pilot Operated 2 Port Solenoid Valve Series VQ20/30

 Standard Specifications

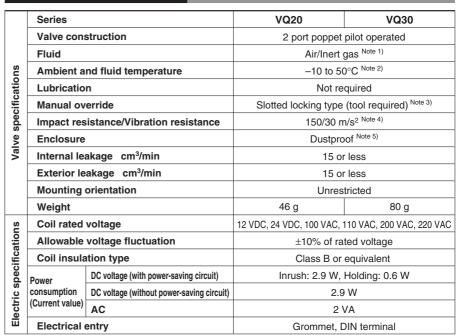




Note 3) Manual override is available only for DIN terminal type.

Note 4) Vibration resistance: No malfunction occurred in a one-sweep test between 8.3 and 2000 Hz. Test was performed at both energized and de-energized states to the axis and right angle directions of the main valve and armature (value at the initial state).

Impact resistance: No malfunction resulted from the impact test using a drop impact tester. The test was performed on the axis and right angle directions of the main valve and armature for both energized and de-energized states (value at the initial state).

Note 5) DIN terminal type: Applicable to dusttight and low jetproof (IP65).

 Symbol



When the valve is closed, flow is blocked from port 1 to port 2. However, if the pressure in port 2 is higher than port 1, the valve will not be able to block the fluid and it will flow from port 2 to port 1.

Characteristic Specifications


Ser	ies	VC	120	VQ30						
	Port size	ø6	ø8	ø10	ø12					
	C [dm3/(s·bar)]	1.4	1.5	2.8	3.0					
characteristics	b	0.23	0.42	0.42	0.37					
	Cv	0.33	0.39	0.80	0.81					
Min. operating pro	essure differential	0.01 MPa Note 3)								
Max. operating pr	essure differential	0.6	MPa	0.5	MPa					
Note 1) Electricity circu		With power-saving circuit	High speed response type	With power-saving circuit	High speed response type					
Response	ON	10 ms or less	7 ms or less	25 ms or less	20 ms or less					
IC	OFF	15 ms or less	5 ms or less	15 ms or less	5 ms or less					

Note 1) JIS B 8375 (value of DC voltage specifications at 0.5 MPa supply pressure) (Value of high response time is subject to change upon pressure, quality of air.)

Note 2) It cannot be used when energized continuously.

Note 3) If a restrictor (nozzle, etc.) is mounted on the outlet side piping, the pressure differential when ON is smaller. Be sure that the pressure differential does not drop below 0.01 MPa. Additionally, take great care when used for the ejector supply, etc.

Construction

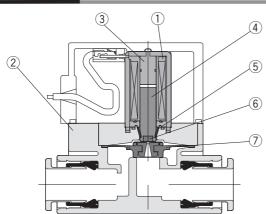

VQ20

VQ30


Component Parts


No.	Description	Material
1	Solenoid coil	
2	Body	Resin
3	Fixed armature	Stainless Steel
4	Armature	Stainless Steel
(5)	Return spring	Stainless Steel
6	Poppet	NBR
7	Diaphragm assembly	H NBR, Resin



Dimensions/Series VQ20

In-line Type/Grommet(G)

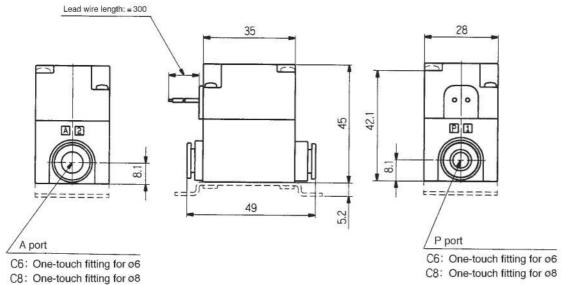


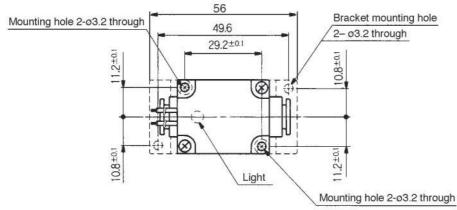

Dimensions/Series VQ20

L Type/Grommet (G)


VQ21A1-□**G**□-**□**-**L**□-**Q**

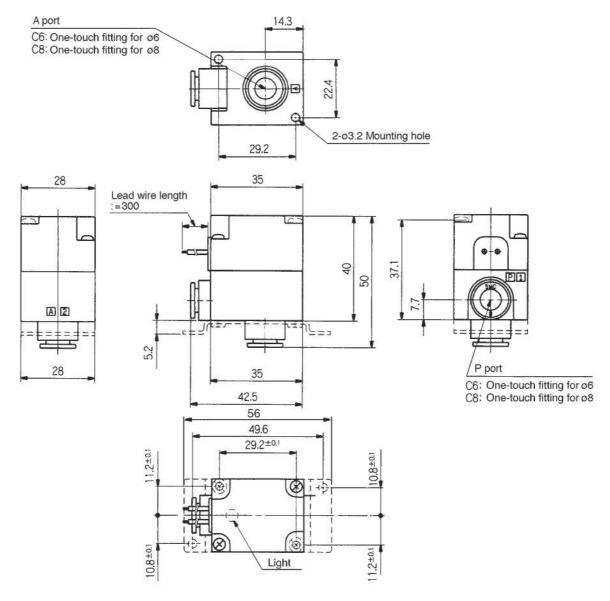

Dimensions/Series VQ20

In-line/DIN connector (Y)


VQ21A1-□**Y**□□- □--Q

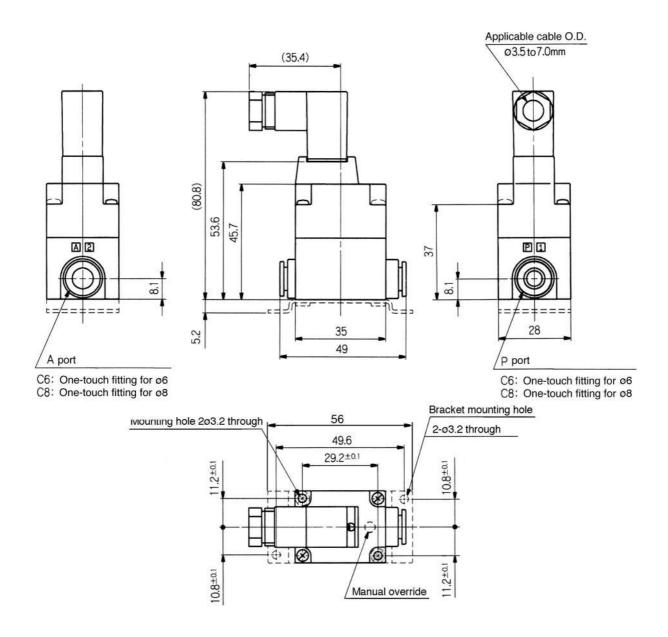

Dimensions/Series VQ30

In-line/Grommet (G)


VQ31A1-□G□-□--Q

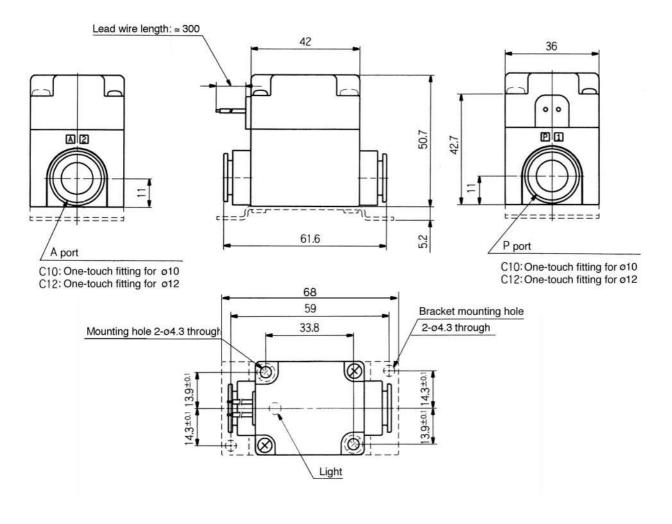


Dimensions/Series VQ30

DIN connector (Y)

VQ31A1-_**Y**__-_-Q

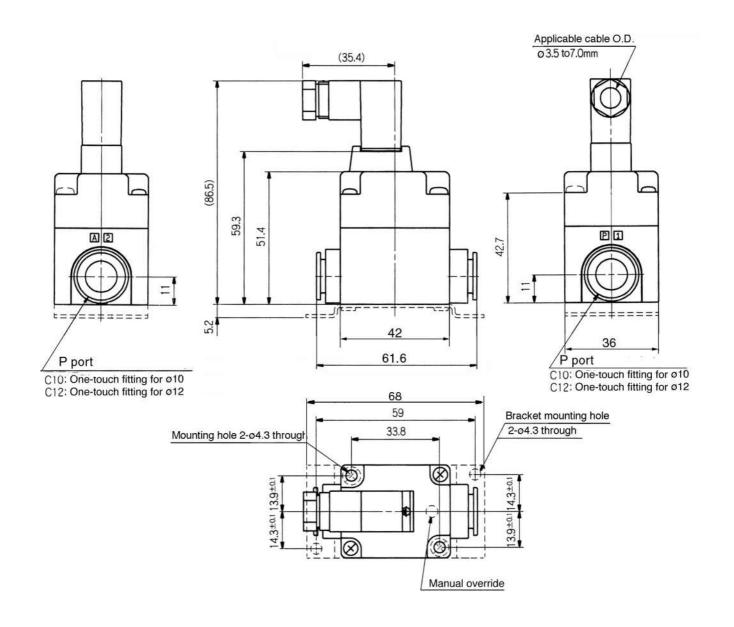


How to Order Manifold

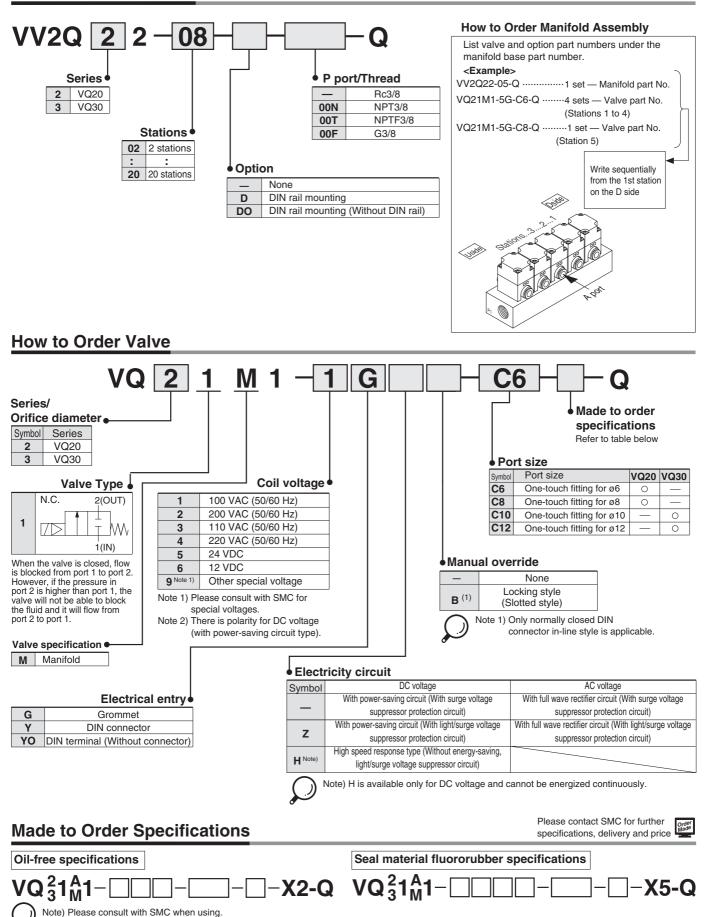

Not available for manual operation

Dimensions

Plug lead unit manifold (VV2Q22-__-Q)

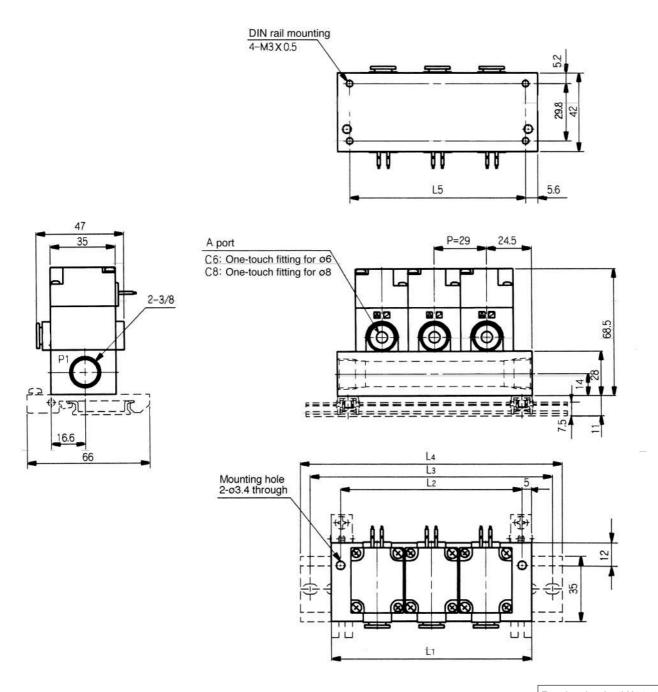




Equation L1= (n-1) X 29+49 L2=L1-10 L3=L4-10.5 L5=L1-11.2

Dime	nsions																		n: St	ation (N	Max.20)
L	n	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20
	L ₁	49	78	107	136	165	194	223	252	281	310	339	368	397	426	455	484	513	542	571	600
	L2	39	68	97	126	155	184	213	242	271	300	329	358	387	416	445	474	503	532	561	590
	Lз	75	100	137.5	162.5	187.5	212.5	250	275	300	337.5	362.5	387.5	425	450	475	500	537.5	562.5	587.5	625
	L4	85.5	110.5	148	173	198	223	260.5	285.5	310.5	348	373	398	435.5	460.5	485.5	510.5	548	573	598	635.5
	L5	37.8	66.8	95.8	124.8	153.8	182.8	211.8	240.8	269.8	298.8	327.8	356.8	385.8	414.8	443.8	472.8	501.8	530.8	559.8	588.8

Dimensions

Plug lead unit manifold (VV2Q32- ___-Q)

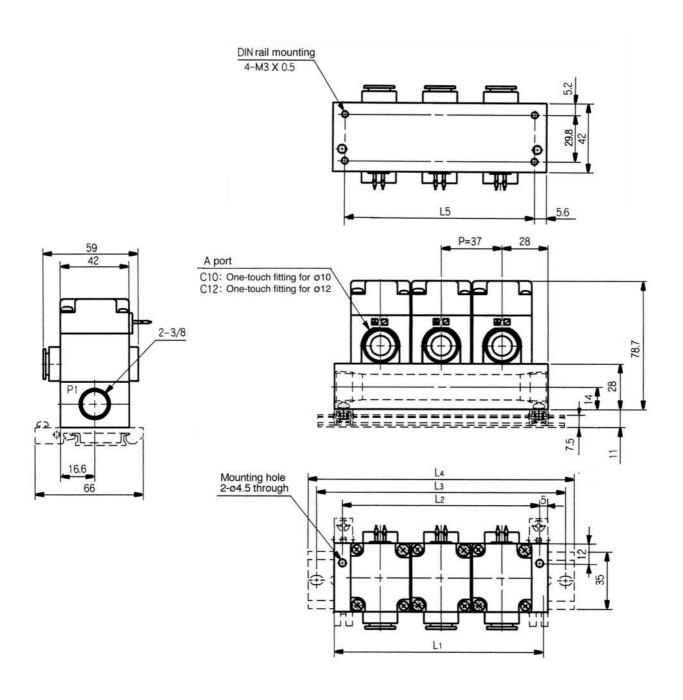




Equation L1= (n-1) X 37+56 L2=L1-10 L3=L4-10.5 L5=L1-11.2

Dimensions																		n: St	ation (N	/lax. 20)
L	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20
L ₁	56	93	130	167	204	241	278	315	352	389	426	463	500	537	574	611	648	685	722	759
L2	46	83	120	157	194	231	268	305	342	379	416	453	490	527	564	601	638	675	712	749
L3	75	112.5	150	187.5	225	261.5	300	337.5	375	412.5	450	487.5	525	562.5	587.5	625	662.5	700	737.5	775
L4	85.5	123	160.5	198	235.5	273	310.5	348	385.5	423	460.5	498	535.5	573	598	635.5	673	710.5	748	785.5
L ₅	44.8	81.8	118.8	155.8	192.8	229.8	266.8	303.8	340.8	377.8	414.8	451.8	488.8	525.8	562.8	599.8	636.8	673.8	710.8	747.8

Single Unit Option

Bracket assembly (with 2 mounting screws)

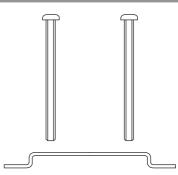

Туре	Bracket assembly	(Mounting screws, 2 pcs.)
VQ20 Grommet in-line type	AXT835-13A	M3 x 45
VQ20 Grommet L type, DIN terminal type	AXT835-13A-2	M3 x 40
DIN terminal L type	AXT835-13A-3	M3 x 35
VQ30	AXT837-13A	M4 x 45

 
Manifold Option

DIN rail AXT100-DR-□

* Suffix the number from DIN rail dimensions table below. Refer to the dimension drawing for each manifold for L dimension.

Each manifold can be mounted on a DIN rail. Order with the option symbol "-D" to specify DIN rail mounting style.

The DIN rail is approximately 30 mm longer than the length of manifold.



L dimension

Series VQ20

Stations	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20
No.	6	8	11	13	15	17	20	22	24	27	29	31	34	36	38	40	43	45	47	50
L	85.5	110.5	148	173	198	223	260.5	285.5	310.5	348	373	398	435.5	460.5	485.5	510.5	548	573	598	635.5


Series VQ30

Stations	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20
No.	6	9	12	15	18	21	24	27	30	33	36	39	42	45	47	50	53	56	59	62
L	85.5	123	160.5	198	235.5	273	310.5	348	385.5	423	460.5	498	535.5	573	598	635.5	673	710.5	748	785.5

DIN rail mounting bracket VVQZ100-DB-5


This bracket is used for mounting the manifold on the DIN rail. DIN rail mounting bracket is attached on the manifold.

 1 set of DIN rail mounting brackets for 1 manifold includes 2 brackets.



Blanking plate assembly (with O-ring and 2 mounting screws)

 Mount a blank plate on valve manifold when a valve is disassembled for maintenance purposes, or when spare valve unit is supposed to be mounted in the future.



Series	Blanking plate assembly	(O-ring)	(Mounting screws, 2 pcs.)
VQ20	AXT835-35A	OR-1679-100-H	M3 x 6
VQ30	AXT837-35A	OR-2400-150-H	M4 x 6