


fittings

FEP Tubing (Fluoropolymer)

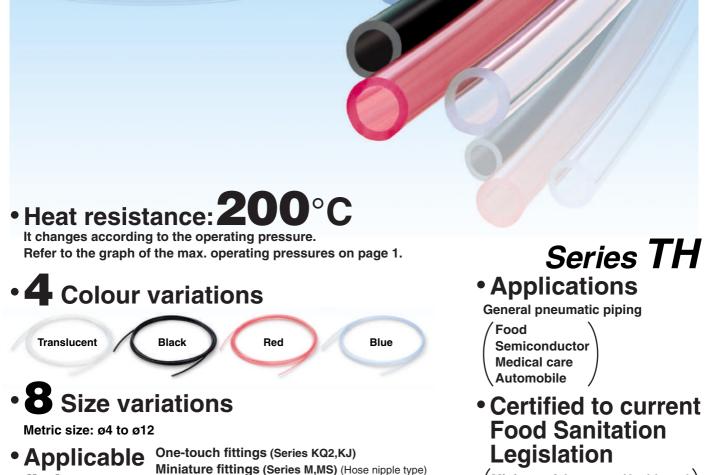

High Purity Fluoropolymer fittings (Series LQ)

Insert fittings (Series KF)

Ministry of Japanese Health and Safety, directive #370,1959

FEP Tubing (Fluoropolymer) **Metric Size** Series TH





Operating Temperature: Max. 200°C

It varies depending on the operating pressure. Refer to the graph for the maximum operating pressure.

Compatible with the Food Sanitation Law

- · Compatible with the test conforming to the Food Sanitation Law based on the 370th notice given by the Ministry of Health and Welfare in 1959.
- Compatible with the §177-1550 dissolution test approved by FDA (Food and Drug Administration).


Flame resistant (Equivalent to UL-94 Standard V-0)

How to measure the minimum bending radius.



At a temperature of 20°C, bend the tubing into a U shape. Fix one end and gradually move the other end closer. Measure 2R at the point where the outside diameter's rate of change is 5%.

Max. Operating Pressure

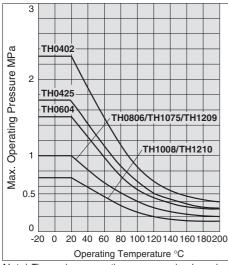

Note) The maximum operating pressure varies dependant on the I.D. bore size even if the O.D. is the same.

Series							●-20 m	roll 🗆-1	00 m rol
		Metric size							
Model		TH0402	TH0425	TH0604	TH0806	TH1075	TH1008	TH1209	TH1210
Tubing O.D. (mm)		4	4	6	8	10	10	12	12
Tubing I.D. (mm)		2	2.5	4	6	7.5	8	9	10
Color	Symbol								
Translucent	N								
Red (Translucent)	R		—	— —	— —	— —	_ _	_ _	_ _
Blue (Translucent)	BU		_ _						
Black (Opaque)	В		_ _						
Inch nominal size Inch nominal size 5/32" 5/16"									
Fluid		Air, Water Note 1), Inert gas							
Applicable Note 2) fittings		One-touch fittings, Insert fittings Fluoropolymer fittings: LQ series Note 3) Miniature fittings: M, MS series (Hose nipple type)							
	20°C	2.3	1.7	1.5	-	1	0.7	1	0.7
Max. operating	100°C	0.85	0.6	0.55	0	.4	0.25	0.4	0.25
pressure (MPa)	200°C	0.4	0.3	0.3	0	.2	0.1	0.2	0.1
Refer to the max. operating pressure curve.									
Min. bending Recording radius	ommended Is	15	20	35	60	95	1(00	130
Tube	e close I radius	10	15	20	40	60	65		110
Operating temperature		Air, Inert gas: -20 to 200°C Water: 0 to 100°C (No freezing)							
Material FEP (Fluorinated Ethylene Propylene Resin)									
Note 1) When using a fluid in liquid form, the surge pressure must not exceed the maximum operating pressure. A surge									

pressure higher than the maximum operating pressure can cause breakage of the fittings, or rupture of the tubina

Furthermore, an abnormal temperature increase due to adiabatic compression can also result in ruptured tubing. Note 2) Do not use in locations where the FEP tubing will move.

Be sure to operate under the maximum operating pressure conditions using the lower maximum operating specification of either the tubing or fittings.

After long term use or under high temperatures, some fittings leakage may occur due to material deterioration with age. Perform periodic inspections, and if any leakage is detected, replace with a new product immediately. When the insert and miniature fittings are used over extended periods of time, it may cause leakage due to the material deterioration of age. In such a case, give an additional tightening to the tube connection part. If leakage still occurs after giving an additional tightening, replace the fitting with a new product. For other precautions, refer to "Fittings & Tubing Precautions" in Best Pneumatics No. 7. When using the fluoropolymer fittings, refer to the precautions on pages 71 and 72. Select the size after confirming O.D. and I.D.

Note 3) TH0402, TH0425, TH1075 and TH1209 are not available because of different internal diameters.

- Note 4) The minimum bending radius is the representative value measured as shown in the left figure.
 - Use a tube above the recommended minimum bending radius.
 - The tubing may be bent if used under the recommended minimum bending radius. Therefore, refer to the tube close bend radius and make sure that the tubing is not bent or flattened.
 - Please note that the tube close bend radius is not warranted because of the value when 2R is measured by the method in the left figure if the tubing is bent or flattened, etc.

How to Order

Metric size TH0604 N - 20							
Indication of tubing model • Color indication • Length per roll							
Symbol N R BU		Color	1	Symbol	Roll size		
			-	20	20 m roll		
		Translucent		100 Note)	100 m roll		
		Red (Translucent)		Note) 100 m roll is available with translucent (color			
		Blue (Translucent)	1				
	В	Black (Opaque)]	indication: N) on			
© SMC				1			

TH Series

Made to Order

(Please contact SMC for specifications in detail, dimensions, delivery and specifications other than those mentioned above.)

Reinforced corrugated cardboard specification longer length reel


ø6, Translucent only: Suffix "-X64" to the end of part number. Ex.) TH0604N-500-X64

Made to Order Availability

Part no.	Length	TH0604N	Color
X64	250 m reel	0	Translucent
A04	500 m reel	0	Translucent

Reinforced corrugated cardboard specification: Longer length reel/-X64

Dimensions

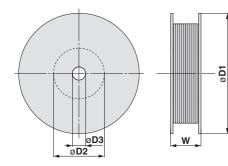

Di	mei	nsid	ons

Model	ØD1	Ø D2	Ø D3	w	Weight (kg)
TH0604N-250-X64	475	200	52	120	9.4
TH0604N-500-X64	475	200	52	220	18.5

Chemical Resistance of the Fluoropolymer FEP Material

Chemicals in this table are inactive against FEP material Note 1), however physical properties may be effected by temperature or pressure change.

Please make sure that operating conditions do not cause problems since the use of FEP tubing under chemical environment is unsecured.

2-nitro-2-methyl propanol 2-nitrobutanol Pentabasic benzamide N-butvlamine N-octadecanol N-butvl acetate O-cresol Di-isobutyl adipate Acetophenone Acetone Alniline Abietic acid Sulphuric chloride Isooctane Liquid ammonia Ethyl alcohol Ethyl ether Ethylene glycol Ethylenediamine Zinc chloride Aluminum chloride Ammonium chloride Calcium chloride Sulphuric chloride Iron chloride (III) Benzoyl chloride Magnesium chloride Hydrochloric acid Chlorine (absolute) Aqua regia Ozone Hydrogen peroxide Natrium peroxide Gasoline Permanganate Formic acid **X**vlene Chromic acid Chlorosulfonic acid Chloroform Paraffinum liquidum Allyl acetate Ethyl acetate Potassium Butyl acetate

Sodium hypochlorite Carbon tetrachloride Dioxane Cvclohexanone Cyclohexane Dimethyl ether Dimethylsulfoxide Dimethylformamide Bromine Deionized water Nitric acid Mercury Ammonium hydroxide Potassium hydroxide Sodium hydroxide Cetane Soap, detergent Dibutyl sebacate **Diethyl carbonate** Tetrachloroethylene Tetrahydrofuran Tetrabromoethane Triethanolamine Trichloroethylene Trichloroacetic acid Toluene Naphtha Naphthalene Naphthol Lead Carbon dioxide Nitrogen dioxide Nitrobenzene Nitromethane Perchloroethylene Perphloroxylene Unsymmetrical dimethylhydrazine Hydrazine Pinene Piperidine Glacial acetic acid (Acetic acid) Pyridine Phenol Phthalic acid Dybutyl phthalate

Dimethyl phthalate Hydrofluoric acid Naphthalene fluoride Nitrobenzene fluoride Furan Hexachlorethane Hexane Ethyl hexanoate Phenylcarbinol Benzaldehyde Benzonitrile Borax Boric acid Formic aldehyde (Formalin) Acrylic anhydride Acetic anhydride Methacrylic acid Allyl methacrylate Vinyl methacrylate Methyl alcohol Methyl ethyl ketone Methylene chloride Sulphuric acid Phosphoric acid Iron phosphate (III) Tri-n-butyl phosphate Tricresyl phosphate

Note 1) "Chemically inert" means - not to cause any chemical reaction.

Note 2) The data above is based on the information presented by the material manufacturers.

Note 3) The applicable fluid list provides reference values as a guide only, therefore we do not guarantee the application to our product.

Note 4) SMC is not responsible for its accuracy and any damage happened because of this data.


Teflon® is a registered trademark for the fluoropolymer produced by E.I du Pond de Nemours & Company (Inc.) and Du Pond-Mitsui Fluorochemicals Co., Ltd.



Reference cited: Teflon®, the fluoropolymer handbook, Manual for the chemical applications of Teflon®. Du Pond-Mitsui Fluorochemicals

Series TH Safety Instructions

These safety instructions are intended to prevent a hazardous situation and/or equipment damage. These instructions indicate the level of potential hazard by a label of **"Caution"**, **"Warning"** or **"Danger"**. To ensure safety, be sure to observe ISO 4414 Note 1), JIS B 8370 Note 2) and other safety practices.

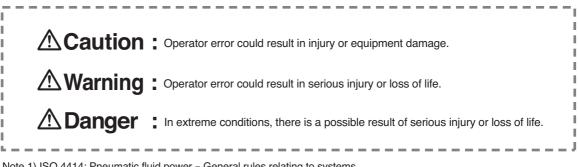

Note 1) ISO 4414: Pneumatic fluid power – General rules relating to systems Note 2) JIS B 8370: Pneumatic system axiom

Marning

1. The compatibility of pneumatic equipment is the responsibility of the person who designs the pneumatic system or decides its specifications.

Since the products specified here are used in various operating conditions, their compatibility with the specific pneumatic system must be based on specifications or after analysis and/or tests to meet your specific requirements. The expected performance and safety assurance will be the responsibility of the person who has determined the compatibility of the system. This person should continuously review the suitability of all items specified, referring to the latest catalogue information with a view to giving due consideration to any possibility of equipment failure when configuring a system.

2. Only trained personnel should operate pneumatically operated machinery and equipment.

Compressed air can be dangerous if handled incorrectly. Assembly, handling or maintenance of pneumatic systems should be performed by trained and experienced operators.

- 3. Do not service machinery/equipment or attempt to remove components until safety is confirmed.
 - 1. Inspection and maintenance of machinery/equipment should only be performed once measures to prevent falling or runaway of the driven object have been confirmed.
 - 2. When equipment is to be removed, confirm the safety process as mentioned above. Cut the supply pressure for this equipment and exhaust all residual compressed air in the system.
 - 3. Before machinery/equipment is restarted, take measures to prevent shooting-out of cylinder piston rod, etc.

4. Contact SMC if the product is to be used in any of the following conditions:

- 1. Conditions and environments beyond the given specifications, or if product is used outdoors.
- 2. Installation on equipment in conjunction with atomic energy, railway, air navigation, vehicles, medical equipment, food and beverages, recreation equipment, emergency stop circuits, clutch and brake circuit in press applications, or safety equipment.
- 3. An application which has the possibility of having negative effects on people, property, or animals, requiring special safety analysis.



Series TH Tubing Precautions

Be sure to read before handling. Refer to page 3 for Safety Instructions.

Selection

AWarning

1. Confirm the specifications.

The products appearing in this catalogue are designed for use only in compressed air systems (including vacuum).

Do not use outside the specified ranges of pressure, temperature, etc., as this may cause damage or malfunction. (Refer to specifications.)

SMC cannot assure the product quality when fluids other than air, water and inert gas are used.

Consult with SMC for details.

2. In case of using the product for medical care

This product is designed for use with compressed air system applications for medical care purposes. Do not use in contact with human bodily fluids, body tissues or transfer applications to a human living body.

ACaution

1. Do not use in locations where the connecting threads and tubing connection will slide or rotate. The connecting theads and tubing connection will come apart under these conditions.

Use rotary type one-touch fittings (Series KS, KX) in cases where sliding or rotation will occur. Only air can be used as the operating fluid, when using rotary type one-touch fittings.

- Use tubing at or above the minimum bending radius. Using below the minimum bending radius can cause breakage or flattening of the tubing.
- Never use the tubing for anything flammable, explosive or toxic such as, gas, fuel gas, or cooling mediums, since the contents can penetrate outward.

Mounting

Caution

- 1. Before mounting confirm the model and size, etc. Also, confirm that there are no blemishes, nicks or cracks in the product.
- 2. When tubing is connected, consider factors such as changes in the tubing length due to pressure, and allow sufficient leeway.
- 3. Mount so that fittings and tubing are not subjected to twisting, pulling or moment loads. This can cause damage to fittings and flattening, bursting or disconnection of tubing, etc.
- 4. Mount so that tubing is not damaged due to tangling and abrasion. This can cause flattening, bursting or disconnection of tubing, etc.

Piping

∆Caution

1. Preparation before piping

Before piping is connected, it should be thoroughly blown out with air (flushing) or washed to remove chips, cutting oil and other debris from inside the pipe. Do not allow chips of the piping thread or the seal material to go in.

Air Supply

A Warning 1. Types of fluid

This product is designed for use with compressed air. Consult SMC if a different fluid is to be used.

Consult SMC regarding products for use with general purpose fluids, to confirm which fluids can be used.

2. When there is a large amount of drainage.

Compressed air containing a large amount of drainage can cause the malfunction of pneumatic equipment. An air dryer or Drain Catch should be installed upstream from filters.

3. Drain management

If air filter drains are not flushed regularly, the drainage will flow downstream leading to the malfunction of pneumatic equipment.

In cases where the management of drain flushing will be difficult, the use of filters with automatic drains is recommended.

For details on the quality of compressed air mentioned above, refer to SMC's "Best Pneumatics" catalogue vol. 4.

Operating Environment

A Warning

- 1. Do not operate in locations in an explosive atmosphere.
- 2. Do not operate in locations where vibration or impact occurs.
- 3. In locations near heat resources, block off radiant heat.

Maintenance

∧Caution

- 1. Check for the following during regular maintenance, and replace components as necessary.
 - a) Scratches, gouges, abrasion, corrosion
 - b) Leakage
 - c) Twisting, flattening or distortion of tubing
 - d) Hardening, deterioration or softness of tubing
- 2. Do not repair or patch the replaced tubing or fittings for reuse.
- 3. When using insert or miniature fittings over a long period, some leakage may occur due to age deterioration of the materials. Perform periodic inspections, and if any leakage is detected, correct the problem by additional tightening. If tightening becomes ineffective, replace the fittings with a new product immediately.



EUROPEAN SUBSIDIARIES:

Austria

SMC Pneumatik GmbH (Austria). Girakstrasse 8, A-2100 Korneuburg Phone: +43 2262-62280, Fax: +43 2262-62285 E-mail: office@smc.at http://www.smc.at



SMC Pneumatics N.V./S.A Niiverheidsstraat 20, B-2160 Wommelgem Phone: 03-355-1464, Fax: 03-355-1466 E-mail: post@smcpneumatics.be



Bulgaria SMC Industrial Automation Bulgaria o.o.d. Vitinia str., bl. 89, entr. V app. 41, BG-1517 Sofia Phone;+359 2 9744492, Fax:+359 2 9744519 E-mail: sales@smc.at http://www.smc.ba



Czech Republic

SMC Industrial Automation CZ s.r.o. Hudcova 78a, CZ-61200 Brno Phone: +420 5 414 24611, Fax: +420 5 412 18034 E-mail: office@smc.cz http://www.smc.cz



Denmark

SMC Pneumatik A/S Knudsminde 4B, DK-8300 Odder Phone: (45)70252900, Fax: (45)70252901 E-mail: smc@smc-pneumatik.dk



Estonia

SMC Pneumatics Estonia OÜ Laki 12-101, 106 21 Tallinn Phone: 06 593540, Fax: 06 593541 http://www.smcpneumatics.ee



SMC Pneumatics Finland OY PL72, Tiistinniityntie 4, SF-02031 ESPOO Phone: 09-859 580, Fax: 09-8595 8595 http://www.smcfitec.sci.fi



SMC Pneumatique, S.A. 1, Boulevard de Strasbourg, Parc Gustave Eiffel Bussy Saint Georges F-77607 Marne La Vallee Cedex 3 Phone: 01-6476 1000, Fax: 01-6476 1010 http://www.smc-france.fr



Boschring 13-15, D-63329 Egelsbach Phone: 06103-4020, Fax: 06103-402139 E-mail: info@smc-pneumatik.de http://www.smc-pneumatik.de



S. Parianopoulus S.A Konstantinoupoleos Street, GR-11855 Athens Phone: 01-3426076, Fax: 01-3455578

Greece



SMC Hungary Ipari Automatizálási Kft. Budafoki ut 107-113, H-1117 Budapest Phone: +36 1 371 1343, Fax: +36 1 371 1344 E-mail: office@smc-automation.hu http://www.smc-automation.hu



Ireland SMC Pneumatics (Ireland) Ltd. 2002 Citywest Business Campus, Naas Road, Saggart, Co. Dublin Phone: 01-403 9000, Fax: 01-464-0500



Phone: 02-92711, Fax: 02-9271365 E-mail: mailbox@smcitalia.it



SMC Pneumatics Latvia SIA Smerla 1-705, Riga LV-1006, Latvia Phone: 0777-94-74, Fax: 0777-94-75 http://www.smclv.lv

Lithuania

UAB Ottensten Lietuva Savanoriu pr. 180, LT-2600 Vilnius, Lithuania Phone/Fax: 370-2651602



SMC Pneumatics BV De Ruyterkade 120, NL-1011 AB Amsterdam Phone: 020-5318888, Fax: 020-5318880 E-mail: info@smcpneumatics.nl



SMC Pneumatics Norway A/S Vollsveien 13 C, Granfos Næringspark N-1366 Lysaker Tel: (47) 67 12 90 20, Fax: (47) 67 12 90 21 http://www.smc-norge.no



SMC Industrial Automation Polska Sp.z.o.o. ul. Konstruktorska 11A, PL-02-673 Warszawa, Phone: +48 22 548 5085, Fax: +48 22 548 5087 E-mail: office@smc.pl http://www.smc.pl

Portugal SMC Sucursal Portugal, S.A. Rua de Engº Ferreira Dias 452, 4100-246 Porto Phone: 22-610-89-22, Fax: 22-610-89-36 E-mail: postpt@smc.smces.es



SMC Romania srl Str Frunzei 29. Sector 2. Bucharest Phone: 01-324-2626, Fax: 01-324-2627 E-mail: smccadm@canad.ro http://www.smcromania.ro



SMC Pneumatik LLC. 36/40 Sredny pr. St. Petersburg 199004 Phone.:(812) 118 5445, Fax:(812) 118 5449 E-mail: smcfa@peterlink.ru http://www.smc-pneumatik.ru



Slovakia SMC Priemyselná Automatizáciá, s.r.o. Námestie Martina Benku 10

SK-81107 Bratislava Phone: +421 2 444 56725, Fax: +421 2 444 56028 E-mail: office@smc.sk http://www.smc.sk



Slovenia SMC industrijska Avtomatika d.o.o. Grajski trg 15, SLO-8360 Zuzemberk Phone: +386 738 85240 Fax: +386 738 85249 E-mail: office@smc-ind-avtom.si http://www.smc-ind-avtom.si



Spain SMC España, S.A. Zuazobidea 14 01015 Vitoria Phone: 945-184 100, Fax: 945-184 124 E-mail: post@smc.smces.es



Sweden SMC Pneumatics Sweden AB Ekhagsvägen 29-31, S-141 71 Huddinge Phone: 08-603 07 00, Fax: 08-603 07 10 http://www.smc.nu



Dorfstrasse 7, CH-8484 Weisslingen Phone: 052-396-3131, Fax: 052-396-3191 E-mail: info@smc.ch http://www.smc.ch



Entek Pnömatik San. ve Tic Ltd. Sti. Perpa Tic. Merkezi Kat: 11 No: 1625, TR-80270 Okmeydani Istanbul Phone: 0212-221-1512, Fax: 0212-221-1519 http://www.entek.com.tr



SMC Pneumatics (UK) Ltd Vincent Avenue, Crownhill, Milton Keynes, MK8 0AN Phone: 0800 1382930 Fax: 01908-555064 E-mail: sales@smcpneumatics.co.uk http://www.smcpneumatics.co.uk



OTHER SUBSIDIARIES WORLDWIDE:

ARGENTINA, AUSTRALIA, BOLIVIA, BRASIL, CANADA, CHILE, CHINA, HONG KONG, INDIA, MALAYSIA, MEXICO, NEW ZEALAND, PHILIPPINES, SINGAPORE, SOUTH KOREA, TAIWAN, THAILAND, USA, VENEZUELA

> http://www.smceu.com http://www.smcworld.com

SMC CORPORATION 1-16-4 Shimbashi, Minato-ku, Tokio 105 JAPAN; Phone:03-3502-2740 Fax:03-3508-2480



Italy SMC Italia S.p.A Via Garibaldi 62, I-20061Carugate, (Milano) http://www.smcitalia.it

