2-Colour Display High Precision CE GALIIS **Digital Pressure Switch** RoHS







IP65

Applicable fluid

Air, Non-corrosive gas, Non-flammable gas

Can copy to up to 10 switches simultaneously.

The settings of the master pressure switch (source of copy) can be copied to the slave pressure switches.

Reduction in setting work
 Prevention of mistakes in setting










Easy handling!



Raised rubber switch buttons for easy and comfortable operation

3-step setting

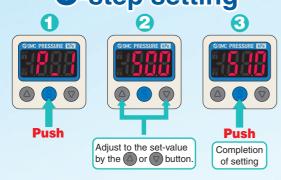

2-colour display

See abnormal values at a glance.










Series ZSE40A(F)/ISE40A




Piping Variations


R1/8, NPT1/8 Rc1/8, G1/8 Rc1/8, G1/8 Rc1/8, G1/8 M5 x 0.8 M5 x 0.8

Space-saving

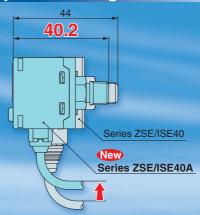


Mounting Variations

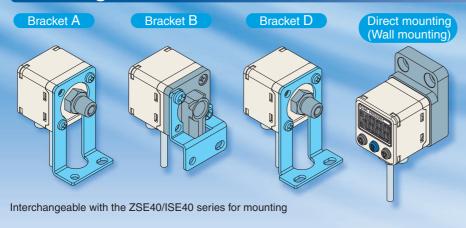

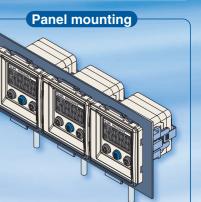

Series

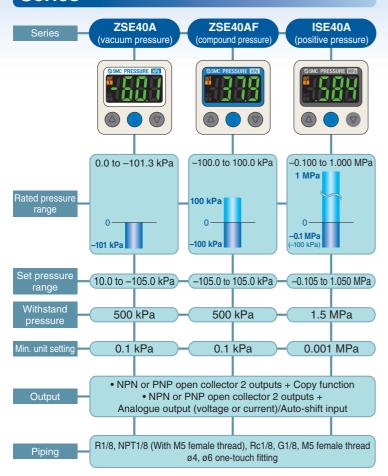

Secret code setting function

A function to prevent operation by anyone other than the designated operator while the keys are locked.



An optional 3-digit value is entered.

* The set-value can be checked while the keys are locked.

Power-saving function······

The display can be turned off to save the power consumption. (Power consumption reduced by max. 20%)



The value disappears and decimal points start flashing.

Resolution conversion function

The flickering on the display can be eliminated.



1/1000 1/100 (Only the displayed value is changed, and there is no effect on the accuracy.)

MPa/kPa switching function·····

The indication unit for vacuum, compound pressure and positive pressure can be integrated into either MPa or kPa.








kPa Stick the label (enclosed with the product) of a desired unit



2-Colour Display High Precision Digital Pressure Switch Series ZSE40A(F)/ISE40A

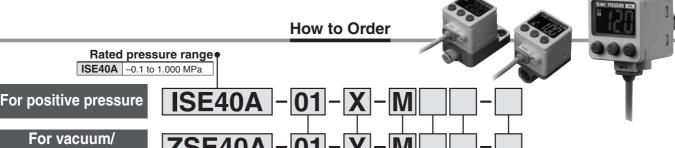

compound pressure

	20240A 1 -10	specifications •
01	R1/8 (With M5 female thread)	R1/8, NPT1/8
N01	NPT1/8 (With M5 female thread)	M5 x 0.8
W1	Rc1/8	Rc1/8, G1/8
WF1 Note)	G1/8	Rc1/8, G1/8
M5 Note)	M5 x 0.8 (Female thread)	M5 x 0.8
C4 Note)	ø4 one-touch fitting	
C6 Note)	ø6 one-touch fitting	ø4, ø6 one-touch fitting

Note) Made to Order Note) The W1 and WF1 include 1 hexagon socket head plug.

Combination of piping specifications with option 1 and part numbers of options

Option 1				Piping					
Description	Description Symbol		01	N01	W1	WF1	M5	C4	C6
Bracket A A		ZS-24-A	0	0	0	0	×	×	×
Bracket B		ZS-24-B	×	×	0	0	×	×	×
Bracket D	D	ZS-24-D	0	0	0	0	×	×	×
Danel mount adenter	Е	ZS-35-C	0	0	×	×	×	×	×
Panel mount adapter	_	ZS-35-D	×	×	0	0	0	0	0
Panel mount adapter +	F	ZS-35-F	0	0	×	×	×	×	×
Front protective cover	Г	ZS-35-G	×	×	0	0	0	0	0

Output sp	ecifications
-----------	--------------

Е

R	NPN open collector 2 outputs + Analogue voltage/Auto-shift switching
Т	PNP open collector 2 outputs + Analogue voltage/Auto-shift switching
S	NPN open collector 2 outputs + Analogue current/Auto-shift switching
٧	PNP open collector 2 outputs + Analogue current/Auto-shift switching
Χ	NPN open collector 2 outputs + Copy function
Υ	PNP open collector 2 outputs + Copy function

When optional parts are required separately,

Options/Part No. use the following part numbers to place an order.				
Option				
Bracket A, With 2 mounting screws each of M3 x 5L and M4 x 5L				
Bracket B, With 2 mounting screws M4 x 5L				
Bracket D, With 2 mounting screws each of M3 x 5L and M4 x 5L				
Panel mount adapter (Piping: For 01/N01)				
Panel mount adapter (Piping: For W1/WF1/M5/C4/C6)				
Panel mount adapter + Front protective cover (Piping: For 01/N01)				
Panel mount adapter + Front protective cover (Piping: For W1/WF1/M5/C4/C6)				

Unit specifications

_	omit opoomounomo -					
_	With unit switching function					
M	Fixed SI unit Note)					
Р	With unit switching function (Initial value psi)					


Note) Fixed unit:

For vacuum/compound pressure: kPa For positive pressure: MPa

-			le to Order
Option 2		Symbol	Specifications/Description
Symbol Calibration certificate		X501	Lead wire length 3 m
Cyllibol	Calibration Certificate		M12 4-pin pre-wired connector
K	-	X531	connector (Lead wire length 100 mm)
			,


Option 1 Note) Refer to page 20 for details.

_	None
A	Bracket A
В	Bracket B
D	Bracket D
	Panel mount adapter 01/N01

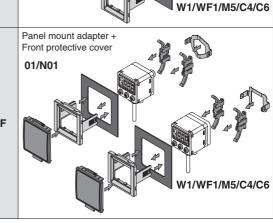

Note) Some options are unavailable depending on the piping specifications. Refer to "Combination of piping specifications with option 1 and part numbers of options".



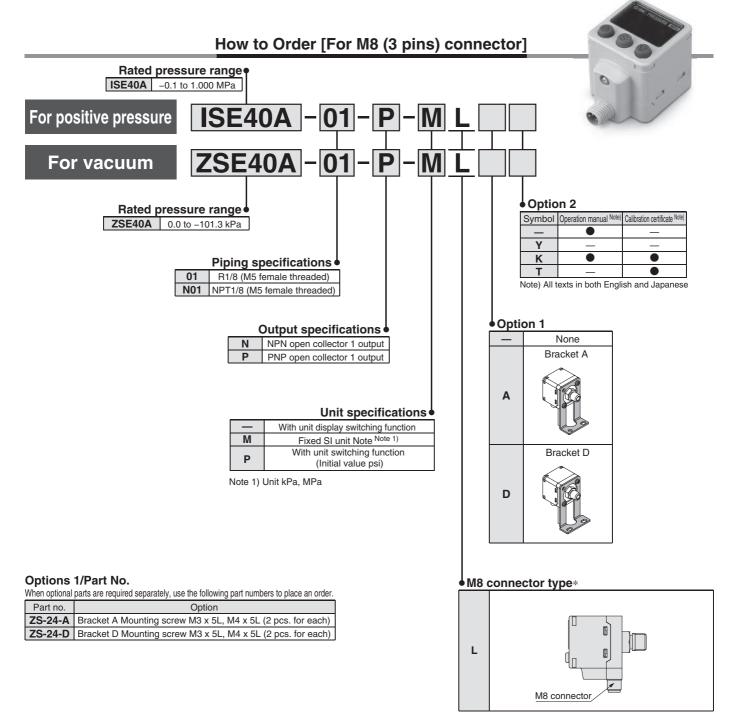

^{*} No lead wires are connected.

Specifications

Model		ZSE40A (vacuum pressure) ZSE40AF (compound pressure) ISE40A (posi					
Rated pressure range		0.0 to -101.3 kPa	-100.0 to 100.0 kPa	-0.100 to 1.000 MPa			
Display/S	Set pressur	e range	10.0 to -105.0 kPa	-105.0 to 105.0 kPa	-0.105 to 1.050 MPa		
Withstand pressure		500 kPa	500 kPa	1.5 MPa			
Display/Minimum unit setting		nit setting	0.1 kPa	0.1 kPa	0.001 MPa		
Applicab	le fluid		Air, N	Ion-corrosive gas, Non-flammabl	e gas		
Power su	upply voltag	ge	12 to 24 VDC ±10%, Ripp	le (p-p) 10% or less (with power	supply polarity protection)		
Current consumption				45 mA or less			
Switch output			NPN or	PNP open collector 1 output or 2	? outputs		
	Maximun	load current		80 mA			
	Maximun	n applied voltage		28 V (at NPN output)			
	Residual	voltage		1 V or less			
	Respons	e time	2.5 ms (with anti-	chattering function: 20, 100, 500	, 1000, 2000 ms)		
	Short cire	cuit protection		Yes			
Repeat accuracy				±0.2% F.S. ±1 digit			
	Hysteres	is mode		Mariable (O av abava) Note 1)			
Hysteresis	Window	comparator mode	Variable (0 or above) Note 1)				
	Note 2	Output voltage	1 to 5 V ±	0.6 to 5 V ±2.5% F.S.			
	Voltage	(Rated pressure range)	±1% F.S.				
	output	Linearity					
Analaa		Output impedance	Approx. 1 kΩ				
Analog output		Output current (Rated pressure range)	4 to 20 mA ±2.5% F.S. 2.4 to 20		2.4 to 20 mA ±2.5% F.S		
	Note 3	Linearity	±1% F.S.				
	output	Load impedance	Maximum load impedance: 300 Ω (Power supply voltage 12 V) 600 Ω (Power supply voltage 24 V)				
			Minimum load	impedance: 50 Ω	,		
Auto-shi	ft input		Non-voltage input (Reed or Solid state), Low level: 0.4 V or less, 5 ms or longer input				
Display			3 1/2-digit, 7-segment, 2-color LCD (Red/Green)				
Display a	accuracy		±2% F.S. ±1 digit (Ambient temperature of 25 ±3°C)				
ndicator	light		Lights up when output is turned ON. OUT1, OUT2: Orange				
	Encl	osure	IP65				
	Oper	ating temperature range Note 4)	Operating: -5 to 50°	C, Stored: -10 to 60°C (No freez	ring or condensation)		
Environr		rating humidity range	Operating/Stored: 35 to 85% RH (No condensation)				
		stand voltage	1000 VAC	for 1 minute between terminals a	and housing		
Insulation resistance			50 M Ω or more (500 VDC measured via megohmmeter) between terminals and housing				
Temperature characteristics		teristics	±2% F.S. (25°C reference)				
Lead wir			Oilproof heavy-duty vinyl cable 5 cores ø3.5, 2 m Conductor area: 0.15 mm² (AWG26) Insulator O.D.: 0.95 mm				
Standard	ds		CE, UL, CSA, RoHS				
Note 1) If the applied pressure fluctuates around the set-v			value, the hysteresis must be set to a	value more than the fluctuating widt	h otherwise chattering will occur		

Note 1) If the applied pressure fluctuates around the set-value, the hysteresis must be set to a value more than the fluctuating width, otherwise chattering will occur.

Piping Specifications

Part no.		01	N01	W1	WF1	M5	C4	C6
Port size		R1/8 (With M5 female thread)	NPT1/8 (With M5 female thread)	Rc1/8	G1/8 Note 5)	M5 x 0.8 female thread	ø4 One-touch fitting	ø6 One-touch fitting
Material Sensor pressure receiving area		Silicon						
of parts in contact with fluid			ss nickel plating) HNBR	ating) ZDC2 ZDC2, POM, Stainless ste C3604 (Electroless nickel O-ring: HNBR, NBF			ss nickel plating)	
Weight		78 g	79 g	97 g 104 g 10		1 g		
M8 connector		45 g	46 g			-		




Note 2) When the analog voltage output is selected, the analog current output cannot be selected.

Note 3) When the analog current output is selected, the analog voltage output cannot be selected.


Note 4) UL temperature rating: The maximum ambient temperature is 50°C.

Analogue Output

Voltage output

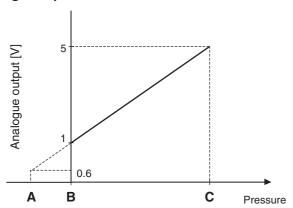

Current output

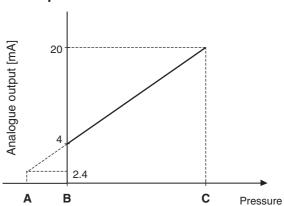

Range	Rated pressure range	Α	В	С
For vacuum pressure	0.0 to -101.3 kPa	10.1 kPa	0	–101.3 kPa
For compound pressure	-100.0 to 100.0 kPa	_	–100.0 kPa	100.0 kPa
For positive pressure	-0.100 to 1.000 MPa	-0.100 MPa	0	1.000 MPa

Descriptions

Output (OUT1) display (Orange)

Lights up when OUT1 is turned ON.

Output (OUT2) display (Orange)

Lights up when OUT2 is turned ON.

△ button

Use this button to select the mode or increase the ON/OFF set-value. It is also used for switching to the peak display mode.



LCD

Displays the current pressure, set mode, selected display unit, and error code. Always use red or green display; or switch between green and red according to the output. Four different display settings are available.

SET button


Use this button to change the mode or confirm the set-value.

∇ button


Use this button to select the mode or decrease the ON/OFF set-value. It is also used for switching to the bottom display mode.

Internal Circuits and Wiring Examples


-X NPN (2 outputs) + Copy function

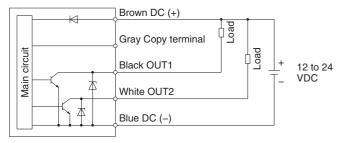

- -R/-S
- -R: NPN (2 outputs) + Analog voltage output
- -S: NPN (2 outputs) + Analog current output

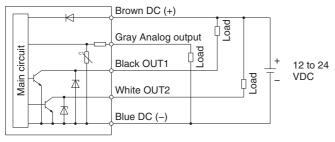


- -T/-V
- -T: PNP (2 outputs) + Analog voltage output -V: PNP (2 outputs) + Analog current output

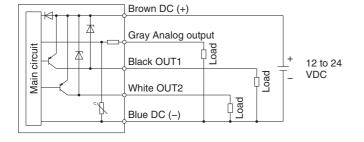


For M8 connector, 3 pins

 
-N NPN (1 output)




-Y PNP (2 outputs) + Copy function

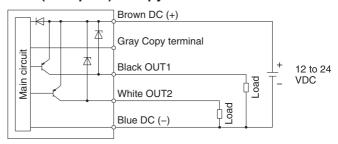


-R/-S NPN (2 outputs) + Auto-shift input

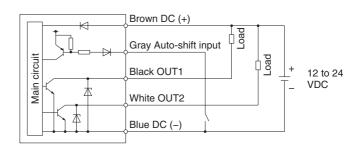

-T/-V PNP (2 outputs) + Auto-shift input

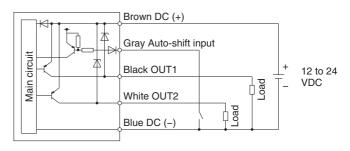


-P PNP (1 output)

 





Dimensions


ZSE40A(F)/ISE40A-01

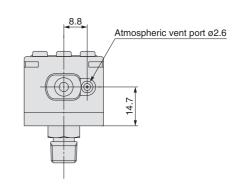


Atmospheric vent port ø2.6

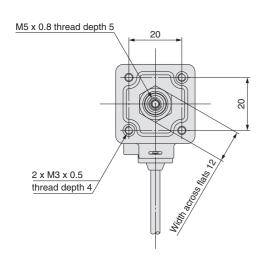


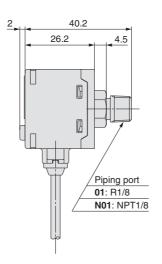


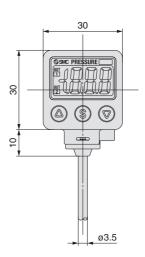


ZSE40A(F)/ISE40A-W1 -WF1

 

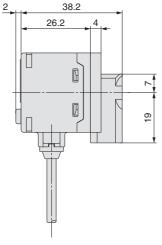

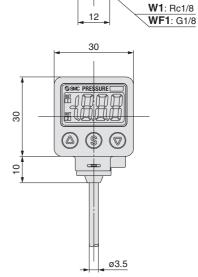


14.7

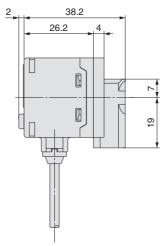



Dimensions/For M8 (3-pin) connector

 
ZSE40A/ISE40A-01-□-□L -N01-□-□L




pin assignment

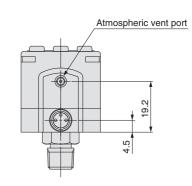


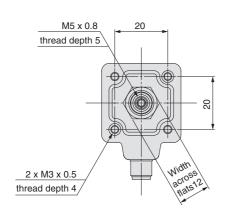

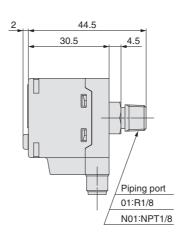

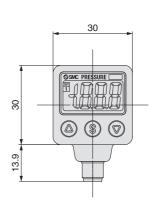


M8 (3-pin) cable with connector V100-49-1-□

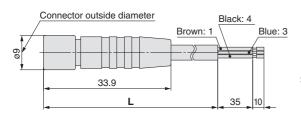





Part no.
V100-49-1-1
V100-49-1-2
V100-49-1-3
V100-49-1-4
V100-49-1-7

  PCA-1557772





Dimensions

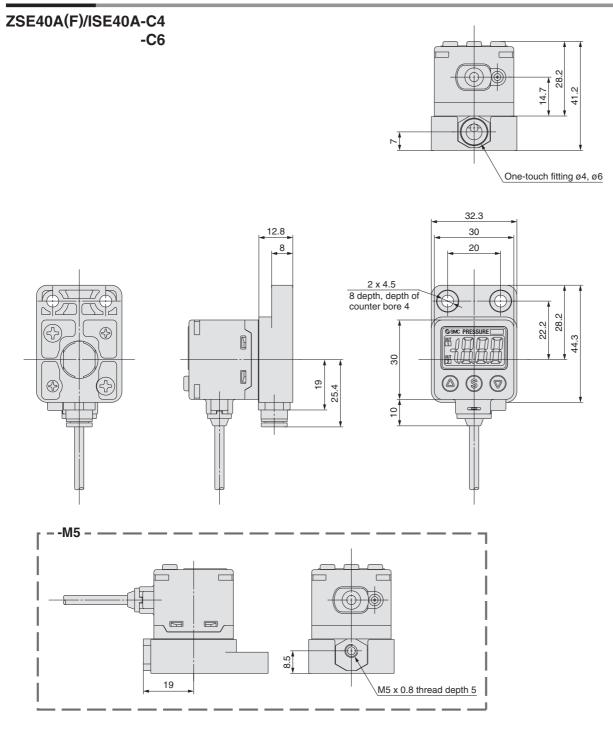



2-Colour Display High Precision Digital Pressure Switch Series ZSE40A(F)/ISE40A


Dimensions

ZSE40A(F)/ISE40A-01-□-□A□ -N01-□-□A□

With bracket A

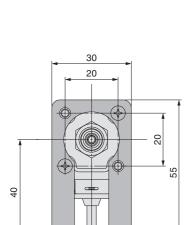


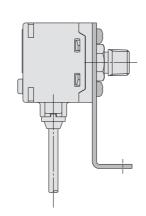


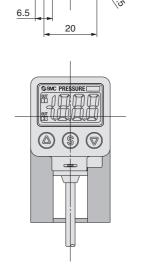



For M8 (3-pin) connector ZSE40A/ISE40A-01-□-□LA -N01-□-□LA

 With bracket A

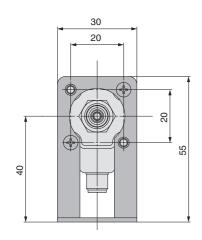

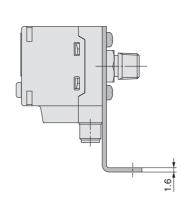

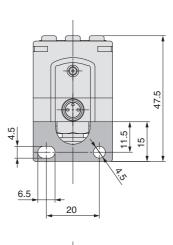





Dimensions


ZSE40A(F)/ISE40A-01-□-□D□


-N01-□-□D□

 With bracket D

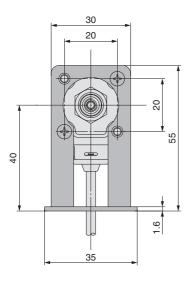

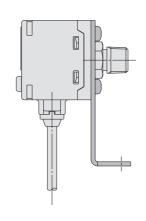


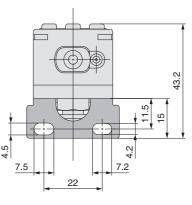






For M8 (3-pin) connector ZSE40A/ISE40A-01-□-□LD -N01-□-□LD

 With bracket D

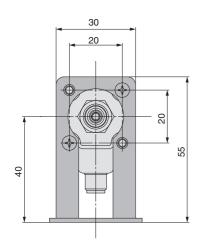

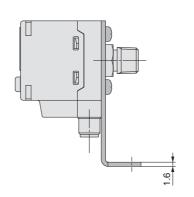

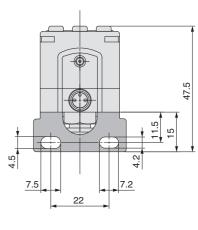




2-Colour Display High Precision Digital Pressure Switch Series ZSE40A(F)/ISE40A


Dimensions


ZSE40A(F)/ISE40A-W1-□-□A□


-WF1-□-□A□

 With bracket A

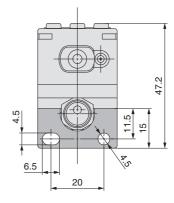

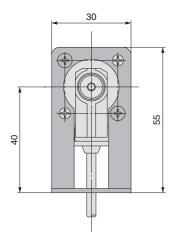

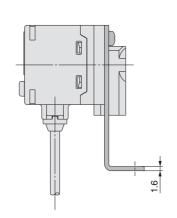






ZSE40A(F)/ISE40A-W1-□-□B□


-WF1-□-□B□

With bracket B

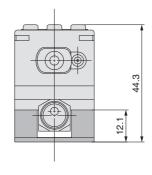

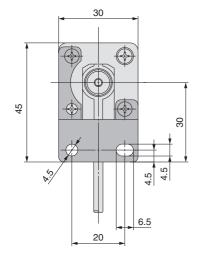

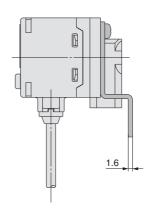


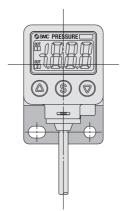



Dimensions


ZSE40A(F)/ISE40A-W1-□-□D□ -WF1-□-□D□

 With bracket D

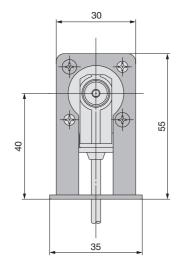

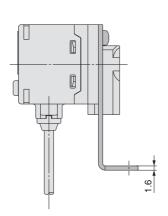

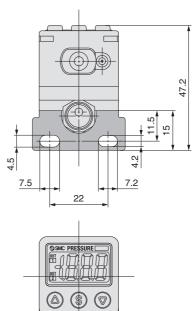




2-Colour Display High Precision Digital Pressure Switch Series ZSE40A(F)/ISE40A


Dimensions


ZSE40A(F)/ISE40A-01-□-□**E**□

-N01-□-□E□

Panel mounting

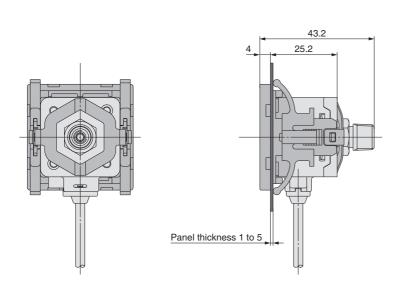

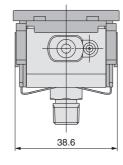


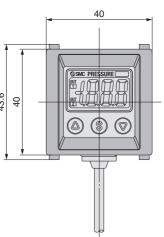



ZSE40A(F)/ISE40A-01-□-□**F**□

-N01-□-□F□

Panel mounting + Front protective cover

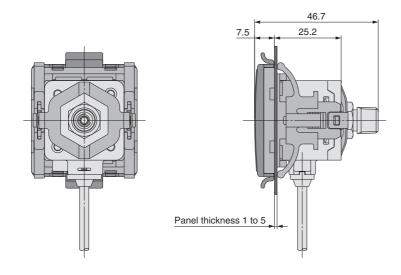

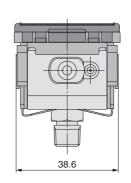

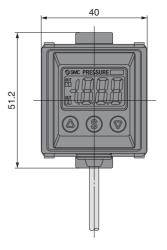





Dimensions


ZSE40A(F)/ISE40A-W1-□-□E□

-WF1-□-□E□

Panel mounting

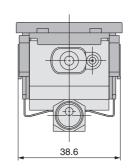

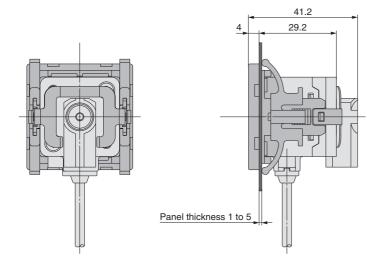


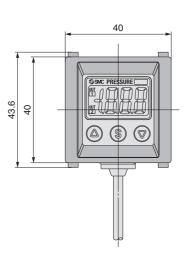



ZSE40A(F)/ISE40A-W1-□-□F□

-WF1-□-□F□

Panel mounting + Front protective cover

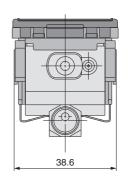

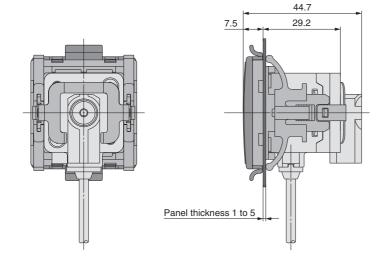

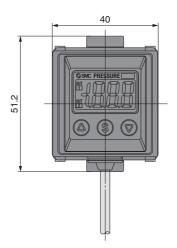


2-Colour Display High Precision Digital Pressure Switch Series ZSE40A(F)/ISE40A


Dimensions


ZSE40A(F)/ISE40A-C4-□E□


-C6-□E□

Panel mounting

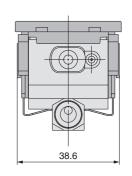

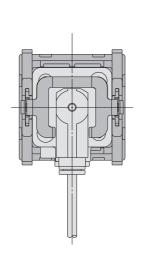

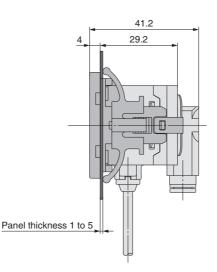


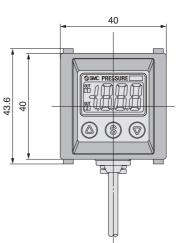



ZSE40A(F)/ISE40A-C4-□F□


-C6-□F□

Panel mounting + Front protective cover

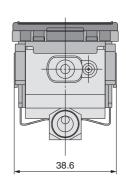

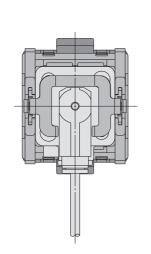

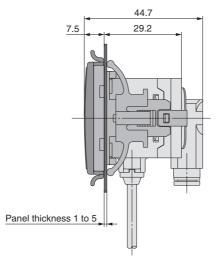

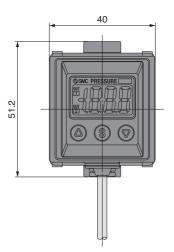

Dimensions

Panel fitting dimensions 36 ± 0.3 36 x n pcs. + 4 x (n pcs. - 1) Panel thickness 1 to 5 mm

Note) This is the minimum value for the piping method 01 or N01.

Take the piping material and tubing into account for design. When the corner is to have radius, it must be R3 or less.

 
Function Details


A Copy function (F97)

The settings of the master pressure switch can be copied to several slave pressure switches.

This can reduce the labour for setting and prevent the entry of incorrect set-values.

The set-value can be copied to up to 10 switches simultaneously. (Maximum communication distance 4 m)



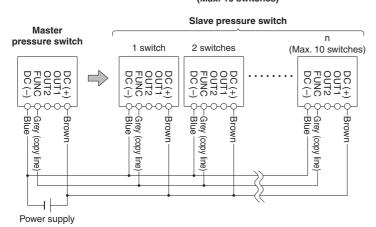


- 1) Wire as shown in the left figure.
- Select the slave switch which is to be the master, and change it into a master using the buttons. (In the default setting, all switches are set as slaves.)
- 3) Press the S button of the master switch to start copying.

B Auto-preset function (F 4)

Auto-preset function, when selected in the initial setting, calculates and stores the set-value from the measured pressure.

The optimum set-value is determined automatically by repeating vacuum and break with the target work piece several times.

Suction Verification

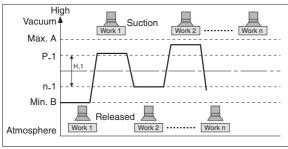


Formula for Obtaining the Set-Value

P_1 or P_2	H_1 or H_2
P_1 (P_2) = A - (A-B)/4 n_1 (n_2) = B + (A-B)/4	H_1 (H_2) = (A-B)/2

C Display calibration function (F 6)

Fine adjustment of the indicated value of the pressure sensor can be made within the range of $\pm 5\%$ of the read value.

(The scattering of the indicated value can be eliminated.)

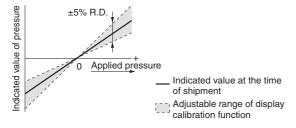

Note) When the display calibration function is used, the set pressure value may change ±1 digit.

D Peak and bottom display function

This function constantly detects and updates the maximum (minimum) value and allows to hold the maximum (minimum) pressure value.

When the 0 buttons are simultaneously pressed for 1 second or longer, while "holding", the hold value will be reset.

E Key lock function

This function prevents incorrect operations such as accidentally changing the set-value.

F Zero-clear function

This function clears and resets the zero value on the display of measured pressure.

For the pressure switch with analogue output, the analogue output shifts according to the indication. The indicated value can be adjusted within $\pm 7\%$ F.S. of the pressure when ex-factory. (ZSE40AF (for compound pressure) $\pm 3.5\%$ F.S.)



The $F\square$ in brackets shows the function code number. Refer to the Operation Manual for the details of operation procedures and function

G Error indication function

Error name	Error code	Description	Remedy	
Overcurrent	Er 1	Load current of switch output (OUT1) exceeds 80 mA.	Turn the power off and remove the output factor for	
error E-2		Load current of switch output (OUT2) exceeds 80 mA.	the overcurrent. Then, turn the power on.	
Residual pressure error	Er3	During zero-clear operation, pressure over ±7% F.S. is applied. (ZSE40AF (compound) ±3.5% F.S.) After 1 second, the mode will reset to measurement mode. ±1% F.S. of the zero-clear range varies between individual products.	Perform zero-clear operation again after restoring the applied pressure to an atmospheric pressure condition.	
Applied	HHH	Supply pressure exceeds the maximum set pressure.	Reset applied pressure to a level within the set	
pressure error		Supply pressure is below the minimum set pressure.	pressure range.	
Auto-shift error	مر	The value measured at the time of auto-shift input is outside the set pressure range. * After displaying the error code for about 1 second, the switch returns to the measuring mode.	The controller does not respond to the auto-shift signal. Check the equipment and machinery for this point.	
	ErO			
	Ery	Internal data error		
System error	E-5		Turn the power off and turn it on again. If the failure cannot be solved, ask SMC for repair.	
	Er 7			
	E-8			
	Er9			

If the above remedy cannot recover the operation, ask SMC for repair.


H Anti-chattering function (F 3)

A large bore cylinder or ejector consumes a large volume of air in operation and may experience a temporary drop in the supply pressure. This function prevents detection of such temporary drops in the supply pressure as an error.

Available response time settings
20 ms, 100 ms, 500 ms, 1000 ms, 2000 ms

<Principle>

This function averages pressure values measured during the response time set by the user and then compares the average pressure value with the pressure set point value to output the result on the switch.

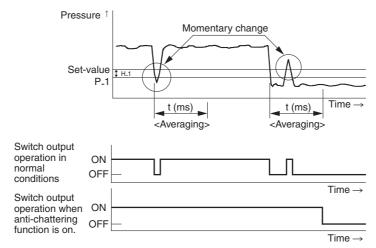

Display unit switching function (F 0)

Display units can be switched with this function.

Display unit	۶	'R	GF.	ьяг	P5 ,	ınX	ññX
Minimum unit setting	kPa	MPa Note)	kgf/cm ²	bar	psi	inHg	mmHg
ZSE40A (vacuum pressure)		0.001	0.001	0.001	0.01	0.1	1
ZSE40AF (compound pressure)	0.1	0.001	0.001	0.001	0.02	0.1	1
ISE40A (positive pressure)	1	0.001	0.01	0.01	0.1		

Note) The ZSE40A (vacuum pressure) and ZSE40AF (compound pressure) will have different setting and display resolution when the unit is set to MPa.



2-Colour Display High Precision Digital Pressure Switch Series ZSE40A(F)/ISE40A

Function Details

The $F\square$ in () shows the function code number. Refer to the Operation Manual for the details of operation procedures and function codes.

J Power-saving mode (F80)

Power-saving mode can be selected.

It shifts to the power-saving mode without button operation for 30 seconds. It is set to the normal mode (Power-saving mode is OFF.) when ex-factory. (Decimal points and operation indicator light (only when the switch output is turned ON) blink in the power-saving mode.)


K Secret code setting (F81)

It can be set whether secret code input is required or not when key is locked. It is set to input no secret code when ex-factory.

L Auto-shift function (F 5)

When there are large fluctuations in the supply pressure, the switch may fail to operate correctly. The auto-shift function compensates such supply pressure fluctuations. It measures the pressure at the time of auto-shift signal input and uses it as the reference pressure to correct the set-value on the switch.

Set-value correction by auto-shift function

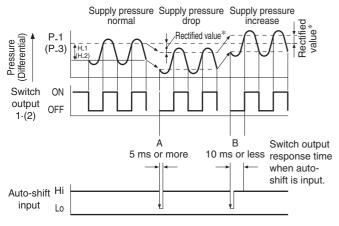

* Rectified value

When the auto-shift is selected, "pop" will be displayed for about 1 second, and the pressure value at that point will be saved as a rectified value " [5]". Based on the saved rectified values, the set-value Note) of " [5]", " [5]", " [5]", " [5]", and " [5]" will likewise be rectified.

Note) When an output is reversed, "n_ 1", "H_ 1", "n_ 2", "H_ 2" will be rectified.

Possible Set Range for Auto-Shift Input

	Regulating pressure range	Possible set range
Compound pressure	-105.0 to 105.0 kPa	–210 to 210 kPa
Vacuum pressure	10.0 to -105.0 kPa	115.0 to -115.0 kPa
Positive pressure	-0.105 to 1.050 MPa	-1.155 to 1.155 MPa

Auto-shift zero

The basic function of auto-shift zero is the same as the function for auto-shift. Also, it corrects values on the display, based on a pressure value of "", when the auto-shift is selected.


Series ZSE40A(F)/ISE40A Made to Order




Please contact SMC for detailed dimensions, specifications, and lead times.

1 Lead wire length 3 m -X501

It has a lead wire extended to 3 meters.

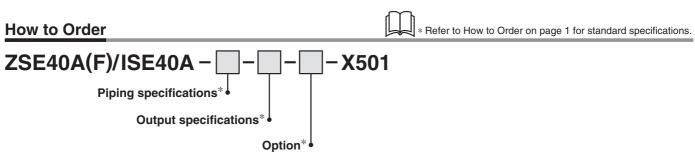

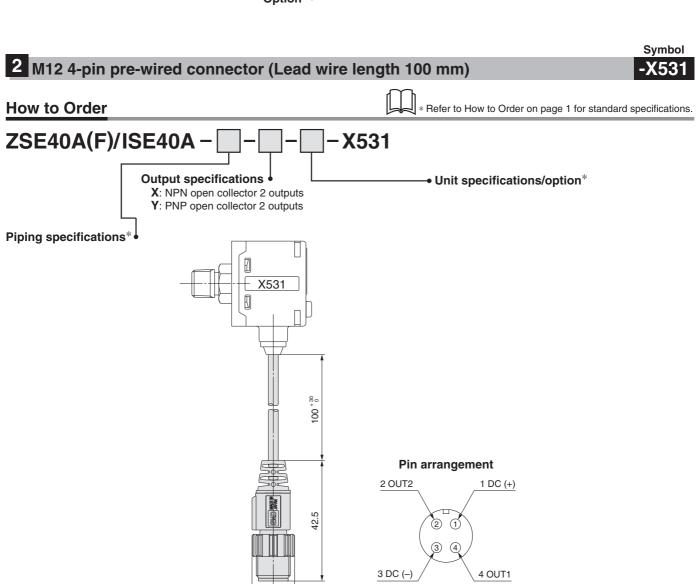

ø15



Series ZSE40A(F)/ISE40A Specific Product Precautions 1

Be sure to read before handling. Refer to back pages 1 and 2 for Safety Instructions, "Handling Precautions for SMC Products" (M-E03-3) for Pressure Switches Precautions.

Handling

⚠ Caution

- Do not drop, bump, or apply excessive impacts (100 m/s²) while handling. Although the body of the sensor may not be damaged, the internal parts of the sensor could be damaged and lead to a malfunction.
- The tensile strength of the cord is 49 N. Applying a greater pulling force on it can cause a malfunction.
 When handling, hold the body of the sensor—do not dangle it from the cord.
- 3. Do not exceed the screw-in torque of 7 to 9 N·m when connecting the pipe to the switch. Exceeding this torque may cause the switch to malfunction.
- 4. Do not use pressure sensors with corrosive and/or flammable gases or liquids.

Connection

⚠ Caution

- 1. Incorrect wiring can damage the switch and cause a malfunction or erroneous switch output.
- 2. Connections should be done while the power is turned off.
- 3. Wire separately from power lines and high voltage lines, avoiding wiring in the same conduit with these lines. Malfunctions may occur due to noise from these other lines.
- 4. If a commercial switching regulator is used, make

Operating Environment

⚠ Warning

- 1. This pressure switch is CE marked; however, it is not equipped with surge protection against lightning. Lightning surge countermeasures should be applied directly to system components as necessary.
- This pressure switch does not have an explosion proof rating. Never use in the presence of an explosive gas as this may cause a serious explosion.

Operating Environment

- 1. Do not use the product in a place where it could be splashed by oils or solvents.
- 2. When this pressure switch is used in a place where water and dust splash on, water and dust may enter inside the switch through the atmospheric vent port. Insert a ø4 tube (I.D. ø2.5) into the atmospheric vent port, and bring piping of the opposite side up to the safe position to keep it from water and dust. Do not bend the tube or close the hole of it. It causes malfunction with the measurement of positive pres-



- * Make sure that the tube is inserted to the end of the atmospheric vent port.
- * Use SMC tubing, TU0425. (Material: Polyurethane, Tube O.D. ø4, I.D. ø2.5)
- 3. Take measures against static electricity with equipment when this switch is used in connection with resin piping. Also, the ground should be separate from that of the units that generate strong electromagnetic noise or high frequency, otherwise, the switch can be damaged by static electricity.






Series ZSE40A(F)/ISE40A Specific Product Precautions 2

Be sure to read before handling.

Refer to back pages 1 and 2 for Safety Instructions, "Handling Precautions for SMC Products" (M-E03-3) for Pressure Switches Precautions.


Mounting

△Caution

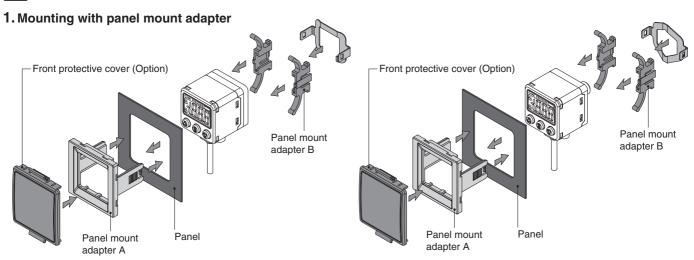

2. Mounting with bracket

Mount a bracket to the using two mounting screws and install on piping. The switch can be installed horizontally depending on the installation location.

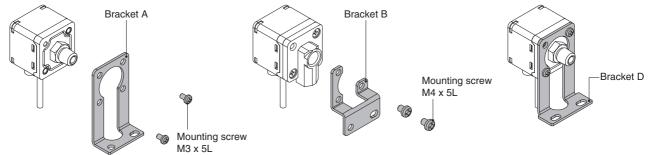

The tightening torque for bracket mounting screw should be 0.5 to 0.7 N·m for M3 and 1.4 to 1.6 N·m for M4.

Set Pressure Range and Rated Pressure Range


△Caution

Set the pressure within the rated pressure range.

The set pressure range is the range of pressure that is possible in setting.

The rated pressure range is the range of pressure that satisfies the specifications (accuracy, linearity, etc.) on the switch.

Although it is possible to set a value outside the rated pressure range, the specifications will not be guaranteed even if the value stays within the set pressure range.

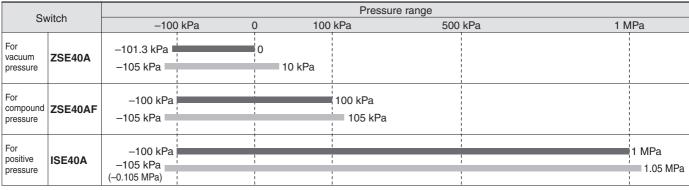

Rated pressure range of switch
Set pressure range of switch

Related Equipment

2-Colour Display High Precision Digital Pressure Switch ZSE/ISE30A



Series	Туре	Rated pressure range
ZSE30AF	Compound pressure -100.0 to 100.0 kPa	
ZSE30A	Low pressure/vacuum	0.0 to -101.0 kPa
ISE30A	Positive pressure	0.100 to 1.000 MPa
Features	 With one-touch fitting (Straight, Elbow) Space-saving, capable of vertical and horizontal contact mounting With display calibration function Simultaneous copying is possible for maximum 10 units. IP40 	

2-Colour Display Digital Pressure Switch ZSE/ISE80



Series	Type	Rated pressure range	
ZSE80F	Compound pressure	-100.0 to 100.0 kPa	
ZSE80	Vacuum pressure	-101.0 to 0.0 kPa	
ISE80	Positive pressure	-0.100 to 1.000 MPa	
ISE80H	Positive pressure	-0.100 to 2.000 MPa	
Features	Suitable for a wide variety of fluids with stainless diaphragm IP65 RoHS compliant Low leakage. VCR®, Swagelok® compatible fittings can be selected. With one-touch fittings (Straight, Elbow) Back piping, underside piping		

Note) VCR® and Swagelok® are trademarks of Swagelok Company.



⚠ Safety Instructions

These safety instructions are intended to prevent hazardous situations and/or equipment damage. These instructions indicate the level of potential hazard with the labels of "Caution," "Warning" or "Danger." They are all important notes for safety and must be followed in addition to International Standards (ISO/IEC)*1), and other safety regulations.

Caution indicates a hazard with a low level of risk Caution: which, if not avoided, could result in minor or moderate injury.

Warning indicates a hazard with a medium level of Warning: risk which, if not avoided, could result in death or serious injury.

⚠ Danger :

Danger indicates a hazard with a high level of risk which, if not avoided, will result in death or serious injury.

*1) ISO 4414: Pneumatic fluid power - General rules relating to systems. ISO 4413: Hydraulic fluid power – General rules relating to systems. IEC 60204-1: Safety of machinery – Electrical equipment of machines. (Part 1: General requirements)

ISO 10218-1: Manipulating industrial robots - Safety.

⚠ Warning

1. The compatibility of the product is the responsibility of the person who designs the equipment or decides its specifications. Since the product specified here is used under various operating conditions, its compatibility with specific equipment must be decided by the person who designs the equipment or decides its specifications based on necessary analysis and test results. The expected performance and safety assurance of the equipment will be the responsibility of the person who has determined its compatibility with the product. This person should also continuously review all specifications of the product referring to its latest catalogue information, with a view to giving due consideration to any possibility of equipment failure when configuring the

2. Only personnel with appropriate training should operate machinery and equipment.

The product specified here may become unsafe if handled incorrectly. The assembly, operation and maintenance of machines or equipment including our products must be performed by an operator who is appropriately trained and experienced.

- 3. Do not service or attempt to remove product and machinery/equipment until safety is confirmed.
 - 1. The inspection and maintenance of machinery/equipment should only be performed after measures to prevent falling or runaway of the driven objects
 - 2. When the product is to be removed, confirm that the safety measures as mentioned above are implemented and the power from any appropriate source is cut, and read and understand the specific product precautions of all relevant products carefully.
 - 3. Before machinery/equipment is restarted, take measures to prevent unexpected operation and malfunction.
- 4. Contact SMC beforehand and take special consideration of safety measures if the product is to be used in any of the following
 - 1. Conditions and environments outside of the given specifications, or use outdoors or in a place exposed to direct sunlight.
 - 2. Installation on equipment in conjunction with atomic energy, railways, air navigation, space, shipping, vehicles, military, medical treatment, combustion and recreation, or equipment in contact with food and beverages, emergency stop circuits, clutch and brake circuits in press applications, safety equipment or other applications unsuitable for the standard specifications described in the
 - 3. An application which could have negative effects on people, property, or animals requiring special safety analysis.
 - 4. Use in an interlock circuit, which requires the provision of double interlock for possible failure by using a mechanical protective function, and periodical checks to confirm proper operation

1. The product is provided for use in manufacturing industries.

The product herein described is basically provided for peaceful use in manufacturing industries.

If considering using the product in other industries, consult SMC beforehand and exchange specifications or a contract if necessary.

If anything is unclear, contact your nearest sales branch.

Limited warranty and Disclaimer/ Compliance Requirements

The product used is subject to the following "Limited warranty and Disclaimer" and "Compliance Requirements".

Read and accept them before using the product.

Limited warranty and Disclaimer

- 1. The warranty period of the product is 1 year in service or 1.5 years after the product is delivered.*2)
 - Also, the product may have specified durability, running distance or replacement parts. Please consult your nearest sales branch.
- 2. For any failure or damage reported within the warranty period which is clearly our responsibility, a replacement product or necessary parts will be provided. This limited warranty applies only to our product independently, and not to any other damage incurred due to the failure of the product.
- 3. Prior to using SMC products, please read and understand the warranty terms and disclaimers noted in the specified catalogue for the particular products.
 - *2) Vacuum pads are excluded from this 1 year warranty.

A vacuum pad is a consumable part, so it is warranted for a year after it is delivered.

Also, even within the warranty period, the wear of a product due to the use of the vacuum pad or failure due to the deterioration of rubber material are not covered by the limited warranty

Compliance Requirements

2 +370 5 2308118

- 1. The use of SMC products with production equipment for the manufacture of weapons of mass destruction (WMD) or any other weapon is strictly prohibited.
- 2. The exports of SMC products or technology from one country to another are governed by the relevant security laws and regulations of the countries involved in the transaction. Prior to the shipment of a SMC product to another country, assure that all local rules governing that export are known and followed.

Be sure to read "Handling Precautions for SMC Products" (M-E03-3) before using.

SMC Corporation (Europe)

☎+43 (0)2262622800 www.smc.at Austria office@smc.at Belaium www.smcpneumatics.be info@smconeumatics.be Bulgaria **2** +359 (0)2807670 office@smc.bg www.smc.bg Croatia *****+385 (0)13707288 office@smc.hr www.smc.hr Czech Republic **2** +420 541424611 www.smc.cz office@smc.cz Denmark ★+45 70252900 www.smcdk.com smc@smcdk.com smc@smcpneumatics.ee Estonia ***** +372 6510370 www.smcpneumatics.ee Finland **2** +358 207513513 www.smc.fi smcfi@smc.fi France **1** +33 (0)164761000 www.smc-france.fr promotion@smc-france.fr Germany **2** +49 (0)61034020 www.smc-pneumatik.de info@smc-pneumatik.de Greece **2** +30 210 2717265 www.smchellas.gr sales@smchellas.gr Hungary ***** +36 23511390 www.smc.hu office@smc.hu **2** +353 (0)14039000 Ireland www.smcpneumatics.ie sales@smconeumatics.ie Italy **☎**+39 0292711 mailbox@smcitalia.it www.smcitalia.it Latvia **2**+371 67817700 www.smclv.lv info@smclv.lv

Lithuania Netherlands Norway Poland **Portugal** Romania Russia Slovakia Slovenia Spain Sweden

2 +31 (0)205318888 **2** +47 67129020 **2** +48 (0)222119616 **2**+351 226166570 **2** +40 213205111 **2** +7 8127185445 2 +421 (0)413213212 www.smc.sk ***** +386 (0)73885412 ***** +34 902184100 **2** +46 (0)86031200 Switzerland **2** +41 (0)523963131 Turkey **2** +90 212 489 0 440 ****** +44 (0)845 121 5122

www.smclt.lt www.smcpneumatics.nl www.smc-norge.no www.smc.nl www.smc.eu www.smcromania.ro www.smc-pneumatik.ru www.smc.si

www.smc.eu

www.smc.nu

www.smc.ch

www.smcpnomatik.com.tr

www.smcpneumatics.co.uk sales@smcpneumatics.co.uk

info@smclt.lt info@smcpneumatics.nl post@smc-norge.no office@smc.pl postpt@smc.smces.es smcromania@smcromania.ro info@smc-pneumatik.ru office@smc.sk office@smc.si post@smc.smces.es nost@smc.nu info@smc.ch info@smcpnomatik.com.tr

SMC CORPORATION Akihabara UDX 15F, 4-14-1, Sotokanda, Chiyoda-ku, Tokyo 101-0021, JAPAN Phone: 03-5207-8249 FAX: 03-5298-5362

UK