Rotary Clamp Cylinder ø12, ø16, ø20, ø25, ø32, ø40, ø50, ø63

New

Allowable moment of inertia 3 times higher New structure! **NEW** MK series is released!!

Overall length is the same as the existing products! Mounting dimensions are interchangeable with the MK series.

Possible to mount small auto switches on 4 surfaces

- Auto switches can be mounted on any of the 4 surfaces to suit the installation conditions (2 surfaces for Ø20 and Ø25).
- No projection of the auto switch.



Consolidated to the New MK series and renewed!






2-colour indication solid state auto switch Accurate setting of the mounting position can be performed without mistakes.




operating range.

Application Example

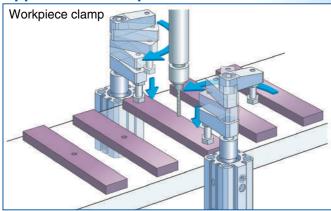

Series MK

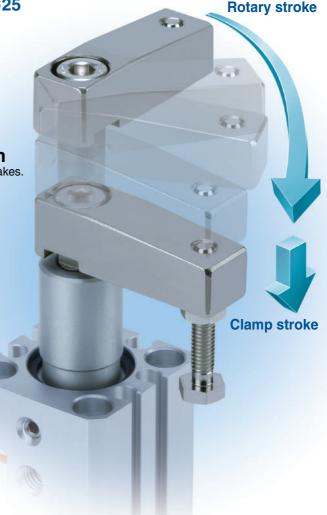


CAT.EUS20-214A-UK




Allowable moment of inertia 3 times higher

Allowable moment of inertia is the same as the heavy-duty MK2 series.

Allowable Moment of Inertia (Ø32, Ø40)

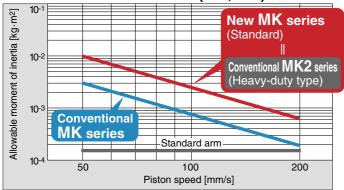

 Maintenance can be performed for all sizes.





Standard stroke range has been expanded.

Strokes have been added to the **New MK** series, making a wide range of strokes available. (★ indicates the added strokes.)

Series	Bore size		Stroke							
Selles	Dole Size	10	20	30	50					
	12			*	_					
	16			*	_					
	20			*	_					
NEW MK	25			*	_					
WEW IVI K	32			*	*					
	40			*	*					
	50	*		*	•					
	63	*		*	•					

Head flanges are newly available for Ø12 and Ø16.

Mounting type has been added to suit a wide range of applications.



Overall length is shortened.

(equivalent to the MK series)

3 to 10 mm shorter than the MK2 series, making the product more compact.

Overall length comparison

Overall length is shortened.



■Overall Length Dimensions


Bore size	Shortened dimensions (compared to the conventional MK2 series)	MK series overall length (at 20st)
20	3 mm	112.5
25	5 mm	113.5
32	8 mm	133.5
40	8 mm	134.5
50	10 mm	152
63	10 mm	155

2 types of cylinder mounting are available with one body.

2 types of cylinder mounting, **through-hole mounting** and **tap mounting**, are available for mounting the cylinder.


 \ast For the tap mounting, the thread length is different from the existing product.

■ Mounting examples

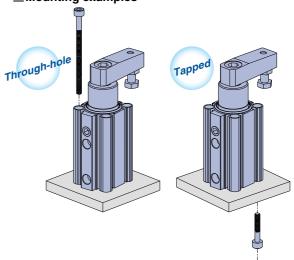

Clamping rotary direction can be selected from 2 types.

Clamping rotary direction can be selected to suit the setting conditions

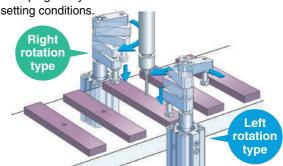




Series MK **Model Selection**

Item	Series	New MK
Max. piston speed Note) [mm/s]	ø12 to ø63	200
	ø 12	±1.4°
Non-rotating accuracy	ø16 to ø25	±1.2°
(Clamp part)	ø 32, ø 40	±0.9°
	ø 50, ø 63	±0.7°
Rotary angle		90°±10°
Horizontal mounting		Not allowed

Note) Maximum piston speed indicates the maximum speed possible when employing a standard arm.

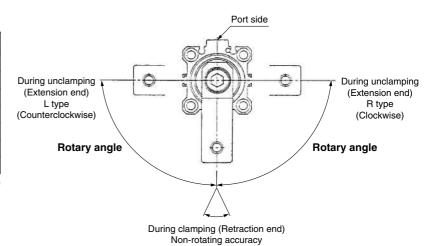

Designing Arms


⚠ Caution

When arms are to be made separately, their length and mass should be within the following range.

1. Allowable bending moment

Use the arm length and operating pressure within Graph (1) for allowable bending moment loaded piston rod.

Graph (1)

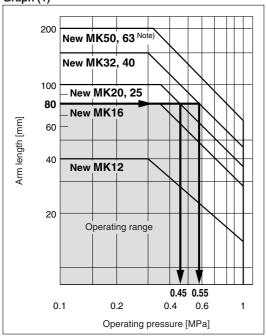


• When the arm length is 80 mm, pressure should be New MK20/25: 0.45 MPa or less, New MK32/40: 0.55 MPa or less.

Note) Use ø63 within a pressure range from 0.1 to 0.6 MPa. If Ø63 is used within a pressure range from 0.61 to 1 MPa, please use -X2071.

2. Moment of inertia

When the arm is long and heavy, damage of internal parts may be caused due to inertia. Use the moment of inertia and cylinder speed within Graph (2) based on arm requirements.

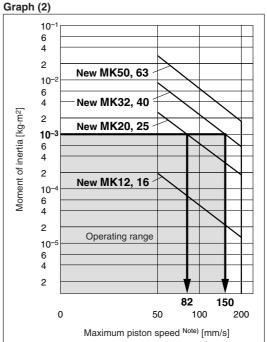

 When the arm's moment of inertia is 1 x 10⁻³ kg⋅m², cylinder speed should be

New MK20/25: 82 mm/s or less, New MK32/40: 150 mm/s or less.

• For calculating the moment of inertia, refer to page 3.

Note) Maximum piston speed is equivalent to approximately 1.6x the average piston speed. (Rough indication)


Bore Size Selection

Moment of Inertia


Note) Maximum piston speed is equivalent to approximately 1.6x the average piston speed. (Rough indication)

Calculate the operating conditions and operate this product within the allowable range. If the allowable range is exceeded, increase the bore size or use the MK2T series. (Refer to SMC Best Pneumatics No. 3 for details of the MK2T series.)




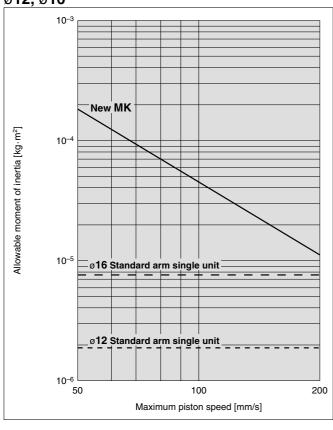




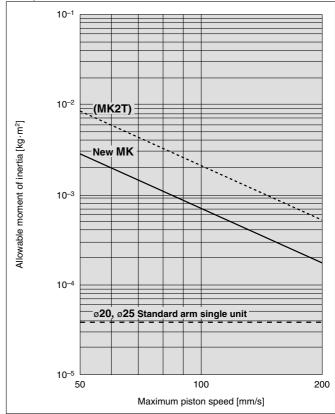

ø32, ø40

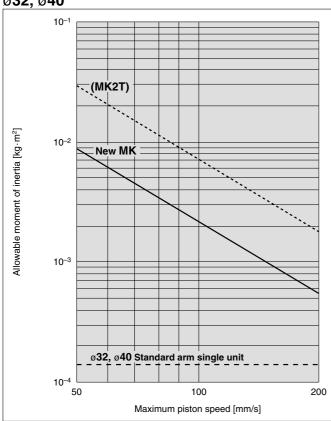

ø50, ø63

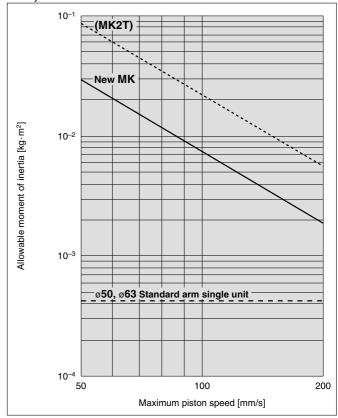

Moment of Inertia

Note) Maximum piston speed is equivalent to approximately 1.6x the average piston speed. (Rough indication)

Calculation example when arms other than the options are used.

Arm: I₁

Clamping jig mass: m2

øD

 
• Calculate the moment of inertia of the arm.

$$I_1 = m_1 \cdot \frac{\textbf{A}^2 + \textbf{B}^2}{12} + m_1 \cdot \left[\frac{\textbf{A}}{2} - \textbf{S}\right]^2$$

• Calculate the moment of inertia of the clamping jig.

$$I_2 = \boldsymbol{m}_2 \cdot \frac{\boldsymbol{D}^2}{8} + \boldsymbol{m}_2 \cdot \boldsymbol{L}^2$$

Calculation example> when the cylinder bore size is \emptyset 32.
Clamping jig: I_2



$$I_1 = 0.35 \times \frac{0.1^2 + 0.03^2}{12} + 0.35 \times \left[\frac{0.1}{2} - 0.012\right]^2 = 8.2 \times 10^{-4} \text{ kg·m}^2$$

$$I_2 = 0.15 \times \frac{0.02^2}{8} + 0.15 \times 0.076^2 = 8.7 \times 10^{-4} \text{ kg·m}^2$$

• Calculate the actual moment of inertia.

$$I = I_{\text{1 }} + I_{\text{2}} \hspace{-0.5mm}=\hspace{-0.5mm} \text{(8.2 + 8.7) x 10}^{\text{-4}} \hspace{-0.5mm}=\hspace{-0.5mm} \text{1.7 x 10}^{\text{-3}} \hspace{0.5mm} \text{kg} \cdot \text{m}^{\text{2}}$$

Calculation result (when the bore size is ø32 and clamp stroke is 10 mm.)

Model	Max. piston speed	Average piston speed Note 1)	Total stroke Note 2)	Stroke time Note 3)
New MK	115 mm/s	72 mm/s	25 mm	0.35 seconds


Note 1) Average piston speed = Max. piston speed ÷1.6

Note 2) Total stroke = Clamp stroke + Rotary stroke

Note 3) Total stroke ÷ Average piston speed

The stroke time should be longer than the above mentioned stroke time.

ø**32,** ø**40**

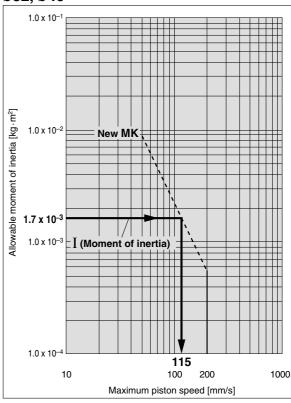

Calculation Equation List for Moment of Inertia

I: Moment of inertia [kg·m²] m: Load mass [kg]

If arms other than the options are used, be sure to calculate the moment of inertia of the arm before selecting it.

1. Thin shaft

Position of rotational axis:

Perpendicular to the shaft, and attached near one end

 


$$I = m_1 \cdot \frac{a_1^2}{3} + m_2 \cdot \frac{a_2^2}{3}$$

2. Thin shaft

Position of rotational axis:

Perpendicular to the shaft, and attached at the centre of gravity




$$I = m \cdot \frac{a^2}{12}$$

3. Thin rectangular plate (Rectangular parallelopiped)

Position of rotational axis:

 Parallel to side b, and attached at the centre of gravity




$$I = m \cdot \frac{a^2}{12}$$

4. Thin rectangular plate (Rectangular parallelopiped)

Position of rotational axis:

 
Perpendicular to the plate, and attached near one end



5. Thin rectangular plate (Rectangular parallelopiped)


Position of rotational axis:

 Attached at the centre of gravity, and perpendicular to the plate (Same as also thick rectangular plate)



$$= m \cdot \frac{a^2 + b^2}{12}$$

6. Load at the end of lever arm

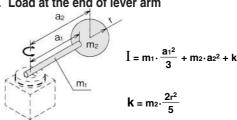

Bore Size Selection

Design/Selection

- 1. Do not use the cylinder under the following environments:
 - An area in which fluids such as cutting oil splash on the piston rod
 - An area in which foreign matter such as particles, cutting chips, or dust is present
 - An area in which the ambient temperature exceeds the operating range
 - · An area exposed to direct sunlight
 - An environment that poses the risk of corrosion
- 2. A cylinder could malfunction or the non-rotating accuracy could be affected if a rotational force is applied to the piston rod. Therefore, observe the particulars given below before operating the cvlinder.
 - 1) Make sure to mount the cylinder vertically (Fig. (1)).
 - 2) Do not absolutely perform any work (such as clamping or acting as a stopper, etc.) in the rotary direction (Fig. (2)).
 - 3) To clamp, make sure to do so within the clamp stroke (straight-line stroke) (Fig. (3)).
 - 4) Make sure that the clamping surface of the workpiece is perpendicular to the cylinder's axial line (Fig. (4)).
 - 5) Do not operate the cylinder in such a way that an external force causes the workpiece to move while being clamped (Fig. (5)).
 - 6) Furthermore, do not operate the cylinder in an application in which a rotational force will be applied to the piston rod.
- 1) Do not operate the cylinder horizontally. When using the cylinder horizontally, use the MK2T series.


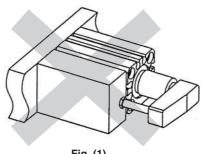


Fig. (1)

2) Do not perform any work in the rotary direction.

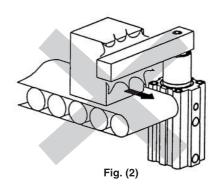

3) Do not clamp during the rotary stroke. Clamp should be performed within the clamp stroke.



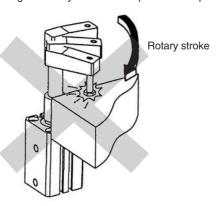


Fig. (3)

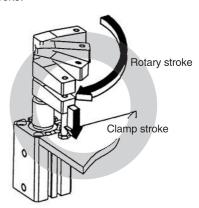

4) Do not clamp on a slanted surface.

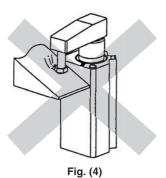

5) Make sure that the workpiece does not move during clamping.


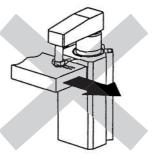


Fig. (5)

Rotary Clamp Cylinder: Standard Series MK

ø12, ø16, ø20, ø25, ø32, ø40, ø50, ø63

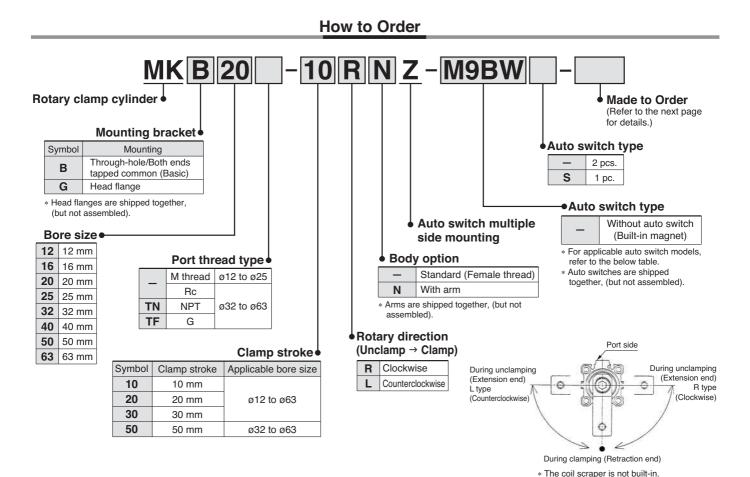

Annlicable Auto Switches Detarte Boot Brown


Applicable Auto Switches/Hefer to Best Pneumatics No. 3 for further information on auto switches. For D-P3DW, refer to the catalogue ES20-201.																						
					L	oad volt	tage	Auto swit	ch model	Lea	d wir	e ler	ngth	(m)								
Туре	Special function	Electrical entry		Wiring (Output)	D	С	AC	Perpendicular	In-line	0.5 (—)	1 (M)	3 (L)	_	None (N)	Pre-wired connector		cable ad					
				3-wire (NPN)		5 V,		M9NV	M9N	•	•	•	0	_	0	IC circuit						
				3-wire (PNP)		12 V		M9PV	M9P	•	•	•	0	_	0	IC Circuit						
				2-wire		12 V		M9BV	M9B		•	•	0	_	0	_						
	Diagnostic indication	·		3-wire (NPN)		5 V,		M9NWV	M9NW		•	•	0	_	0	10						
			Yes	3-wire (PNP)	04.1/	12 V		M9PWV	M9PW	•	•	•	0	_	0	IC circuit	Relay,					
	(2-colour indication)	Grommet		2-wire	24 V	12 V	_	M9BWV	M9BW	•	•	•	0	_	0	_	PLC					
									3-wire (NPN)		5 V,		M9NAV	M9NA	0	0	•	0	_	0		
	Water resistant (2-colour indication)			3-wire (PNP)		12 V		M9PAV	M9PA	0	0	•	0	_	0	IC circuit						
	(2-colour indication)			2-wire		12 V		M9BAV	М9ВА	0	0	•	0	_	0							
	Magnetic field resistant (2-colour indication)			2-wire (Non-polar)		_		_	P3DW*	•	_	•	•	_	•	_						
	— Gro		V	3-wire (NPN equivalent)	_	5 V	_	A96V	A96	•	_	•	_	_	_	IC circuit	_					
		Grommet	Yes	O voine	04.1/	12 V	100 V	A93V	A93	•	_	•	_	_	_	_	Relay,					
			No	2-wire	24 V	5 V,12 V	100 V or less	A90V	A90	•	_	•	_	_	_	IC circuit	PLC					

- * Lead wire length symbols: 0.5 m ······ -(Example) M9NW 1 m M (Example) M9NWM
 - 3 m L (Example) M9NWL 5 m Z (Example) M9NWZ
- * Solid state auto switches marked with "O" are produced upon receipt of order.
- * For D-P3DW□, ø32 to ø63 are available.
- * Since there are other applicable auto switches than listed, refer to page 15 for details.
- * For details about auto switches with pre-wired connector, refer to Best Pneumatics No. 3.
- For D-P3DW□, refer to the catalogue ES20-201.
- Auto switches are shipped together, (but not assembled)
- * The coil scraper is not built-in.





Rotary Angle

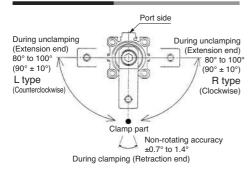



Made to Order

(For details, refer to page 18)

Symbol	Description
-X2071	Max. operating pressure 1.0 MPa
-X2094	Overall length is the same as the MK2 series
-X2172	With boss in head end
-X2177	The dimension of head end flange is the same as the current series MK and MK2.
-X2997	Rotary angle 60° specifications
-XB6	Heat resistant cylinder (-10 to 150 °C) w/o auto switch only Note 1)
-XC4	With heavy duty scraper Note 2)
-XC22	Fluororubber seals Note 3)

Note 1) Except ø12 and ø16.

Note 2) Except ø12.

Note 3) The bumper is a standard product.

Option/Arm

Bore size (mm)	Part no.	Accessories
12	MK-A012Z	
16	MK-A016Z	
20	MK-A020Z	Clamp bolt,
25	WIK-AUZUZ	Hexagon socket head cap screw,
32	MK-A032Z	Hexagon nut,
40	WIK-AU32Z	Spring washer
50	MK-A050Z	3
63	WIK-AUSUZ	

Mounting Bracket/Flange

Bore size (mm)	Part no.	Accessories
12	CQS-F012	
16	CQS-F016	
20	MKZ-F020	
25	MKZ-F025	Hexagon socket
32	MK2T-F032	head cap screw
40	MK2T-F040	
50	MK2T-F050	
63	MK2T-F063	

Specifications

Bore size (mm)	12	16	20	25	32	40	50	63		
Action	Double acting									
Rotary angle Note 1)				90°	±10					
Rotary direction Note 2)			Clocky	vise, Co	unterclo	ckwise				
Rotary stroke (mm)	7	.5	9	.5	1	5	1	9		
Clamp stroke (mm)		10, 2	20, 30			10, 20,	30, 50			
Theoretical clamp force (N) Note 3)	40	75	100	185	300	525	825	1400		
Fluid					ir					
Proof pressure				1.5	MPa					
Operating pressure range				0.1 to	1 MPa			0.1 to 0.6 MPa		
Ambient and fluid temperature			t auto sv auto swi							
Lubrication				Non-	-lube					
Piping port size		M5 :	x 0.8		,	NPT1/8	Rc1/4, NPT1/4			
						1/8		1/4		
Mounting	Tr	irough-h	ole/Both				ead flan	ge		
Cushion					bumper					
Stroke length tolerance	+0.6 -0.4									
Piston speed Note 5)				50 to 20	00 mm/s					
Non-rotating accuracy (Clamp part) Note 1)	±1.4		±1.2		±C).9	±(0.7		

Note 1) Refer to Rotary Angle figure.

Note 2) Direction of rotation viewed from the rod end when the piston rod is retracting

Note 3) Clamp force at 0.5 MPa

Note 4) When using the cylinder within a pressure range from 0.61 to 1 MPa, please use –X2071. Note 5) Be sure to install a speed controller to the cylinder, and adjust the cylinder speed to make it within the range from 50 to 200 mm/s. To adjust the speed, start with the needle in the completely closed position, and then adjust it by opening gradually.

Theoretical Output

							Unit: N
Bore size	Rod size	Operating	Piston area				
(mm)	(mm)	direction	(cm ²)	0.3	0.5	0.7	1.0
10		IN	0.8	25	42	59	85
12	6	OUT	1.1	34	57	79	113
16		IN	1.5	45	75	106	151
10	8	OUT	2.0	60	101	141	201
20	10	IN	2.0	60	101	141	201
20	12	OUT	3.1	94	157	220	314
25	12	IN	3.8	113	189	264	378
25	12	OUT	4.9	147	245	344	491
32	16	IN	6.0	181	302	422	603
32	16	OUT	8.0	241	402	563	804
40	16	IN	10.6	317	528	739	1056
40	16	OUT	12.6	377	628	880	1257
50	20	IN	16.5	495	825	1155	1649
30		OUT	19.6	589	982	1374	1963
63	20	IN	28.0	841	1402	_	_
03		OUT	31.2	935	1559	_	_

Note) Theoretical output (N) = Pressure (MPa) x Piston area (cm²) x 100 Operating direction IN: Clamp OUT: Unclamp

Weight

									Unit: g
Clan	np stroke				Bore siz	ze (mm)			
((mm)	12	16	20	25	32	40	50	63
	10	69	94	222	282	445	517	921	1256
	20	84	113	250	319	494	570	1001	1364
	30	99	132	279	355	542	623	1081	1472
	50	_	_	_	_	639	728	1241	1687

Additional Weight

								Unit: g
Bore size (mm)	12	16	20	25	32	40	50	63
With arm	13	32	100	100	200	200	350	350
Head flange (including mounting bolt)	58	69	130	150	175	209	371	578

 
Calculation: (Example) MKG20-10RNZ • Standard calculation: MKB20-10RZ.....222 g • Extra weight calculation: Head flange130 g With arm100 g 452 g



Mounting Bolt for MKB-Z

Mounting: Mounting bolt for through-hole type is available. Ordering: Add the word "Bolt" to the mounting bolt size.

Example) Bolt M5 x 75 L (4 pcs.)



Note) Be sure to use a flat washer to mount cylinders via through-holes.

Cylinder model	С	D	Mounting bolt size
MKB12-10□Z		50	M3 x 50L
-20□Z	8	60	M3 x 60L
-30□Z	8	70	M3 x 70L
MKB16-10□Z		50	M3 x 50L
-20□Z	8	60	M3 x 60L
-30□Z		70	M3 x 70L
MKB20-10□Z		75	M5 x 75L
-20□Z	9	85	M5 x 85L
-30□Z		95	M5 x 95L
MKB25-10□Z	8	75	M5 x 75L
-20□Z		85	M5 x 85L
-30□Z		95	M5 x 95L
MKB32-10□Z	9.5	85	M5 x 85L
-20□Z		95	M5 x 95L
30□Z		105	M5 x 105L
-50□Z		125	M5 x 125L
MKB40-10□Z		80	M5 x 80L
-20□Z	11	90	M5 x 90L
-30□Z	''	100	M5 x 100L
-50□Z		120	M5 x 120L
MKB50-10□Z		90	M6 x 90L
-20□Z	10.5	100	M6 x 100L
-30□Z	10.5	110	M6 x 110L
-50□Z		130	M6 x 130L
MKB63-10□Z		95	M8 x 95L
-20□Z	14.1	105	M8 x 105L
-30□Z	14.1	115	M8 x 115L
-50□Z		135	M8 x 135L

Clamp Arm Mounting

Use a clamp arm that is available as an option.

To fabricate a clamp arm, make sure that the allowable bending moment and the inertial moment will be within the specified range. Refer to Graph 1 and 2 on page 1.

Ensuring Safety

⚠ Caution

If one side of the piston is pressurized by supplying air with the clamp arm attached, the piston will move vertically while the clamp arm rotates.

This operation could be hazardous to personnel, as their hands or feet could get caught by the clamp arm, or could lead to equipment damage. Therefore, it is important to secure as a danger zone a cylindrical area with the length of the clamp arm as its radius, and the stroke plus 20 mm as its height.


Clamp Arm Mounting and Removal

⚠ Caution

When the arm is mounted onto or removed from the piston rod, do not fix the cylinder body, but hold the arm with a spanner when tightening or loosening the bolt (Fig. 1).

If the bolt is tightened with the cylinder body fixed, excessive rotation force will be applied to the piston rod, which may damage the internal components.

Note that when making an arm, machine it so that it engages with the width across flats on the rod end to prevent it from rotating.

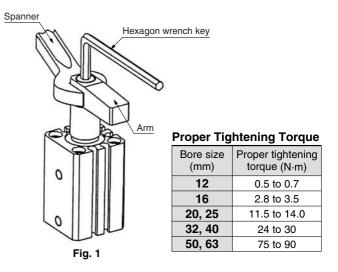

Head Flange Mounting

⚠ Caution


The mounting bolt for the head flange should be tightened to the torque shown in the below table.

Bore size	Thread size	Tightening torque	
ø12, 16	M4 x 0.7	1.4 to 2.6 N·m	
ø 20 to 40	to 40 M6 x 1.0 9.0		
ø 50	M8 x 1.25	11.4 to 22.4 N·m	
ø 63	M10 x 1.5	25.0 to 44.9 N·m	




Construction

 
New MK12, 16



New MK20 to 32

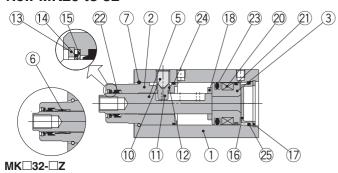


New MK40 to 63

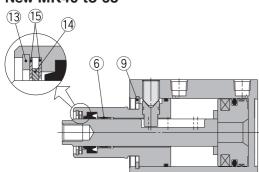



Component Parts


iiponent i arto		
Description	Material	Note
Cylinder tube	Aluminum alloy	Hard anodised
Rod cover	Aluminum alloy	Hard anodised
Piston	Aluminum alloy	Chromated
Magnet holder	Aluminum alloy	Chromated
Dictor rod	Stainless steel	ø12 to ø25 Nitriding
riston rou	Carbon steel	ø32 to ø63 Heated, Nickel plated
Bushing	Copper bearing material	ø32 to ø63 only
Stop ring	Stainless steel	ø20 to ø32 only
Round R-type retaining ring	Carbon tool steel	ø12, ø16 only
C-type retaining ring	Carbon tool steel	ø40 to ø63 only
Hexagon socket head set screw	Chromium molybdenum steel	Sharp end section: 90
Guide pin	Stainless steel	Nitriding
O-ring	NBR	
Round R-type retaining ring	Carbon tool steel	Except ø12, ø16
Coil scraper	Phosphor bronze	Except ø12, ø16
Scraper pressure	Stainless steel	Except ø12, ø16
Head cover	Rolled steel	Electroless nickel plated
C-type retaining ring	Carbon tool steel	ø20 to ø32 only
	Cylinder tube Rod cover Piston Magnet holder Piston rod Bushing Stop ring Round R-type retaining ring C-type retaining ring Hexagon socket head set screw Guide pin O-ring Round R-type retaining ring Coil scraper Scraper pressure Head cover	Cylinder tube Aluminum alloy Rod cover Aluminum alloy Piston Aluminum alloy Magnet holder Aluminum alloy Piston rod Stainless steel Bushing Copper bearing material Stop ring Stainless steel Round R-type retaining ring Carbon tool steel C-type retaining ring Carbon tool steel Hexagon socket head set screw Chromium molybdenum steel Guide pin Stainless steel O-ring NBR Round R-type retaining ring Carbon tool steel Coil scraper Phosphor bronze Scraper pressure Stainless steel Head cover Rolled steel

  With arm (N)

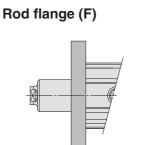



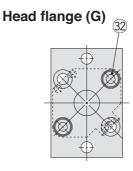



Component Parts

iiponent Parts				
Description	Material		Note	
Bumper	Urethane			
Bumper B	Urethane		ø12, ø16 only	
Magnet	-			
Wear ring	Resin	ı	Except ø12, ø16	
Rod seal	NBR			
Piston seal	NBR			
Gasket	NBR			
O-ring	NBR	ø20 to ø32 only		
Arm	Rolled steel			
Hexagon socket head cap screw	Chromium molybdenum steel			
Spring washer	Hard steel			
Clamp bolt	Chromium molybdenum steel			
Hexagon nut	Rolled steel			
Flange	Rolled steel			
Hexagon socket	Chromium	Qty.	ø12, ø16, ø32 to ø40: 4 pcs.	
head cap screw	molybdenum steel		ø20, ø25: 2 pcs.	
	Description Bumper Bumper B Magnet Wear ring Rod seal Piston seal Gasket O-ring Arm Hexagon socket head cap screw Spring washer Clamp bolt Hexagon nut Flange	Description Material Bumper Urethane Bumper B Urethane Magnet — Wear ring Resin Rod seal NBR Piston seal NBR Gasket NBR O-ring NBR Arm Rolled steel Hexagon socket head cap screw Chromium molybdenum steel Spring washer Hard steel Hexagon nut Rolled steel Hexagon socket Flange Rolled steel Hexagon socket Chromium molybdenum steel Hexagon nut Rolled steel Hexagon socket Chromium Chromium	Description Material Bumper Urethane Bumper B Urethane Magnet — Wear ring Resin IR Rod seal NBR Piston seal NBR Gasket NBR O-ring NBR Arm Rolled steel Hexagon socket head cap screw Chromium molybdenum steel Spring washer Hard steel Clamp bolt Chromium molybdenum steel Hexagon nut Rolled steel Hexagon socket Chromium Chromium Chromium	

Replacement Parts/Seal Kit

Bore size (mm)	ø 12	ø 16	ø 20	ø 25	ø 32	ø 40	ø 50	ø 63
Kit no.	CQSB12-PS	CQSB16-PS	MK20Z-PS	MK25Z-PS	MK32Z-PS	MK2T40-PS	MK2T50-PS	MK63Z-PS
Contents	Set of nos. a	bove 22 23 24			Set of nos. abo	ve 14 22 23 24		

- * Seal kit includes numbers in the table. Order the seal kit, based on each bore size.
- * Since the seal kit does not include a grease pack, order it separately. Grease pack part no.: GR-S-010 (10 g)

Replacement Parts/Guide Pin Kit

Bore size (mm)	ø 12	ø 16	ø 20	ø 25	ø 32	ø 40	ø 50	ø 63
Kit no.	MK12Z-GS	MK16Z-GS	MK20Z-GS	MK25Z-GS	MK32Z-GS	MK40Z-GS	MK50Z-GS	MK63Z-GS
Contents	Set of nos. above ① ① ① ②							

^{*} Guide pin kit includes numbers in the table. Order the guide pin kit, based on each bore size.

* For the replacement procedure of the replacement parts/seal and guide pin kits, refer to the Operation Manual.




Dimensions: Ø12, Ø16

The outline dimensions shown are when the rod is retracted.

 ${f E}$ effective thread depth ${f F}$

Through-hole/Both ends tapped common (Basic)

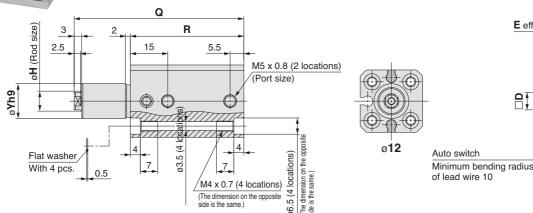


Port side

Basic								(mm
Model	Α	В	С	D	E	F	Н	øYh9
MKB12-Z	25	32	15.5	5	M3 x 0.5	5.5	6	11 -0.043
MKB16-Z	29	38	20	7	M5 x 0.8	6.5	8	14 0042

							(mm)
	Dad			Clamp	stroke		
Model	Rod state	10 ו	mm	20	mm	30 mm	
	State	Q	R	Q	R	Q	R
MKB12-Z	Retracted	68	45.5	88	55.5	108	CF F
WIND 12-Z	Extended	85.5	45.5	115.5	55.5	145.5	65.5
MKB16-Z	Retracted	68	45.5	88	55.5	108	65.5
IVIND 10-Z	Extended	85.5	45.5	115.5		145.5	65.5

Note) The above figure is with the auto switch (D-M9□) mounted.


With arm

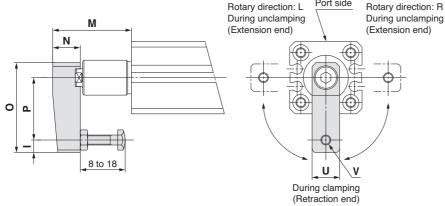

With Arm						(mm
Model	Τ	N	0	Р	U	٧
MKB12-Z	4	8	29	20	8	M3 x 0.5
MKB16-Z	5	11	36	25	11	M4 x 0.7

	Rod	M				
Model	state	С	lamp strol	ке		
	State	10 mm	20 mm	30 mm		
MKB12-Z	Retracted	28.5	38.5	48.5		
WIND 12-Z	Extended	46	66	86		
MKB16-Z	Retracted	31.5	41.5	51.5		
WIND 10-Z	Extended	49	69	89		


Head flange

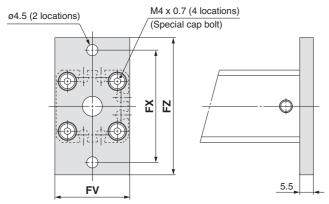

Head Flange (mm)					
Model	FV	FX	FZ		
MKG12-Z	25	45	55		
MKG16-Z	30	45	55		

Rod flange

- * The dimensions other than MM dimensions are the same as those of head flange.
- \ast The arm dimensions other than M dimensions are the same as those of with arm.

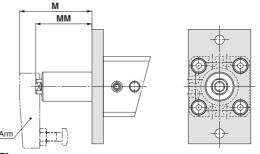

Rod Flar	ıge
----------	-----


nou riai	ige						(mm)
	Dad		M			MM	
Model	Rod state	CI	amp stro	ke	CI	amp stro	ke
	State	10 mm	20 mm	30 mm	10 mm	20 mm	30 mm
MKF12-Z	Retracted	23	33	43	17	27	37
WIKE 12-Z	Extended	40.5	60.5	80.5	34.5	54.5	74.5
MKF16-Z	Retracted	26	36	46	17	27	37
WKF 10-2	Extended	43.5	63.5	83.5	34.5	54.5	74.5



Dimensions: Ø20, Ø25

The outline dimensions shown are when the rod is retracted.

Through-hole/Both ends tapped common (Basic)

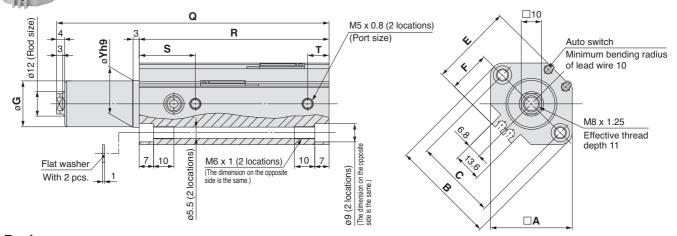


Basic									(mm)	į
Model	Α	В	С	Е	F	G	øYh9	S	Т	
MKB20-Z	36	47	36	35.5	18	17.9	18-0.043	28	9	
MKB25-Z	40	52	40	40.5	21	22.5	23 0050	27.5	10.5	

							(111111)				
	Dod	Clamp stroke									
Model	Rod state	10	mm	20	mm	30	mm				
	State	Q	R	Q	R	Q	R				
MKB20-Z	Retracted	92.5	72	112.5	82	132.5	92				
WKD2U-Z	Extended	112	12	142	02	172	92				
MKB25-Z	Retracted	93.5	73	113.5	83	133.5	93				
IVIND23-Z	Extended	113	/3	143	03	173	93				


Note) The above figure is with the auto switch (D-M9 \square) mounted.

With arm

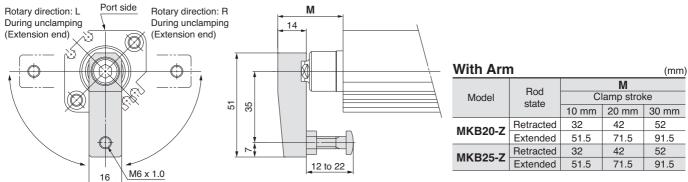

Head flange


During clamping (Retraction end)

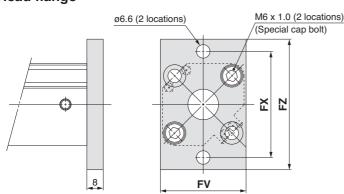

Head Fla	Head Flange (mm)											
Model	FV	FX	FZ									
MKG20-Z	39	48	60									
MKG25-Z	42	52	64									

Rod flange

- * The dimensions other than MM dimensions are the same as those of head flange.
- * The arm dimensions other than M dimensions are the same as those of with arm.

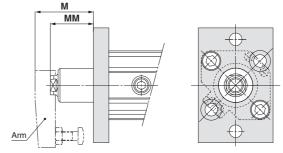


nou i iai	ige						(mm)		
	Dad		M			MM			
Model	Rod state	CI	amp stro	ke	CI	amp stroke			
	State	10 mm	20 mm	30 mm	10 mm	20 mm	30 mm		
MKF20-Z	Retracted	24	34	44	12.5	22.5	32.5		
WKF2U-Z	Extended	43.5	63.5	83.5	32	52	72		
MKF25-Z	Retracted	24	34	44	12.5	22.5	32.5		
WKF25-Z	Extended	43.5	63.5	83.5	32	52	72		



Dimensions: Ø32, Ø40, Ø50, Ø63

The outline dimensions shown are when the rod is retracted.

Through-hole/Both ends tapped common (Basic)

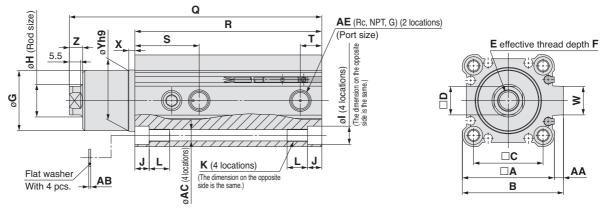


Basic	Basic (mn												(mm)									
Model	Α	В	С	D	Е	F	G	Н	I	J	K	L	S	Т	W	Х	øYh9	Z	AA	AB	ø AC	AE
MKB32-Z	45	49.5	34	14	M10 x 1.5	12	29.5	16	9	7	M6 x 1.0	10	31.5	10.5	14	3	30_0.062	6.5	4.5	1	5.5	1/8
MKB40-Z	52	57	40	14	M10 x 1.5	12	29.5	16	9	7	M6 x 1.0	10	29	9	15	3	30_0.062	6.5	5	1	5.5	1/8
MKB50-Z	64	71	50	17	M12 x 1.75	15	36.5	20	11	8	M8 x 1.25	14	34	11.5	19	3.5	37 -0.062	7.5	7	1	6.6	1/4
MKB63-Z	77	84	60	17	M12 x 1.75	15	47.5	20	14	10.5	M10 x 1.5	18	34.5	10.5	19	3.5	48-0.062	7.5	7	1.4	9	1/4

	Dod	Clamp stroke										
Model	Rod state	10 mm		20	mm	30	mm	50 mm				
	State	Q	R	Q	R	Q	R	Q	R			
MKB32-Z	Retracted	113.5	81.5	133.5	91.5	153.5	101.5	193.5	121.5			
WKD32-Z	Extended	138.5	01.5	168.5	91.5	198.5	101.5	258.5	121.5			
MKB40-Z	Retracted	114.5	75	134.5	0.5	154.5	0.5	194.5	115			
WKD4U-Z	Extended	139.5	75	169.5	85	199.5	95	259.5	115			
MKB50-Z	Retracted	132	86.5	152	96.5	172	106.5	212	126.5			
WKD5U-Z	Extended	161	00.5	191	96.5	221	106.5	281	120.5			
MKB63-Z	Retracted	135	90	155	100	175	110	215	130			
IVIND03-Z	Extended	164	90	194	100	224	110	284				

Note) The above figure is with the auto switch (D-M9□) mounted.

With arm

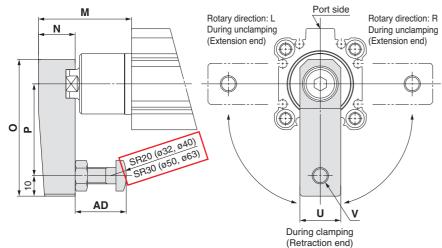

,	With Arm						(mm)
ĺ	Model	N	0	Р	U	V	AD
	MKB32-Z	18	67	45	20	M8 x 1.25	15 to 25
Ī	MKB40-Z	18	67	45	20	M8 x 1.25	15 to 25
	MKB50-Z	22	88	65	22	M10 x 1.5	30 to 40
ĺ	MKB63-Z	22	88	65	22	M10 x 1.5	30 to 40


	Rod		IN.	/I						
Model	state	Clamp stroke								
	Siaie	10 mm	20 mm	30 mm	50 mm					
MKB32-Z	Retracted	45.5	55.5	65.5	85.5					
WKD32-Z	Extended	70.5	90.5	110.5	150.5					
MKB40-Z	Retracted	53	63	73	93					
WKD4U-Z	Extended	78	98	118	158					
MKB50-Z	Retracted	63	73	83	103					
WINDSU-Z	Extended	92	112	132	172					
MKB63-Z	Retracted	62.5	72.5	82.5	102.5					
MIKD03-Z	Extended	91.5	111.5	131.5	171.5					



Dimensions: Ø32, Ø40, Ø50, Ø63

The outline dimensions shown are when the rod is retracted.


Head flange

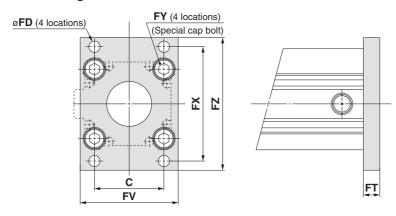

Head Flange (mm) C ØFD FT Model FZ MKG32-Z 34 5.5 8 48 56 M6 x 1.0 65 **MKG40-Z** 40 5.5 8 54 62 M6 x 1.0 72 MKG50-Z 50 M8 x 1.25 89 6.6 9 67 76 MKG63-Z 60 9 9 80 92 M10 x 1.5 108

Rod flange

- * The dimensions other than MM dimensions are the same as those of head flange.
- * The arm dimensions other than M dimensions are the same as those of with arm.

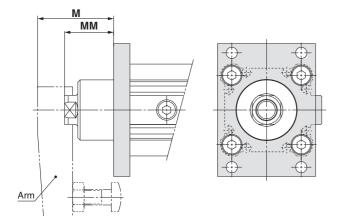


Rod flange

(mm) М MM Rod Model Clamp stroke Clamp stroke state 10 mm | 20 mm | 30 mm | 50 mm | 10 mm | 20 mm | 30 mm | 50 mm Retracted 37.5 47.5 57.5 77.5 24 34 64 MKF32-Z 82.5 102.5 142.5 49 89 129 Extended 62.5 69 45 85 31.5 41.5 51.5 71.5 Retracted 55 65 MKF40-Z Extended 70 90 110 150 56.5 76.5 96.5 136.5 54 64 74 94 36.5 46.5 56.5 76.5 Retracted MKF50-Z Extended 83 103 123 163 65.5 85.5 105.5 145.5 Retracted 53.5 63.5 73.5 93.5 36 46 56 76 MKF63-Z 82.5 102.5 | 122.5 | 162.5 85 105 145



Auto Switch Proper Mounting Position (Detection at Stroke End) and its Mounting Height

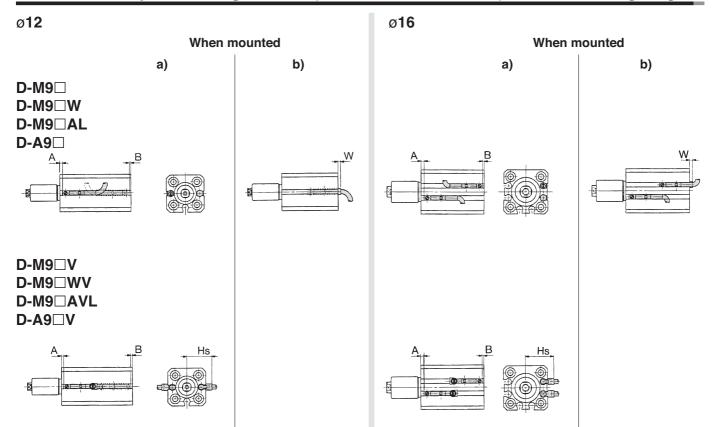

(mm)

Auto Switch	Proper	Mounting	Position
/ tate officer		mounting	

Bore size (mm)	D-M9□ D-M9□W D-M9□AVL				M9□V M9□WV D-M9□AL				AL	D-A9□ D-A9□V			
	Α	В	W	Α	В	W	Α	В	W	Α	В	W	
12	12	4	6	12	4	4	12	4	8	8	0	4.5 (2)	
16	12	4	6	12	4	4	12	4	8	8	0	4.5 (2)	

Note	1)	(): D-	A96.	A9□V

Note 2) When setting an auto switch, confirm the operation and adjust its mounting position.

Auto Switch Mounting Height

Muto switch model	D-M9□V D-M9□WV D-M9□AVL	D-A9□V
Bore size	Hs	Hs
12	19	17
16	21	19


Operating Range


								(mm)		
Auto switch model		Bore size								
Auto Switch model	12	16	20	25	32	40	50	63		
D-M9□/M9□V D-M9□W/M9□WV D-M9□AL/M9□AVL	3	4	5	5.5	5	5	5	6.5		
D-A9□/A9□V	6	7.5	10	9	9	9.5	9.5	11		
D-F7□/J79 D-F7□V/J79C D-F7□W/F7□WV D-J79W D-F79F/F7BAL D-F7BAVL/F7NTL	_	_	6	6	6	6.5	6.5	7.5		
D-A7□/A80 D-A7□H/A80H D-A73C/A80C	_	_	12	11	10.5	11.5	11	13		
D-A79W	_	_	15.5	14	14	15.5	14.5	17		
D-P3DWA	_	_	_	_	6.5	7	7	8		


- * Since this is a guideline including hysteresis, not meant to be guaranteed (assuming approximately 30% dispersion). There may be the case it will vary substantially depending on the ambient environment.
- * The D-M9 \square (V), M9 \square W(V), M9 \square A(V)L, and A9 \square (V) with Ø12 or ø16 (MK), or ø32 or more (MK, MK2) indicate the operating range when using the existing auto switch mounting groove, without using auto switch mounting bracket BQ2-012.




    D-M9□ D-M9□AL D-M9□V D-M9□AVL D-M9□W D-A9□ D-M9□WV D-A9□V










D-F79F/F7NTL **D-F7**□/J79 D-F7□V **D-A7**□/**A80** D-A73C/A80C **D-J79C** D-A7 H/A80H D-F7 W/J79W D-F7□WV **D-A79W** D-F7BAL/F7BAVL

 
ø20, ø25






Ø32 to Ø63



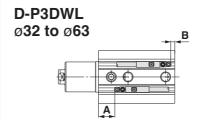

 

Auto Switch Proper Mounting Position

Bore size (mm)	D-F7□/J79 D-F7□V D-M9□V D-J79C/F7□W D-M9□W D-F7BAL D-M9□WV D-F7BAVL D-M9□AL D-F79F/J79W D-A73C/A80C D-A72		V V/F7□W WV AL AVL V/J79W H/A80H	D-F7NTL		D-A9□ D-A9□V		D-A73 D-A80		D-A79W		D-P3DWL		
	Α	В	Α	В	Α	В	Α	В	Α	В	Α	В	Α	В
20	30.5	10.0	28.0	7.5	33.0	12.5	26.5	6.0	27.5	7.0	25.0	4.5	_	_
25	29.5	12.0	27.0	9.5	32.0	14.5	25.5	8.0	26.5	9.0	24.0	6.5	_	_
32	31.5	13.0	29.0	10.5	34.0	15.5	27.5	9.0	28.5	10.0	26.0	7.5	22.5	3.5
40	25.0	13.0	22.5	10.5	27.5	15.5	21.0	9.0	22.0	10.0	19.5	7.5	16.0	4.0
50	29.0	16.5	26.5	14.0	31.5	19.0	25.0	12.5	26.0	13.5	23.5	11.0	20.0	7.5
63	29.5	19.5	27.0	17.0	32.0	22.0	25.5	15.5	26.5	16.5	24.0	14.0	20.5	10.5

Note) When setting an auto switch, confirm the operation and adjust its mounting position.

Auto Swi	Auto Switch Mounting Height (mm)											
Auto switch model	D-M9□V	D-A9□V	D-F7□/J79 D-F7□W D-J79W D-F7BAL D-F79F D-F7NTL D-A7□H D-A80H	D-F7□V D-F7□WV	D-J79C	D-A7□ D-A80	D-A73C D-A80C	D-A79W	D-P3DW□			
Bore size \	U	U	U	U	C	U	U	U	U			
20	25	23	25.5	27.5	30	24.5	31	28	_			
25	28	26	28	30.5	32.5	27.5	34	31	_			
32	28.5	26.5	36	26.5	39.5	34	40.5	37.5	33			
40	32	30	38	40	42.5	37.5	43.5	40.5	36.5			
50	37.5	35	43.5	45	48	43	49	46	42			
63	42.5	40.5	48.5	50.5	53.5	48	54.5	51.5	47			

Auto Switch Mounting Bracket/Parts No.

Applicable auto switch	D-M9□/M9□V D-M9□W/M9□WV D-M9□AL/M9□AVL D-A9□/A9□V	D-F7□/F7□V/J79/J79/ D-F7BAL/F7BAVL/F79 D-A7□/A80/A7□H/A80	F/F7NTL	D-P3DW□	
Bore size (mm)	ø12 to ø63	ø 20 , ø 25	ø32 to ø63	ø32 to ø63	
Auto switch mounting bracket part no.	_	BQ4-012	BQ5-032	BQ3-032S	
Auto switch mounting bracket fitting parts lineup/weight	_	① Auto switch mounting screw (M2.5 x 8L) ② Auto switch mounting nut Weight: 1.5 g When requesting the enclosure of the cylinder for shipment, add "-BQ" to the		①Hexagon socket head cap screw (M2.5 x 6L) ②Hexagon socket head cap screw (M2.5 x 9L) ③Auto switch mounting bracket (nut) Weight: 2.5 g	
		Standard model no. +BQ Example: N			
	Surfaces with auto switch mounting slot	Auto switch mounting rail side only	A/B/C side except port side	Surfaces with auto switch mounting slot	
Auto switch mounting surface	012, 016 025	_	Port side		
mounting surface	Ø32 to Ø63	ø 20 , ø 25	B		
Mounting of auto switch	Auto switch Men tightening the auto switch switch screw (N-mounting screw, use a watchmakers' screwdriver with a handle 5 to 6 mm in diameter. Tightening torque of auto switch mounting screw (N-m) Auto switch model Tightening torque D-M9□(V) D-M9□(V)	Insert the nut into the auto switch mounting slot on the cylinder tube, and place it in the roughly estimated setting position. Engage the ridge on the auto switch mounting arm with the recess in the cylinder tube rail, and slide it to the position of the nut. Gently screw the auto switch mounting screw into the thread of the auto switch mounting nut through the mounting hole on the auto switch mounting arm. Confirm where the mounting position is, and tighten the auto switch mounting screw to fix the auto switch. The tightening torque of the M2.5 screw must be 0.25 to 0.35 N·m. The detection position can be changed under the conditions in step 3. Auto switch mounting screw (M2.5 x 0.45 x 8L) 2 Auto switch 1 Auto switch mounting nut	Insert the nut into the auto switch mounting slot on the cylinder tube, and place it in the roughly estimated setting position. With the lower tapered part of the auto switch spacer facing the outside of the cylinder tube, line up the M2.5 through hole with the M2.5 female of the auto switch mounting nut. Gently screw the auto switch mounting nut fixing screw (M2.5) into the thread of the auto switch mounting nut through the mounting hole. Engage the ridge on the auto switch mounting arm with the recess in the auto switch spacer. Tighten the auto switch mounting screw (M3) to fix the auto switch. The tightening torque of the M3 screw must be 0.35 to 0.45 N·m. Confirm where the mounting position is, and tighten the auto switch fixing screw (M2.5) to fix the auto switch mounting nut. The tightening torque of the M2.5 screw must be 0.25 to 0.35 N·m. The detection position can be changed under the conditions in step ⑤. Auto switch mounting screw (M2.5 x 0.45 x 10L) Auto switch mounting screw (M3 x 0.5 x 8L) Auto switch mounting screw (M3 x 0.5 x 8L)	Insert the protrusion on the bottom of the auto switch into the mating part of the auto switch mounting bracket and fix the auto switch mounting bracket temporarily by tightening the hexagon socket head cap screw (M2.5 x 9L.) 1 to 2 turns. Insert the temporarily tightened mounting bracket into the mating groove of the cylinder tube, and slide the auto switch onto the cylinder tube through the groove. Check the detecting position of the auto switch and fix the auto switch firmly with the hexagon socket head cap screw (M2.5 x 6L, M2.5 x 9L.).* If the detecting position is changed, go back to step (2). The hexagon socket head cap screw (M2.5 x 6L) is used to fix the mounting bracket and cylinder tube. This enables the replacement of the auto switch without adjusting the auto switch position. Note 1) Ensure that the auto switch is covered with the mating groove to protect the auto switch. Note 2) The tightening torque of the hexagon socket head cap screw (M2.5 x 9L.) is 0.2 to 0.3 N·m. Note 3) Tighten the hexagon socket head cap screw (M2.5 x 9L.) Hexagon socket head cap screw (M2.5 x 6L.) Auto switch mounting bracket	

Note) The auto switch mounting bracket and auto switch are enclosed with the cylinder for shipment.

Other than the models listed in "How to Order", the following auto switches are applicable. For detailed specifications, refer to Best Pneumatics No. 3.

Auto switch type	Model	Electrical entry	Features	Applicable bore size	
	D-A72, A73		_		
	D-A80	Grommet (Perpendicular)	Without indicator light		
	D-A79W		Diagnostic indication (2-colour indication)		
Reed	D-A73C	Connector (Perpendicular)	_	ø20 to ø63	
	D-A80C	Connector (Ferpendicular)	Without indicator light		
	D-A72H, A73H, A76H	Grommet (In-line)	-		
	D-A80H	Grommet (m-ime)	Without indicator light		
	D-F7NV, F7PV, F7BV		П		
	D-F7NWV, F7BWV	Grommet (Perpendicular)	Diagnostic indication (2-colour indication)		
	D-F7BAVL		Water resistant (2-colour indication)		
	D-J79C	Connector (Perpendicular)	_		
Solid state	D-F79, F7P, J79		_	ø20 to ø63	
	D-F79W, F7PW, J79W		Diagnostic indication (2-colour indication)		
	D-F7BAL	Grommet (In-line)	Water resistant (2-colour indication)		
	D-F79F		With diagnostic output (2-colour indication)		
	D-F7NTL		With timer		

^{*} With pre-wired connector is also available for solid state auto switches. For details, refer to Best Pneumatics No. 3.


Mounting

 
∆ Caution

When a Magnetic Body Surrounds the Cylinder


 When a magnetic body surrounds the cylinder as shown in the figure below (including when the magnetic body is only on one side of the cylinder), the movement of the auto switch may become unstable, so please contact SMC.


ø12 to ø16 ø32 to ø63

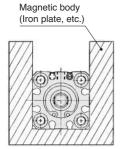



ø20. ø25

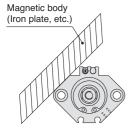

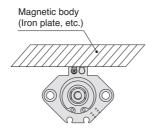


With Magnetic Field Resistant Auto Switch D-P3DWL

• If welding cables or welding gun electrodes are in the vicinity of the cylinder, the magnets in the cylinder could be affected by the external magnetic fields. (Please contact SMC if the welding amperage exceeds 16000 A.) If the source of strong magnetism comes in contact with the cylinder or an auto switch, make sure to install the cylinder away from the source of the magnetism. If the cylinder is to be used in an environment in which spatter will come in direct contact with the lead wires, cover the lead wires with a protective tube. For the protective tube, use a tube I.D. Ø7 or more, which excels in heat resistance and flexibility. Please contact SMC if an inverter welder or a DC welder will be used.




Auto Switch Connections and Examples

Basic Wiring

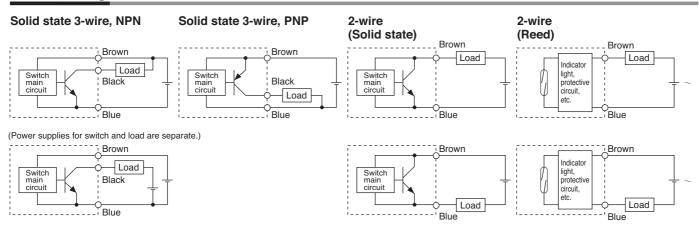


Example of Connection to PLC (Programmable Logic Controller)

 Sink input specification 3-wire, NPN




 Source input specification 3-wire, PNP

 


 Connect according to the PLC input specifications, since the connection method will differ depending on the PLC input specifications.






2-wire

 


Example of AND (Serial) and OR (Parallel) Connection

 
3-wire AND connection for NPN output (using relays)



 AND connection for NPN output (performed with switches only)




OR connection for NPN output

 

The indicator lights will illuminate when both switches are turned ON.

 • 2-wire 2-switch AND connection




When two switches are connected in series, a load may malfunction because the load voltage will decrease in the ON state. The indicator lights will illuminate if both switches are turned ON.

Load voltage at ON = $\frac{Power supply}{voltage} - \frac{Residual}{voltage} \times 2 pcs.$ = 24 V - 4 V x 2 pcs. = 16 V

Example) Power supply voltage: 24 VDC
Auto switch internal voltage drop: 4 V

 2-switch OR connection



When two switches are connected in parallel, malfunction may occur because the load voltage will increase in the OFF state.

(Solid state)

Load voltage at OFF = Leakage current x 2 pcs. x Load impedance = 1 mA x 2 pcs. x 3 k = 6 V

Example) Load impedance: 3 k
Auto switch leakage current: 1 mA

(Reed)

Because there is no leakage current, the load voltage will not increase in the OFF state. However, depending on the number of switches in the ON state, the indicator lights may sometimes dim or not light because of the dispersion and reduction of the current flowing to the switches.



Rotary Clamp Cylinder Series MK



Overall Length Is the Same as the MK2 Series

Stroke

• The overall length Q (from the end on

the head side to the rod end) is the

Rotary

direction

Overall length is the same as the MK2 series

Please contact SMC for detailed dimensions, specifications, and lead times.

Body option

Made to Order Individual Specifications

Symbol Max. Operating Pressure 1.0 MPa -X2071

MK | Mounting | 63 - | Stroke | Rotary direction | N Z - X2071

• Use this specification if the pressure is between 0.61 and 1.0 MPa when using MK \square 63- \square Z.

• The rod end and arm dimensions are different from the standard.

• When an arm assembly is ordered for this specification, order it with the part number [MK-A063-X2071]. (See below.)

Body option							
Nil Without arm							
N	With arm						

Max. operating pressure 1.0 MPa

Specifications

Bore size (mm)	63
Operating pressure range	0.1 to 1.0 MPa

* Specifications other than the above are the same as the standard.

same as the MK2 series.

MK Mounting

Applicable bore size/ Stroke

Symbol

X2094


X2094

Bore size	Stroke					
ø 20						
ø 25	10.20					
ø 32	10, 20					
ø 40						
ø 50	20 50					
ø 63	20, 50					


Construction/ **Dimensions**

(The outline dimensions shown are when the rod is retracted.) Dimensions other than those marked with "*" are the same as the standard.

Without arm

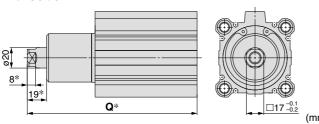

	Dad	Q							
Model	Rod state	Clamp stroke							
	State	10 mm	20 mm	30 mm	50 mm				
MK□63-□Z-X2071	Retracted	146.5	166.5	186.5	226.5				
IVINLUO-LLZ-XZU/ I	Extended	175.5	205.5	235.5	295.5				

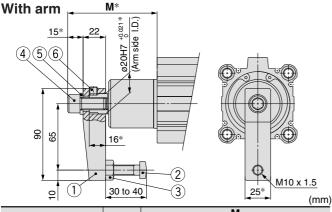

Model	Rod	M						
	state		Clamp stroke					
	State	10 mm	20 mm	30 mm	50 mm			
MK□63-□Z-X2071	Retracted	77.5	87.5	97.5	117.5			
IVINLIOS-LIZ-AZU/ I	Extended	106.5	126.5	146.5	186.5			

Arm assembly

MK-A063-X2071

Max. operating pressure 1.0 MPa


Arm Assembly Component Parts

No.	Description	Material	Note	
1	Arm	Rolled steel		
2	Clamp bolt	Chromium molybdenum steel		
3	Hexagon nut	Rolled steel		
4	Hexagon socket head cap screw	Chromium molybdenum steel	M12 x 25L	
5	Spring washer	Hard steel		
6	Hexagon socket head set screw	Chromium molybdenum steel	Flat point M8 x 8L	

^{*} The arm assembly consists of the parts No.1 to 6.

Dimensions

(The outline dimensions shown are when the rod is retracted.) Dimensions other than those marked with "*" are the same as the standard.

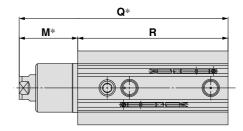

										(mm)
Bore size	Rod state	Clamp stroke								
		10 mm		20 mm			50 mm			
		Q	R	М	Q	R	M	Q	R	M
ø 20	Retracted	95.5	72	23.5	115.5	82	33.5	-	_	_
	Extended	115	72	43	145	82	63	_	_	_
ø 25	Retracted	98.5	73	25.5	118.5	83	35.5	-	_	_
Ø 23	Extended	118	73	45	148	83	65	_	_	_
ø 32	Retracted	121.5	81.5	40	141.5	91.5	50	-	_	_
Ø 3 2	Extended	146.5	81.5	65	176.5	91.5	85	_	_	_
~ 40	Retracted	122.5	75	47.5	142.5	85	57.5	_	_	_
ø 40	Extended	147.5	75	72.5	177.5	85	92.5	_	_	_
~E0	Retracted	_	_	_	162	96.5	65.5	222	126.5	95.5
ø 50	Extended	_	_	-	201	96.5	104.5	291	126.5	164.5
ø 63	Retracted				165	100	65	225	130	95
	Extended				204	100	104	294	130	164

 
Made to Order: Individual Specifications 2

Please contact SMC for detailed dimensions, specifications, and lead times.




3 With Boss in Head End

Symbol -X2172



With boss in head end

 

Bore size	øAh9
ø 20	13 -0.043
ø 25	15 0 0 0 0
ø 32	21 -0.052
ø 40	28 0 -0.052
ø 50	35 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0
ø 63	35 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0

The Dimension of Head End Flange is the Same as the Existing Series MK and MK2


Symbol

-X2177


MKG Bore size - Stroke Rotary direction Body option Z - X2177

The dimension of head end flange is the same as the existing series MK and MK2


• The mounting dimension of head end flange and pin hole size are the same as the existing series MK and MK2. Note) A centering location ring is used for the connection part between the cylinder and head end flange.

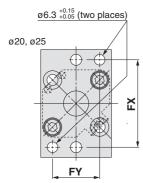

Bore size	FX	FY
ø 20	48	25.5
ø 25	52	28
ø 32	56	_
ø 40	62	_
ø 50	76	_
ø 63	92	_

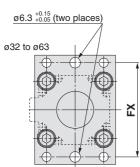

MK Series

 


Specifications

Bore size (mm)	12	16	20	25	32	40	50	63
Rotary angle (°)	60 ±10							
Rotary stroke (mm)	5	5	6.3	6.3	10	10	12.7	12.7

^{*} Specifications other than the above are the same as the standard.

Dimensions: Same as standard product

Rotary Angle

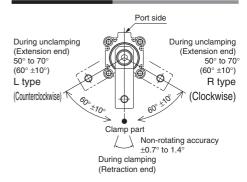

⚠ Safety Instructions

These safety instructions are intended to prevent hazardous situations and/or equipment damage. These instructions indicate the level of potential hazard with the labels of "Caution," "Warning" or "Danger." They are all important notes for safety and must be followed in addition to International Standards (ISO/IEC)*1), and other safety regulations.

Caution indicates a hazard with a low level of risk Caution: which, if not avoided, could result in minor or moderate injury.

Warning indicates a hazard with a medium level of Warning: risk which, if not avoided, could result in death or serious injury.

⚠ Danger :

Danger indicates a hazard with a high level of risk which, if not avoided, will result in death or serious injury

*1) ISO 4414: Pneumatic fluid power – General rules relating to systems. ISO 4413: Hydraulic fluid power - General rules relating to systems. IEC 60204-1: Safety of machinery - Electrical equipment of machines. (Part 1: General requirements)

ISO 10218-1: Manipulating industrial robots - Safety.

⚠ Warning

1. The compatibility of the product is the responsibility of the person who designs the equipment or decides its specifications. Since the product specified here is used under various operating conditions, its compatibility with specific equipment must be decided by the person who designs the equipment or decides its specifications based on necessary analysis and test results. The expected performance and safety assurance of the equipment will be the responsibility of the person who has determined its compatibility with the product. This person should also continuously review all specifications of the product referring to its latest catalogue information, with a view to giving due consideration to any possibility of equipment failure when configuring the

2. Only personnel with appropriate training should operate machinery and equipment.

The product specified here may become unsafe if handled incorrectly. The assembly, operation and maintenance of machines or equipment including our products must be performed by an operator who is appropriately trained and experienced.

- 3. Do not service or attempt to remove product and machinery/equipment until safety is confirmed.
 - 1. The inspection and maintenance of machinery/equipment should only be performed after measures to prevent falling or runaway of the driven objects have been confirmed.
 - 2. When the product is to be removed, confirm that the safety measures as mentioned above are implemented and the power from any appropriate source is cut, and read and understand the specific product precautions of all relevant products carefully.
 - 3. Before machinery/equipment is restarted, take measures to prevent unexpected operation and malfunction.
- 4. Contact SMC beforehand and take special consideration of safety measures if the product is to be used in any of the following
 - 1. Conditions and environments outside of the given specifications, or use outdoors or in a place exposed to direct sunlight.
 - 2. Installation on equipment in conjunction with atomic energy, railways, air navigation, space, shipping, vehicles, military, medical treatment, combustion and recreation, or equipment in contact with food and beverages, emergency stop circuits, clutch and brake circuits in press applications, safety equipment or other applications unsuitable for the standard specifications described in the product catalogue.
 - 3. An application which could have negative effects on people, property, or animals requiring special safety analysis.
 - 4. Use in an interlock circuit, which requires the provision of double interlock for possible failure by using a mechanical protective function, and periodical checks to confirm proper operation.

1. The product is provided for use in manufacturing industries.

The product herein described is basically provided for peaceful use in manufacturing industries.

If considering using the product in other industries, consult SMC beforehand and exchange specifications or a contract if necessary

If anything is unclear, contact your nearest sales branch.

Limited warranty and Disclaimer/ Compliance Requirements

The product used is subject to the following "Limited warranty and Disclaimer" and "Compliance Requirements".

Read and accept them before using the product.

Limited warranty and Disclaimer

- 1. The warranty period of the product is 1 year in service or 1.5 years after the product is delivered.*2)
 - Also, the product may have specified durability, running distance or replacement parts. Please consult your nearest sales branch.
- 2. For any failure or damage reported within the warranty period which is clearly our responsibility, a replacement product or necessary parts will be provided. This limited warranty applies only to our product independently, and not to any other damage incurred due to the failure of the product.
- 3. Prior to using SMC products, please read and understand the warranty terms and disclaimers noted in the specified catalogue for the particular products.
 - *2) Vacuum pads are excluded from this 1 year warranty.

A vacuum pad is a consumable part, so it is warranted for a year after it is delivered. Also, even within the warranty period, the wear of a product due to the use of the vacuum pad or failure due to the deterioration of rubber material are not covered by the limited warranty.

Compliance Requirements

- 1. The use of SMC products with production equipment for the manufacture of weapons of mass destruction (WMD) or any other weapon is strictly prohibited.
- 2. The exports of SMC products or technology from one country to another are governed by the relevant security laws and regulations of the countries involved in the transaction. Prior to the shipment of a SMC product to another country, assure that all local rules governing that export are known and followed.

Be sure to read "Handling Precautions for SMC Products" (M-E03-3) before using.

SMC Corporation (Europe)

2 +43 2262622800 Austria www.smc.at office@smc.at Belaium **2**+32 (0)33551464 www.smcpneumatics.be info@smconeumatics.be Bulgaria *****+359 29744492 office@smc.bg www.smc.bg Croatia **2**+385 13776674 office@smc.hr www.smc.hr Czech Republic **2**+420 541424611 office@smc.cz www.smc.cz Denmark **2**+45 70252900 smc@smcdk.com www.smcdk.com smc@smcpneumatics.ee Estonia **☎**+372 6510370 www.smcpneumatics.ee Finland **2**+358 207513513 www.smc.fi smcfi@smc.fi France *****+33 (0)164761000 www.smc-france.fr contact@smc-france.fr **2**+49 (0)61034020 www.smc-pneumatik.de info@smc-pneumatik.de Germany Greece **2**+30 210 2717265 www.smchellas.gr sales@smchellas.gr Hungary **23511390** www.smc.hu office@smc.hu sales@smcpneumatics.ie *****+353 (0)14039000 Ireland www.smcpneumatics.ie Italy **2**+39 (0)292711 www.smcitalia.it mailbox@smcitalia.it **2**+371 67817700 info@smclv.lv Latvia www.smclv.lv

Lithuania ***** +370 5 2308118 Netherlands Norway ***** +47 67129020 **Poland 2** +48 222119600 Portugal Romania ***** +40 213205111 Russia **2**+7 8127185445 Slovakia Slovenia **2** +34 945184100 Spain Sweden

***** +31 (0)205318888 **2** +351 226166570 *****+421 413213212 *****+386 73885412 **2** +46 (0)86031200 *****+41 (0)523963131 **2**+90 (0)2124440762 **2** +44 (0)845 121 5122 www.smcpneumatics.co.uk sales@smcpneumatics.co.uk

www.smclt.lt www.smcpneumatics.nl www.smc-norge.no www.smc.pl www.smc.eu www.smcromania.ro www.smc-pneumatik.ru

info@smcpneumatics.nl post@smc-norge.no office@smc.pl postpt@smc.smces.es smcromania@smcromania.ro info@smc-pneumatik.ru www.smc.sk office@smc.sk office@smc.si www.smc.si www.smc.eu post@smc.smces.es www.smc.nu post@smcpneumatics.se info@smc.ch www.smc.ch www.entek.com.tr smc@entek.com.tr

info@smclt.lt

SMC CORPORATION Akihabara UDX 15F, 4-14-1, Sotokanda, Chiyoda-ku, Tokyo 101-0021, JAPAN Phone: 03-5207-8249 FAX: 03-5298-5362

Switzerland

Turkey