

IMPORTANT! Read these instructions carefully before using the device. Keep it for future reference.

Your new water extinguisher contains water concentrate intended for extinguishing fires in various materials such as wood, paper, fibrous materials. This fire extinguisher can also be used on fires in electrical installations up to 1000 Volts

THIS PACKAGING CONTAINS

- » Fire extinguisher
- » Wall bracket
- » Hose

CHECKING AND INSPECTING THE FIRE EXTINGUISHER

When unpacking the extinguisher, please check that the manometer needle points in the green sector. Check that the safety pin is mounted and sealed. Make sure that the hose is mounted. If not, attach the hose.

IMPORTANT: Visual inspection of the fire extinguisher is the user's responsibility, for example, that the pressure of the extinguisher is at a satisfactory level.

HOW ABC WATER EXTINGUISHES WORK

The water has a cooling effect on the fire. It prevents the burning material from being reignited.

FIRE CLASSES:

Fire extinguishers are classed using a letter-symbol system which denotes the type of fire they are suitable to extinguish.

Class A - Organic materials such as wood, paper, textiles etc.

IMPORTANT INFORMATION

Always use caution when approaching a fire. Do not go too close to the fire and keep a safety distance of at least 1 meter. Always check the possible escape routes first. Do not try to approach the fire in case there is a risk that it can spread so that your escape route is blocked.

HOW TO OPERATE YOUR FIRE EXTINGUISHER

- » Pull out the safety pin, to free the lever.
- » Aim the nozzle or hose at the base of the fire.
- » Squeeze the handle.
- » Sweep the nozzle or hose across the base of the fire until it is fully extinguished.

MAINTENANCE AND INSPECTION

All maintenance must be done according to national standards. In private households Housegard recommends, an authorized inspection every 5 years, and a full service every 10 years.

REGULAR SELF-MONITORING

- » Check that the extinguisher is correctly located in the designated place.
- » Make sure the fire extinguisher is intact and without visible damage.
- » Check that the manometer needle points in the green sector.
- » Check that the safety pin is in place and sealed.

IMPORTANT: The extinguisher must always be recharged after any use, even if only parts of the contents have been used. Recharging requires special equipment and training, Contact an authorized service centre. Use only Housegard specified extinguishing agents and spare parts.

TECHNICAL SPECIFICATIONS:

6 L WE6HO-A

Model: Housegard WE6HO-A

Type: 6 L water, stored pressured

Fire class: A

Fire rating: 21A

Total weight: 9,2 kg

Pressurization: 12 Bar

Propellant: Nitrogen gas

Agent: Water

Approvals: CE, EN3-7, Wheelmark.

Operating temperature: +5 °C to +60 °C

9L WE9HO-A

Model: Housegard WE9HO-A

Type: 9 L water, stored pressured

Fire class: A

Fire rating: 27A

Total weight: 13,2 kg

Pressurization: 12 Bar

Propellant: Nitrogen gas

Agent: Water

Approvals: CE, EN3-7, Wheelmark.

Operating temperature: +5 °C to +60 °C

IMPORTANT SAFETY INFORMATION

- » The extinguisher is pressurized. DO NOT incinerate. Do not subject to external force or open forcibly.
- » Damaged or corroded extinguishers must be depressurized before disposal. Service should only be performed by authorized personnel.
- » Make sure the fire extinguisher is suitable for the intended area of use. For more information, see label of extinguisher.
- » Never aim the extinguisher's nozzle at people or animals.
- » Keep the extinguisher clean. Do not use corrosive cleaning agents.
- » Fire extinguishers in vehicles must be securely fastened using a suitable bracket.
- » The fire extinguisher should be kept out of reach for young children.
- » This extinguisher contains water, which is a clean agent.
- » Must not be discarded in the normal household waste. On disposal, provide fire extinguishers to your recycling centre.

ENGLISH

WARRANTY

A 5 year warranty applies to pressure drop. The warranty is valid for 5 years calculated from the product's month of production. The warranty requires that the original seal is intact and that the product has not been opened, used, refilled or gone through service that has resulted in physical intervention of the product.

The warranty applies only when the product is used and stored under normal conditions and environment. The warranty does not apply if the product is stored in corrosive or otherwise unfavourable or stressful environments, or otherwise considered to be damaged by its storage or use.

For more information, please visit
www.housegard.com