


Assembly Guide


























Axelent X-It





(Picture: X-Guard X-It)

                          BG	инструкции за монтаж	IT	Istruzioni di montaggio
CZ	Montážní návod	LT	Montavimo instrukcijos
DE	Montageanleitungen	LV	Montāžas instrukcijas
DK	Monteringsvejledning	MT	Istruzzjonijiet għall-immuntar
EE	Paigaldusjuhendid	NL	Montage-instructies
ES	Instrucciones de montaje	PL	Instrukcje składowania
FI	Kokoamisohje	PT	Instruções de montagem
FR	Les instructions d'assemblage	RO	Instrucțiunile de asamblare
GR	οδηγίες συναρμολόγησης	SE	Monteringsanvisningar
HU	Összeszerelési utasítások	SI	Navodila za montažo
IE	Treoracha cóimeála	SK	Návod na montáž

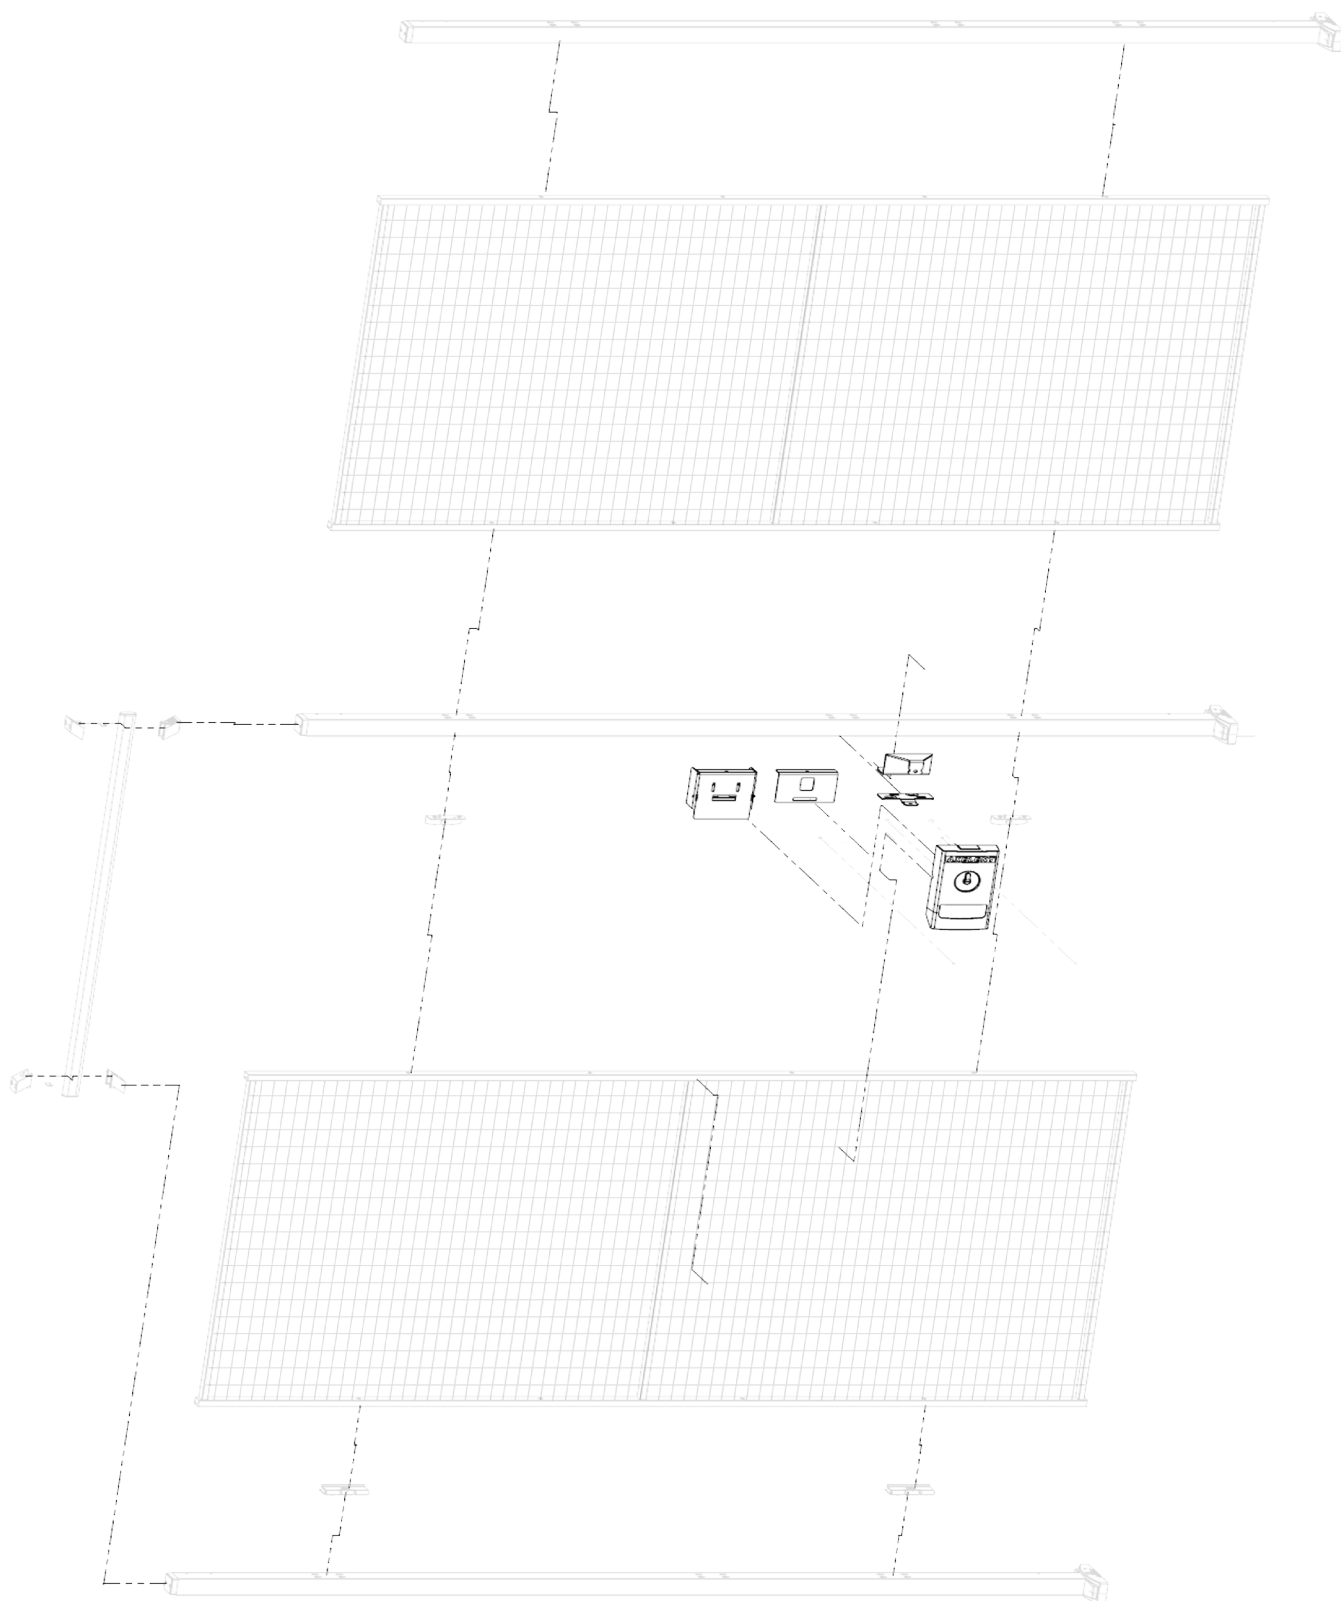


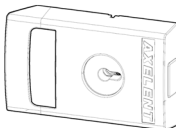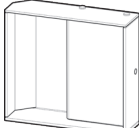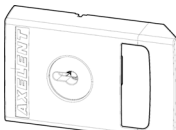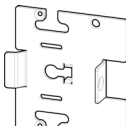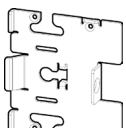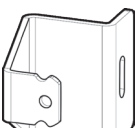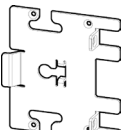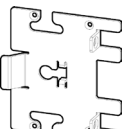XIT-L01-000 *(-L02-)	 x1	 x1	 x4	 x1	*XIT-002-001  x1		
XIT-R01-000 *(-R02-)	 x1	 x1	 x4	 x1			
XIT-0XX-X01 X-Guard	 x1	 x1	 XIT-000-101	 x1	 XIT-000-301	 x1	 XIT-000-401
XIT-0XX-X02 X-Store	 x1	 x1	 XIT-000-102	 x1	 XIT-000-302	 x1	 XIT-000-402
XIT-0XX-103 F	 x1	 x1	 x1	 x1			
XIT-0XX-104 FK	 x1	 x1	 x1	 x1			
XIT-B00-022	 M8x30	 M8x17					


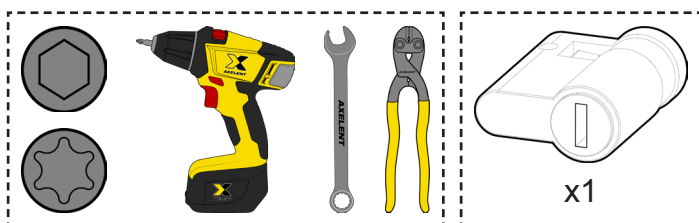 


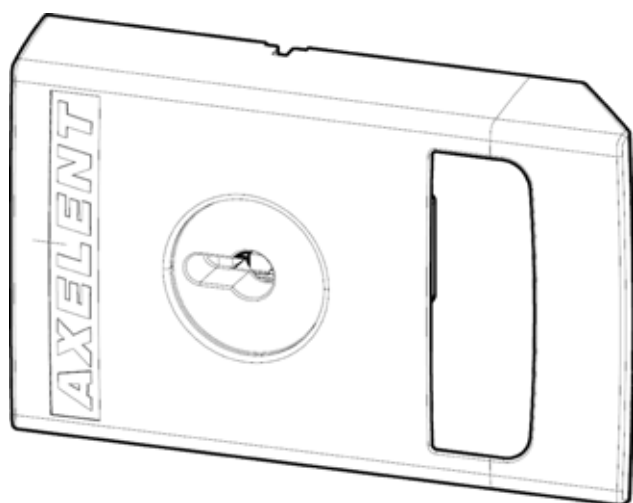 



II.

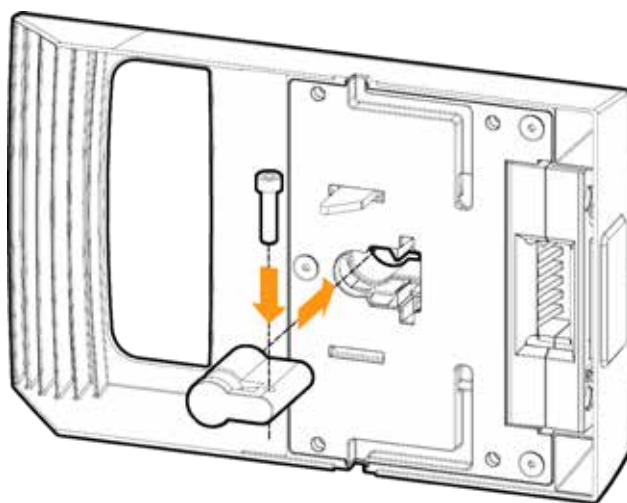 


III.

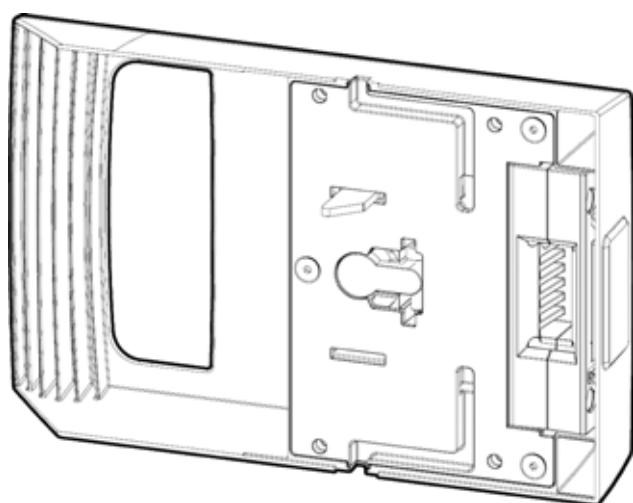  



IV.

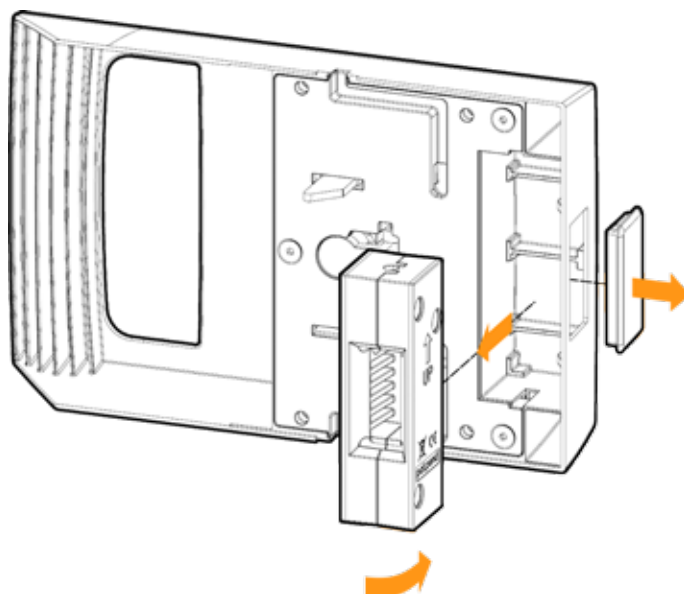  


V.

 

VI.

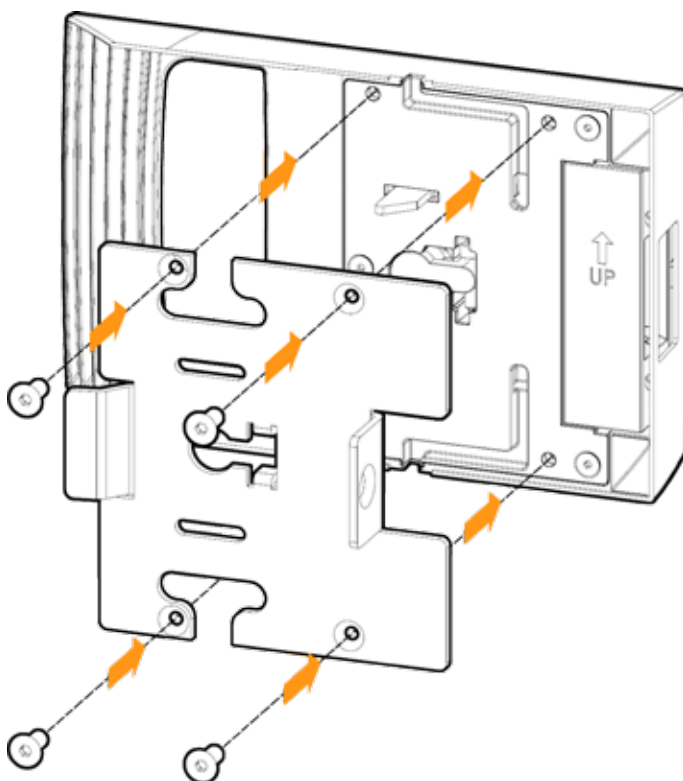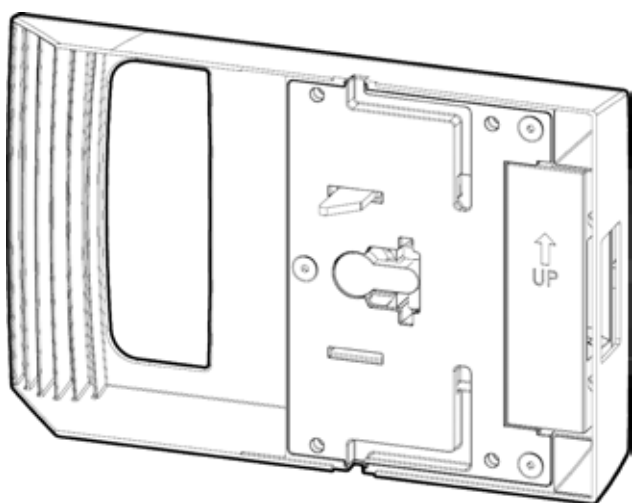  

 1.

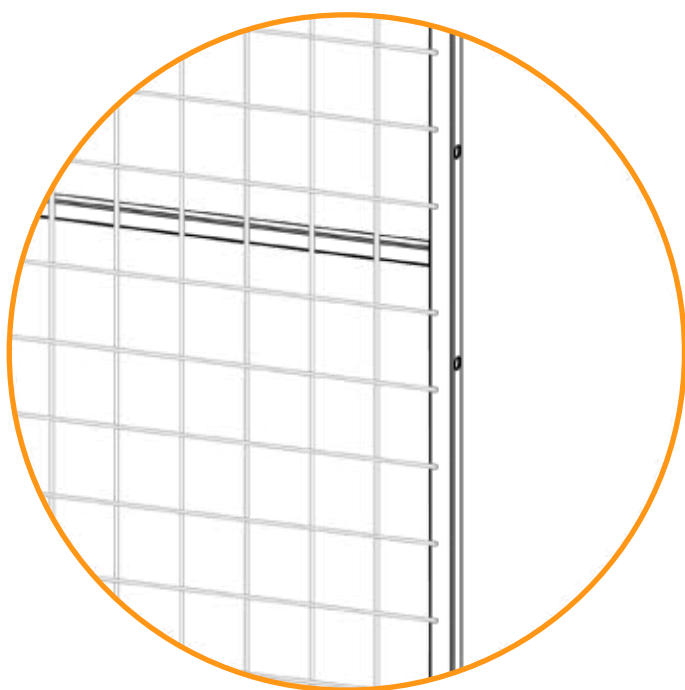


X-Guard ➡ Bild 2.




F/FK ➡ Bild 8.

X-Store ➡ Bild 12.

 
2.X-Guard



  
 
3.

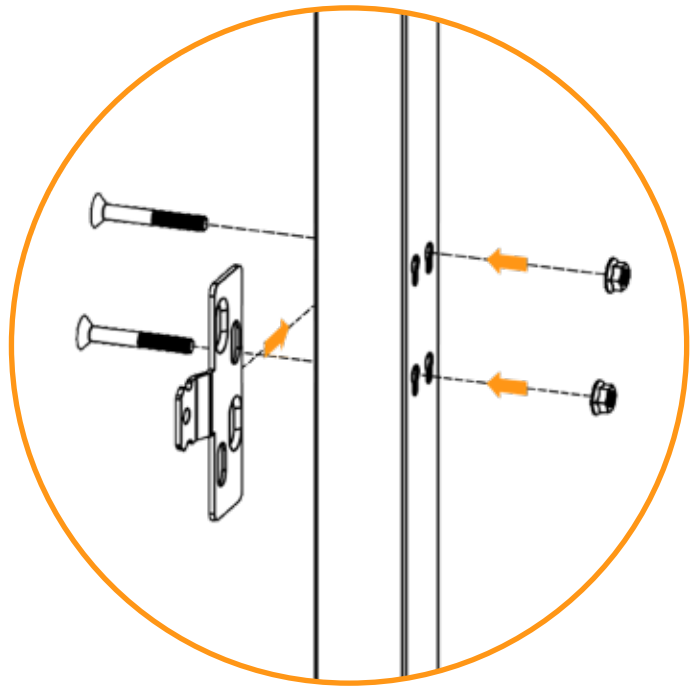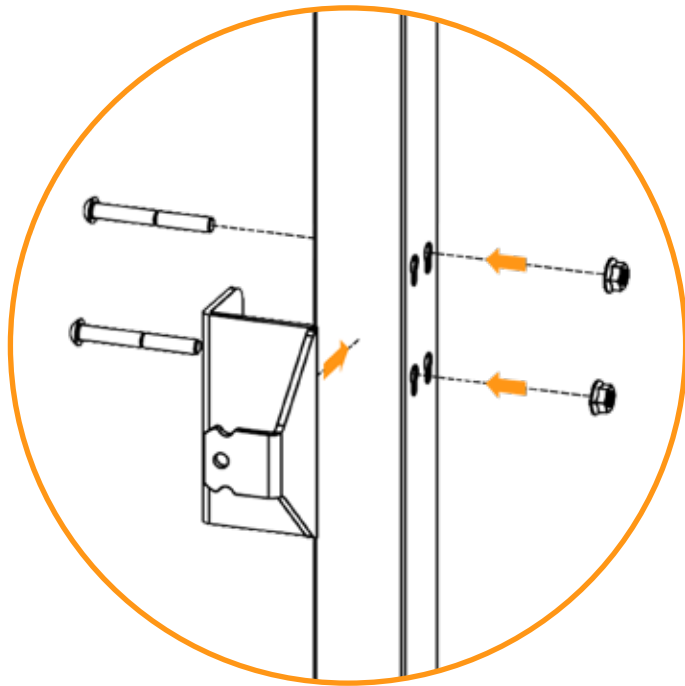

 
4.



  
5.

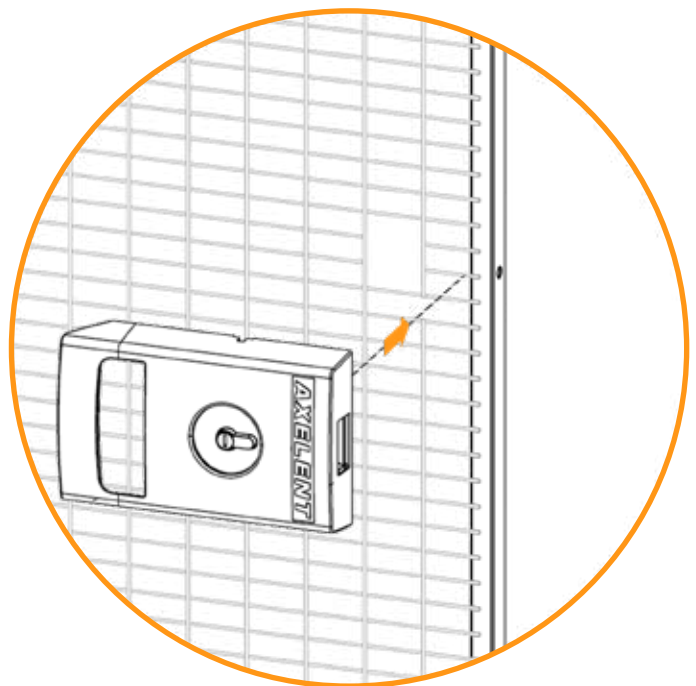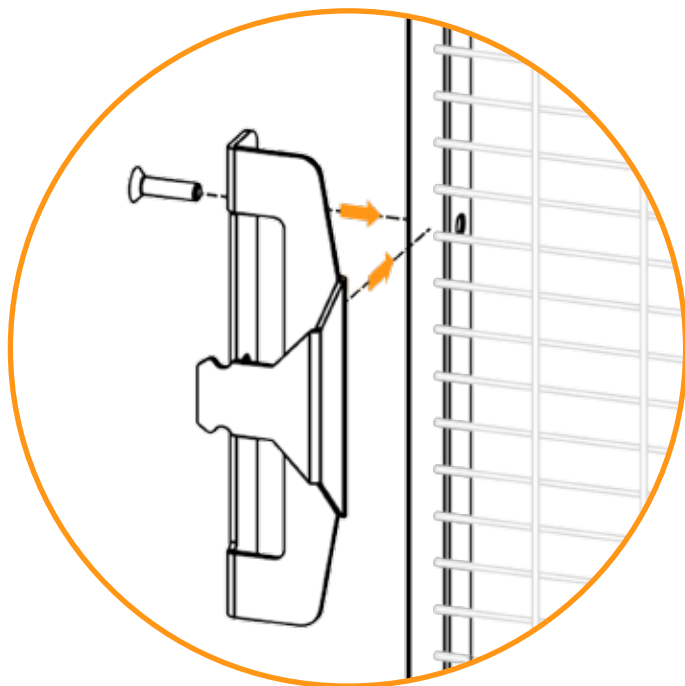

 
6.

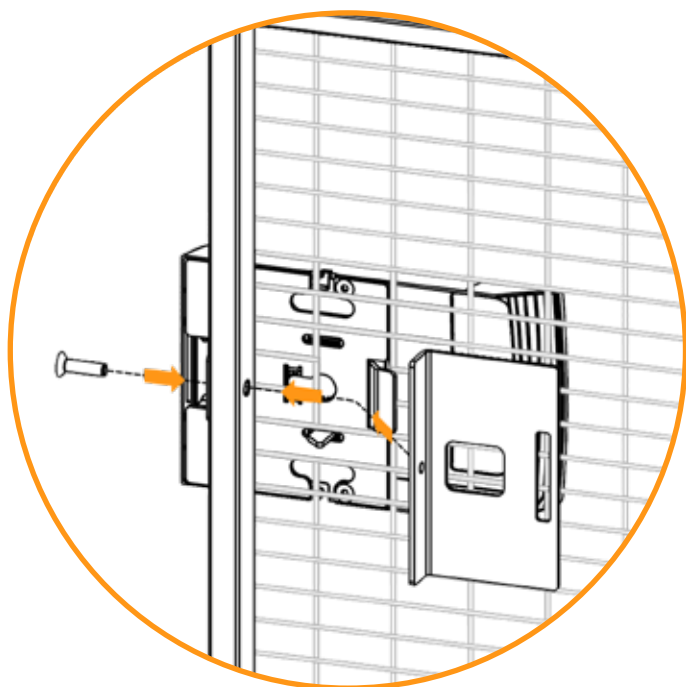


 
7.

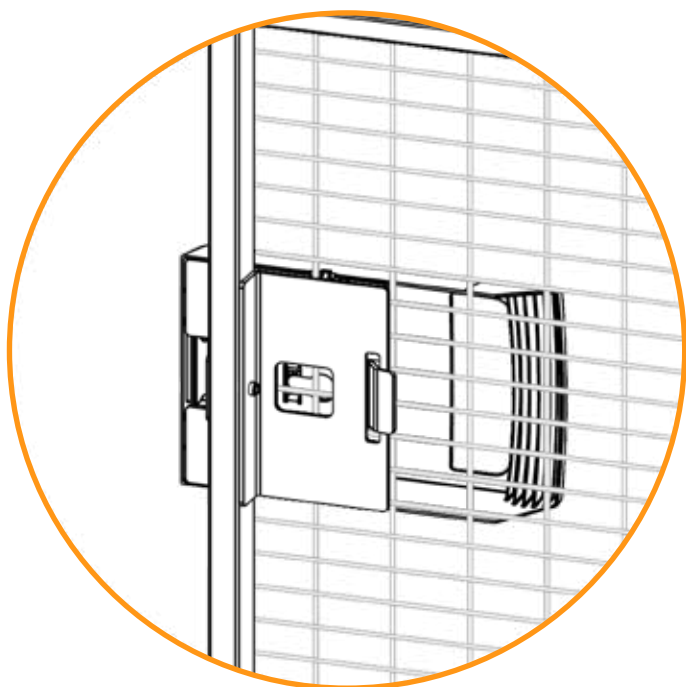

 
8.F/FK



  
9.

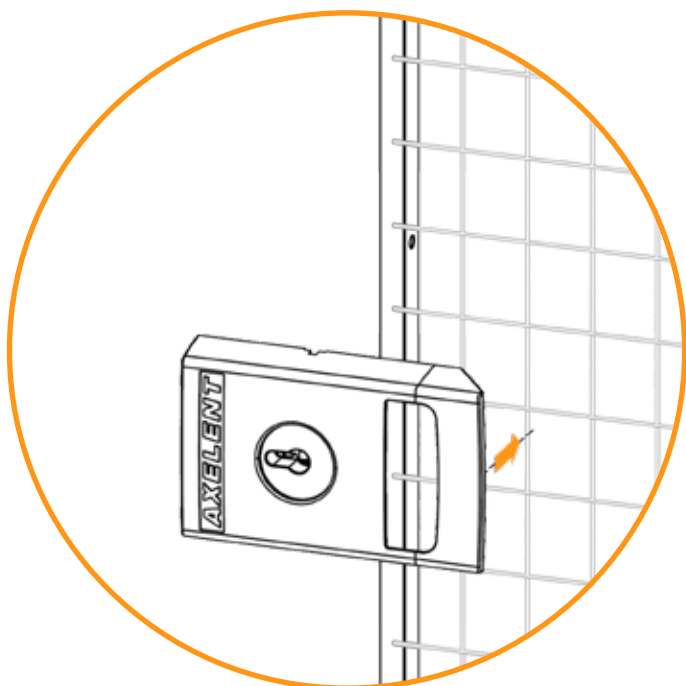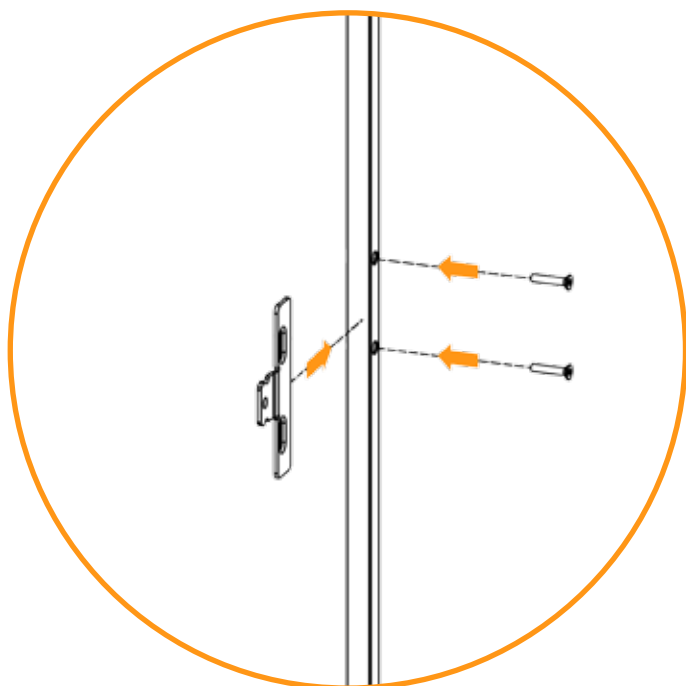


 
10.

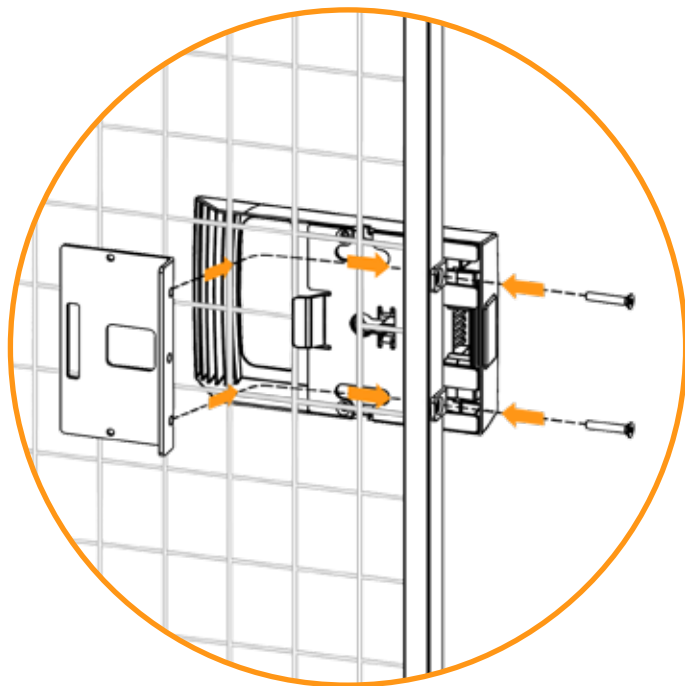


 
11.

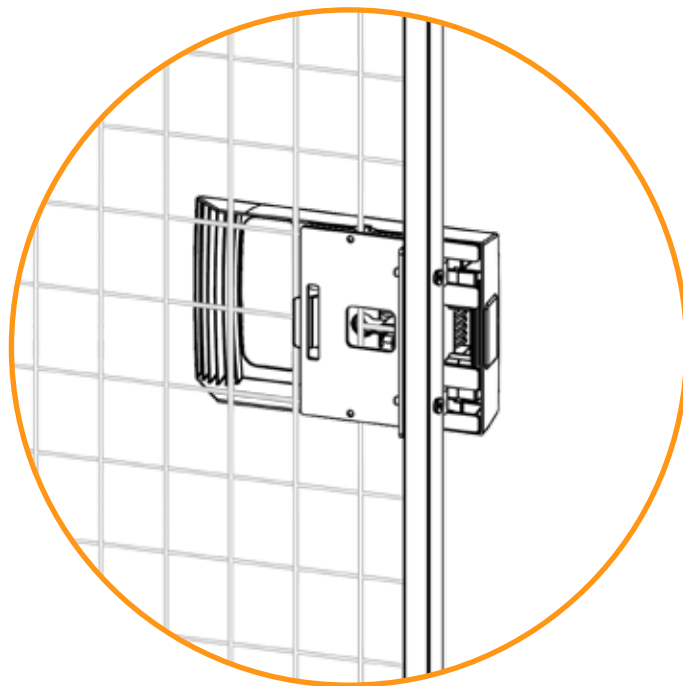

  
12.X-Store

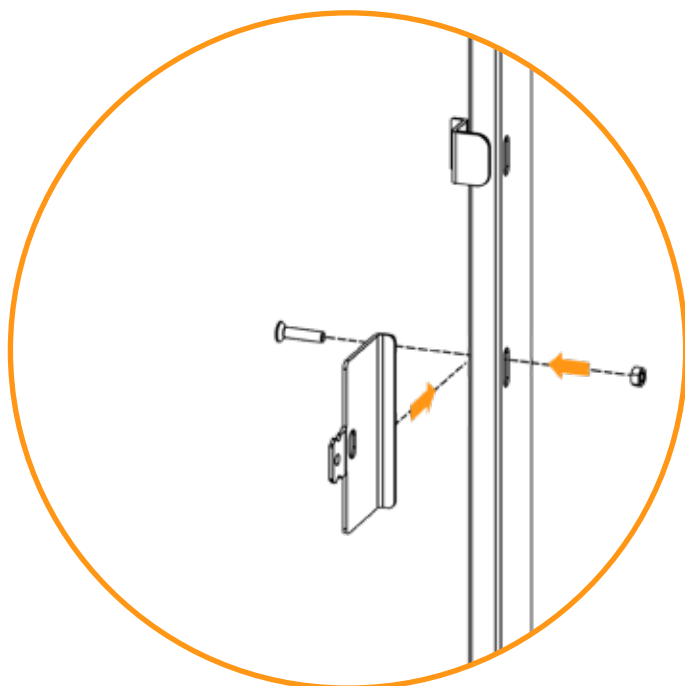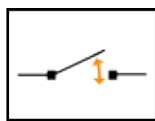

  
13.

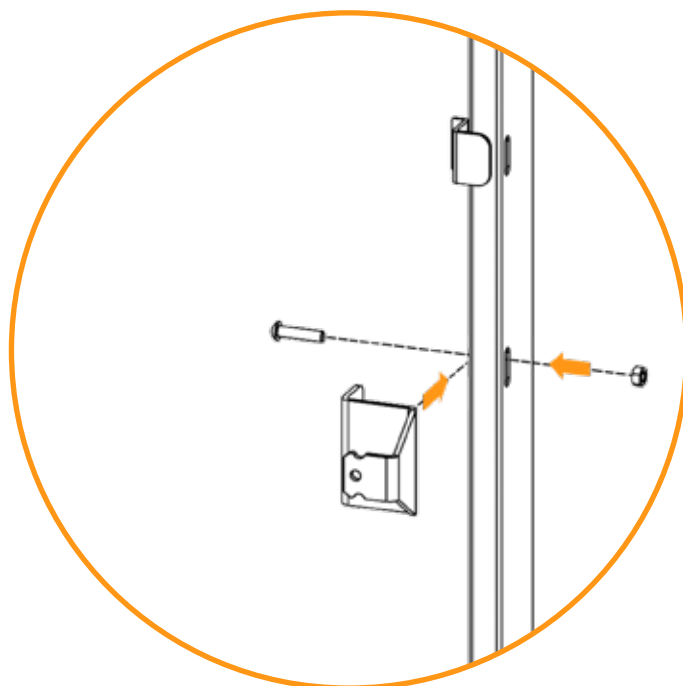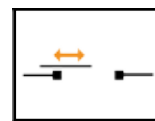

 
14.

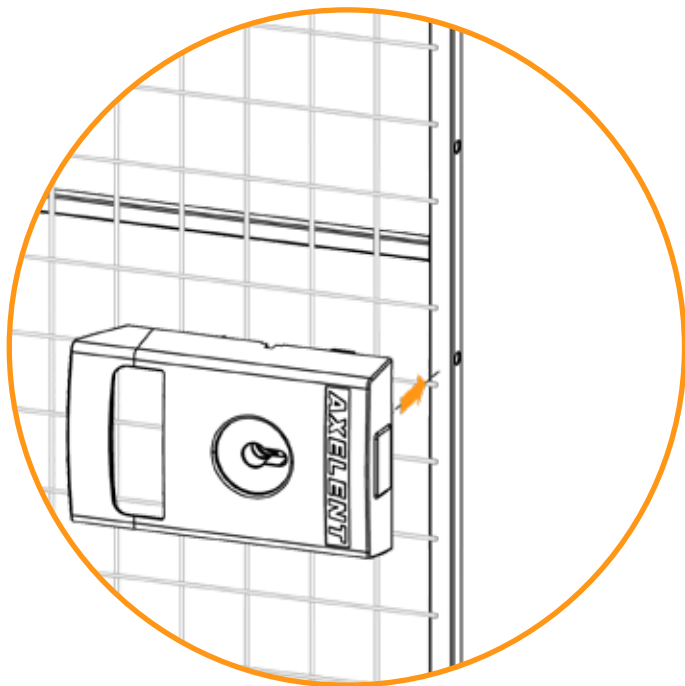

 
15.

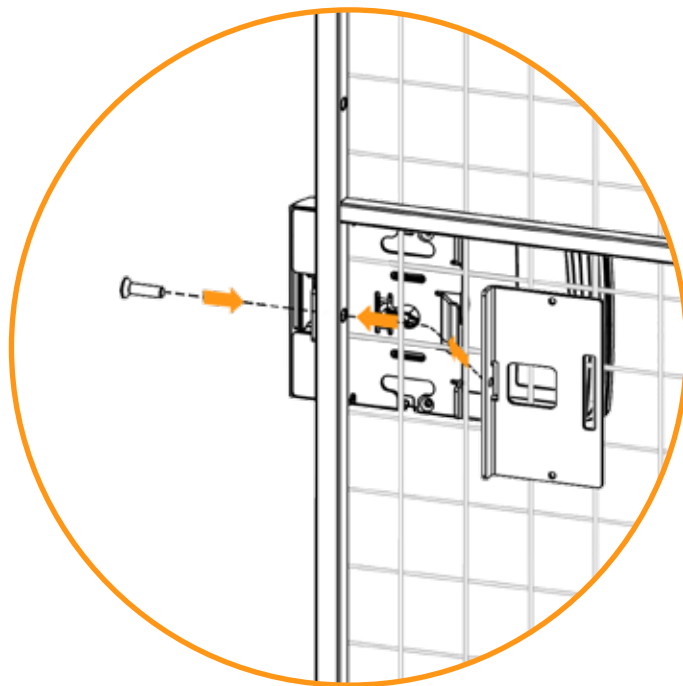

 
16.

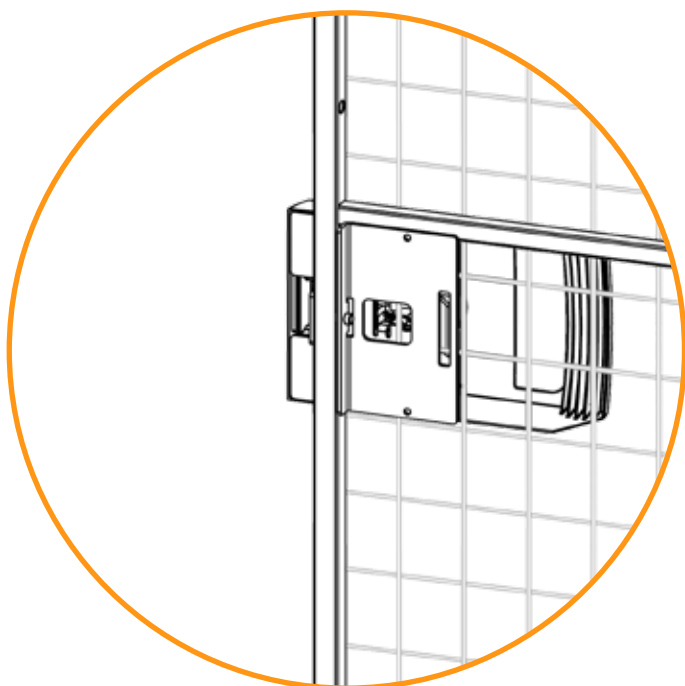

 17. XIT-002-001

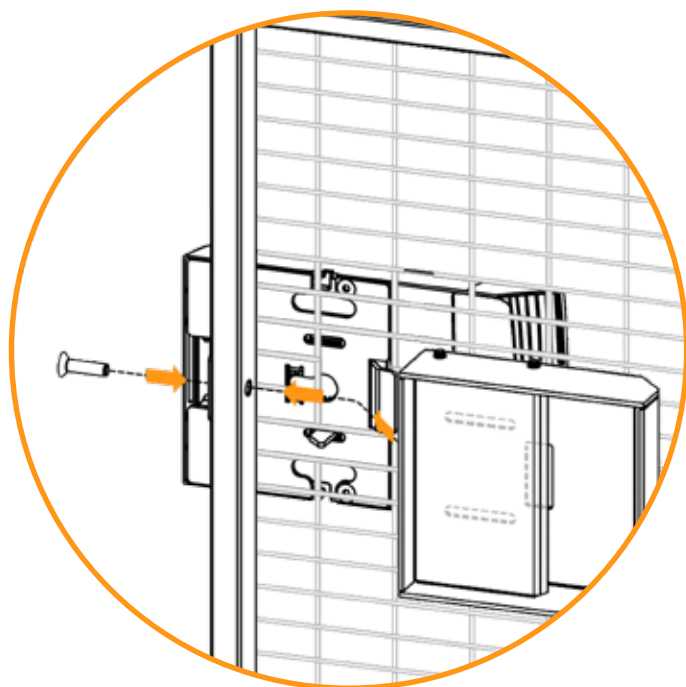

 18. XIT-002-001

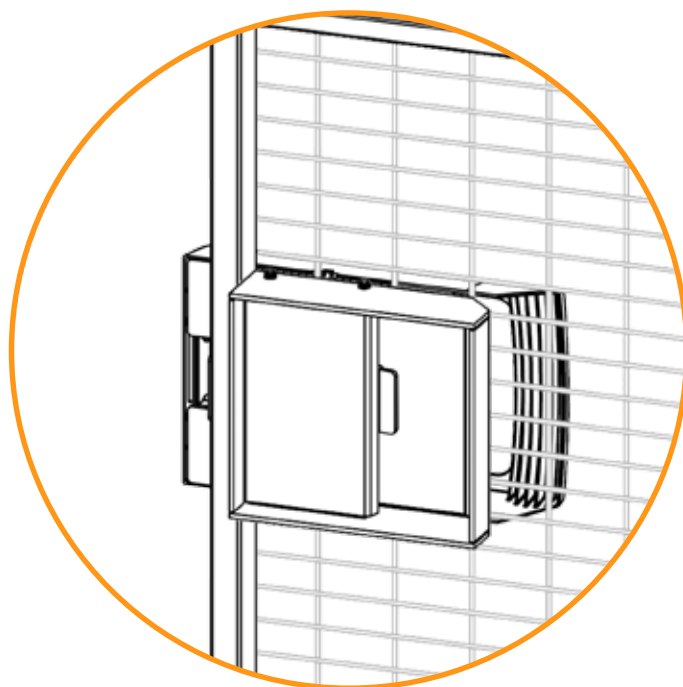

Welcome to a safe world!

Made in Hillerstorp. Works worldwide

Axelent's head office is in Hillerstorp, Sweden. All product development, production, storage and packaging is carried out here. Our production is high grade automated to manage high volumes and speedy deliveries. Our machines are specially designed to meet our high efficiency, quality and intelligent flow demands. As all our standard products are in stock, we can ship your order the same day as we get it.

Axelent has sales offices in 50 countries and the products are sold worldwide. The company also includes Axelent Wire Tray, who offer a complete cable routing system based on wire trays under the brand name of X-Tray.

The Axelent Group is made up of the three companies Axelent, Axelent Engineering (automation solutions) and Axelent Software. These companies have the joint mission of making Swedish industry competitive through automation, safety, rational procedures, functions and expertise.

