
# 5 Port Solenoid Valve

# CE

CAT.EUS11-103Dd-UK


Thanks to the flow increase, valve size can be reduced! Saves energy and space.

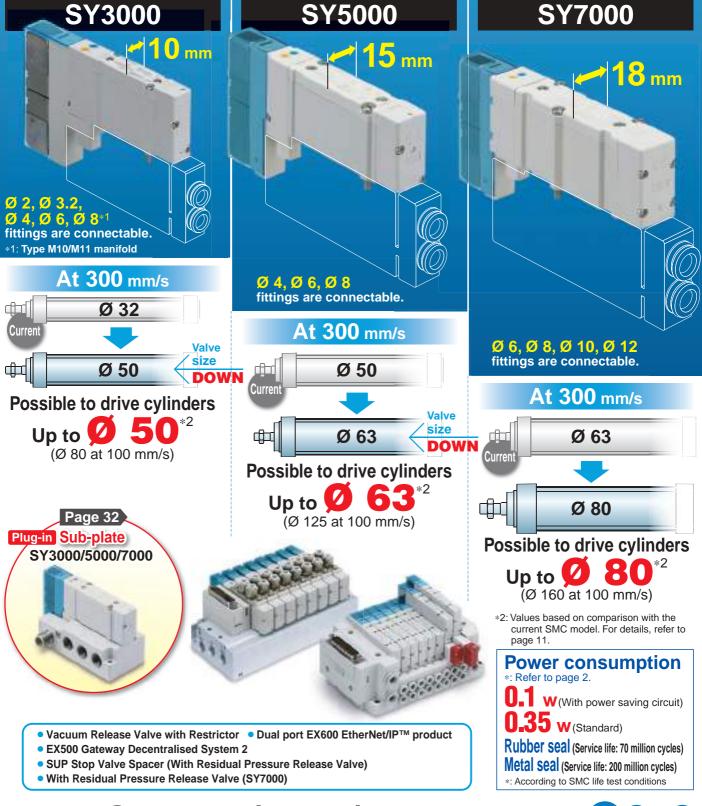

Series **SY3000/5000/7000** 


# **5 Port Solenoid Valve**



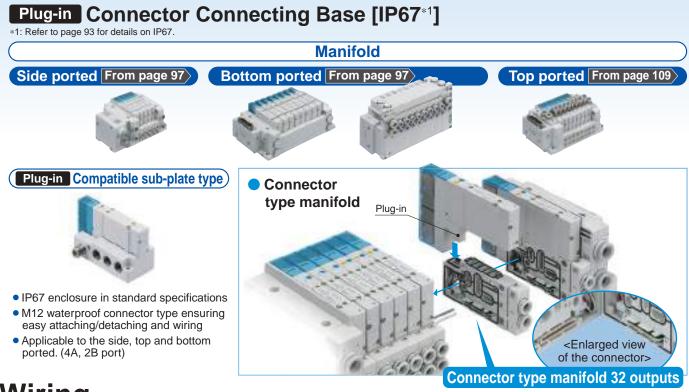

# Wiring

D-sub Con Lead Wire						al Block B	Box
				1 11 411 511115	SION		
Serial Tran	smissioi	n Variation		Integrated-type			
Series		al transmission system	Integrated-type (for input/output) serial transmission system (Fieldbus system)	(for input/output) serial transmission system		(for output) serial trai	
Series	EX510	EX500	EX600	EX250	EX260	EX126	EX120
Applicable protocol		Time R	124	SST. L	A Constant	· · · Earn	M. James
DeviceNet™		•					
PROFIBUS DP	<b>├</b> ● ─	•	•	•	•		
CC-Link	<b>—</b> •		•	•	•		<b>_</b>
EtherNet/IP™		<b>O</b>	<b>_</b>	<b>_</b>			
EtherCAT <sup>®</sup>			•				
PROFINET		<u> </u>	<b>_</b>				
CANopen							
AS-Interface				•			
OMRON CompoBus/S							
CompoNet™							
EtherNet POWERLINK							
EtherNet/IP <sup>™</sup> <sup>Compatible</sup> wireless base							
PROFINET Compatible wireless base			•				
1			<b>S</b>			1	

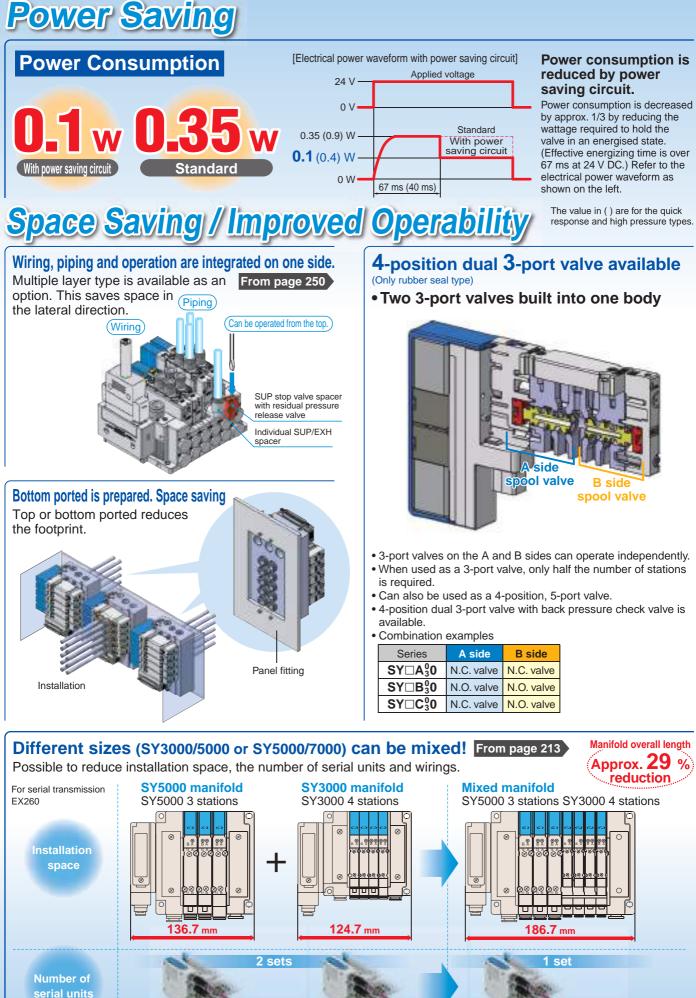


**SMC** 

# 5 Port Solenoid Valve Improved functionality

### Back Pressure Check Valve

This prevents actuator and air operated valve malfunctions caused by the exhaust from other valves.\*1

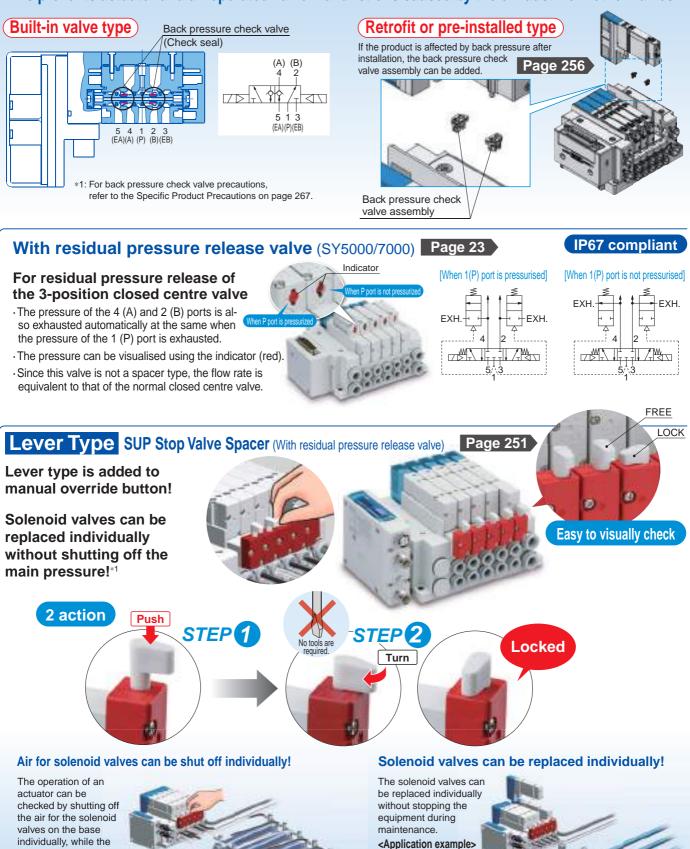

\*1: This product is only for internal pilot specifications, as the external pilot air cannot be shut off.



Air operated valves,

and automatic valve

control

such as sanitary valve

main air is being

operation.

supplied during a trial


# **Improved functionality**

## **Slotted Type**

SUP Stop Valve Spacer (With residual pressure release valve) Page 251


Air supply to each valve can be stopped individually. The valve and cylinder can be replaced without stopping other devices and equipment.



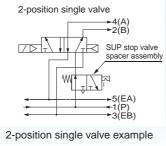

## **Slotted Type**


Double Check Spacer (With residual pressure release valve) Page 251 Long time of intermediate stop and position holding are possible.

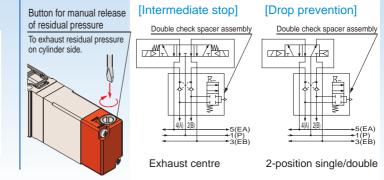


ON

#### With slide locking manual override


ON/OFF operation and locking can be performed with the manual slide.

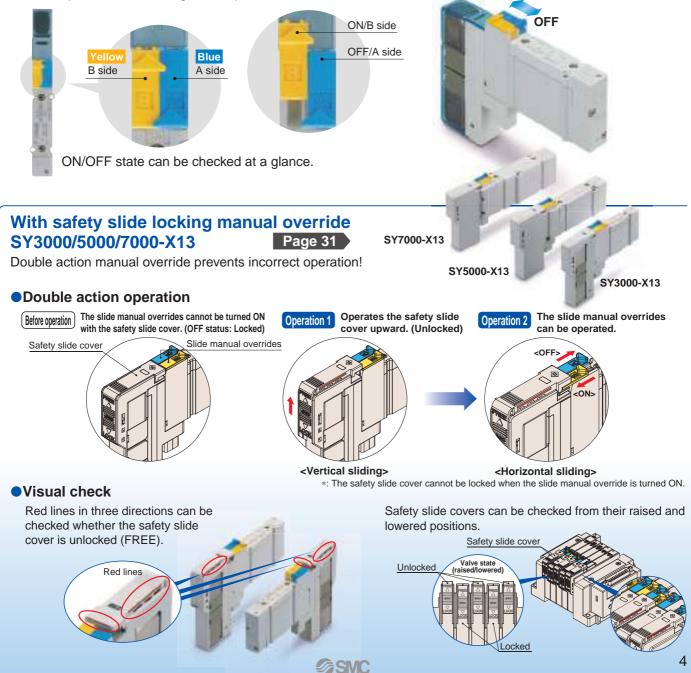

# **5 Port Solenoid Valve Piping Options**

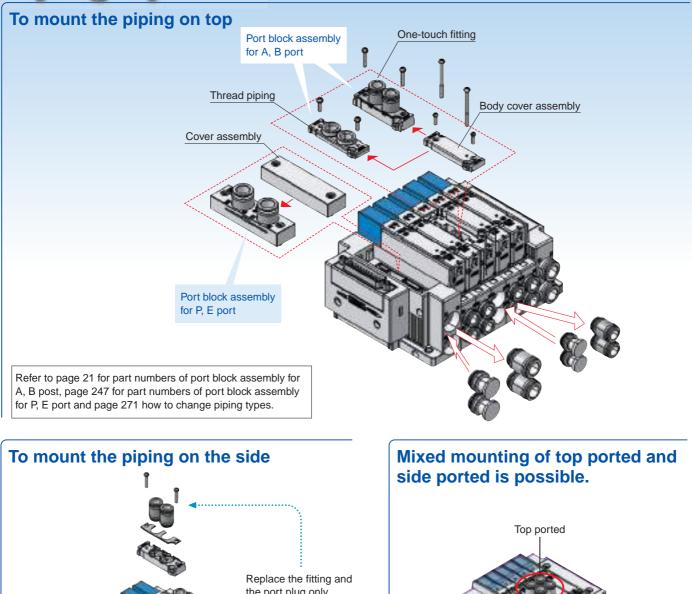

the port plug only. It is possible to detect the output of 4(A) and Pressure switch

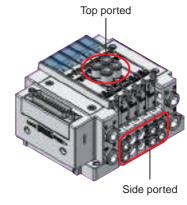


2(B) port with a pressure switch by mounting the top ported valve onto the side ported or bottom ported manifold.

(Pressure switch etc., needs to be ordered separately.)

**SMC** 



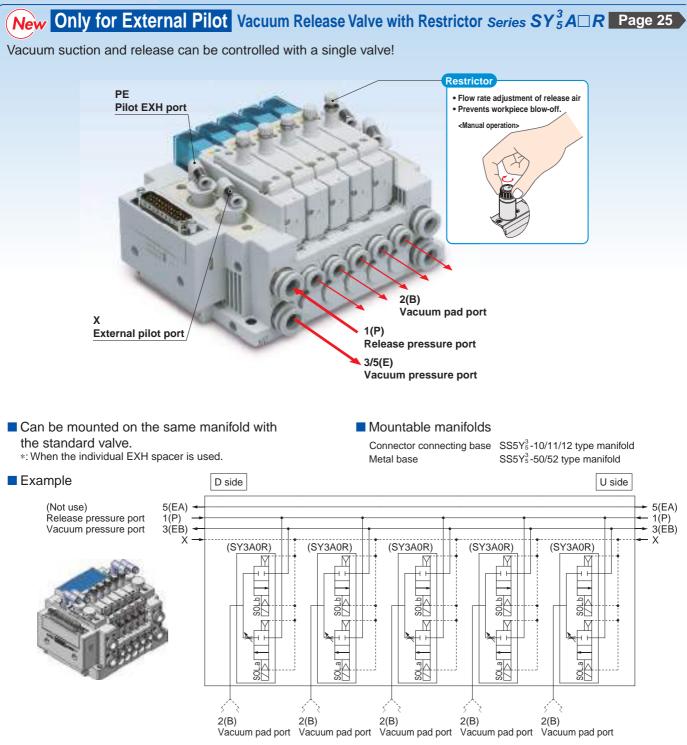

# **5 Port Solenoid Valve**

# Variations

|         |   |   |  |   |  |   |  |   
   |   |   | W   | 'irin   | ng  |   
   
   |   |   
  |   |  |  |  
   |   |   |  | /   | А, В  |   |
|---------|---|---|--|---|--|---|--
---|---|---|---|---|---
--
---|---
--
---|--|--|--
---|---|--|---|---|---|
|         |   |   | Valve  |   |  |   |  |   
   | С   | on  | nec   | tio   | n   |   
   
   |   |   
  |   |  |  | | | | | |
   |   |   |  |   |   |   |
|         |   |   | Series   |   |  |   |  |   
   |   |   | S   | Seri  | al t  | trar  
   
   | nsm   | niss  
  | sior  | ۱  |  | | | | | |
   |   |   |  |   |   |   |
|         |   |   |  | ctor  | ble  |   | xoq  |   
   | etor  | tor   |   | ts)   | s)  |   
   
   |   |   
  |   |  | non  | mon  
   |   |   |  |   | C2  |   |
|         | Variations  |   |  | nnec  | n ca   | ring  | lock   | wire  
   | onne  | nect  | _   | poin  | oint  |   
   
   |   |   
  |   | 0  | omr  | Imoc   
   | M5  | 1/8   | 1/4  | 3/8   | g   |   |
|         |   |   | 5 ports  | sub co  | at ribbo   | PC wi   | minal b  | Lead  
   | sular co  | 112 con   | EX510   | 0 (128  | 00 (64 p  | EX600   
   
   | EX250   | EX260   
  | EX126   | EX120  | sitive c   | gative o   
   |   |   |  |   | nt pipin  |   | | |
|         |   |   |  | <u>ط</u>  | Ē  |   | Ter  |   
   | Circ  | Z   |   | EX50  | EX5(  |   
   
   |   |   
  |   |  | Ро   | Ne   
   |   |   |  |   | Straigl   |   | | |
| are     |   |   | SY3□3□   |   |  |   |  |   
   |   |   |   |   |   |   
   
   |   |   
  |   |  |  |  
   |   |   |  |   |   |   |
|         | See.  | From<br>page 34   | SY5□ <sub>3</sub> □  |   |  |   |  | _   
   | _   |   | _   | —   | _   |   
   
   |   |   
  |   | _  |  | | | | | |
   |   |   |  |   | —   |   |
| no<br>N | M12 connector   |   | SY7□ <sub>3</sub> □  |   |  |   |  |   
   |   |   |   |   |   |   
   
   |   |   
  |   |  |  | | | | | |
   |   |   | _  |   |   |   |
| 404     |   | Type  | SY3⊡0⊡   |   |  |   |  |   
   |   |   |   |   |   |   
   
   |   |   
  |   |  |  |  
   |   |   |  |   |   |   |
|         |   | From  | SY5⊡0⊡   |   |  |   |  | _   
   | _   |   |   | —   | _   | —   
   
   |   | —   
  |   | _  |  | | | | | |
   |   |   |  |   |   |   |
| U.S.    |   | page 45   | SY7□0□   | P.45  | P.45   | P.45  |  |   
   |   |   | P.73  |   |   |   
   
   |   |   
  |   |  |  | | | | | |
   |   |   |  |   | _   |   |
|         |   | Туре  | SY3⊡0⊡   |   |  |   |  |   
   |   |   |   |   |   |   
   
   |   |   
  |   |  |  | | | | | |
   |   |   |  |   |   |   |
| 2       |   | 51  | SY5⊡0⊡   |   |  |   |  |   
   | _   | _   |   | —   |   | —   
   
   |   | —   
  |   | _  |  | | | | | |
   |   |   |  |   |   |   |
| 1 C     |   | page 45   | SY7□0□   | P.45  | P.45   | P.45  |  |   
   |   |   | P.73  |   |   |   
   
   |   |   
  |   |  |  | | | | | |
   |   | —   |  |   |   |   |
| 201     |   | Туре  | SY3□3□   |   |  |   |  |   
   |   |   |   |   |   |   
   
   |   |   
  |   |  |  |  
   |   | —   |  |   |   |   |
|         | B. Strand   | 52  | SY5⊡3⊡   |   |  |   |  | _   
   | _   |   |   | —   | _   | —   
   
   | —   | —   
  |   | —  |  | 0  
   |   |   |  |   |   |   | | |
| ,<br>E  |   | page 65   | SY7⊡3⊡   | P.65  | P.65   | P.65  |  |   
   |   |   | P.83  |   |   |   
   
   |   |   
  |   |  |  | | | | | |
   |   | —   |  |   |   |   |
|         | rted  | Туре  | SY3□0□   |   |  |   |  |   
   |   |   |   |   |   |   
   
   |   |   
  |   |  |  | | | | | |
   |   |   |  |   |   |   |
|         | and the second se | 10  | SY5⊡0⊡   |   |  |   |  |   
   |   | —   | _   |   |   |   
   |   
   |   
  |   |  |  | •  | —   
   | —   | —  | —   |   |   |
|         | Nid   | page 97   | SY7□0□   | P.97  | P.97   | P.97  | P.115  | P.125   
   | P.135   |   |   | P.145   | P.151   | P.161   
   
   | P.173   | P.181   
  | P.189   | P.197  |  | | | | | |
   |   |   |  |   | _   |   |
| Plo     | borted  | Type<br>11□   | SY5⊡0⊡   |   |  |   |  |   
   |   |   |   |   |   |   
   
   |   |   
  |   |  |  |  
   |   |   |  |   |   |   |
| Manif   | 3 ottom   | From<br>page 97   | SY7⊡0⊡   |   |  | -   | -  | _   
   | -   |   | <u> </u>  | <b>9</b><br>P.145   | <b>P</b> .151   |   
   
   |   | -   
  | -   | -  |  | 0  
   | —<br>   | -   |  | —<br>   | —   |   | | |
|         | 1.1.44  | Turne   | SY3□3□   |   |  |   |  |   
   |   |   |   |   |   |   
   
   |   |   
  |   |  |  | | | | | |
   |   | _   |  |   |   |   |
|         | bort  | 12□   |  |   |  |   |  |   
   |   |   |   |   |   |   
   
   |   |   
  |   |  |  | •  
   | -   |   | —  |   |   |   |
|         | Top   | page 109  | SY7□3□   | P.109   | P.109  | P.109   | P.121  | P.131   
   | ·   |   |   | P.157   | P.159   | P.171   
   
   | P.179   | P.187   
  | P.195   | P.203  | -  | | | | | | | | | | | | | | | | | | | | | | | | |
   | —   | _   |  |   | —   |   |
|         | Lotton motio  | Manifold<br>Manifold<br>Manifold<br>Manifold<br>Manifold<br>Manifold<br>Manifold<br>Manifold<br>Manifold<br>Manifold<br>Manifold<br>Manifold<br>Manifold<br>Manifold<br>Manifold<br>Manifold<br>Manifold<br>Manifold<br>Manifold<br>Manifold<br>Manifold<br>Manifold<br>Manifold<br>Manifold<br>Manifold<br>Manifold<br>Manifold<br>Manifold<br>Manifold<br>Manifold<br>Manifold<br>Manifold<br>Manifold<br>Manifold<br>Manifold<br>Manifold<br>Manifold<br>Manifold<br>Manifold<br>Manifold<br>Manifold<br>Manifold<br>Manifold<br>Manifold<br>Manifold<br>Manifold<br>Manifold<br>Manifold<br>Manifold<br>Manifold<br>Manifold<br>Manifold<br>Manifold<br>Manifold<br>Manifold<br>Manifold<br>Manifold<br>Manifold<br>Manifold<br>Manifold<br>Manifold<br>Manifold<br>Manifold<br>Manifold<br>Manifold<br>Manifold<br>Manifold<br>Manifold<br>Manifold<br>Manifold<br>Manifold<br>Manifold<br>Manifold<br>Manifold<br>Manifold<br>Manifold<br>Manifold<br>Manifold<br>Manifold<br>Manifold<br>Manifold<br>Manifold<br>Manifold<br>Manifold<br>Manifold<br>Manifold<br>Manifold<br>Manifold<br>Manifold<br>Manifold<br>Manifold<br>Manifold<br>Manifold<br>Manifold<br>Manifold<br>Manifold<br>Manifold<br>Manifold<br>Manifold<br>Manifold<br>Manifold<br>Manifold<br>Manifold<br>Manifold<br>Manifold<br>Manifold<br>Manifold<br>Manifold<br>Manifold<br>Manifold<br>Manifold<br>Manifold<br>Manifold<br>Manifold<br>Manifold<br>Manifold<br>Manifold<br>Manifold<br>Manifold<br>Manifold<br>Manifold<br>Manifold<br>Manifold<br>Manifold<br>Manifold<br>Manifold<br>Manifold<br>Manifold<br>Manifold<br>Manifold<br>Manifold<br>Manifold<br>Manifold<br>Manifold<br>Manifold<br>Manifold<br>Manifold<br>Manifold<br>Manifold<br>Manifold<br>Manifold<br>Manifold<br>Manifold<br>Manifold<br>Manifold<br>Manifold<br>Manifold<br>Manifold<br>Manifold<br>Manifold<br>Manifold<br>Manifold<br>Manifold<br>Manifold<br>Manifold<br>Manifold<br>Manifold<br>Manifold<br>Manifold<br>Manifold<br>Manifold<br>Manifold<br>Manifold<br>Manifold<br>Manifold<br>Manifold<br>Manifold<br>Manifold<br>Manifold<br>Manifold<br>Manifold<br>Manifold<br>Manifold<br>Manifold<br>Manifold<br>Manifold<br>Manifold<br>Manifold<br>Manifold<br>Manifold<br>Manifold<br>Manifold<br>Manifold<br>Manifold<br>Manifold<br>Manifold<br>Manifold<br>Manifold<br>Manifold<br>Manifold<br>Manifold<br>Manifold<br>Manifold<br>Manifold<br>Manifold<br>Manifold<br>Manifold<br>Manifold<br>Manifold<br>Manifold<br>Manifold<br>Manifold<br>Manifold<br>Manifold<br>Manifold<br>Manifold<br>Manifold<br>Manifold<br>Manifold<br>Manifold<br>Manifold<br>Manifold<br>Manifold<br>Manifold<br>Manifold<br>Manifold<br>Manifold<br>Manifold<br>Manifold<br>Manifold<br>Manifold<br>Manifold<br>Manifold<br>Manifold<br>Manifold<br>Manifold<br>Manifold<br>Man | M12 connector<br>M12 connector<br>M12 connector<br>Type<br>S0<br>From<br>page 45<br>S0<br>From<br>page 45<br>S0<br>From<br>page 45<br>S1<br>From<br>page 97<br>From<br>page 97<br>From<br>From<br>Page 97<br>From<br>From<br>From<br>From<br>From<br>From<br>From<br>From | Series           Variations         5 ports           5 ports         SY3 | Series         by           Variations         5 ports         99           5 ports         5 ports         99           M12 connector         SY3 0 - SY5 0 - SY7 | Series         Job and Series           Variations         Sports         Job and Series           Systems         Systems         Systems         Job and Series           M12 connector         SY300<br>SY500<br>SY700         SY300<br>SY500<br>SY700         Job and Series           Pade application         Systems         Systems         Systems         Job and Series           Pade application         Systems         Systems         Systems         Systems         Job and Series           Pade application         Type<br>Systems         Systems         Systems         Systems         Systems         Job and Series           Pade application         Type<br>Systems         Systems         Systems         Systems         Systems         Job and Series           Pade application         Type<br>Systems         Systems         Systems         Systems         Systems         Job and Series         Systems           Pade application         Type<br>Systems         Systems         Systems         Systems         Systems         Systems           Pade application         Type<br>Systems         Systems         Systems         Systems         Systems           Pade application         Systems         Systems         Systems         Systems         Systems | Series         Job and Series           Variations         5 ports         and Series           5 ports         and Series         and Series           M12 connector         SY3 3 and Series         SY5 3 and Series           M12 connector         SY3 3 and Series         SY3 3 and Series           SY7 3 and Series         SY3 3 and Series         SY3 3 and Series           M12 connector         SY3 3 and Series         SY3 3 and Series           SY7 3 and Series         SY3 3 and Series         SY3 3 and Series           Sy7 3 and Series         SY3 3 and Series         SY3 3 and Series           Sy7 3 and Series         SY3 3 and Series         SY3 3 and Series           Sy7 3 and Series         SY3 3 and Series         SY3 3 and Series           Sy7 3 and Series         SY3 3 and Series         SY3 3 and Series           Sy7 3 and Series         SY3 3 and Series         SY3 3 and Series           Sy7 3 and Series         SY3 3 and Series         SY3 3 and Series           Sy7 3 and Series         SY3 3 and Series         SY3 3 and Series           Sy7 3 and Series         SY3 3 and Series         SY3 3 and Series           Sy7 3 and Series         SY3 3 and Series         SY3 3 and Series           Sy7 3 and Series         SY3 3 and Series | Series         Jorden         Normalized           Variations         5 ports         Jorden         Jor | Series         Normalized biology         Normalized biology< | Series         Normalized biology         Normalized biology< | Series         Variations         Series         No         No         No           Variations         5 ports         5 ports         000000000000000000000000000000000000 | Variations         Valve<br>Series         Connect<br>and<br>big approximation           Variations         5 ports         and big approximation<br>of the big approximation | Variations         Variations         System         Connection           Variations         5 ports         and an an and an an and an | Series         Series         Series           Variations         5 ports         0 <t< th=""><th>Valve<br/>Series         Connection           Variations         5 ports         and an analysis         Serial transmitter           Variations         5 ports         and analysis         and analysis         and analysis           M12 connector         SY3_0_1<br/>SY7_0_1         and analysis         and analysis         and analysis           SY3_0_1<br/>SY7_0_1         SY3_0_1<br/>SY7_0_1         and analysis         and analysis         and analysis           Paid analysis         SY3_0_1<br/>SY7_0_1         SY3_0_1<br/>SY7_0_1         and analysis         and analysis           SY3_0_1<br/>SY7_0_1         SY3_0_1<br/>SY7_0_1         and analysis         and analysis         and analysis           Paid analysis         SY3_0_1<br/>SY7_0_1         SY3_0_1<br/>SY7_0_1         and analysis         and analysis         and analysis           Paid analysis         SY3_0_1<br/>SY7_0_1         SY3_0_1<br/>SY7_0_1         and analysis         and analysis         and analysis           Paid analysis         SY3_0_1<br/>SY7_0_1         SY3_0_1<br/>SY7_0_1         and analysis         and analysis         and analysis           Paid analysis         SY3_0_1<br/>SY7_0_1         SY3_0_1<br/>SY7_0_1         and analysis         and analysis         and analysis         and analysis           Paid analysis         SY3_0_1<br/>SY7_0_1         SY3_0_1<br/>SY7_0_1</th><th>Valve<br/>Series         Connection           Variations         5 ports         oppose of the series         serial transmines           Variations         5 ports         oppose of the series         serial transmines           M12 connector         Frages         SY3         -         <t< th=""><th>Value<br/>Series         Connection           Variations         5 ports         0<br/>0<br/>0<br/>0<br/>0<br/>0<br/>0<br/>0<br/>0<br/>0<br/>0<br/>0<br/>0<br/>0<br/>0<br/>0<br/>0<br/>0<br/>0</th><th>Variations         Serial transmission           Variations         Serial transmission           5 ports         000000000000000000000000000000000000</th><th>Valve<br/>Series         Connection           Variations         Series         Series         Series         Series         Series           Variations         Sports         opportunity         opportunity</th><th>Valve         Connection         Connection           Variations         5 ports         vig display         vig display<th>Valve<br/>Series         Connection         Connection         Connection           Valve<br/>Series         Serial transmission         Serial transmission         Serial transmission           Variations         5 ports         System         Serial transmission         Serial transmission           System         System         System         Serial transmission         Serial transmission           Mile connector         System         System         System         Serial transmission           System         System         System         System         Serial transmission           System         System         System         System         System           System         System         System         System         System           System         System         System         System         System           System         System         System         System         System         System           System         System         System         System         System         System         System           System         System         System         System         System         System         System         System         System         System         System         System         System         Syst</th><th>Variations         Series         XO         Series         Series&lt;</th><th>Value<br/>Series         Connection         Connection           Variations         5 ports         5 ports         Serial transmission           M12 connector         SY3_0_0<br/>SY5_0_0<br/>SY7_0_0         SY3_0_0<br/>SY5_0_0<br/>SY5_0_0         SY3_0_0<br/>SY5_0_0<br/>SY5_0_0         SY3_0_0<br/>SY5_0_0<br/>SY5_0_0         Pate Ads Pats<br/>SY3_0_0<br/>SY5_0_0         Pate Ads Pats<br/>SY3_0_0<br/>SY5_0_0         Pate Ads Pats<br/>SY3_0_0<br/>SY5_0_0         Pate Ads Pats<br/>SY3_0_0         Pate Ads Pats Pats SY3_0_0         Pate Ads Pats Rest Rest Rest Rest Rest Rest Rest Re</th><th>Variations         Variations         Series         <th< th=""><th>Valve<br/>Series         Connection         Connection           Variations         5 ports         90 00 00 00 00 00 00 00 00 00 00 00 00 0</th><th>Valve<br/>Series         Connection         Generation           Variations         5 ports         90 00 00 00 00 00 00 00 00 00 00 00 00 0</th></th<></th></th></t<></th></t<> | Valve<br>Series         Connection           Variations         5 ports         and an analysis         Serial transmitter           Variations         5 ports         and analysis         and analysis         and analysis           M12 connector         SY3_0_1<br>SY7_0_1         and analysis         and analysis         and analysis           SY3_0_1<br>SY7_0_1         SY3_0_1<br>SY7_0_1         and analysis         and analysis         and analysis           Paid analysis         SY3_0_1<br>SY7_0_1         SY3_0_1<br>SY7_0_1         and analysis         and analysis           SY3_0_1<br>SY7_0_1         SY3_0_1<br>SY7_0_1         and analysis         and analysis         and analysis           Paid analysis         SY3_0_1<br>SY7_0_1         SY3_0_1<br>SY7_0_1         and analysis         and analysis         and analysis           Paid analysis         SY3_0_1<br>SY7_0_1         SY3_0_1<br>SY7_0_1         and analysis         and analysis         and analysis           Paid analysis         SY3_0_1<br>SY7_0_1         SY3_0_1<br>SY7_0_1         and analysis         and analysis         and analysis           Paid analysis         SY3_0_1<br>SY7_0_1         SY3_0_1<br>SY7_0_1         and analysis         and analysis         and analysis         and analysis           Paid analysis         SY3_0_1<br>SY7_0_1         SY3_0_1<br>SY7_0_1 | Valve<br>Series         Connection           Variations         5 ports         oppose of the series         serial transmines           Variations         5 ports         oppose of the series         serial transmines           M12 connector         Frages         SY3         - <t< th=""><th>Value<br/>Series         Connection           Variations         5 ports         0<br/>0<br/>0<br/>0<br/>0<br/>0<br/>0<br/>0<br/>0<br/>0<br/>0<br/>0<br/>0<br/>0<br/>0<br/>0<br/>0<br/>0<br/>0</th><th>Variations         Serial transmission           Variations         Serial transmission           5 ports         000000000000000000000000000000000000</th><th>Valve<br/>Series         Connection           Variations         Series         Series         Series         Series         Series           Variations         Sports         opportunity         opportunity</th><th>Valve         Connection         Connection           Variations         5 ports         vig display         vig display<th>Valve<br/>Series         Connection         Connection         Connection           Valve<br/>Series         Serial transmission         Serial transmission         Serial transmission           Variations         5 ports         System         Serial transmission         Serial transmission           System         System         System         Serial transmission         Serial transmission           Mile connector         System         System         System         Serial transmission           System         System         System         System         Serial transmission           System         System         System         System         System           System         System         System         System         System           System         System         System         System         System           System         System         System         System         System         System           System         System         System         System         System         System         System           System         System         System         System         System         System         System         System         System         System         System         System         System         Syst</th><th>Variations         Series         XO         Series         Series&lt;</th><th>Value<br/>Series         Connection         Connection           Variations         5 ports         5 ports         Serial transmission           M12 connector         SY3_0_0<br/>SY5_0_0<br/>SY7_0_0         SY3_0_0<br/>SY5_0_0<br/>SY5_0_0         SY3_0_0<br/>SY5_0_0<br/>SY5_0_0         SY3_0_0<br/>SY5_0_0<br/>SY5_0_0         Pate Ads Pats<br/>SY3_0_0<br/>SY5_0_0         Pate Ads Pats<br/>SY3_0_0<br/>SY5_0_0         Pate Ads Pats<br/>SY3_0_0<br/>SY5_0_0         Pate Ads Pats<br/>SY3_0_0         Pate Ads Pats Pats SY3_0_0         Pate Ads Pats Rest Rest Rest Rest Rest Rest Rest Re</th><th>Variations         Variations         Series         <th< th=""><th>Valve<br/>Series         Connection         Connection           Variations         5 ports         90 00 00 00 00 00 00 00 00 00 00 00 00 0</th><th>Valve<br/>Series         Connection         Generation           Variations         5 ports         90 00 00 00 00 00 00 00 00 00 00 00 00 0</th></th<></th></th></t<> | Value<br>Series         Connection           Variations         5 ports         0<br>0<br>0<br>0<br>0<br>0<br>0<br>0<br>0<br>0<br>0<br>0<br>0<br>0<br>0<br>0<br>0<br>0<br>0 | Variations         Serial transmission           Variations         Serial transmission           5 ports         000000000000000000000000000000000000 | Valve<br>Series         Connection           Variations         Series         Series         Series         Series         Series           Variations         Sports         opportunity         opportunity | Valve         Connection         Connection           Variations         5 ports         vig display         vig display <th>Valve<br/>Series         Connection         Connection         Connection           Valve<br/>Series         Serial transmission         Serial transmission         Serial transmission           Variations         5 ports         System         Serial transmission         Serial transmission           System         System         System         Serial transmission         Serial transmission           Mile connector         System         System         System         Serial transmission           System         System         System         System         Serial transmission           System         System         System         System         System           System         System         System         System         System           System         System         System         System         System           System         System         System         System         System         System           System         System         System         System         System         System         System           System         System         System         System         System         System         System         System         System         System         System         System         System         Syst</th> <th>Variations         Series         XO         Series         Series&lt;</th> <th>Value<br/>Series         Connection         Connection           Variations         5 ports         5 ports         Serial transmission           M12 connector         SY3_0_0<br/>SY5_0_0<br/>SY7_0_0         SY3_0_0<br/>SY5_0_0<br/>SY5_0_0         SY3_0_0<br/>SY5_0_0<br/>SY5_0_0         SY3_0_0<br/>SY5_0_0<br/>SY5_0_0         Pate Ads Pats<br/>SY3_0_0<br/>SY5_0_0         Pate Ads Pats<br/>SY3_0_0<br/>SY5_0_0         Pate Ads Pats<br/>SY3_0_0<br/>SY5_0_0         Pate Ads Pats<br/>SY3_0_0         Pate Ads Pats Pats SY3_0_0         Pate Ads Pats Rest Rest Rest Rest Rest Rest Rest Re</th> <th>Variations         Variations         Series         <th< th=""><th>Valve<br/>Series         Connection         Connection           Variations         5 ports         90 00 00 00 00 00 00 00 00 00 00 00 00 0</th><th>Valve<br/>Series         Connection         Generation           Variations         5 ports         90 00 00 00 00 00 00 00 00 00 00 00 00 0</th></th<></th> | Valve<br>Series         Connection         Connection         Connection           Valve<br>Series         Serial transmission         Serial transmission         Serial transmission           Variations         5 ports         System         Serial transmission         Serial transmission           System         System         System         Serial transmission         Serial transmission           Mile connector         System         System         System         Serial transmission           System         System         System         System         Serial transmission           System         System         System         System         System           System         System         System         System         System           System         System         System         System         System           System         System         System         System         System         System           System         System         System         System         System         System         System           System         System         System         System         System         System         System         System         System         System         System         System         System         Syst | Variations         Series         XO         Series         Series< | Value<br>Series         Connection         Connection           Variations         5 ports         5 ports         Serial transmission           M12 connector         SY3_0_0<br>SY5_0_0<br>SY7_0_0         SY3_0_0<br>SY5_0_0<br>SY5_0_0         SY3_0_0<br>SY5_0_0<br>SY5_0_0         SY3_0_0<br>SY5_0_0<br>SY5_0_0         Pate Ads Pats<br>SY3_0_0<br>SY5_0_0         Pate Ads Pats<br>SY3_0_0<br>SY5_0_0         Pate Ads Pats<br>SY3_0_0<br>SY5_0_0         Pate Ads Pats<br>SY3_0_0         Pate Ads Pats Pats SY3_0_0         Pate Ads Pats Rest Rest Rest Rest Rest Rest Rest Re | Variations         Variations         Series         Series <th< th=""><th>Valve<br/>Series         Connection         Connection           Variations         5 ports         90 00 00 00 00 00 00 00 00 00 00 00 00 0</th><th>Valve<br/>Series         Connection         Generation           Variations         5 ports         90 00 00 00 00 00 00 00 00 00 00 00 00 0</th></th<> | Valve<br>Series         Connection         Connection           Variations         5 ports         90 00 00 00 00 00 00 00 00 00 00 00 00 0 | Valve<br>Series         Connection         Generation           Variations         5 ports         90 00 00 00 00 00 00 00 00 00 00 00 00 0 |


Standard ○ Option ▲ Made-to-Order (Refer to page 31.)

Por	rt S	ize										N	lar	nifo	ld	Opt	ior	is (	Pag	es	250	to	258	)			١	/alv	ve C	Opti	ons	5		Valves Func	
On	e-to	ouc	h fi	ittir	ngs							acer	acer	SUP stop valve spacer with residual pressure release valve	Double check spacer with residual pressure release valve	or	Individual SUP block assembly	Individual EXH block assembly	disk	disk	Back pressure check valve assembly (Manifold installed type)	1	Silencer (One-touch fitting connection type)			SY3000/5000 mixed mounting	SY5000/7000 mixed mounting	Oil resistant (Other than designated turbine oil)	Vacuum/Low pressure specification	es	e.	S		With residual pressure release valve	Vacuum release valve with restrictor
C3 (N1)	C (N		C (N	;6  7)		;8 19)	C <sup>.</sup> (N	10 11)	C	12	plate	P spa	H spa	al pressure	al pressure	gulat	ock as	ock as	king	king	ly (Manifold	fitting	g conne	nite)	late	ed mo	ed mo	signated	re spec	essur	essur	g size	91P67	re relea	e with I
 	<u> </u>	-	-	-		<u> </u>			ping	ng*1	<b>Blanking plate</b>	Individual SUP spacer	Individual EXH spacer	r with residu	with residua	Interface regulator	UP blo	NH blo	SUP/EXH blocking disk	Label for blocking disk	alve assemb	Dual flow fitting	uch fittin	Plug (White)	Name plate	00 mix	00 mix	er than de	pressu	<b>Different pressures</b>	Reverse pressure	Mixed fitting sizes	Enclosure IP67	pressu	se valv
ght pi	jht pij	Elbow piping <sup>*1</sup>	ght pi	Elbow piping*1	jht pij	Elbow piping*1	jht pi	Elbow piping*1	jht pij	Elbow piping*1	Blai	dividu	dividu	alve space	eck spacer	Interfa	dual S	lual E	P/EX	bel fo	Ire check va	Dual	(One-to	PI	Ň	00/200	00/200	ant (Othe	n/Low	)iffer€	Reve	Mixec	Enc	sidual	n relea
Straight piping	Straight piping	Elbov	Straight piping	Elbov	Straight piping	Elbov	Straight piping	Elbov	Straight piping	Elbov		Ine	Ine	SUP stop v	Double ch		ndivic	ndivic	SU	La	<b>ack press</b>		Silencer			SY300	SY50(	Oil resist	Vacuur					Nith re	Vacuur
																	-	-											-						_
-	—	_	_		-	—	—	—	—	—	—	—	_	0	0	0	_	—		—	—	—	—	—	—	—	—		External	—	External	—	•	*3	_
																													Pilot		Pilot				
-							—				0	0	0	0	0	0								0						0				*3	*4
-											Ú	)	0	U		Ú								)					External Pilot	Individual SUP	External Pilot				
					_																														
		—			•		_	—	_	—	0	0	0	0	0	0	—	—	_	—	—	—		0	—	—	—			) Individual	_	•	—	*3	—
	_																													SUP					
							_		_		0	0	0	0		0								0						0					*4
-											U	0	0	0		U								0					External Pilot	Individual SUP	External Pilot				
					—	_																													
								_	_	—	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	P.213	_		External Pilot	) Individual	External	•	*2	*3	*4
	_	_																				—				_	<b>P</b> .217		Pilot	SUP	Pilot				
							_				0	0	0	$\bigcirc$	0	0	0	0	0	0	0		0	0	0					$\bigcirc$			*2	*3	*4
								_				$\cup$							0				$\cup$	$\cup$	$\cup$	P.213			External Pilot	Individual SUP	External Pilot	-	-	-	
			•				-																				P.217								
		_						_		_	0	0	0	0		0	0	0	0	0	0	—	0	0	_	<b>9</b> .225			External	) Individual	External		*2	—	*4
	_																									—	<b>P</b> .225		Pilot	SUP	Pilot				

\*1: Elbow piping may specify size only in millimeters, depending on the port size. Refer to How to Order Manifold for details.
 \*2: Refer to Manifold Specifications on page 93 for details on IP67.
 \*3: Only SY5000/7000
 \*4: Only SY3000/5000

One-touch fittings

Straight piping

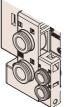

Elbow piping (Upward)







Manifold Variations Page 7	Valve Replacement Parts Page 21
Optimum Actuation Size Chart of Air Cylinder Page 11	With Residual Pressure Release Valve Page 23
Valve SpecificationsPage 13 (Specifications, Response Time, Weight)	Vacuum Release Valve with Restrictor Page 25 Made-to-Order for Valve Page 31
Valve ConstructionPage 17	Made to Order for Valve





Plug-in Sub-plate Specifications (M12 Connector)Page	33
Sub-plate Parts NoPage	35

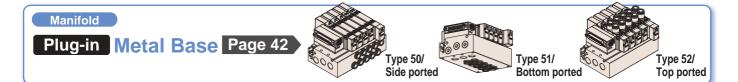


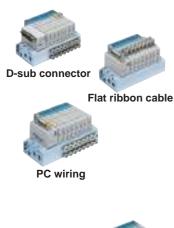



Type 50/Side Ported, Type 51/Bottom Ported, Type 52/Top Ported

Plug-in Metal Base Page	ə 43
D-sub Connector, Flat Ribbon Cable, PC Wiring System [IP40]	
Type 50/Side PortedPage	ə 45
Type 51/Bottom PortedPage	ə 45
Type 52/Top PortedPage	ə 65
Wiring Specifications Page	ə 70
EX510 Gateway-type Serial Transmission System [IP20]	
Type 50/Side PortedPage	ə 73
Type 51/Bottom Ported ······Page	ə 73
Type 52/Top PortedPage	ə 83
Manifold Exploded View [Exploded View, Manifold Parts No.] Page	e 89

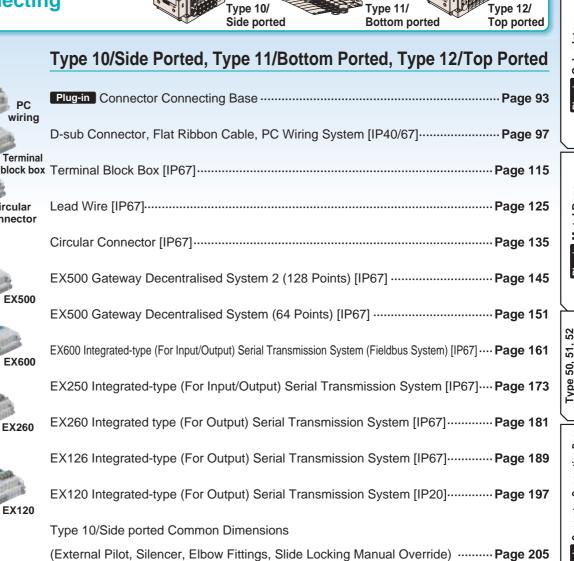

Type 11/Bottom Ported Common Dimensions ------ Page 208

Type 12/Top Ported Common Dimensions ..... Page 210

Plug-in Manifold Mixed Mounting Type ------ Page 213



Manifold

Plug-in

D-sub

onnector

Flat

Lead wire

X126

ibbon cable

Connector

Base

onnecting

PC

wiring

Terminal

X500

X600

X260

EX120

Circular

connector

20 Page 92

Type 10, 11, 12 Manifold Exploded View Manifold Exploded View [Exploded View, Manifold Parts No.]------Page 229 One-touch Fittings/ Plug Assembly Part No. How to Increase Connector Type Manifold ..... Page 243 Manifold Options One-touch Fittings, Plug Assembly/Part No. .... Page 248 Manifold Options [ Plug-in Metal Base, Plug-in Connector Connecting Base]------Page 249 Specific Product Precautions Page 266

Valve

Plug-in Sub-plate

Plug-in Metal Base

Manifold Exploded View

Plug-in Connector Connecting Base

# **Optimum Actuation Size Chart of Air Cylinder**

Applicable	Main valve					Арр	licabl	e cyl	inder				
cylinder speed	seal type	Series	Ø	6	Ø	10	Ø	16	ø	20	Ø	25	
		SY3000											
	Rubber seal	SY5000											
<b>100</b> mm/s		SY7000		1 1 1 1 1 1 1 1 1									
or less		SY3000		1 1 1 1 1 1 1 1 1 1									
	Metal seal	SY5000		1 1 1 1 1 1 1 1									
		SY7000		1 1 1 1 1 1 1 1 1									
		SY3000											
	Rubber seal	SY5000											
<b>300</b> mm/s		SY7000											
or less		SY3000		1 1 1 1 1 1 1 1									
	Metal seal	SY5000											
		SY7000											
		SY3000											
	Rubber seal	SY5000											
<b>500</b> mm/s		SY7000											
or less		SY3000		1 1 1 1 1 1 1 1									
	Metal seal	SY5000											
		SY7000											

[Common conditions]

• Pressure: 0.5 MPa

• Piping length: 1 m


Load ratio: 50 %

Stroke: 200 mm

Connector type manifold (for side and bottom ported type)

\*: Use as a guide for selection.

Please check the actual conditions with SMC Model Selection Software.

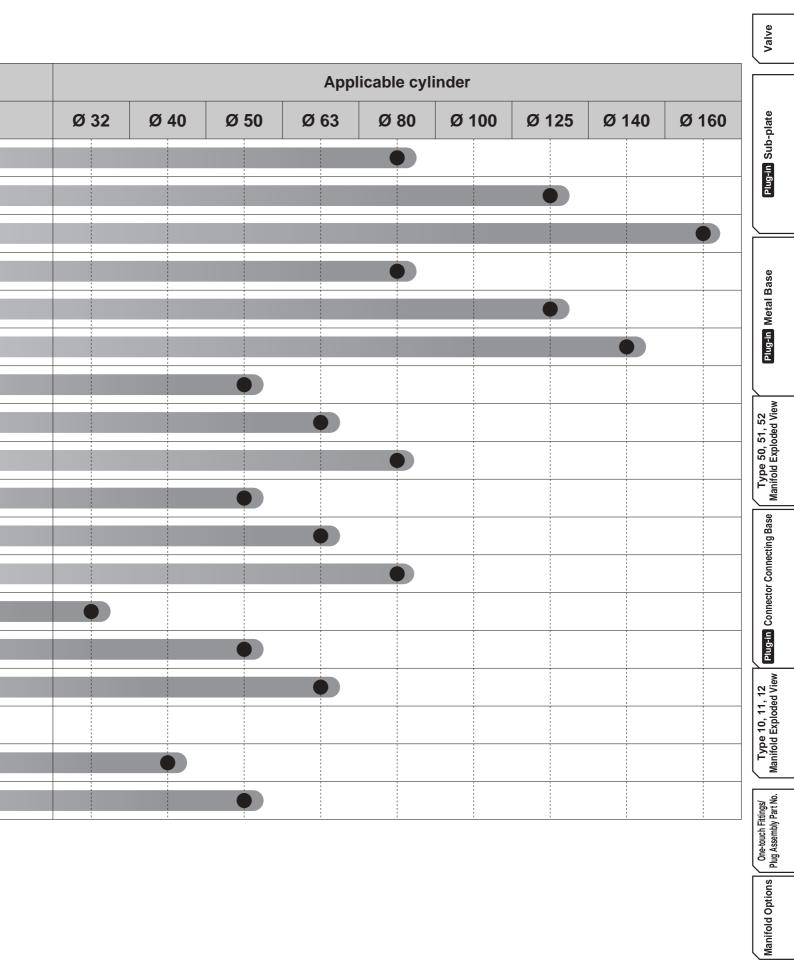

# Series SY3000/5000/7000 Valve Specifications

#### Valve Specifications

V	/alve type		Rubber seal	Metal seal				
Fluid			Α	\ir				
	2-position	single	0.15 to 0.7					
Internal pilot	2-position	double	0.1 to 0.7	0.1 to 0.7 (High pressure type: 0.1 to 1)				
operating pressure range [MPa]	3-position		0.2 to 0.7					
נווירמן	4-position	dual 3-port valve	0.15 to 0.7	_				
	Operating	pressure range	-100 kPa to 0.7 (4-position: -100 kPa to 0.6)	-100 kPa to 0.7 (High pressure type: -100 kPa to 1)				
External pilot		2-position single						
operating pressure range	Pilot	2-position double	0.25 to 0.7	0.1 to 0.7 (High pressure type: 0.1 to				
[MPa]	pressure range	3-position						
	range	4-position dual 3-port valve	Operating pressure + 0.1 or more (Min. 0.25) to 0.7	_				
Ambient and fluid tempera	ature [°C]		-10 to 50 (N	No freezing)				
		2-position single/double	5	20*1				
	SY3000 SY5000	4-position dual 3-port valve	5	20**				
Max. operating frequency	515000	3-position	3	10*1				
[Hz]		2-position single/double	5	10*1				
	SY7000	4-position dual 3-port valve	3	—				
		3-position	3	10*1				
			Non-lockin	g push type				
Manual override				ing slotted type				
Manual Overnue			Push-turn loc	king lever type				
			Slide loc	king type				
Pilot exhaust type	Internal pi	lot	Main/Pilot valve common exhaust	Main/Pilot valve individual exhaust				
Thot exhaust type	External p	ilot	Pilot valve ind	ividual exhaust				
Lubrication			Not re	quired				
Mounting orientation*2			Unrestricted	Single: Unrestricted Double/3-position: Main valve is horizontal.				
Impact/Vibration resistance	:e*2 [m/s2]		150	)/30				
Enclosure			IP67 (Based o	n IEC60529)* <sup>3</sup>				
Coil rated voltage [DC]			24,	12 V				
Allowable voltage fluctuat	ion [V]		±10 % of rat	ted voltage*4				
	Standard		0.35 (With indi	cator light: 0.4)				
Dower concumption M/	High pressu	re type, Quick response type	0.9 (With indic	ator light: 0.95)				
Power consumption [W]	With powe	er saving circuit	Standard: 0.1*5 (With indicator light only) [Inrush 0.35, Holding 0.1], High pressure type: 0.4*5 (With indicator light only) [Inrush 0.9, Holding 0.4]					
Surge voltage suppressor			Diode (Varistor for non-polar type)					
Indicator light			LED					

\*1: Use below 5 Hz for with the power saving circuit.

\*2: Impact resistance: No malfunction occurred when it is tested in the axial direction and at the right angles to the main valve and armature in both energised and de-energised states every once for each condition. (Values at the initial period)

Vibration resistance: No malfunction occurred in a one-sweep test between 45 and 2000 Hz. Test was performed at both energised and de-energised states in the axial direction and at the right angles to the main valve and armature. (Values at the initial period) Refer to page 271 for the fixation of DIN rail mounting type manifold.

\*3: In the case of a metal seal, there are restrictions in the operating environment. Refer to the Specific Product Precautions (page 266).

\*4: Due to voltage drops by the internal circuit in S/Z type and T type (with power saving circuit), use within the allowable voltage fluctuation as follows.

S/Z type  $\begin{cases}
24 V DC: -7 % to +10 % \\
12 V DC: -4 % to +10 %
\end{cases} T type \begin{cases}
24 V DC: -8 % to +10 % \\
12 V DC: -6 % to +10 %
\end{cases}$ 

\*5: For details, refer to page 268.

# Valve Specifications Series SY3000/5000/7000

#### **Response Time**

					Respo	onse time [m	s] (at 0.5 MPa) <sup>N</sup>	ote)		
				:	Standard		Quick	response ty	ре	
Series	Seal type	Model	Type of actuation	Without light/ surge voltage		ht/surge uppressor	Without light/ surge voltage	With light/surge voltage suppressor		
				suppressor	S/Z type	R/U type	suppressor	S/Z type	R/U type	
	Rubber seal	SY31⊡0	O position single	15 or less	20 or less	15 or less	12 or less	15 or less	12 or less	
	Metal seal	SY31⊡1	2-position single	15 or less	20 or less	15 or less	12 or less	15 or less	12 or less	
	Rubber seal	SY32⊡0	2 position double	12 or less	15 or less	12 or less	10 or less	13 or less	10 or less	
SY3000	Metal seal	SY32⊡1	2-position double	12 or less	15 or less	12 or less	10 or less	13 or less	10 or less	
	Rubber seal	SY33/4/5⊡0	2 position	18 or less	22 or less	18 or less	14 or less	18 or less	14 or less	
	Metal seal	SY33/4/5□1	3-position	18 or less	22 or less	18 or less	14 or less	18 or less	14 or less	
	Rubber seal	SY3A/B/C⊡0	4-position dual 3-port valve	18 or less	22 or less	18 or less	15 or less	19 or less	15 or less	
	Rubber seal	SY51⊡0		24 or less	31 or less	24 or less	18 or less	25 or less	18 or less	
	Metal seal	SY51⊡1	2-position single	24 or less	31 or less	24 or less	18 or less	25 or less	18 or less	
	Rubber seal	SY52⊡0		12 or less	15 or less	12 or less	10 or less	13 or less	10 or less	
SY5000	Metal seal	SY52⊡1	2-position double	12 or less	15 or less	12 or less	10 or less	13 or less	10 or less	
	Rubber seal	SY53/4/5⊡0	0	30 or less	34 or less	30 or less	24 or less	28 or less	24 or less	
	Metal seal	SY53/4/5□1	3-position	28 or less	30 or less	28 or less	23 or less	25 or less	23 or less	
	Rubber seal	SY5A/B/C⊡0	4-position dual 3-port valve	35 or less	42 or less	35 or less	28 or less	35 or less	28 or less	
	Rubber seal	SY71⊡0	O monition simple	47 or less	58 or less	53 or less	42 or less	52 or less	44 or less	
	Metal seal	SY71⊡1	2-position single	39 or less	48 or less	39 or less	34 or less	43 or less	34 or less	
	Rubber seal	SY72⊡0		18 or less	19 or less	19 or less	18 or less	17 or less	17 or less	
SY7000	Metal seal	SY72⊡1	2-position double	17 or less	17 or less	16 or less	16 or less	16 or less	16 or less	
	Rubber seal	SY73/4/5□0	2 position	52 or less	54 or less	47 or less	42 or less	46 or less	40 or less	
	Metal seal	SY73/4/5□1	3-position	38 or less	45 or less	39 or less	33 or less	38 or less	34 or less	
	Rubber seal	SY7A/B/C□0	4-position dual 3-port valve	52 or less	60 or less	54 or less	49 or less	53 or less	48 or less	

Note) Based on dynamic performance test, JIS B 8419-2010. (Coil temperature: 20 °C, at rated voltage.

Since the response time of the external pilot type of the 4-position dual 3-port valve differs from the above table, please contact SMC.

### Valve Weight

#### Series SY3000

Valve model	Seal ty	/pe		Тур	pe of actuation	า	Weigh	nt [g]
			0.00	aitian	Single		74	ļ
			2-po	sition	Double		83	3
SY3⊡00	Rubbers				Closed centr	е		
31300	Rubbels	seal	3-ро	sition	Exhaust cen	tre	87	7
					Pressure ce	ntre	1	
			4-po	sition	Dual 3-port v	/alve	83	3
Valve model	Seal		Tur	o of oo	tuation	Port	size	Weight
valve model	type		rype	e of ac	4, 2 (	A, B)	[g]	
				Singl	0			74

SY3□30-M5       2-position       Single Double       N5 x 0.8       74         3-position       Closed centre Exhaust centre       M5 x 0.8       87         3-position       Dual 3-port valve       83         2-position       Dual 3-port valve       83         2-position       Single Double       82         2-position       Single Double       82         2-position       Single Double       91         3-position       Dual 3-port valve       91         3-position       Dual 3-port valve       91         2-position       Single Double       2-position       85         3-position       Single Double       2-position       Single Double       93         2-position       Single Double       2-position       85         3-position       Single Double       2-position       94         2-position       Single       94		type			4, Z (A, D)	[8]
SY3 30-M5       3-position       Closed centre       M5 x 0.8       87         3-position       Exhaust centre       Pressure centre       M5 x 0.8       87         SY3 30-C2       Single       Double       83         SY3 30-C2       Single       Double       82         3-position       Exhaust centre       Pressure centre       91         3-position       Exhaust centre       Pressure centre       92         3-position       Exhaust centre       91       95         2-position       Single       2-position       91         2-position       Single       2-position       91         2-position       Single       2-position       91         2-position       Single       2-position       93         3-position       Exhaust centre       94       94         2-position       Dual 3-port valve       94       94         2-position       Dual 3-port valve       94       94         2-position       Single       2-position       94         2-position       Single       2-position       94         2-position       Single       94       94         3-position       Exhaust centre			2 position	Single		74
SY3_30-C2       3-position       Exhaust centre Pressure centre Double       MIS X 0.8       87         SY3_30-C2       Single 2-position       Single Double       82       91         3-position       Single Exhaust centre Pressure centre       82       91         3-position       Closed centre Exhaust centre Pressure centre       92       One-touch fitting       91         3-position       Single Double       2-       91       92         2-position       Dual 3-port valve       91       91         2-position       Single Double       0       93         2-position       Closed centre Double       93       94         2-position       Closed centre Double       93       94         2-position       Closed centre Double       94       94         2-position       Dual 3-port valve       94       94         2-position       Dual 3-port valve       94       94         2-position       Closed centre Duble       94       94         2-position       Single Duble       777       86         3-position       Exhaust centre Pressure centre       Ø 4 One-touch fitting       80         3-position <td< td=""><th></th><td></td><td>2-position</td><td>Double</td><td></td><td>83</td></td<>			2-position	Double		83
3-position       Exhaust centre Pressure centre Pressure centre       87         SY3 30-C2       2-position       Dual 3-port valve       83         2-position       Duals 2-port valve       83         3-position       Closed centre Pressure centre       91         3-position       Closed centre Pressure centre       91         4-position       Dual 3-port valve       91         2-position       Single Double       91         2-position       Single Double       91         2-position       Single Double       93.2 One-touch fitting         3-position       Single Double       93.2 One-touch fitting         3-position       Single Double       94         2-position       Single Double       94         3-position       Single Double       94         2-position       Single Double       94         2-position       Single Double       94         2-position       Single Double       94         3-position       Single Double       94         2-position       Single Double       94         3-position       Single Double       94         2-position       Single Double       94         86       90	SV3 30-M5			Closed centre	MEYOR	
SY3 30-C2       4-position       Dual 3-port valve       83         2-position       Single       Double       91         3-position       Closed centre       2       91         3-position       Closed centre       2       91         4-position       Dual 3-port valve       91       95         3-position       Single       91       91         2-position       Dual 3-port valve       91       91         2-position       Single       0       2.00e-touch fitting       94         2-position       Single       0       3.2 One-touch fitting       94         3-position       Exhaust centre       Pressure centre       94       94         2-position       Single       2.00e-touch fitting       94         3-position       Exhaust centre       77       86         2-position       Single       2.00e-touch fitting       94         3-position       Exhaust centre       94       94         3-position       Exhaust centre       94       94         2-position       Single       2.00e-touch fitting       94         3-position       Exhaust centre       94       94       94 <t< td=""><th>515<u></u>50-105</th><td></td><td>3-position</td><td>Exhaust centre</td><td>1013 X 0.0</td><td>87</td></t<>	515 <u></u> 50-105		3-position	Exhaust centre	1013 X 0.0	87
SY3 30-C2       2-position       Single Double       2-position       Single Double       2-position       Closed centre Exhaust centre       Ø 2 One-touch fitting       91       95         SY3 30-C3       Rubber seal       2-position       Single Double       Ø 2 One-touch fitting       91         SY3 30-C3       Rubber seal       Single 2-position       Closed centre Double       Ø 3.2 One-touch fitting       94         2-position       Single Double       Ould 3-port valve       Ø 3.2 One-touch fitting       94         3-position       Single Double       Ould 3-port valve       Ø 4 One-touch fitting       94         2-position       Single Double       Ouble       C4       86         3-position       Exhaust centre Pressure centre       Ø 4 One-touch fitting       90         SY3 30-C6       Single 2-position       Closed centre Exhaust centre       Ø 6 One-touch fitting       80         SY3 30-C6       Single 2-position       Closed centre Exhaust centre       Ø 6 One-touch fitting       80				Pressure centre		
SY3 30-C2       2-position       Double       91         3-position       Closed centre       2 One-touch fitting       95         SY3 30-C3       Rubber seal       2-position       Single       91         2-position       Single       2-position       91         3-position       Single       91       95         2-position       Single       91       91         3-position       Single       91       91         3-position       Single       03.2 One-touch fitting       94         3-position       Dual 3-port valve       93       94         2-position       Dual 3-port valve       94       94         2-position       Single       77       94         2-position       Single       77       86         3-position       Closed centre       94       90         2-position       Dual 3-port valve       94       90         3-position       Single       94       90         2-position       Dual 3-port valve       86       80         3-position       Single       90       86         2-position       Single       90       86         3-position			4-position	Dual 3-port valve		83
SY3 30-C2       3-position       Closed centre       2 One-touch fitting       95         3-position       Exhaust centre       91       95         4-position       Dual 3-port valve       91         2-position       Single       94         2-position       Exhaust centre       94         3-position       Exhaust centre       94         2-position       Closed centre       3.2 One-touch fitting       94         3-position       Exhaust centre       94       94         3-position       Exhaust centre       94       94         2-position       Dual 3-port valve       94       94         2-position       Single       2-position       77         3-position       Exhaust centre       94       94       94         2-position       Single       2-position       94       94         3-position       Exhaust centre       94       94       94         3-position       Exhaust centre       94       94 <th></th> <th></th> <th>2 position</th> <th>Single</th> <th></th> <th>82</th>			2 position	Single		82
SY3 30-C2       3-position          Closed centre Exhaust centre Pressure centre Pressure centre Double         Closed centre        Ø 2 One-touch fitting        95          SY3 30-C3       Rubber seal          2-position           Single Double        Ø 2 One-touch fitting        91          SY3 30-C3       Rubber seal          2-position           Single Double           Q         3.2 One-touch Fitting           94          SY3 30-C4          2-position           Single 2-position           Q         3.2 One-touch Exhaust centre           94          SY3 30-C4          Single 2-position           Dual 3-port valve           94          SY3 30-C4          Single 2-position           Single Double           Pressure centre Pressure centre           Ø 4 One-touch fitting           90          SY3 30-C6            Single Double           Ø 4 One-touch fitting           80          Sy3 30-C6          Single 2-position           Single Double           Ø 4 One-touch fitting			2-розшон	Double	C2	91
SY3 30-C3       Rubber seal       3-position       Exnaust centre Pressure centre Dual 3-port valve       fitting       91         2-position       Single Double       94       94       94         3-position       Single Double       0       3.2 One-touch fitting       98         SY3 30-C4       3-position       Single Closed centre Exhaust centre Pressure centre       0       3.2 One-touch fitting       94         2-position       Single Closed centre       0       3.2 One-touch fitting       94         2-position       Single Closed centre       0       3.2 One-touch fitting       94         2-position       Dual 3-port valve       94       94       94         2-position       Dual 3-port valve       94       94       94         2-position       Single Double       0       0       94       96         3-position       Exhaust centre Pressure centre       94       90       90       90       90       90       90       90       96       90       90       96       86       80       80       80       80       80       80       80       80       80       80       80       80       80       80       80       80       80       80 </td <th>SV3 30-C2</th> <td></td> <td></td> <td>Closed centre</td> <td></td> <td></td>	SV3 30-C2			Closed centre		
SY3 30-C3       Rubber seal       Pressure centre       91         SY3 30-C3       Rubber seal       2-position       Dauble       93         3-position       Exhaust centre       Pressure centre       94         2-position       Closed centre       93       3.2 One-touch fitting       94         2-position       Pressure centre       Pressure centre       94       94         2-position       Dauble       C3       94         2-position       Dual 3-port valve       94       94         2-position       Dauble       C4       94         2-position       Single       77       86         3-position       Exhaust centre       90       90         4-position       Dual 3-port valve       94       90         2-position       Exhaust centre       90       86         2-position       Single       80       80         2-position       Single       80       80         2-position       Closed centre       80       80         3-position       Exhaust centre       94       93         3-position       Exhaust centre       90       88         90       Olde       80	515-52		3-position	Exhaust centre		95
SY3 30-C3       Rubber seal <sup>2</sup> -position <sup>Single</sup> Double <sup>2</sup> -position <sup>Single</sup> Double <sup>8</sup> / <sub>94</sub> 3-position <sup>2</sup> -position <sup>Closed</sup> centre Pressure centre <sup>4</sup> -position <sup>0</sup> / <sub>2</sub> 2-position <sup>8</sup> / <sub>94</sub> 2-position <sup>Duals</sup> 2-port valve <sup>9</sup> / <sub>4</sub> <sup>9</sup> / <sub>4</sub> 2-position <sup>Single</sup> <sup>Double</sup> <sup>77</sup> / <sub>86</sub> <sup>90</sup> / <sub>90</sub> 3-position <sup>Single</sup> <sup>Double</sup> <sup>6</sup> / <sub>4</sub> <sup>77</sup> / <sub>86</sub> 3-position <sup>Single</sup> <sup>Double</sup> <sup>6</sup> / <sub>4</sub> <sup>90</sup> SY3 30-C6 <sup>Single</sup> <sup>2</sup> -position <sup>Single</sup> <sup>Double</sup> <sup>6</sup> / <sub>4</sub> 3-position <sup>Single</sup> <sup>Double</sup> <sup>6</sup> / <sub>4</sub> <sup>80</sup> / <sub>8</sub> 3-position <sup>Single</sup> <sup>Double</sup> <sup>6</sup> / <sub>4</sub> <sup>80</sup> / <sub>8</sub> 3-position <sup>Single</sup> <sup>Double</sup> <sup>6</sup> / <sub>4</sub> <sup>80</sup> / <sub>8</sub> 3-positi				Pressure centre	inturig	
SY3 30-C3       Rubber seal       2-position       Double       Closed centre       94         3-position       Exhaust centre       Pressure centre       0 3.2 One-touch fitting       98         SY3 30-C4       2-position       Single       77         Bouble       Closed centre       80       77         Bouble       Closed centre       90       77         2-position       Double       C4       86         3-position       Exhaust centre       90       90         3-position       Exhaust centre       90       86         2-position       Double       64       80         2-position       Double       86       80         2-position       Single       80       80         2-position       Double       80       89         2-position       Closed centre       80       89         3-position       Exhaust centre       90       89         3-position       Exhaust centre       90       89         0       0       0       89       93         Stransition       Exhaust centre       90       89       93			4-position	Dual 3-port valve		91
SY3 30-C3       Rubber seal       Closed centre       Closed centre       2       94         3-position       Exhaust centre       Pressure centre       0       3.2 One-touch fitting       98         SY3 30-C4       2-position       Single       94       98       94         2-position       Double       0       94       98         2-position       Data 3-port valve       94       94         2-position       Double       94       94         2-position       Data 3-port valve       94       94         3-position       Exhaust centre       94       94         3-position       Exhaust centre       94       94         2-position       Dauble       64       94         2-position       Dauble       86       80         2-position       Single       80       80         2-position       Single       80       80         3-position       Exhaust centre       86       89         3-position       Exhaust centre       93       89         3-position       Exhaust centre       93       93			2 position	Single		85
SY3 30-C3       Rubber seal       3-position          Closed centre Exhaust centre Pressure centre Pressure centre 0        Ø 3.2 One-touch fitting        98          SY3 30-C4       4-position       Dual 3-port valve       94        94          2-position       Single Double       77        86        90          SY3 30-C4			2-розноп	Double	C3	94
SY3_30-C4     3-position     Exnaust centre Pressure centre 4-position     fitting     98       2-position     Dual 3-port valve     94       2-position     Single Double     77       3-position     Exhaust centre Pressure centre     40 one-touch fitting       4-position     Dual 3-port valve       3-position     Exhaust centre Pressure centre     90       2-position     Single Double     86       2-position     Single Double     80       2-position     Single Double     80       2-position     Closed centre Double     80       3-position     Exhaust centre Pressure centre     93	SV3 30-C3	Rubber		Closed centre		
SY3 30-C4     Pressure centre 4-position     Pressure centre Dual 3-port valve     94       2-position     Single Double     77       3-position     Exhaust centre Pressure centre     04       4-position     Closed centre Pressure centre     04       4-position     Exhaust centre Pressure centre     04       2-position     Single Double     04       2-position     Exhaust centre Double     04       2-position     Single Double     80       2-position     Single Double     80       2-position     Closed centre Double     89       3-position     Exhaust centre Pressure centre     93	013-03	seal	3-position	Exhaust centre		98
SY3 30-C4     2-position     Single Double     77     86       3-position     Closed centre Exhaust centre Pressure centre     Ø 4 One-touch fitting     90       4-position     Dual 3-port valve     86       2-position     Single Double     80       2-position     Closed centre Pressure centre     80       2-position     Closed centre Double     80       2-position     Exhaust centre Pressure centre     80       3-position     Exhaust centre Pressure centre     93					intering	
SY3 30-C4     2-position     Double     C4     86       3-position     Exhaust centre     Ø 4 One-touch fitting     90       4-position     Dual 3-port valve     86       2-position     Single     80       2-position     Closed centre     80       3-position     Closed centre     80       3-position     Closed centre     89       3-position     Exhaust centre     93			4-position	Dual 3-port valve		94
SY3 30-C4     Closed centre 3-position     Closed centre Exhaust centre Pressure centre     Ø 4 One-touch fitting     90       SY3 30-C6     Single 2-position     Double     86       2-position     Single Double     80       3-position     Exhaust centre Pressure centre     80       2-position     Closed centre Double     80       3-position     Exhaust centre Pressure centre     93			2-position			77
SY3□30-C4       3-position       Closed centre Exhaust centre Pressure centre       Ø 4 One-touch fitting       90         4-position       Dual 3-port valve       86         2-position       Single Double       80         2-position       Closed centre Pressure centre       80         3-position       Exhaust centre Pressure centre       93			2-розшон	Double	C4	86
3-position     Exhaust centre Pressure centre     fitting     90       4-position     Dual 3-port valve     86       2-position     Single Double     80       2-position     Closed centre     89       3-position     Exhaust centre     93	SV3 30-C4			Closed centre	- ·	
SY3□30-C6     Pressure centre     86       2-position     Single     80       Double     C6     89       3-position     Exhaust centre     Ø 6 One-touch fitting	0100004		3-position	Exhaust centre		90
SY3□30-C6     Single Double     80 Bouble       3-position     Closed centre Exhaust centre     0 6 One-touch fitting					inturig	
SY3□30-C6 2-position 3-position Closed centre 3-position Pressure centre Pressure centre			4-position	Dual 3-port valve		86
SY3 30-C6 3-position Exhaust centre Pressure centre Pressure centre			2-position			80
SY3□30-C6 Closed centre Ø 6 One-touch 3-position Exhaust centre Pressure centre 93			2 20311011		C6	89
3-position Exhaust centre fitting 93	SY3 30-C6					
Pressure centre	013-30-00		3-position			93
4-position Dual 3-port valve 89					intering	
			4-position	Dual 3-port valve		89

Valve model	Seal type	Тур	be of actuation	Weight [g]
		2-position	Single	76
		2-розшон	Double	86
SY3⊡01	Metal seal		Closed centre	
		3-position	Exhaust centre	90
			Pressure centre	

Valve model	Seal	Type	of actuation	Port size	Weight
	type			4, 2 (A, B)	[g]
		2-position	Single	-	76
		2 0031001	Double		86
SY3□31-M5			Closed centre	M5 x 0.8	
		3-position	Exhaust centre		90
			Pressure centre		
		2-position	Single		84
		2-розшон	Double	C2	94
SY3□31-C2			Closed centre	Ø 2 One-touch	
		3-position	Exhaust centre	fitting	98
			Pressure centre		
		Questition	Single		87
	Metal	2-position	Double	C3	97
SY3□31-C3	seal		Closed centre	Ø 3.2 One-touch	
	Seal		Exhaust centre	fitting	101
			Pressure centre		
		2-position	Single		79
		2-position	Double	C4	89
SY3□31-C4			Closed centre	Ø 4 One-touch	
		3-position	Exhaust centre	fitting	93
			Pressure centre		
		2 position	Single		82
	C6	2-position	Double	C6	92
SY3□31-C6			Closed centre	Ø 6 One-touch	
		3-position	Exhaust centre	fitting	96
			Pressure centre		

#### Series SY5000

Valve model	Seal type	Type of actuation		Type of actuation		Weight [g]
		2-position	Single	82		
	Rubber seal	2-position	Double	90		
SY5⊟00		3-position	Closed centre			
515000			Exhaust centre	100		
			Pressure centre			
		4-position	Dual 3-port valve	90		

Valve model	Seal	Tura	a of actuation	Port size	Weight
valve model	type	Гур	e of actuation	4, 2 (A, B)	[g]
		2-position	Single		102
		2-розноп	Double		110
SY5⊡30-01			Closed centre	1/8	
5150-01		3-position	Exhaust centre	1/0	120
			Pressure centre		
		4-position	Dual 3-port valve		110
		2-position	Single		115
		2-00510011	Double	C4	123
SY5⊡30-C4			Closed centre	Ø 4 One-touch	
3130-04		3-position	Exhaust centre	fitting	133
			Pressure centre	inturig	
	Rubber	4-position	Dual 3-port valve		123
	seal	2-position	Single		110
		2-розшон	Double	C6	118
SY5⊡30-C6			Closed centre	Ø 6 One-touch	
515-50		3-position	Exhaust centre	fitting	128
			Pressure centre	inturig	
		4-position	Dual 3-port valve		118
		2-position	Single		99
		2-розшон	Double	C8	107
SY5⊡30-C8			Closed centre	Ø 8 One-touch	
515-06		3-position	Exhaust centre	fitting	117
			Pressure centre	inturig	
		4-position	Dual 3-port valve		107

Valve model	Seal type	Type of actuation		Type of actuation Weig		Weight [g]
SY5⊡01		2 position	Single	91		
		2-position	Double	101		
	Metal seal	3-position	Closed centre			
			Exhaust centre	111		
			Pressure centre	1		

Valve model	Seal type	Туре	of actuation	Port size 4, 2 (A, B)	Weight [g]
		2-position	Single		111
		2-position	Double		121
SY5□31-01			Closed centre	1/8	
		3-position	Exhaust centre		131
			Pressure centre		
	2-position	Single		124	
		2-розшон	Double	C4	134
SY5□31-C4		3-position	Closed centre	Ø 4 One-touch	
			Exhaust centre	fitting	144
	Metal		Pressure centre		
	seal	eal 2-position	Single		120
			Double	C6	130
SY5□31-C6			Closed centre	Ø 6 One-touch	
		3-position	Exhaust centre	fitting	140
			Pressure centre		
		2-position	Single		108
		2-position	Double	C8	118
SY5□31-C8			Closed centre	Ø 8 One-touch	
		3-position	Exhaust centre	fitting	128
			Pressure centre		

# Valve Specifications Series SY3000/5000/7000

#### Valve Weight

#### Series SY7000


Valve model	Seal ty	/pe		Typ	pe of actuation	า	Weight [g]	
			2-position Single		11			
			2-po	SITION	Double		11	8
SY7⊓00	Rubber	0001			Closed cent	re		
31700	Ruppel	Seal	3-ро	sition	Exhaust cer	ntre	13	3
					Pressure ce	ntre		
			4-po	sition	Dual 3-port	valve	11	4
Valve model	Seal		Typ	e of ac	tuation	Port		Weight
	type					4, 2 (	А, B)	[g]
		2-00	sition	Singl		-		125
		- po		Doub		-		133
SY7□30-02					ed centre	1/	4	
		3-pos	sition		ust centre	,		147
		<u> </u>			sure centre	-		
		4-po:	sition		3-port valve			129
		2-pos	sition	Singl		-		163
				Doub		C	6	171
SY7□30-C6					ed centre	Ø 6 One	e-touch	
		3-pos	osition		ust centre	fitti	ng	186
		4			sure centre	-	-	407
		4-p0	SILLOLI		3-port valve			167
		2-po:	sition	Singl Doub		-		151 159
	Rubber				ed centre	C		109
SY7□30-C8		3-00	3-position		ust centre	Ø 8 One-touch fitting		174
		<sup>33</sup> p0;	SILIOIT		sure centre			1/4
		4-no	sition		3-port valve			155
				Singl				136
		2-pos	sition	Doub		1		144
OV7⊡20 040					ed centre	C1	-	
SY7□30-C10		3-pos	sition		ust centre	Ø 10 On		159
					sure centre	fitti	ng	
		4-po:	sition	Dual	3-port valve	1		140
		<u> </u>		Singl				146
		2-pos	sition	Doub		C12		154
SY7⊡30-C12				Close	ed centre	Ø 12 On	-	
SY/_30-C12		3-po:	sition	Exha	ust centre			169
				Press	sure centre	fitting		
		4-pos	sition	Dual	3-port valve			150

Valve model	Seal ty	/pe		Тур	pe of actuation	n Weigh		nt [g]	
		2-pos		Single			122		
			2-p03	suon	Double		133		
SY7⊡01	Metal s	seal			Closed cent				
			3-pos	sition	Exhaust cer	ntre	15	0	
					Pressure ce	ntre			
Valve model	Seal		Type	of ac	tuation	Port		Weight	
	type		,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,	0.		4, 2 (/	А, В)	[g]	
		2-po	sition	Sing		-		136	
01/7 04 00		3-position		Dou				148	
SY7⊡31-02					ed centre	1/-	4	101	Г
					aust centre	_		164	
					sure centre			474	
		2-position		Sing Dou		C6		174 186	
SY7⊡31-C6		3-positio			ed centre	Ø 6 One	•	186	
517131-00			aition		aust centre			202	
		<b>3-</b> pu	5111011		sure centre	fitting		202	
				Sing				162	
		2-po	sition	Dou		C	8	174	
SY7⊡31-C8	Metal	<u> </u>			ed centre	Ø 8 One-touch		1/4	
017 - 01 - 00	seal	3-00	sition		aust centre	fitti		190	
			5111011		sure centre		'9	130	
		-		Sing				148	
		2-po	sition	Dou		C1	0	159	
SY7□31-C10					ed centre	Ø 10 On	-		Γ
	3-positi		sition	Exh	aust centre	fitti	ng	176	
				Pres	sure centre	1	0		
		0	-141	Sing				157	
		2-po	sition	Dou		C1	2	169	
SY7□31-C12				Clos	ed centre	Ø 12 On	e-touch		
		3-ро			aust centre	fitti	ng	185	
				Pres	sure centre				


Valve


# Series SY3000/5000/7000 Valve Construction

#### **Rubber Seal**

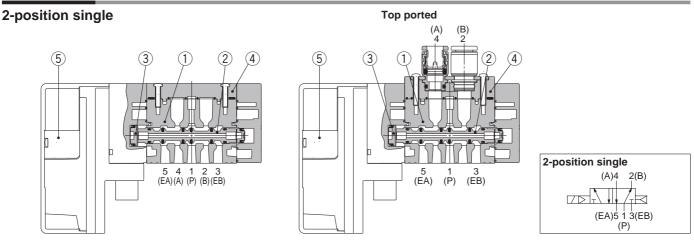



#### 2-position double

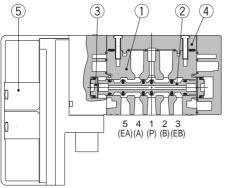

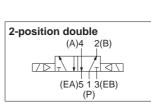

#### 3-position closed centre/exhaust centre/pressure centre

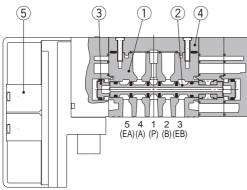

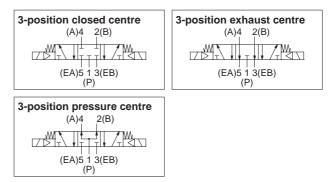


#### **Component Parts**

No.	Description	Material	Note
1	Body	SY3000: Zinc die-casted SY5000/SY7000: Aluminium die-casted	
2	Spool valve	Special resin/HNBR ( 3-position valve: ( Aluminium/HNBR )	
3	Piston	Resin	
	Body cover assembly	Resin	For side/bottom ported
4	Port block assembly	SY3000: Resin SY5000: Zinc die-casted SY7000: Aluminium die-casted	For top ported
5	Pilot valve assembly		Refer to page 22.




# Valve Construction Series SY3000/5000/7000

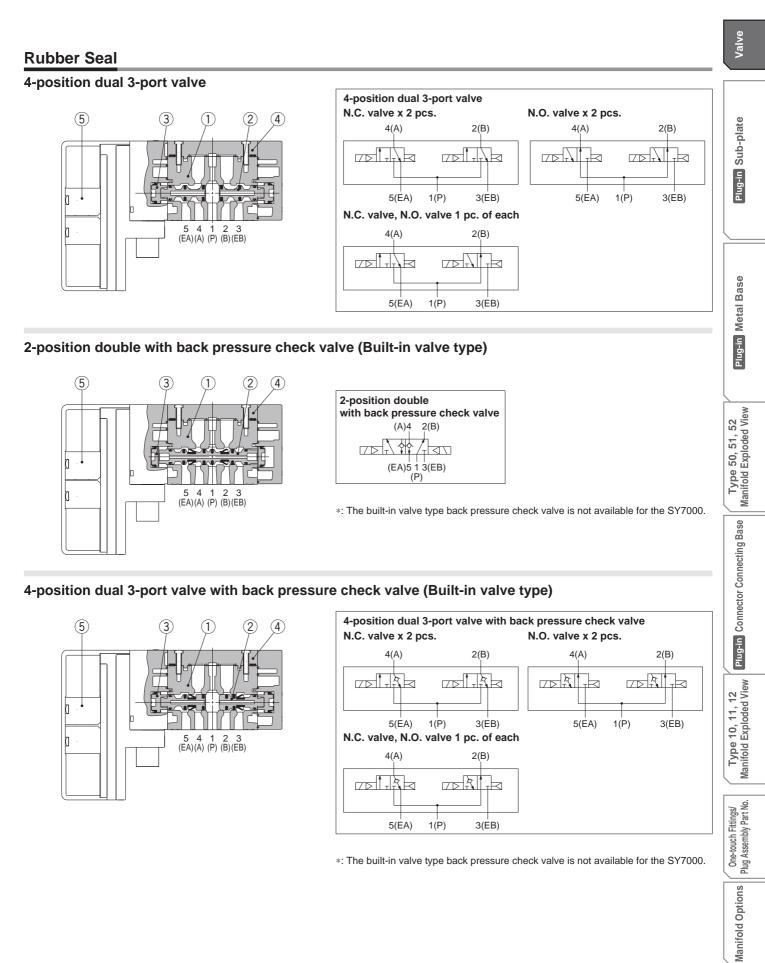


**SMC** 


\*: The built-in valve type back pressure check valve is not available for the SY7000.

#### **Metal Seal**

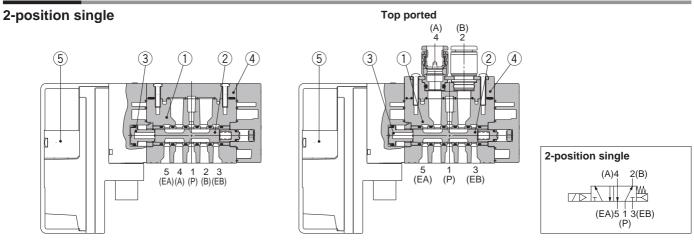


#### 2-position double

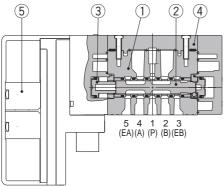

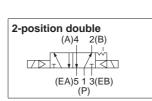

#### 3-position closed centre/exhaust centre/pressure centre

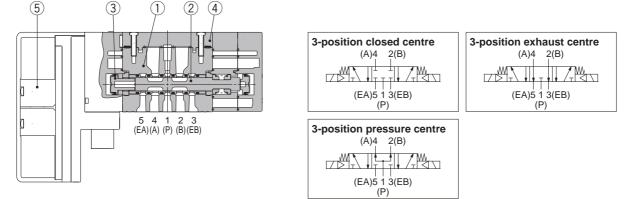

#### **Component Parts**


No.	Description	Material	Note
1	Body	SY3000: Zinc die-casted SY5000/SY7000: Aluminium die-casted	
2	Spool, Sleeve	Stainless steel/HNBR	
3	Piston	Resin	
	Body cover assembly	Resin	For side/bottom ported
4	4 Port block assembly	SY3000: Resin SY5000: Zinc die-casted SY7000: Aluminium die-casted	For top ported
5	Pilot valve assembly	—	Refer to page 22.

Valve
Plug-in Sub-plate
Plug-in Metal Base
Type 50, 51, 52 Manifold Exploded View
Plug-in Connector Connecting Base
Type 10, 11, 12 Manifold Exploded View
One-touch Fittings/ Plug Assembly Part No.
Manifold Options




# Series SY3000/5000/7000 Valve Replacement Parts

#### How to Order Port Block Assembly

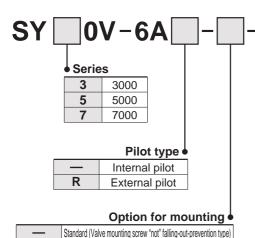


Valve mounting screw falling-out-prevention type

1

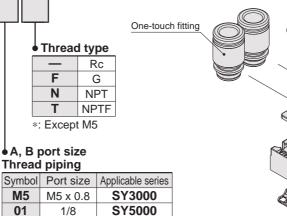

SY7000

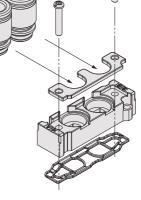

Mounting screw

#### Metric size (One-touch fitting)

1/4

02

Cumhal	Dert eine	Applicable series				
Symbol	Port size	SY3000	SY5000	SY7000		
C2	Ø 2		_	—		
C3	Ø 3.2		_	—		
C4	Ø 4			_		
C6	Ø 6					
C8	Ø 8	—				
C10	Ø 10	_	_			
C12	Ø 12	—	_			

#### Inch size (One-touch fitting)

Symbol	Port size	Applicable series			
	Port size	SY3000	SY5000	SY7000	
N1	Ø 1/8"		_	_	
N3	Ø 5/32"			—	
N7	Ø 1/4"				
N9	Ø 5/16"	—			
N11	Ø 3/8"	_	_		

#### • Possible to replace only the One-touch fitting.


Port size		SY3000	SY5000	SY7000				
	Ø 2	VVQ1000-50A-C2	—	—				
Metric size	Ø 3.2	VVQ1000-50A-C3	—	—				
	Ø 4	VVQ1000-50A-C4	VVQ1000-51A-C4	—				
	Ø 6	VVQ1000-50A-C6	VVQ1000-51A-C6	VVQ2000-51A-C6				
	Ø 8	—	VVQ1000-51A-C8	VVQ2000-51A-C8				
	Ø 10	—	—	VVQ2000-51A-C10				
	Ø 12	_	—	KQ2H12-17-X899				
	Ø 1/8"	VVQ1000-50A-N1	_	—				
	Ø 5/32"	VVQ1000-50A-N3	VVQ1000-51A-N3	—				
Inch size	Ø 1/4"	VVQ1000-50A-N7	VVQ1000-51A-N7	VVQ2000-51A-N7				
	Ø 5/16"	—	VVQ1000-51A-N9	VVQ2000-51A-N9				
	Ø 3/8"	—	—	VVQ2000-51A-N11				

Refer to pages 271 and 272 for how to replace the port block assembly, One-touch fitting and body cover assembly.

# Valve Replacement Parts Series SY3000/5000/7000

#### **Body Cover Assembly**


\*: Used when the top ported is changed to the side or bottom ported.

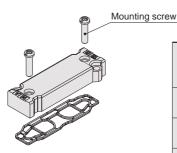

		Part	no.
Series		Standard (Valve mounting screw "not" falling-out-prevention type)	Valve mounting screw falling-out-prevention type
01/2000	Internal pilot	SY30V-16A	SY30V-16A-1
SY3000	External pilot	SY30V-16AR	SY30V-16AR-1
SY5000	Internal pilot	SY50V-16A	SY50V-16A-1
315000	External pilot	SY50V-16AR	SY50V-16AR-1
SY7000	Internal pilot	SY70V-16A	SY70V-16A-1
317000	External pilot	SY70V-16AR	SY70V-16AR-1


\*: The part number is not indicated on the product.

#### How to Order Pilot Valve Assembly (With a gasket and two mounting screws)

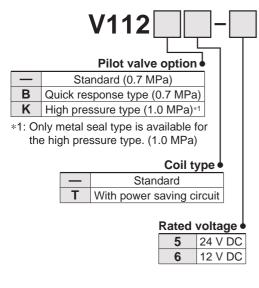

#### **≜**Caution

- The coil specification and voltage (including light/surge voltage suppressor) cannot be changed by changing the pilot valve assembly.
- When selecting the coil type with power saving circuit, it is not possible to change to high pressure/power saving circuit type.

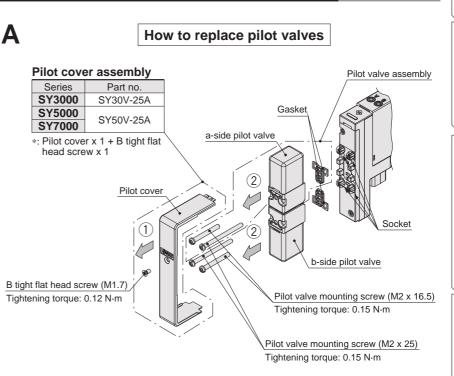

- Loosen B tight flat head screw to remove the pilot cover in the direction indicated by the arrow ①.
- Remove the pilot valve mounting screws.

**GSMC** 

- Remove the pilot valve in the direction indicated by the arrow 2.
- \*: Assemble by following the removal procedure in reverse.
- \*: Ensure the gasket is mounted, and take care not to bend the socket.
- \*: Be noted for mounting that there are two types of lengths for the pilot valve mounting screws.

Plug-in Sub-plate

Plug-in Metal Base

Type 50, 51, 52 Manifold Exploded View


Plug-in Connector Connecting Base

Type 10, 11, 12 Manifold Exploded View

One-touch Fittings/ Plug Assembly Part No.

Manifold Options

22

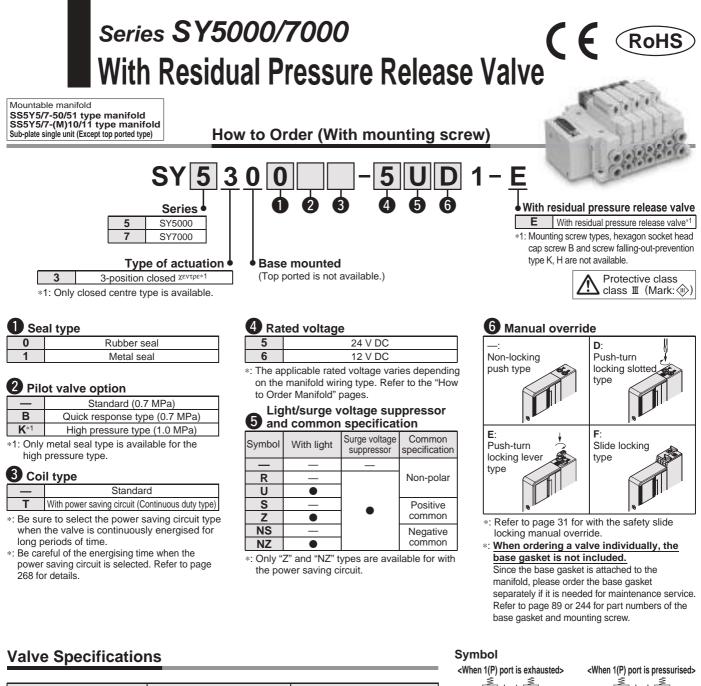


Valve construction		Rubber seal	Metal seal			
valve col	ISTIUCTION	3-position closed centre valve with residual pressure release valve				
Fluid		Air				
Operating press	ure range MPa <sup>*2</sup>	0.3 to 0.7	0.3 to 0.7 (High pressure: 0.3 to 1)			
Woight [g]	SY5000	117	128			
Weight [g]	SY7000	156	177			

\*1: Rubber seal is used for the residual pressure release valve.


\*2: Internal pilot type only

\*: Other specifications are common to the valve specifications on page 13.

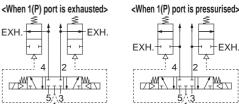


A mechanism is used that exhausts the pressure of the cylinder port when the P port supply pressure of the 3 position closed centre valve is exhausted.

## With Residual Pressure Release Valve Series SY5000/7000

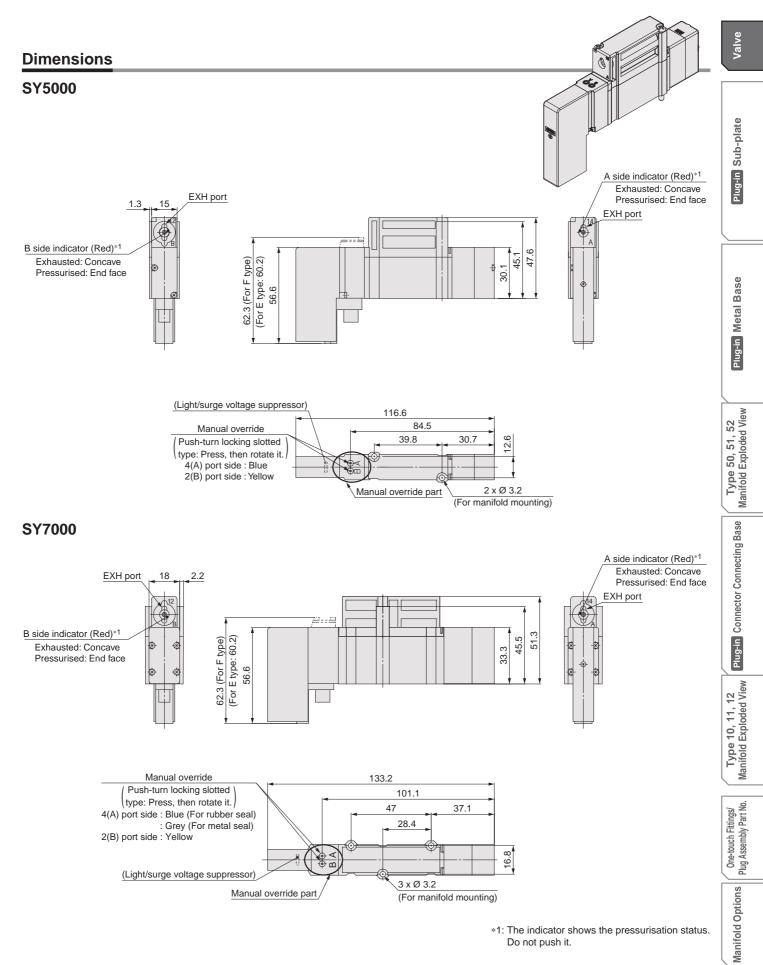

Only for External Pilot

# Vacuum Release Valve with Restrictor ( € Series SY3000/5000

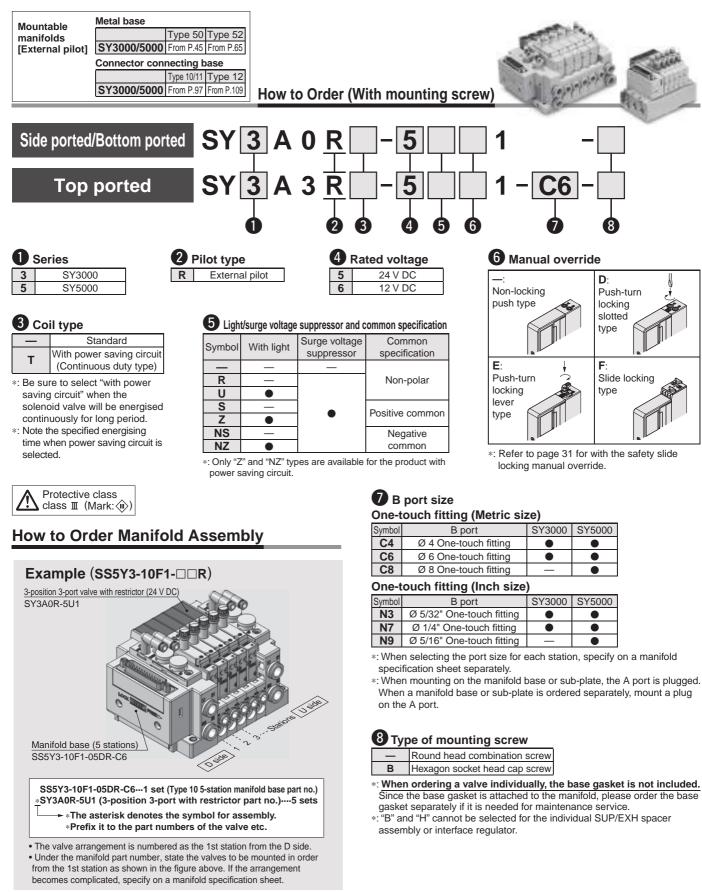

## Only for External Pilot Vacuum Release Valve with Restrictor Series SY3000/5000





Options	
Manifold	

#### **Valve Specifications**

Valve construction		3-position 3-port valve with restrictor		
Seal		Rubber seal		
Fluid		Air		
Type of actuation		Normally closed		
	Release pressure port 1(P)	0 to 0.6		
Operating pressure range [MPa]	Vacuum pressure port 3(EB), 3/5(E)	-100 kPa to 0.7*1		
range [wir a]	Pilot X port	Release pressure + 0.1 or more (Min. 0.25) to 0.7		
Restrictor operation		Manual		

\*1: Can be used with positive pressure to suit the application.

\*: Other specifications are common to the valve specifications on page 13.

\*: Quick response type is not available.

#### Weight

Valve model	Weight [g]	
SY3A0R	90	
	Port size	
Valve model	2(B) port	Weight [g]
CV2A2D	C4	91
SY3A3R	C6	93
Valve model	Weight [g]	
SY5A0R	94	
	Port size	
Valve model	2(B) port	Weight [g]
	C4	118
SY5A3R	C6	115
	C8	121

#### **Response Time**

Valve model	Without light/surge	With light/surge voltage suppressor						
valve mouel	voltage suppressor	S/Z type	R/U type					
SY3A⊟R	18	26	18					
SY5A⊟R	27	32	27					

\*: P = 0.1 MPa X = 0.5 MPa

#### Manifold Flow Rate Characteristics<sup>\*1</sup>

3(EB) Х

port

Vacuum pressure

2(B)

Vacuum pad port

Symbol

1(P)

port

Release pressure

#### Flow Rate Characteristics (When restrictor is fully open) **1 Plug-in Metal Base**

	Port	size	Valve flow rate characteristics					
Manifold type	1, 3	2		1→2 (P→B)		2	2→3 (B→EB)	
	(P, EB)	(B)	C [dm <sup>3</sup> /(s·bar)]	b	Q [l/min (ANR)]*2	C [dm <sup>3</sup> /(s·bar)]	b	Q [l/min (ANR)]*2
SS5Y3-50R (Side ported)	1/8	C6	0.7	0.24	172	1.0	0.16	234
SS5Y3-52R (Top ported)	1/8	C6	1.0	0.25	247	1.1	0.25	271
SS5Y5-50R (Side ported)	1/4	C8	1.0	0.30	254	2.3	0.10	522
SS5Y5-52R (Top ported)	1/4	C8	1.4	0.16	328	2.4	0.14	556

#### **2 Plug-in Connector Connecting Base**

	Port	Port size Valve flow rate characteristics						
Manifold type	1, 3	2		1→2 (P→B)		2	2→3 (B→EB)	
	(P, EB)	(B)	C [dm <sup>3</sup> /(s·bar)]	b	Q [l/min (ANR)]*2	C [dm <sup>3</sup> /(s·bar)]	b	Q [l/min (ANR)]*2
SS5Y3-10R (Side ported)	C8	C6	0.7	0.36	185	1.2	0.22	291
SS5Y3-12R (Top ported)	C8	C6	1.0	0.26	248	1.2	0.20	287
SS5Y5-10R (Side ported)	C10	C8	1.0	0.20	240	2.9	0.17	683
SS5Y5-11R (Bottom ported)	C10	C8	1.0	0.30	354	3.3	0.24	809
SS5Y5-12R (Top ported)	C10	C8	1.4	0.15	326	2.6	0.24	637


\*1: The value is for manifold base with 5 stations.

\*2: These values have been calculated according to ISO 6358 and indicate the fl ow rate under standard conditions with an inlet pressure of 0.6 MPa (relative pressure) and a pressure drop of 0.1 MPa.


<sup>\*:</sup> Calculation of effective area S and sonic conductance C: S = 5.0 x C

# Series SY3000/5000


#### Restrictor Flow Rate Characteristics [Fluid passage: 1(P)→2(B)]

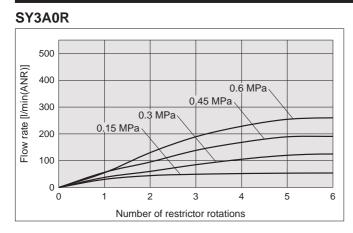


#### SY3A3R-C4

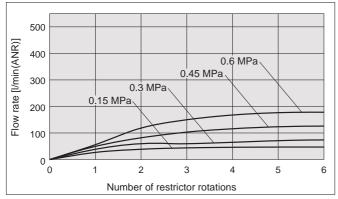


#### SY3A3R-C6

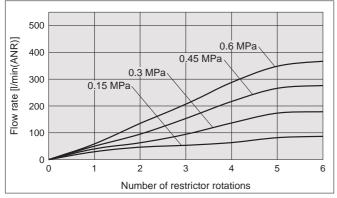


#### SY5A0R

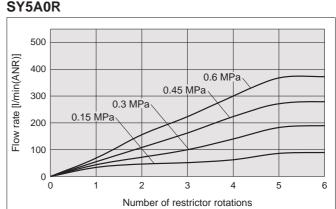




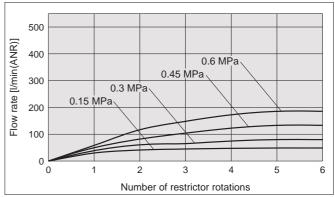



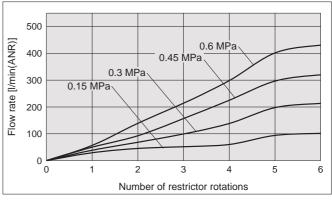




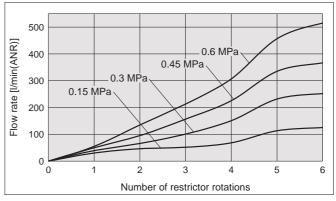


## Only for External Pilot Vacuum Release Valve with Restrictor Series SY3000/5000

#### **Circuit Example**

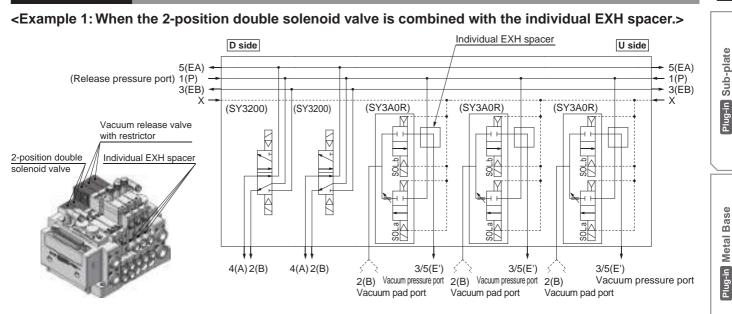

<Example 2: When the 2-position double solenoid valve is combined with the individual EXH block and blocking disk.>

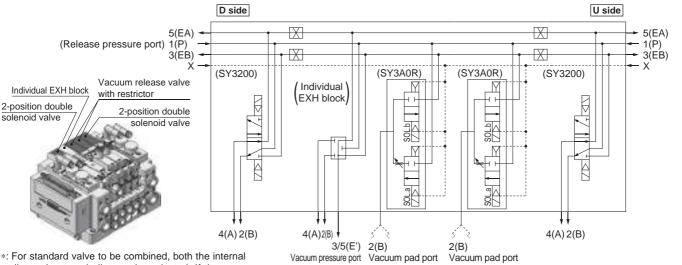

: For standard valve to be combined, both the internal pilot and external pilot can be selected. If the pressure drop may occur when the 1(P) port releases the vacuum, use the external pilot type.



Valve

Type 50, 51, 52 Manifold Exploded View

Plug-in Connector Connecting Base


Type 10, 11, 12 Manifold Exploded View

One-touch Fittings/ Plug Assembly Part No.

## Series SY3000/5000


#### **Dimensions: SY3000**

#### Side ported SY3A0R

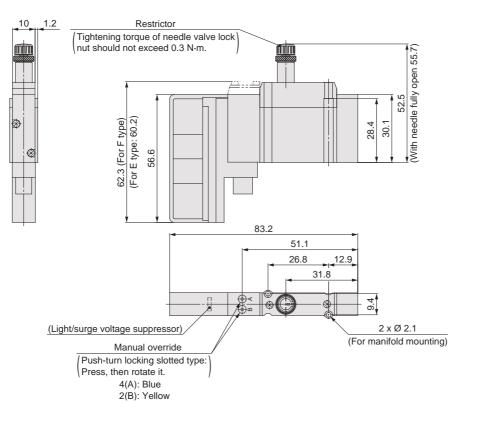


¢

#### Top ported SY3A3R

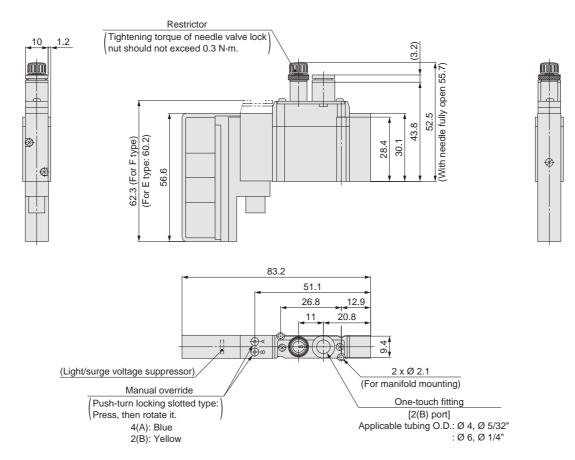

## Only for External Pilot Vacuum Release Valve with Restrictor Series SY3000/5000

#### **Dimensions: SY5000**

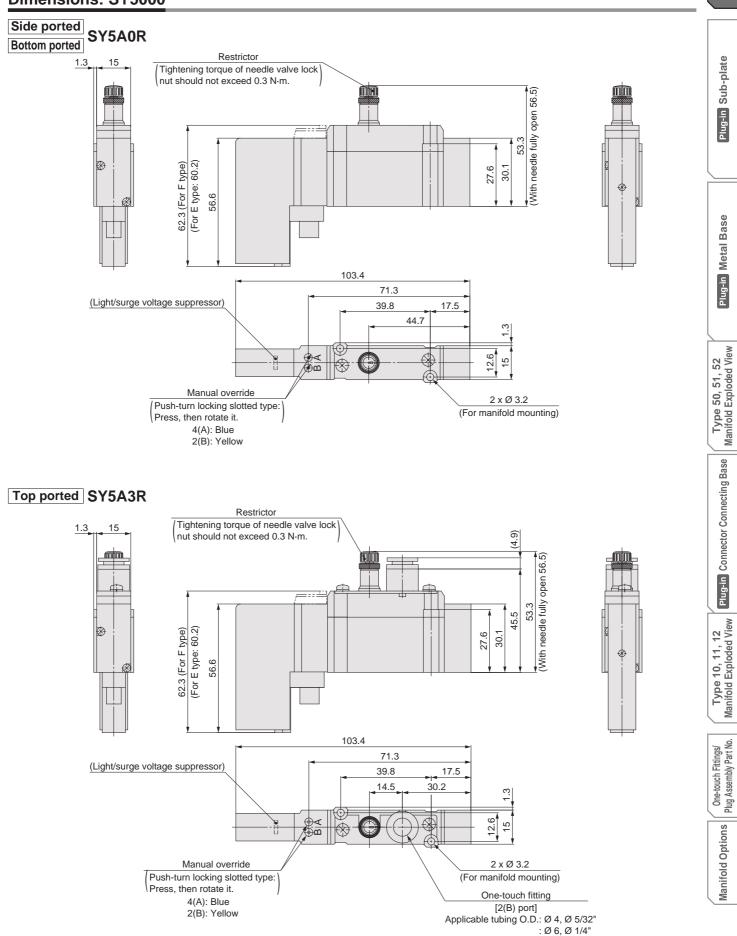

: Ø 8. Ø 5/16"

Valve

Series SY3000/5000/7000 Made to Order

Please contact SMC for detailed dimensions, specifications and lead times.




	Symbol
1 Main Valve Fluororubber Specification	-X90

#### Fluororubber is used for rubber parts of the main valve to allow use in applications such as the following.


• When using a lubricant other than the recommended turbine oil, and there is a possibility of malfunction due to swelling of the spool valve seals.

Applicable valves series SY3 $\square_3^00$ , SY5 $\square_3^00$ , SY7 $\square_3^00$  (Only rubber seal type)

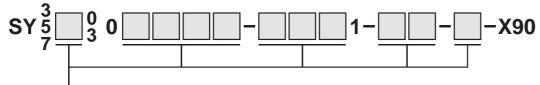

Entry is the same as standard products.


Specifications and performance are the same as standard products.

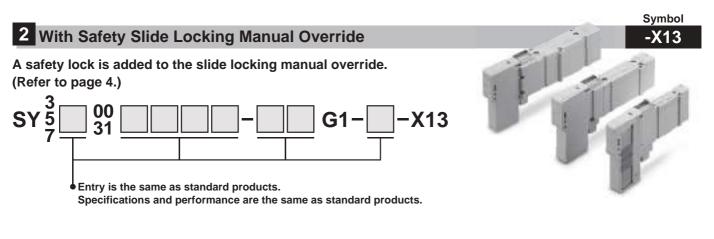

#### **3** Metal Seal Valve, Main/Pilot Valve Common Exhaust

Symbol

This is the type where the exhaust method of the pilot valve is integrated into the exhaust port of the main valve.

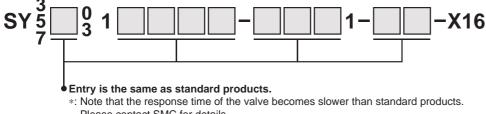

Please contact SMC for details.

# Plug-in Sub-plate Type [IP67 Compliant]



Valve

# Series SY3000/5000/7000 Plug-in Single Unit/Sub-plate Type [IP67 Compliant]

(Side ported, Bottom ported, Top ported)



#### **Plug-in** Sub-plate Specifications

Manifold type	v l								
	Side ported								
Piping direction	Bottom ported	1(P), 5(EA)/3(EB) port, 4(A)/2(B) port	Bottom	ported					
	Top ported	1(P), 5(EA)/3(EB) port	Side p	orted					
	Top poned	4(A)/2(B) port	Тор ро	orted					
SUP/EXH port type	SUP/EXH individual port [5(EA), 3(EB) individual]								
Applicable connector		M12 waterproof connector							
Internal wiring	Positive common, Negative common								
			SY3000	1/8					
	Side ported	1(P), 5(EA)/3(EB) port, 4(A)/2(B) port	SY5000	1/4					
			SY7000	3/8					
	Bottom ported		SY3000	1/8					
Port size		1(P), 5(EA)/3(EB) port, 4(A)/2(B) port	SY5000	1/4					
			SY7000	3/8					
	Top ported		SY3000	1/8					
		1(P), 5(EA)/3(EB) port	SY5000	1/4					
			SY7000	3/8					
		4(A)/2(B) port	Compliant with	Compliant with the valve.*1					
Enclosure (Based on IEC60529)		IP67	- I I						
		Side ported	9	99					
	SY3000	Bottom ported	109						
		Top ported	104						
		Side ported	14	145					
Weight: W [g]*2	SY5000	Bottom ported		172					
	0.0000	Top ported		159					
		Side ported	20	-					
	SY7000	Bottom ported	23	-					
		Top ported	-	232					

\*1: Refer to page 13 for valve specifications.

\*2: The valve and cable weights are not included. To obtain the weight with valves attached, add the valve weights given on page 15, and to include the cable weight, add the connector cable weight on page 35.

#### Plug-in Sub-plate Flow-rate Characteristics

#### **Rubber Seal**

Series	Sub-plate Fitting port size			$1 \rightarrow 4/2$			$4/2 \rightarrow 5/3$		
Series	piping location	(P,E)	(A,B)	С	b	Q [l/min(ANR)]* 2)	С	b	Q [l/min(ANR)]* 2)
	Side ported	1/8	1/8	1.8	0.27	449	1.7	0.26	422
SY3000	Bottom ported	1/8	1/8	1.7	0.23	414	1.4	0.27	349
	Top ported	1/8	C6	1.3	0.34	339	1.5	0.27	374
	Side ported	1/4	1/4	4.2	0.21	1012	4.0	0.26	992
SY5000	Bottom ported	1/4	1/4	4.0	0.19	953	4.0	0.23	975
	Top ported	1/4	C8	2.9	0.29	733	4.1	0.33	1063
	Side ported	3/8	3/8	6.5	0.24	1593	6.3	0.23	1535
SY7000	Bottom ported	3/8	3/8	6.4	0.22	1591	6.3	0.22	1526
	Top ported	3/8	C12	5.4	0.30	1373	6.0	0.27	1497

#### Metal Seal

Series	Sub-plate	Fitting port size		$1 \rightarrow 4/2$			$4/2 \rightarrow 5/3$		
Series	piping location	(P,E)	(A,B)	С	b	Q [l/min(ANR)]* 2)	С	b	Q [l/min(ANR)]* 2)
SY3000	Side ported	1/8	1/8	1.4	0.14	325	1.3	0.26	322
	Bottom ported	1/8	1/8	1.3	0.13	300	1.3	0.22	315
	Top ported	1/8	C6	1.2	0.22	291	1.4	0.29	354
SY5000	Side ported	1/4	1/4	3.2	0.13	738	3.5	0.16	820
	Bottom ported	1/4	1/4	3.0	0.12	688	3.2	0.17	754
	Top ported	1/4	C8	2.6	0.23	634	3.2	0.19	762
SY7000	Side ported	3/8	3/8	4.6	0.10	1044	4.9	0.16	1148
	Bottom ported	3/8	3/8	4.6	0.10	1044	4.9	0.17	1154
	Top ported	3/8	C12	4.0	0.18	947	4.7	0.16	1101

\* Calculation of effective area S and sonic conductance C: S = 5.0 x C

\*1: The value is for individually operated 2-position type.

\*2: The values have been calculated according to ISO 6358 and indicate the flow rate under standard conditions with an inlet pressure of 0.6 MPa (relative pressure) and a pressure drop of 0.1 MPa.



Valve

18

Manifold Exploded View

52

51,

Type 50,

Plug-in Connector Connecting Base

Π

16

Rc

G

NPT

NPTF

mounting screws are required for maintenance. \*: When using an optional spacer assembly,

#### "B" and "H" cannot be selected.

#### **Wiring specifications**

15

WO	Without M12 connector cable
W1	With M12 connector cable (300 mm)
W2	With M12 connector cable (500 mm)
W3	With M12 connector cable (1000 mm)
W4	With M12 connector cable (2000 mm)
W7	With M12 connector cable (5000 mm)

\*: When ordering a product with M12 connector cable, the connector cable is included.

#### Bort location (Sub-plate)

_	Side ported				
В	Bottom ported				
<b>V</b> *1	Top ported (1P, 5EA, 3EB port: Side ported)				
1: Only available for the valve piping type "3"					

top ported.

#### Port size (Sub-plate)

top ported.						
D Port size (Sub-plate)						
Symbol	Port size	Applicable series	, <u>1</u>			
01	1/8	SY3000	<del>6</del> <u>-</u> <u>-</u>			
02	1/4	SY5000	be			
03	3/8	SY7000	<u>L</u> i			
			Ma			

#### B Sub-plate thread type

	o plate thi caa type
—	Rc
F	G
N	NPT
Т	NPTF



#### \*: When mounting a special order (including Made-to-Order specification) valve or manifold option (spacer etc.) on the sub-plate, add the valve part number or spacer part number under the sub-plate part number to place an order. For details, refer to the ordering example on page 35.

A, B port

Ø 1/8'

Svmbo

N1


**N3** 

N7

N9

N11

How to Order

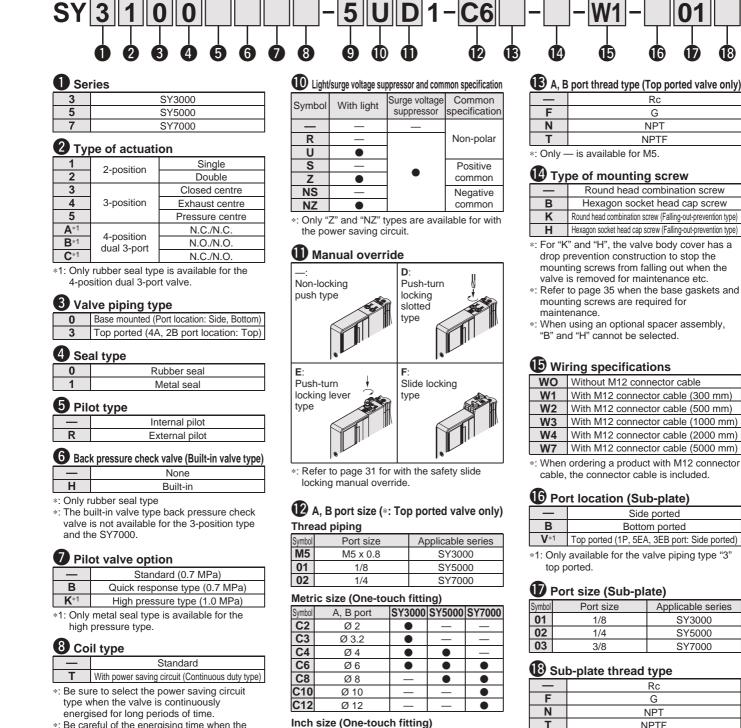


In the case of (Valve) + (Sub-plate) (Built-in valve type part no.)

\*: Be careful of the energising time when the power saving circuit is selected. Refer to page 268 for details.

#### 9 Rated voltage


-	
5	24 V DC
6	12 V DC

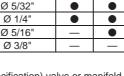

SMC

.

SY3000 SY5000 SY7000

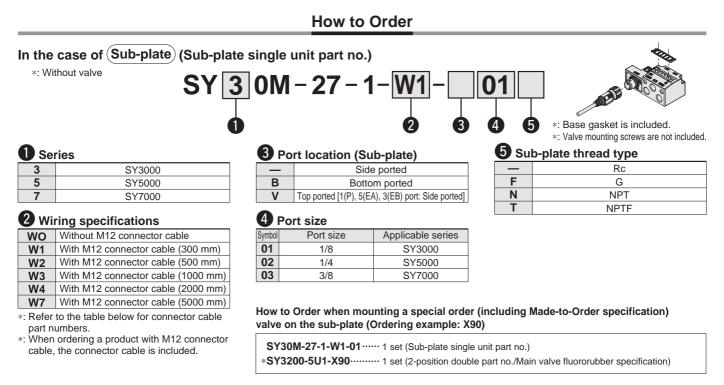

Ordering example when mounting a manifold option (spacer etc.)

SY30M-27-1-W1-01 ······ 1 set (Sub-plate single unit part no.)

\*SY3400-5U1 ······ 1 set (3-position exhaust centre part no.)

\*SY30M-60-1A ...... 1 set (Part no. for double check spacer with residual pressure release valve)

#### Sub-plate Parts No.


(1)	No.	Description		Part no.			Nete
*: 3 pcs. for the SY7000		Description		SY3000	SY5000	SY7000	Note
	1	Valve mounting screw	Round head combination screw	<b>SY3000-23-24A</b> (M2 x 32)	<b>SY5000-221-1A</b> (M3 x 32.5)	<b>SY7000-221-1A</b> (M3 x 36.5)	the left are for 10 valves
			Hexagon socket head cap screw	<b>SY3000-222-1A</b> (M2 x 32)	<b>SY5000-222-1A</b> (M3 x 32.5)	<b>SY7000-222-1A</b> (M3 x 36.5)	
	2	Base gasket (for sub-plate)		SY30M-11-1A	SY50M-11-1A	SY70M-11-1A	Part numbers shown on the left are for 10 valves (10 pcs.).
2		M12 waterproof connector cable		ZS-37-L			Cable length: 300 mm Cable weight: Approx. 18 g
	3			ZS-37-M			Cable length: 500 mm Cable weight: Approx. 23 g
				ZS-37-N			Cable length: 1000 mm Cable weight: Approx. 36 g
3						Cable length: 2000 mm Cable weight: Approx. 62 g	
				ZS-37-C			Cable length: 5000 mm Cable weight: Approx. 140 g
				•			·



Tightening torque

M2: 0.16 N·m (SY3000) M3: 0.8 N·m (SY5000/7000)

## (Side ported, Bottom ported, Top ported) Series SY3000/5000/7000

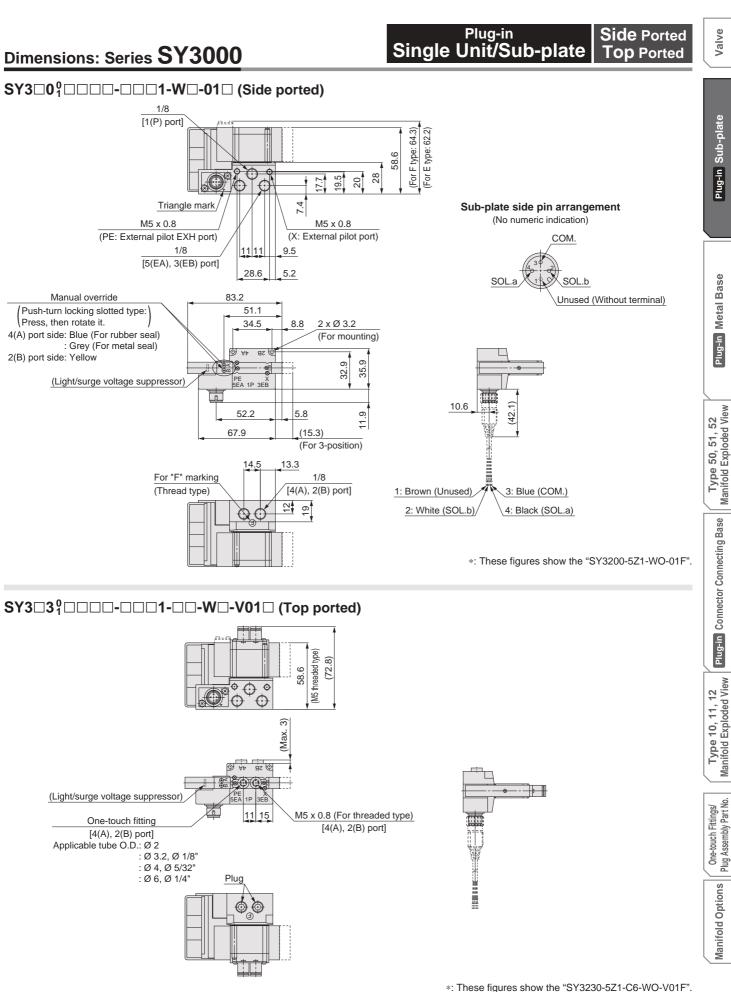

\*: 1(P), 5(EA), 3(EB), X and PE ports are side ported.


**多SMC** 

### Plug-in Single Unit/Sub-plate

### **Bottom** Ported

### SY3\_0<sup>0</sup>1\_\_\_\_1\_\_\_1-W\_-B01\_ (Bottom ported)


Dimensions: Series SY3000

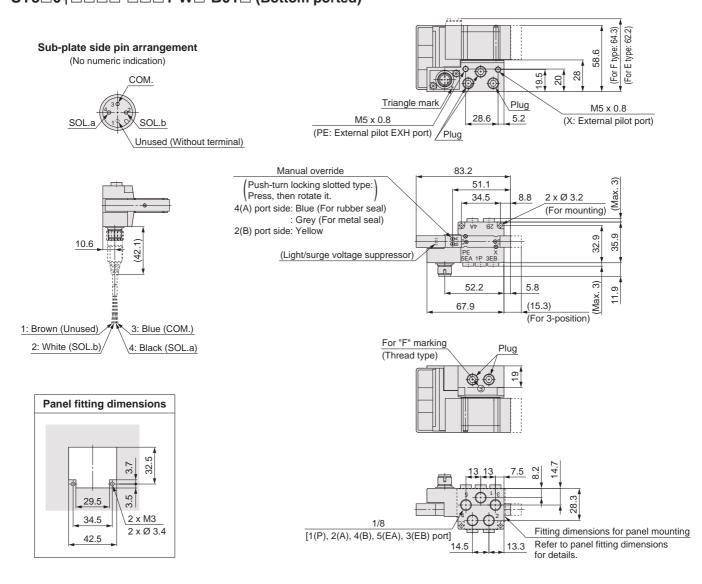



\*: These figures show the "SY3200-5Z1-WO-B01F".

## (Side ported, Bottom ported, Top ported) Series SY3000/5000/7000

Plug-in Single Unit/Sub-plate Type [IP67 Compliant]

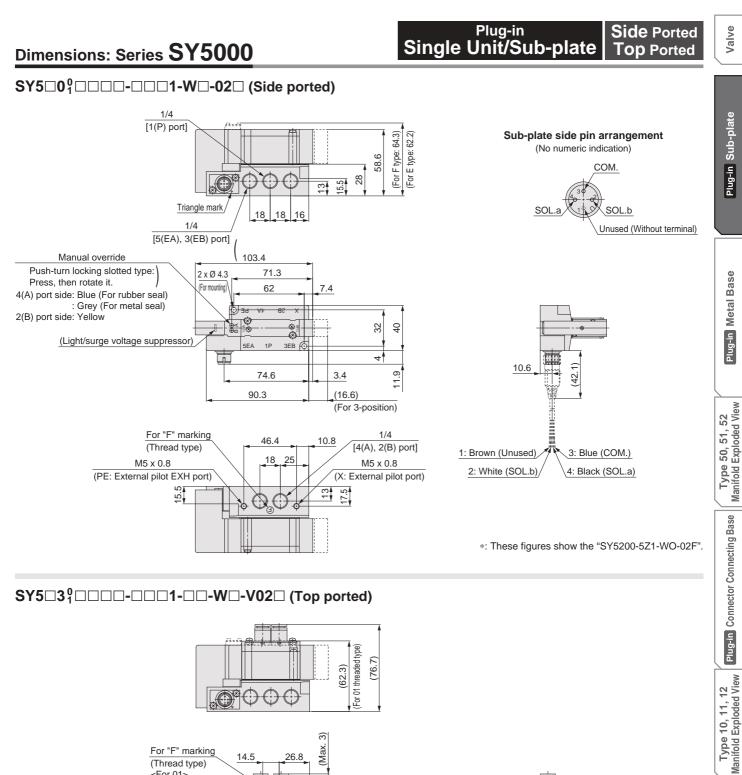

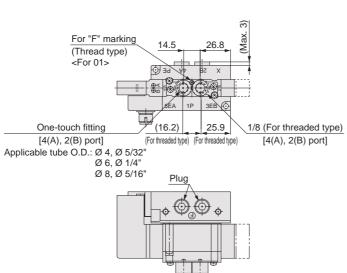

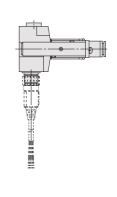

\*: These figures show the "SY5230-5Z1-C8-WO-V02F". \*: 1(P), 5(EA), 3(EB), X and PE ports are side ported.

One-touch Fittings/ Plug Assembly Part No.


Manifold Options

38

#### Plug-in Single Unit/Sub-plate **Bottom** Ported Dimensions: Series SY5000 SY5\_0<sup>1</sup>\_\_\_\_1\_\_\_1-W\_-B02\_ (Bottom ported) Fitting dimensions for panel mounting Refer to panel fitting dimensions for details. 18 16 18 Sub-plate side pin arrangement 30.5 9.5 (No numeric indication) COM. 25 1/4 18 [1(P), 2(A), 4(B), 5(EA), 3(EB) port] SOL.a SOL.b (For F type: 64.3) For E type: 62.2) Unused (Without terminal) 58.6 M°O.O 28 15.5 Triangle mark Plug 103.4 10.6 Manual override 71.3 ŝ Push-turn locking slotted type: 2 x Ø 4.3 (Max. 62 7.4 Press, then rotate it. (For mounting) 4(A) port side: Blue (For rubber seal) : Grey (For metal seal) 2(B) port side: Yellow 3 (Max. 40 32 $\bigotimes$ 1: Brown (Unused) 3: Blue (COM.) (Light/surge voltage suppressor) 1P 2: White (SOL.b) 4: Black (SOL.a) 74.6 11.9 3.4 90.3 (16.6) Panel fitting dimensions (For 3-position) 2 x M4 2 x Ø 4.5 For "F" marking (Thread type) 10.8 46.4 M5 x 0.8 M5 x 0.8 4.5 40 32 Plug (PE: External pilot EXH port) (X: External pilot port) 5.5 17.5 3.5 57 4 0) $\odot$ 62

\*: These figures show the "SY5200-5Z1-WO-B02F".


# (Side ported, Bottom ported, Top ported) Series SY3000/5000/7000

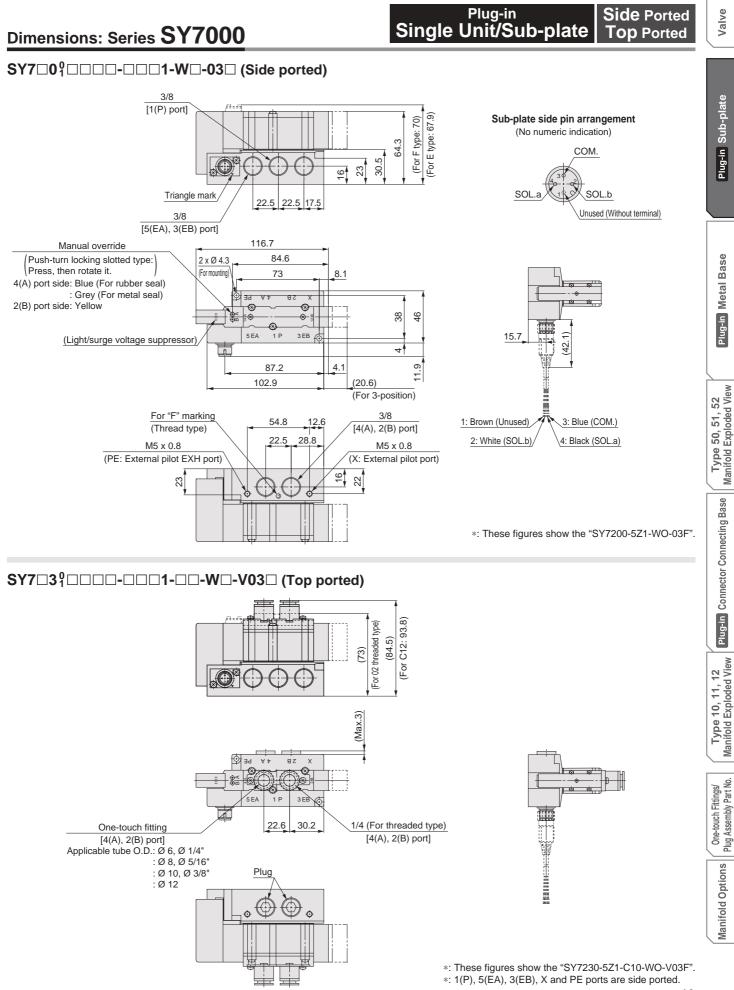

### Dimensions: Series SY7000


### Plug-in Single Unit/Sub-plate

**Bottom** Ported

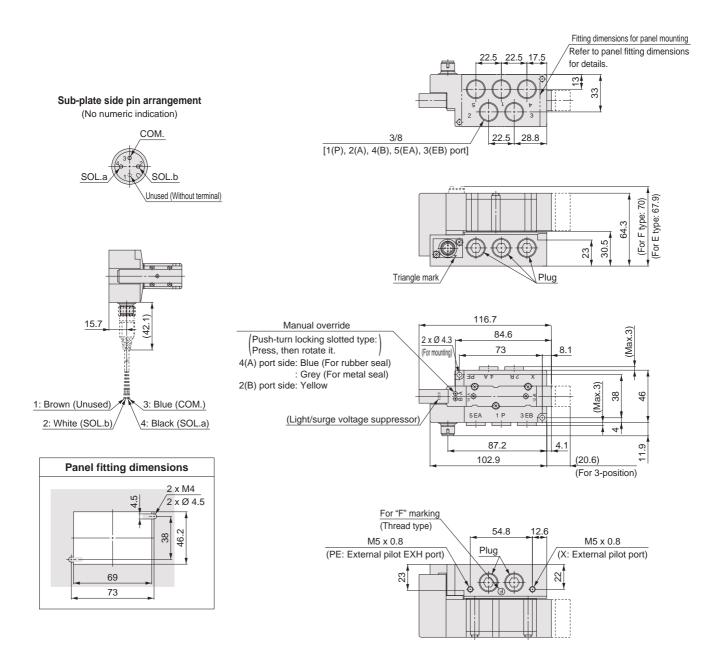

\*: These figures show the "SY7200-5Z1-WO-B03F".

# Plug-in Metal Base

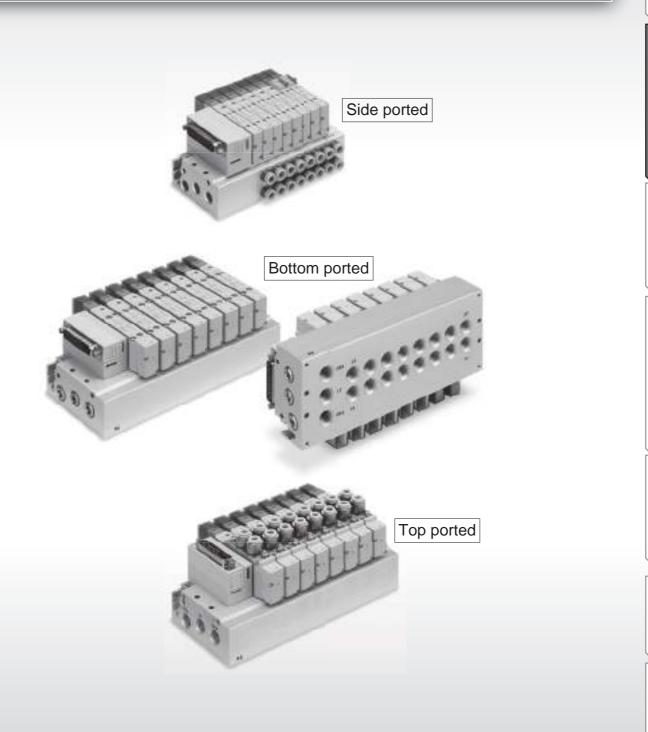

Plug-in Sub-plate

42

 Series SY3000/5000/7000
 Type 50, 51, 52

 Plug-in Metal Base
 Image: Contract of the series of

### **Manifold Specifications**

		D-sub connector		Flat ribbon cable		Serial wiring				
Model			F type P type PG type J type		PH type	S5 type (EX510)				
Manifold type				Plug-in metal base						
SUP/EXH port type				Common SUP/EXH						
Valve stations		2 to 12 stations		2 to 9 stations (J type: 2 to 8 stations) 2 to 4 stations		2 to 8 stations				
	All single wiring		]		2 to 12 stations	2 to 8 stations	2 to 12 stations			
Applicable connector		D-sub connector		t ribbon cable connect with strain relief nforming to MIL-C-83	_					
		JIS-X-5101	Socket: 26 pins MIL type	Socket: 20 pins MIL type	Socket: 10 pins MIL type					
Internal wiring			Positive common, Negative common							
	SY3000		1/8							
	1(P), 3/5(E) port	SY5000	1/4							
	SY700		3/8							
Port size		SY3000	M5 x 0.8, 1/8 Ø 2 One-touch fitting, Ø 3.2 One-touch fitting, Ø 4 One-touch fitting, Ø 6 One-touch fitting Ø 1/8" One-touch fitting, Ø 5/32" One-touch fitting, Ø 1/4" One-touch fitting							
	4(A), 2(B) port	SY5000	1/8, 1/4 Ø 4 One-touch fitting, Ø 6 One-touch fitting, Ø 8 One-touch fitting Ø 5/32" One-touch fitting, Ø 1/4" One-touch fitting, Ø 5/16" One-touch fitting							
		SY7000	1/4 Ø 6 One-touch fitting, Ø 8 One-touch fitting, Ø 10 One-touch fitting, Ø 12 One-touch fitting Ø 1/4" One-touch fitting, Ø 5/16" One-touch fitting, Ø 3/8" One-touch fitting							
Enclosure (Based on IEC60529)			IP40 IP20							

### Type 50, 51, 52 Plug-in Metal Base Series SY3000/5000/7000

### Manifold Flow-rate Characteristics \*1/Manifold Weight

#### Valve Seal Type: Rubber Seal

	Port	size	Valve flow-rate characteristics						Weight: W [g] Note 2)	
	1, 5, 3 (P, EA, EB)		1→4/2 (P→A/B)			4/2→5/3 (A/B→E)			(n: stations)	
Model		4, 2 (A, B)	C [dm³/(s·bar)]	b	Q [L/min] (ANR) <sup>Note 3)</sup>	C [dm³/(s·bar)]	b	Q [L/min] (ANR) <sup>Note 3)</sup>	Fixed: C□	Replaceable: KC
SS5Y3-50 (Side ported)	1/8	C6	1.1	0.19	262	1.1	0.15	256	39n + 247	43.5n + 247
SS5Y3-51 (Bottom ported)	1/8	C6	1.2	0.31	307	1.2	0.14	278	41.5n + 251	48.5n + 251
SS5Y3-52 (Top ported)	1/8	C6	1.1	0.29	278	1.2	0.20	287	44n -	+ 247
SS5Y5-50 (Side ported)	1/4	C8	2.6	0.28	653	2.6	0.14	603	93n + 379	110n + 379
SS5Y5-51 (Bottom ported)	1/4	C8	2.7	0.35	709	2.8	0.20	671	93n + 413	113n + 413
SS5Y5-52 (Top ported)	1/4	C8	2.6	0.26	645	3.1	0.13	715	103n	+ 379
SS5Y7-50 (Side ported)	3/8	C10	3.8	0.27	948	4.0	0.20	958	144n + 510	158n + 510
SS5Y7-51 (Bottom ported)	3/8	C10	4.1	0.34	1070	4.8	0.20	1150	150n + 549	172n + 549
SS5Y7-52 (Top ported)	3/8	C10	4.5	0.27	1123	4.9	0.24	1201	164n	+ 510

#### Valve Seal Type: Metal Seal

	Port	size	Valve flow-rate characteristics						Weight: V	V [g] Note 2)
Model	4.5.0	4, 2 (A, B)	1→4/2 (P→A/B)			4/2→5/3 (A/B→E)			(n: stations)	
	1, 5, 3 (P, EA, EB)		C [dm³/(s·bar)]	b	Q [L/min] (ANR) <sup>Note 3)</sup>	C [dm³/(s·bar)]	b	Q [L/min] (ANR) <sup>Note 3)</sup>	Fixed: C□	Replaceable: KC
SS5Y3-50 (Side ported)	1/8	C6	0.9	0.14	209	1.0	0.12	229	39n + 247	43.5n + 247
SS5Y3-51 (Bottom ported)	1/8	C6	1.0	0.21	241	1.1	0.10	250	41.5n + 251	48.5n + 251
SS5Y3-52 (Top ported)	1/8	C6	1.1	0.15	256	1.1	0.14	255	44n + 247	
SS5Y5-50 (Side ported)	1/4	C8	2.2	0.20	527	2.3	0.13	530	93n + 379	110n + 379
SS5Y5-51 (Bottom ported)	1/4	C8	2.4	0.26	595	2.5	0.16	586	93n + 413	113n + 413
SS5Y5-52 (Top ported)	1/4	C8	2.4	0.18	568	2.6	0.12	596	103n	+ 379
SS5Y7-50 (Side ported)	3/8	C10	3.2	0.23	780	3.5	0.18	829	144n + 510	158n + 510
SS5Y7-51 (Bottom ported)	3/8	C10	3.5	0.25	863	4.0	0.16	937	150n + 549	172n + 549
SS5Y7-52 (Top ported)	3/8	C10	3.5	0.21	843	3.8	0.18	900	164n	+ 510

 $\ast$  Calculation of effective area S and sonic conductance C: S = 5.0 x C

\* 1) The value is for manifold base with 5 stations and individually operated 2-position type.

\* 2) 'Weight: W' is the value for the D-sub connector manifold.

To obtain the weight with valves attached, add the valve weights given on page 15 for the appropriate number of stations.

\* 3) These values have been calculated according to ISO6358 and indicate the flow rate under standard conditions with an inlet pressure of 0.6 MPa (relative pressure) and a pressure drop of 0.1 MPa.

**SMC** 


Valve

## Plug-in Metal Base

D-sub Connector Flat Ribbon Cable PC Wiring

# Series SY3000/5000/7000 ( F (RoHS)

### How to Order Manifold

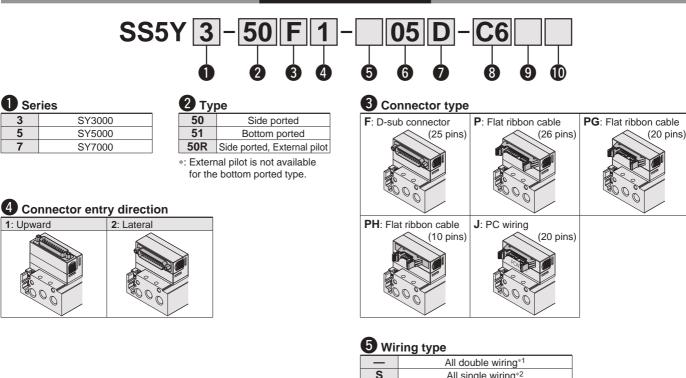

### How to Order Manifold Assembly

Type 50 Side Ported

Type 51 **Bottom Ported** 


Series

3

5

7

1: Upward

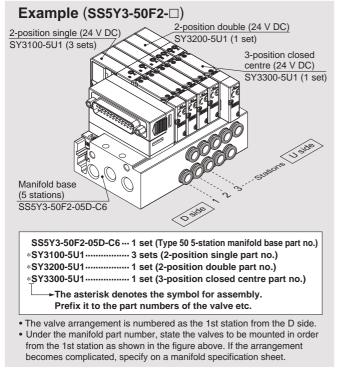

\*: When mixing top ported configurations, select from page 66 In this case, use caution as there is also output on the A and B port on base side. Specify on a manifold specification sheet if plugs are required on the A and B port on base side.

\*1: All double wiring: 2-position single, double, 3-position and 4-position valves can be used on all manifold stations.

All single wiring\*2

- \*2: All single wiring: Available only for the manifold which has 2-position single for all stations.
- Note that 2-position double, 3- or 4-position valves cannot be used.
- \*: If a mix of single and double wiring is required, it is supplied as a special order.

### 6 Valve stations

SMC

<b>F</b> : D-s	sub con	nector (25 pins)	P: Fla	at ribbon	cable (26 pins)	PG:	Flat ribbo	on cable (20 pins)
Symbol	Stations	Note	Symbol	Stations	Note	Symbo	I Stations	Note
02	2 stations	All	02	2 stations	All	02	2 stations	All
÷	:	double	÷	÷	double	÷	:	double
12	12 stations	wiring	12	12 stations	wiring	09	9 stations	wiring
02	2 stations	All	02	2 stations	All	02	2 stations	All
÷	:	single	:	÷	single	:	:	single
12	12 stations	wiring	12	12 stations	wiring	12	12 stations	wiring
PH: Flat ribbon cable (10 pins) J: PC wiring (20 pins) Symbol Stations Note Symbol Stations Note								
· · ·		Note			Note			
02	2 stations	All	02	2 stations	All			
:		double	:	:	double			
04	4 stations	wiring	08	8 stations	wiring			
02	2 stations	All	02	2 stations	All			
:		single	:	:	single			
08	8 stations	wiring	12	12 stations	wiring			
* Th	is also	includes the	num	her of	blanking pla	te as	sembly	

\*: This also includes the number of blanking plate assembly.

## Elligen Metal Base Series SY3000/5000/7000

Protective class		
- $ (         -$		
class Ⅲ (Mark: ())	class II	(Mark: 🛞)

 U
 U side\*1

 D
 D side\*1\*2

B Both sides
 \*1: Plugs are mounted on the opposite
 side of the selected ports

side of the selected ports. \*2: Only D side is available for Type 51 (Bottom ported).

#### 9 Thread type

<u> </u>							
_	Rc						
F	G						
N	NPT						
Т	NPTF						

### **1** Mounting

	Direct mounting					
D	DIN rail mounting (With DIN rail)					
D0	DIN rail mounting (Without DIN rail)					
D3	For 3 stations					
:	1	Specify a longer rail than the standard length.				
D12	For 12 stations	ine standard length.				

\*: Only direct mounting is available for Type 51 (Bottom ported).

\*: Refer to page 271 for the fixation of DIN rail mounting type manifold.

### 8 A, B port size

# Symbol A, B port SY3000 SY5000 SY7000 M5 M5 x 0.8 — — — —

M5	M5 x 0.8		_	_			
<b>01</b> 1/8 • • —							
<b>02</b> 1/4 — • •							
One-tou	ch fitting (Metric)						


			CV2000	OVEDOD	CV7000		
S	/mbol	A, B port	SY3000	SY5000	51/000		
	C2	Ø 2		—	—		
	C3	Ø 3.2		—	—		
Fixed	C4	Ø 4			—		50
Ē	C6	Ø 6			—		<u>io</u> k
	C8	Ø 8	—			j je	) ee
	C10	Ø 10	—	—			
	KC2	Ø 2		—	—	Type 50	Type 51
	KC3	Ø 3.2		—	—	(Side ported)	(Bottom ported)
ole	KC4	Ø 4			_	ก	
Replaceable	KC6	Ø 6					
plac	KC8	Ø 8	_				
Re	KC10	Ø 10	—	—			
	KC12	Ø 12	_	_			68
	<b>M</b> *1	Mixed sizes					
Ρ,	E port	size (Thread piping)	1/8	1/4	3/8		

#### **One-touch fitting (Inch)**

_							
Sy	/mbol	A, B port	SY3000	SY5000	SY7000		
	N1	Ø 1/8"		—			// .
5	N3	Ø 5/32"					
Fixed	N7	Ø 1/4"					05
L.	N9	Ø 5/16"	_			(C	jo <sup>ne</sup>
	N11	Ø 3/8"	—	—			
	KN1	Ø 1/8"		—	_	Type 50	Type 51
e	KN3	Ø 5/32"			_	(Side ported)	(Bottom ported)
Replaceable	KN7	Ø 1/4"					
plac	KN9	Ø 5/16"	_				
Re	KN11	Ø 3/8"	_	_			
	<b>M</b> *1	Mixed sizes					68
Ρ,	E por	size (Thread piping)	1/8	1/4	3/8		

\*1: When ports are mixed sizes, indicate the piping specifications on the manifold specification sheet.



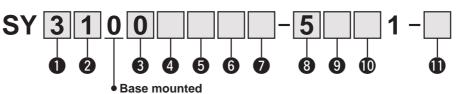

1 Series							
3	SY3000						
5	SY5000						
7	SV7000						

### 2 Type of actuation

1	2-position	Single
2	2-position	Double
3	3 4 3-position 5	Closed centre
4		Exhaust centre
5		Pressure centre
<b>A</b> *1	4-position dual 3-port	N.C./N.C.
<b>B</b> *1		N.O./N.O.
<b>C</b> *1		N.C./N.O.

 \*1: Only rubber seal type is available for the 4-position dual 3-port valve.

### **3** Seal type

000	artype
0	Rubber seal
1	Metal seal

### 4 Pilot type

	71
—	Internal pilot
R	External pilot

## **5** Back pressure check valve (Built-in valve type)

H None

\*: Only rubber seal type

\*: Back pressure check valve is not available for the 3-position type and the SY7000.

#### 6 Pilot valve option

- Standard (0.7 MPa)								
В	Quick response type (0.7 MPa)							
<b>K</b> *1	High pressure type (1.0 MPa)							
: Only metal seal type is available for the								

high pressure type.



\*1

- Standard

- T With power saving circuit (Continuous duty type) \*: Be sure to select the power saving circuit
- type when the valve is continuously energised for long periods of time.
- \*: Be careful of the energising time when the power saving circuit is selected. Refer to page 268 for details.

### 8 Rated voltage


5	24 V DC
6	12 V DC

### 9 Light/surge voltage suppressor and common specification

Symbol	With light	Surge voltage suppressor	Common specification								
—	—										
R	—		Non-polar								
U	•										
S	_		Positive								
Z	•		common								
NS	_		Negative								
NZ		common									
* Only "	*: Only "7" and "N7" types are available for with										

\*: Only "Z" and "NZ" types are available for with the power saving circuit.

### Manual override

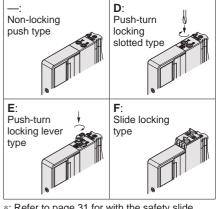

\*: Refer to page 31 for with the safety slide locking manual override.

### Type of mounting screw

_	Round head combination screw
В	Hexagon socket head cap screw
Κ	Round head combination screw (Falling-out-prevention type)
Н	Hexagon socket head cap screw (Falling-out-prevention type)


\*: For "K" and "H", the valve body cover has a drop prevention construction to stop the mounting screws from falling out when the valve is removed for maintenance etc.

\*: When ordering a valve individually, the base gasket is not included. Since the base gasket is attached to the manifold, please order the base gasket


manifold, please order the base gasket separately if it is needed for maintenance service.

Refer to page 89 for part numbers of the base gasket and mounting screw.

\*: "B" and "H" cannot be selected for the individual SUP/EXH spacer assembly, interface regulator or double check spacer assembly with residual pressure release valve.

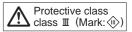


## Elligen Metal Base Series SY3000/5000/7000

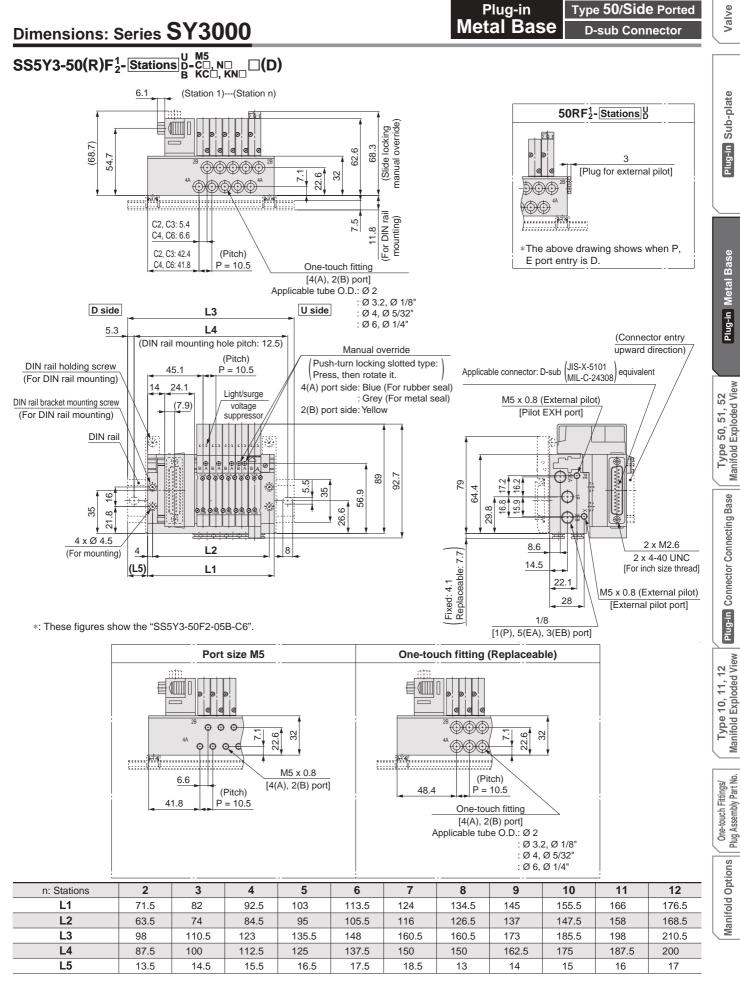

### Dimensions: Series SY3000

## Plug-in Type 50/Side Ported Metal Base D-sub Connector


SS5Y3-50(R)F<sub>2</sub><sup>1</sup>-Stations<sup>U</sup><sub>B</sub>-01□(D)

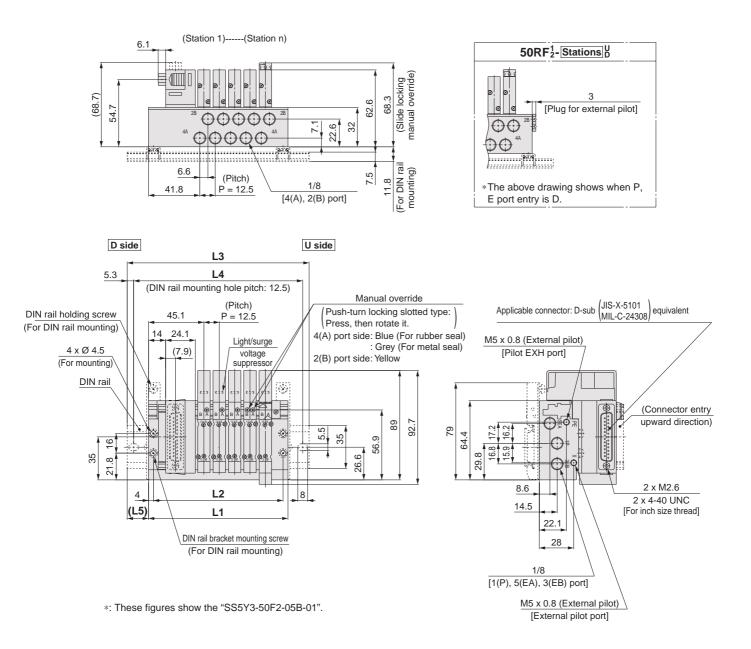

n: Stations	2	3	4	5	6	7	8	9	10	11	12
L1	76	88.5	101	113.5	126	138.5	151	163.5	176	188.5	201
L2	68	80.5	93	105.5	118	130.5	143	155.5	168	180.5	193
L3	110.5	123	135.5	148	160.5	173	185.5	198	210.5	223	235.5
L4	100	112.5	125	137.5	150	162.5	175	187.5	200	212.5	225
L5	17.5	17.5	17.5	17.5	17.5	17.5	17.5	17.5	17.5	17.5	17.5




## Elligetin Metal Base Series SY3000/5000/7000

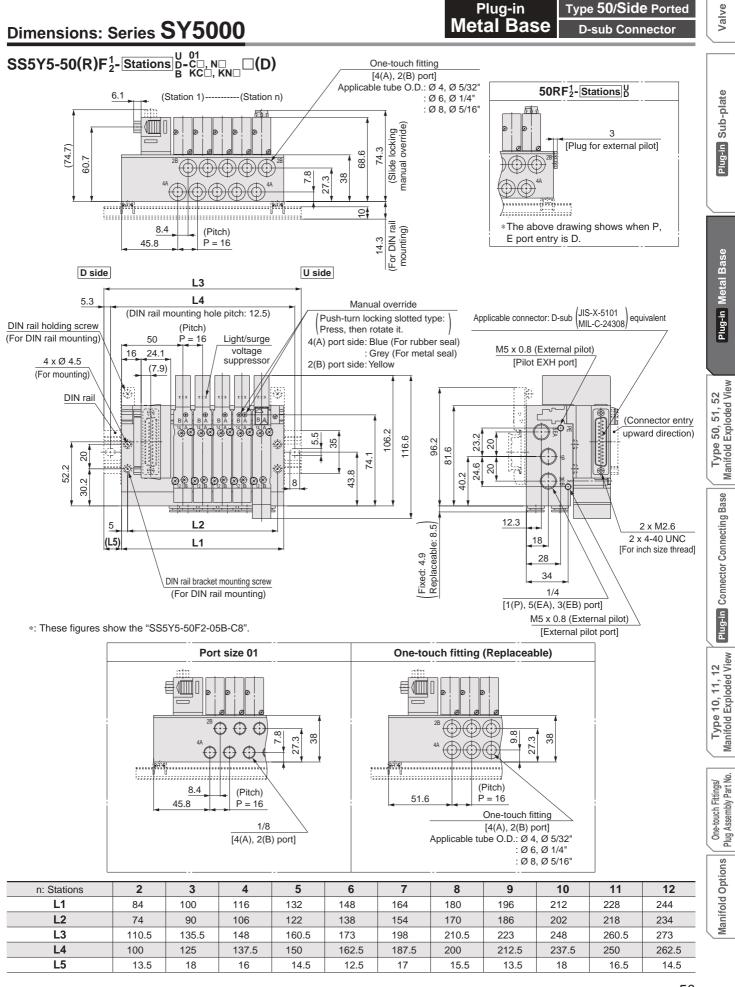

### Dimensions: Series SY5000

## Plug-in Type 50/Side Ported Metal Base D-sub Connector

### SS5Y5-50(R)F<sub>2</sub><sup>1</sup>-Stations<sup>U</sup><sub>B</sub>-02□(D)

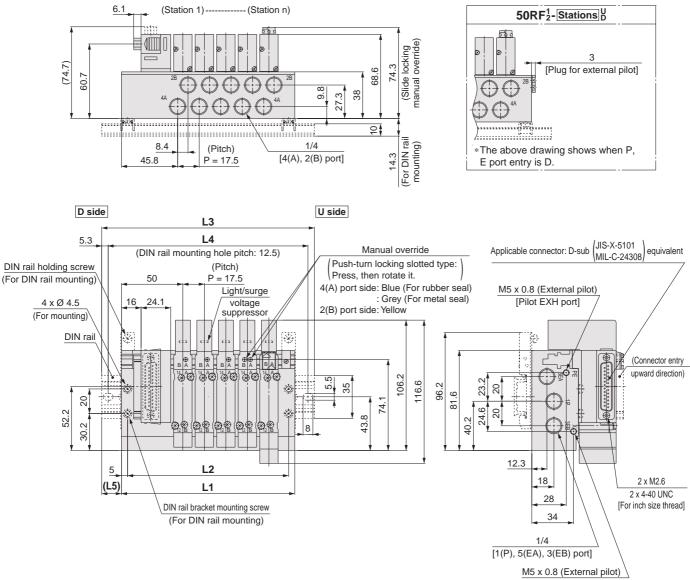

[External pilot port]


\*: These figures show the "SS5Y5-50F2-05B-02".

n: Stations	2	3	4	5	6	7	8	9	10	11	12
L1	88.5	106	123.5	141	158.5	176	193.5	211	228.5	246	263.5
L2	78.5	96	113.5	131	148.5	166	183.5	201	218.5	236	253.5
L3	123	135.5	148	173	185.5	210.5	223	235.5	260.5	273	298
L4	112.5	125	137.5	162.5	175	200	212.5	225	250	262.5	287.5
L5	17.5	15	12.5	16	13.5	17.5	15	12.5	16	13.5	17.5



## Ellegen Metal Base Series SY3000/5000/7000

Plug-in Type 50/Side Ported Valve Metal Base Dimensions: Series SY7000 **D-sub Connector**  $SS5Y7-50(R)F_2^1-\underline{Stations}_{B}^{U} \overset{02}{\xrightarrow{}} \overset{02}{\xrightarrow{}} \underset{KC\square, KN\square}{\cup} \Box(D)$ 6.1 Plug-in Sub-plate (Slide locking manual override) 50RF<sub>2</sub><sup>1</sup>-Stations 3 84 (81. 67.2 78. 3 44.5 9.4 32.4 [Plug for external pilot] B486..... -----5 (For DIN rail mounting) 6 10.8 (Pitch) 14.3 È = 19 46.6 신문물러 One-touch fitting \* Plug-in Metal Base [4(A), 2(B) port] \* The above drawing shows when P, Applicable tube O.D.: Ø 8, Ø 5/16" E port entry is D. : Ø 10, Ø 3/8' ----- (Station n) (Station 1)-D side U side \*: These figures show the "SS5Y7-50F2-05B-C10". L3 5.3 L4 Manual override (DIN rail mounting hole pitch: 12.5) JIS-X-5101 MIL-C-24308 equivalent Applicable connector:D-sub Push-turn locking slotted type: (Pitch) DIN rail holding screw Press, then rotate it. 52  $\dot{P} = 19$ (Connector entry 4(A) port side: Blue (For rubber seal) (For DIN rail mounting) Manifold Exploded View 16 24.1 upward direction) (Light/surge voltage : Grey (For metal seal) 52 DIN rail bracket mounting screw 2(B) port side: Yellow (7.9) suppressor) M5 x 0.8 (External pilot) Type 50, 51, (For DIN rail mounting) PE: Pilot EXH port (DIN rail) **⊕** ₿ Å вА в₿А 5.5 ø Ø Ø ¢ Ø 116.7 35 133.2 <u>929-1</u> ø Ø Ø Ø ဖ Plug-in Connector Connecting Base 24 8 62.6 3 80. 44.1 8 49. ۲ ¢ Ð Ø ¢ 12 F Ø ¢ ¢ 32. NC CN 18.1 4 x Ø 4.5 (5.4)20.9 (For mounting) 12 5 34.5 (L5) 3/8 L1 [1(P), 5(EA), 3(EB) port] 40.5 M5 x 0.8 (External pilot) X: External pilot port Port size 02 **One-touch fitting (Replaceable)** 2 x M2.6 Type 10, 11, 12 Manifold Exploded View 2 x 4-40 UNC [For N or T thread] - (1111) ▤◍▯ £. 10.3 9.4 ß 7 44 32.4 ž ......... ...... ..... 2 5 One-touch Fittings/ Plug Assembly Part No. ..... === ......... (Pitch) P = 19 10.8 (Pitch) 55.7 46.6 È = 19 (11) One-touch fitting 1/4(22.9) [4(A), 2(B) port] [4(A), 2(B) port] (For Ø 12) Applicable tube O.D.: Ø 6, Ø 1/4" : Ø 8, Ø 5/16" Manifold Options : Ø 10, Ø 3/8" : Ø 12 2 4 10 n: Stations 3 5 6 7 8 9 11 12 L1 92 111 130 149 168 187 206 225 244 263 282 L2 82 101 120 139 158 177 196 215 234 253 272 L3 123 148 160.5 185.5 198 223 235.5 260.5 273 298 310.5 L4 112.5 137.5 150 175 187.5 212.5 225 250 262.5 287.5 300 L5 18.5 14.5 17.5 14.5 15.5 15.5 18.5 15 18 15 18 52 SMC

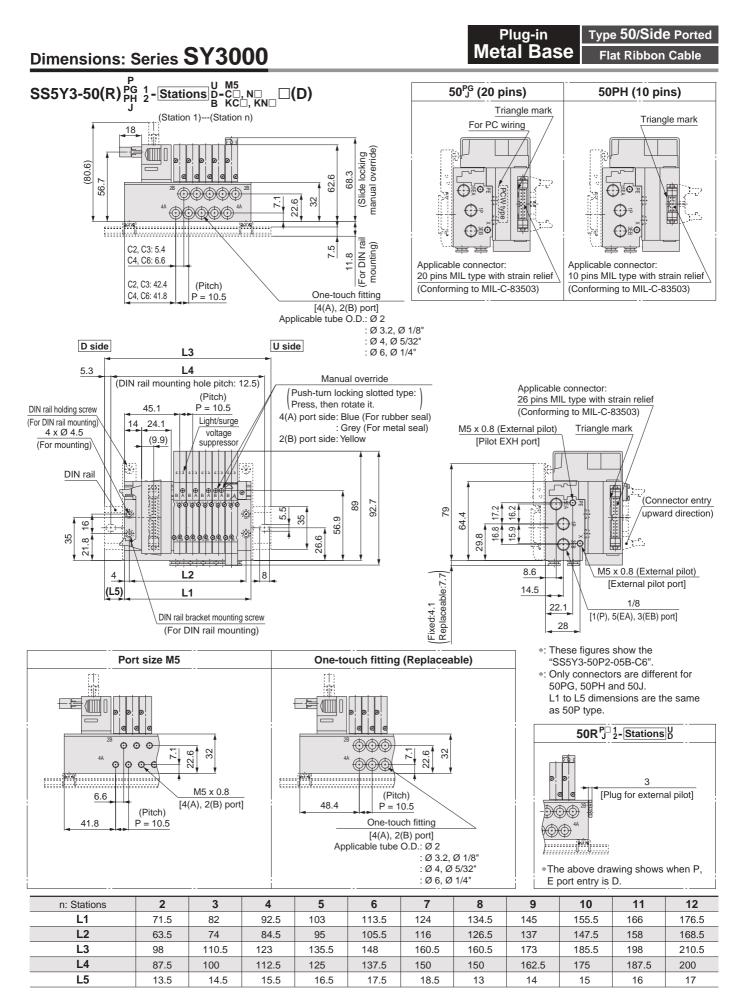



## Eller Metal Base Series SY3000/5000/7000

Plug-in Type 50/Side Ported Metal Base Dimensions: Series SY3000 Flat Ribbon Cable SS5Y3-50(R) $_{PH}^{PG}$  <sup>1</sup>/<sub>2</sub>-Stations  $_{R}^{U}$ -01 $\Box$ (D) (Station 1) ----- (Station n) 50R<sup>PD 1</sup><sub>J</sub> Stations<sup>D</sup><sub>D</sub> 18 (Slide locking manual override)  $\langle \square \square \rangle$ (80.6) 3 68.3 62.6 [Plug for external pilot] 56.7  $\odot \odot \odot \odot \odot$  $\oplus \oplus$ 22.6 32 7.1  $\odot \odot$ Œ €Ð (For DIN rail mounting) 6.6 (Pitch) 7.5 \*The above drawing shows when P, ω <u>41</u>.8 P = 12.5 ÷ E port entry is D. 1/8 [4(A), 2(B) port] D side U side L3 <u>5.3</u> L4 Manual override Applicable connector: (DIN rail mounting hole pitch: 12.5) Push-turn locking slotted type: 26 pins MIL type with strain relief (Pitch) Press, then rotate it. (Conforming to MIL-C-83503) P = 12.5 45.1 4(A) port side: Blue (For rubber seal) DIN rail holding screw Triangle mark Grey (For metal seal) (For DIN rail mounting) Type 50, 51, 52 Manifold Exploded View 14 24.1 Light/surge M5 x 0.8 (External pilot) 2(B) port side: Yellow voltage DIN rail bracket mounting screw (9.9) [Pilot EXH port] suppresso (For DIN rail mounting) 촚 DIN rail Ľ∷⊽ 92.7 89 5.5 79 Ċ 1 19 64.4 35 56.9 9 89 50 35 26.6 ω œ 122 29. 4 x Ø 4.5 L2 8.6 8 4 1/8 (For mounting) [1(P), 5(EA), 3(EB) port] (L5) 14.5 L1 (Connector entry 22.1 upward direction) 28 50<sup>PG</sup> (20 pins) 50PH (10 pins) M5 x 0.8 (External pilot) [External pilot port] Triangle mark Triangle mark For PC wiring Type 10, 11, 12 Manifold Exploded View \*: These figures show the "SS5Y3-50P2-05B-01". \*: Only connectors are different for 50PG, 50PH and 50J. L1 to L5 dimensions are the same as 50P type. ⊕‱ ⊕ ‱ PCW 24 1.,,  $\oplus$ ⊕⇒ type - *د*ر ⊕≣€ ⊕#© Manifold Options Plug Assembly Part No. Applicable connector: Applicable connector: 20 pins MIL type with strain relief 10 pins MIL type with strain relief (Conforming to MIL-C-83503) (Conforming to MIL-C-83503)


n: Stations	2	3	4	5	6	7	8	9	10	11	12
L1	76	88.5	101	113.5	126	138.5	151	163.5	176	188.5	201
L2	68	80.5	93	105.5	118	130.5	143	155.5	168	180.5	193
L3	110.5	123	135.5	148	160.5	173	185.5	198	210.5	223	235.5
L4	100	112.5	125	137.5	150	162.5	175	187.5	200	212.5	225
L5	17.5	17.5	17.5	17.5	17.5	17.5	17.5	17.5	17.5	17.5	17.5

Valve


Plug-in Sub-plate

Plug-in Metal Base


Plug-in Connector Connecting Base

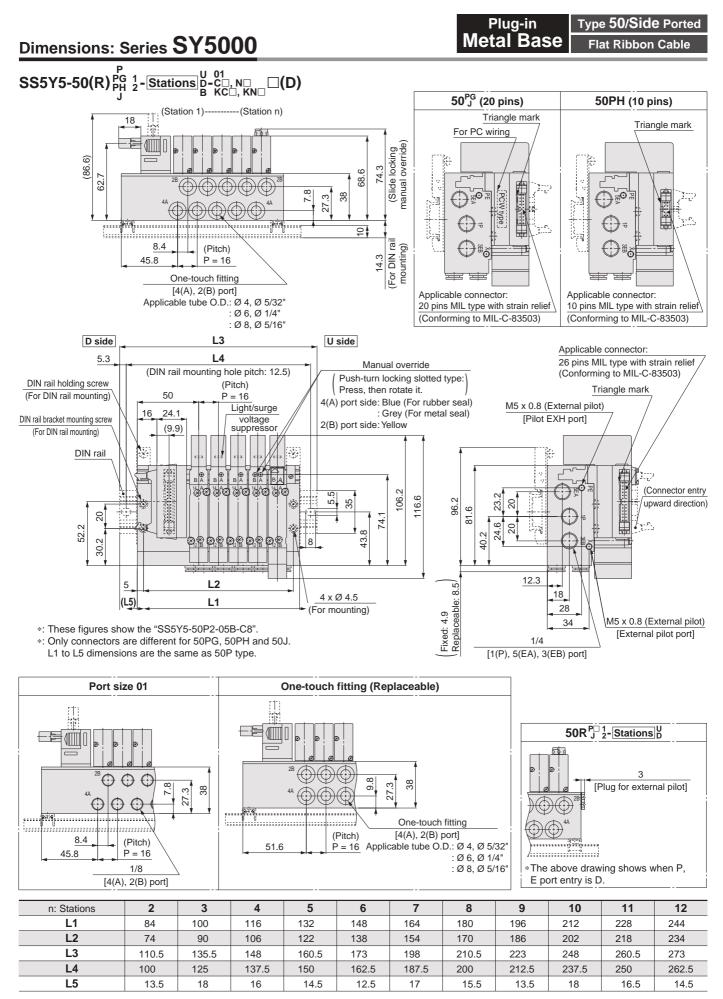

## Eller Metal Base Series SY3000/5000/7000

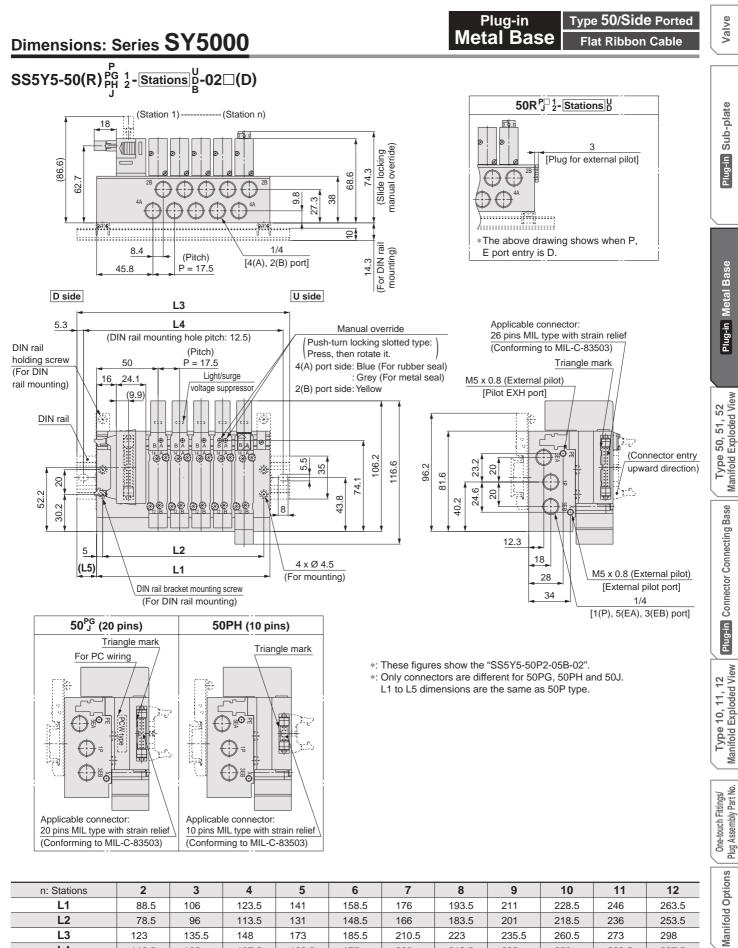

n: Stations	2	3	4	5	6	7	8	9	10	11	12
L1	88.5	106	123.5	141	158.5	176	193.5	211	228.5	246	263.5
L2	78.5	96	113.5	131	148.5	166	183.5	201	218.5	236	253.5
L3	123	135.5	148	173	185.5	210.5	223	235.5	260.5	273	298
L4	112.5	125	137.5	162.5	175	200	212.5	225	250	262.5	287.5
L5	17.5	15	12.5	16	13.5	17.5	15	12.5	16	13.5	17.5

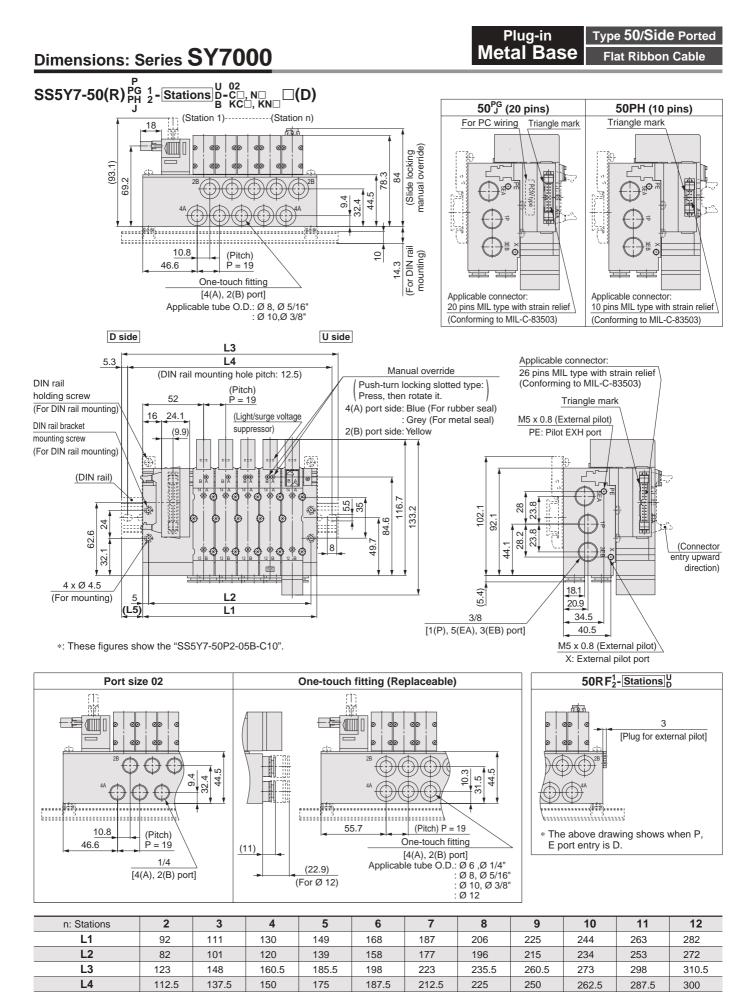

15

SMC

18

15

18


14.5


17.5

14.5

L5

## Elugen Metal Base Series SY3000/5000/7000

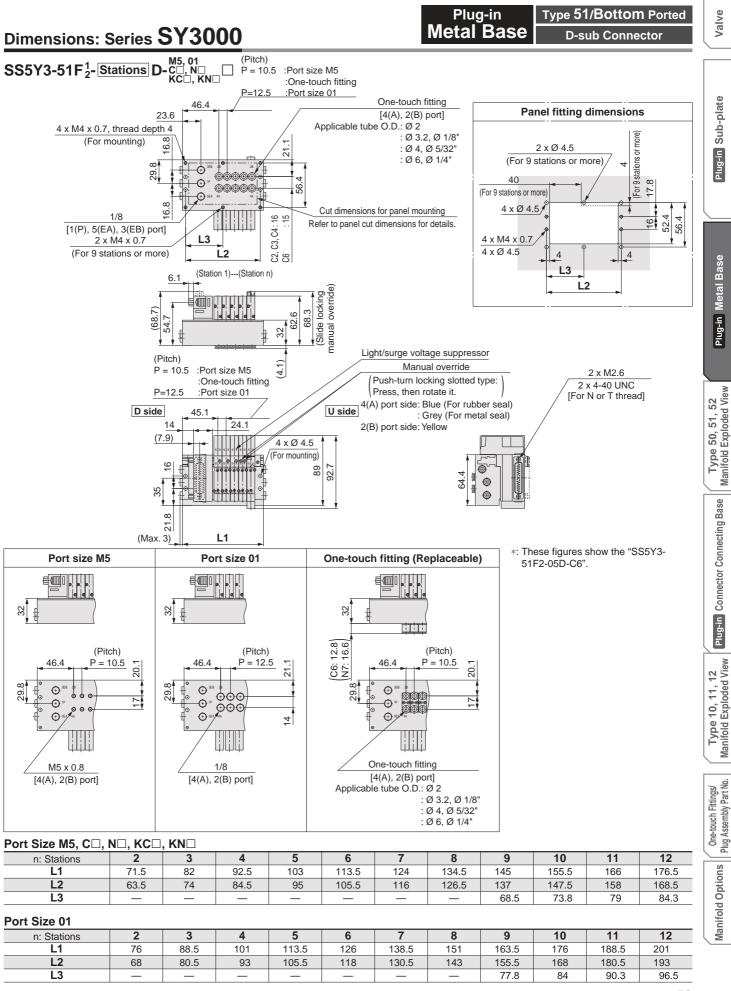

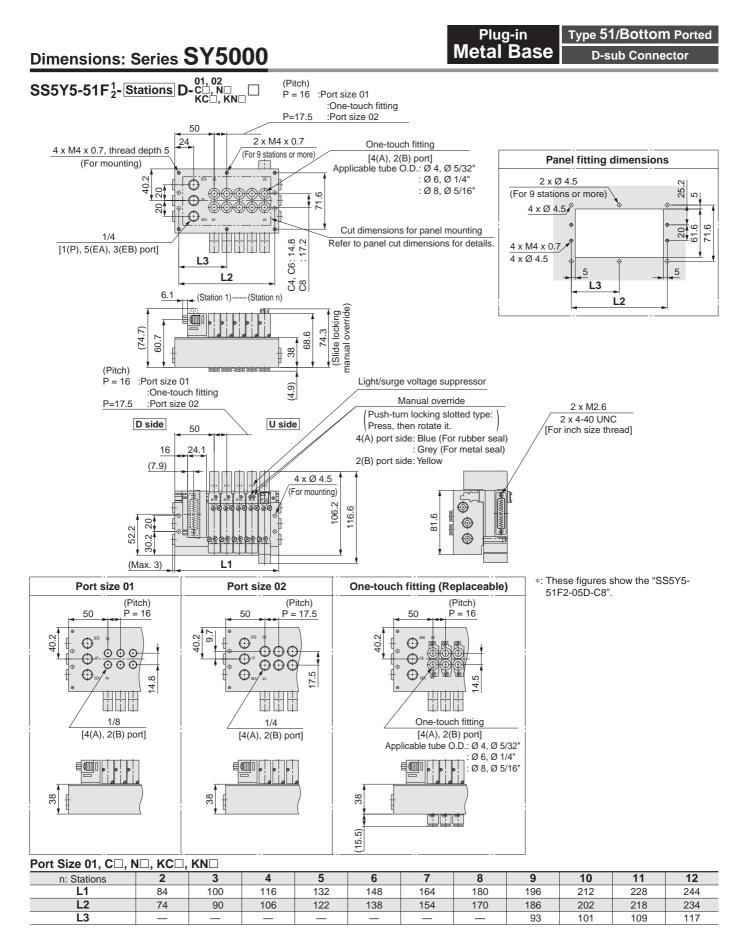



#### Port Size 02

n: Stations	2	3	4	5	6	7	8	9	10	11	12
L1	88.5	106	123.5	141	158.5	176	193.5	211	228.5	246	263.5
L2	78.5	96	113.5	131	148.5	166	183.5	201	218.5	236	253.5
L3	_	_			_	_	_	100.5	109.3	118	126.8




## Plug-in Metal Base Series SY3000/5000/7000

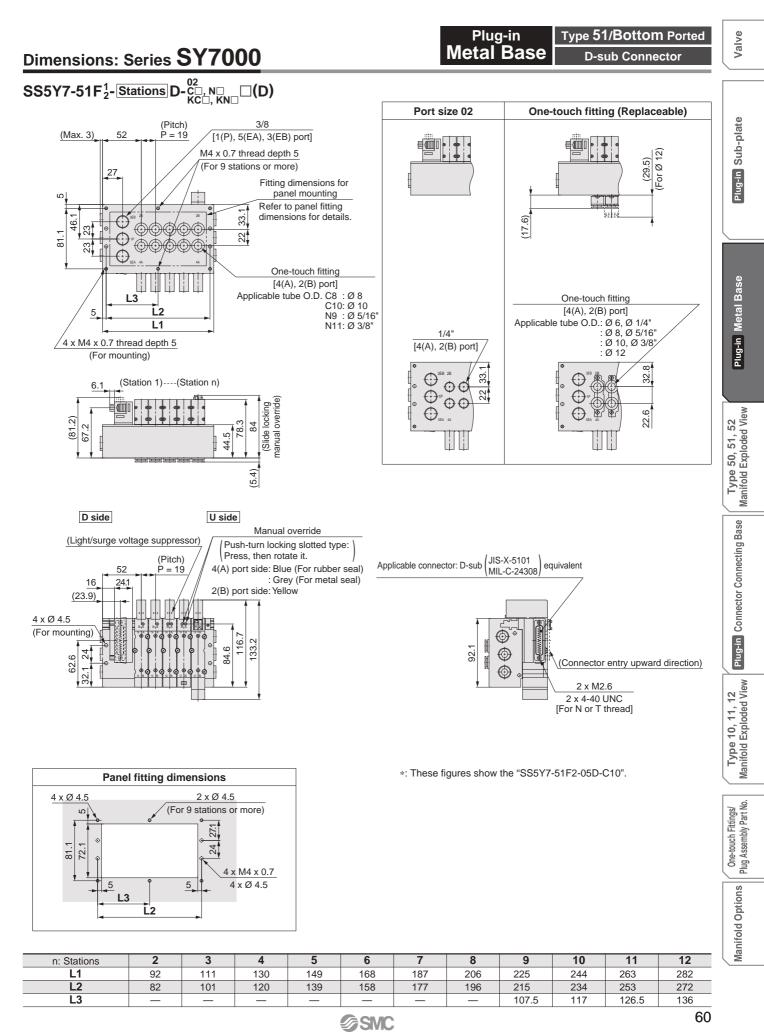


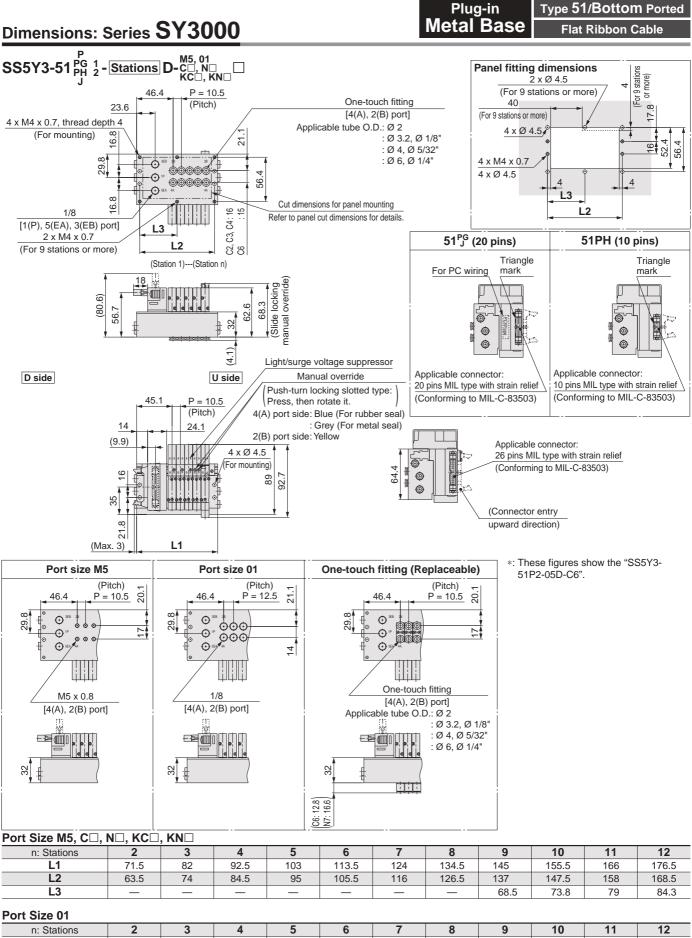

Stations	2	3	4	5	6	7	8	9	10	11	12
L1	76	88.5	101	113.5	126	138.5	151	163.5	176	188.5	201
L2	68	80.5	93	105.5	118	130.5	143	155.5	168	180.5	193
L3	—	—	—	_		—	—	77.8	84	90.3	96.5

## Elligen Metal Base Series SY3000/5000/7000

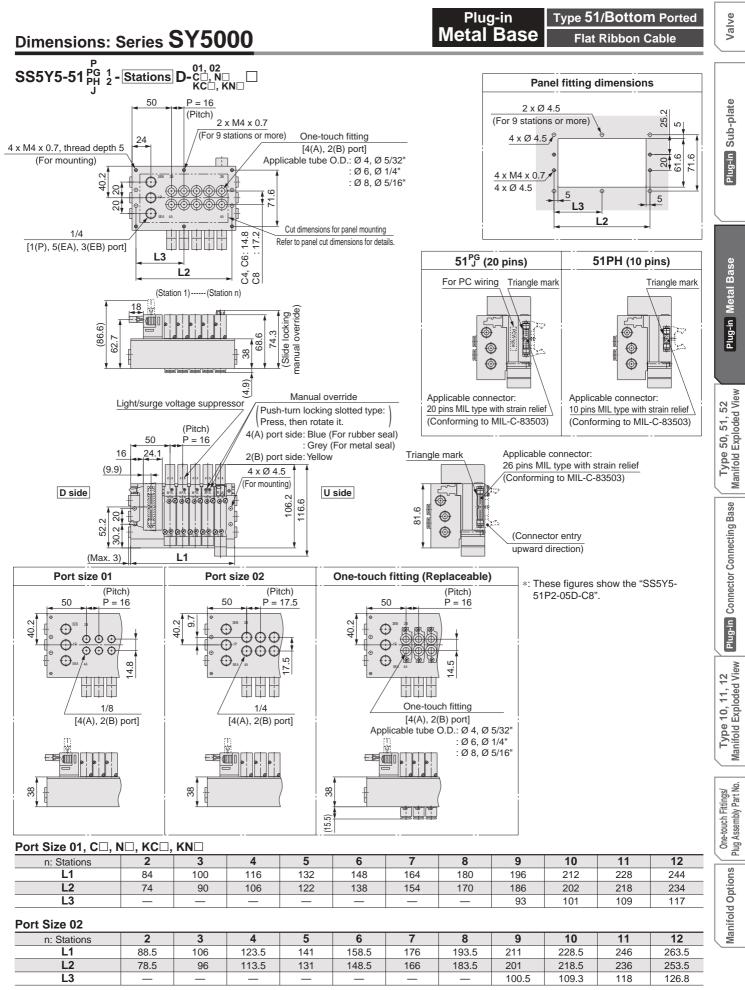

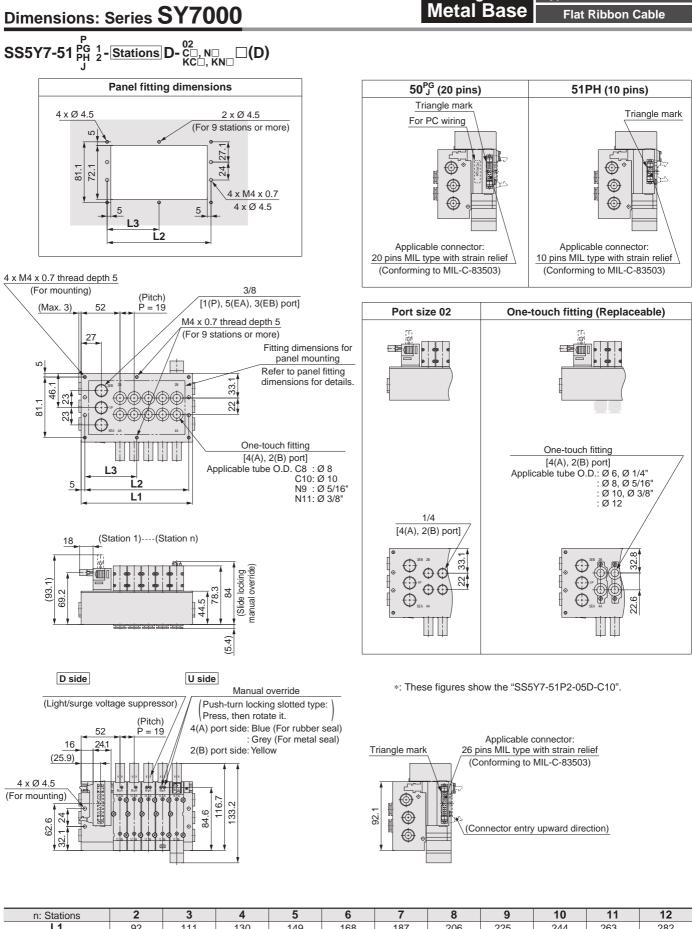

Plug-in

Type 51/Bottom Ported

n: Stations	2	3	4	5	6	7	8	9	10	11	12
L1	92	111	130	149	168	187	206	225	244	263	282
L2	82	101	120	139	158	177	196	215	234	253	272
L3	—	—	—	—	—	—	—	107.5	117	126.5	136

Valve
Plug-in Sub-plate
Plug-in Metal Base
Type 50, 51, 52 Manifold Exploded View
Plug-in Connector Connecting Base
Type 10, 11, 12 Manifold Exploded View
One-touch Fittings/ Plug Assembly Part No.
Manifold Options



## Plug-in Metal Base

Top ported


52R Top ported, External pilot


D-sub Connector Flat Ribbon Cable PC Wiring

Type 52 Top Ported


# Series SY3000/5000/7000 ( F RoHS

### How to Order Manifold

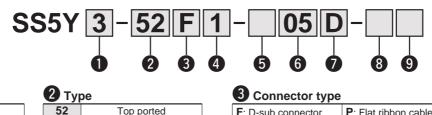

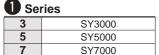

### 4 Connector entry direction

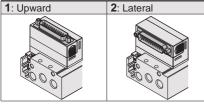


### **5** Wiring type


_	All double wiring <sup>*1</sup>
S	All single wiring*2

- \*1: All double wiring: 2-position single, double, 3-position and 4-position valves can be used on all manifold stations.
- \*2: All single wiring: Available only for the manifold which has 2-position single for all stations.
- Note that 2-position double, 3- or 4-position valves cannot be used. \*: If a mix of single and double wiring is required, it is supplied as a special order.

### How to Order Manifold Assembly

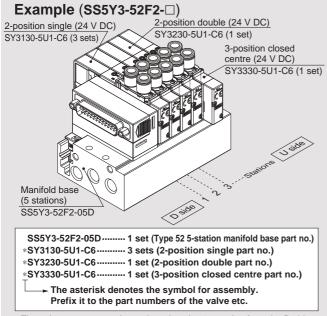

• The valve arrangement is numbered as the 1st station from the D side. Under the manifold part number, state the valves to be mounted in order from the 1st station as shown in the figure above. If the arrangement becomes complicated, specify on a manifold specification sheet.

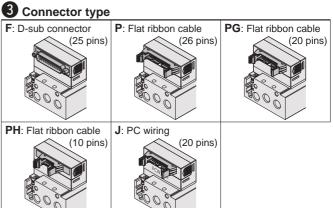

### 6 Valve stations

<b>F</b> : D-9	sub con	nector (25 pins	P: Fla	at ribbon	cable (26 pins)	PG	: Flat ribbo	on cable (20 pins)
Symbol	Stations	Note	Symbol	Stations	Note	Symb	ol Stations	Note
02	2 stations	All	02	2 stations	All	02	2 stations	All
÷	÷	double	:	:	double	:	:	double
12	12 stations	wiring	12	12 stations	wiring	09	9 stations	wiring
02	2 stations	All	02	2 stations	All	02	2 stations	All
:	:	single	:	:	single	÷	:	single
12	12 stations	wiring	12	12 stations	wiring	12	12 stations	wiring
PH: F	PH: Flat ribbon cable (10 pins) J: PC wiring (20 pins)							
Symbol	Stations	Note	Symbol	Stations	Note			
02	2 stations	All	02	2 stations	All			
:		double	:	:	double			
04	4 stations	wiring	08	8 stations	wiring			
02	2 stations	All	02	2 stations	All			
:	:	single	:	:	single			
08	8 stations	wiring	12	12 stations	wiring			
*: Th	is also	includes the	e num	ber of	blanking pla	te as	sembly	

P, E port entry						
U	U side*1					
D	D side*1					
B Both sides						
*1: Pluge are mounted on the opposi						

<u>8</u> т	Thread type				
—	Rc				
00F	G				
00N	NPT				
00T	NPTF				

-lugs are mounted on the opposite side of the selected ports.

#### 9 Mounting


**多SMC** 


- Internet in the second secon							
—	Direct mounting						
D	DIN rail mounting (With DIN rail)						
D0	DIN rail mounting (Without DIN rail)						
D3	For 3 stations	Specify a langer roll than					
:	÷	<ul> <li>Specify a longer rail than</li> <li>the standard length.</li> </ul>					
D12	For 12 stations	the standard length.					

\*: Refer to page 271 for the fixation of DIN rail mounting type manifold.




## Eller Metal Base Series SY3000/5000/7000

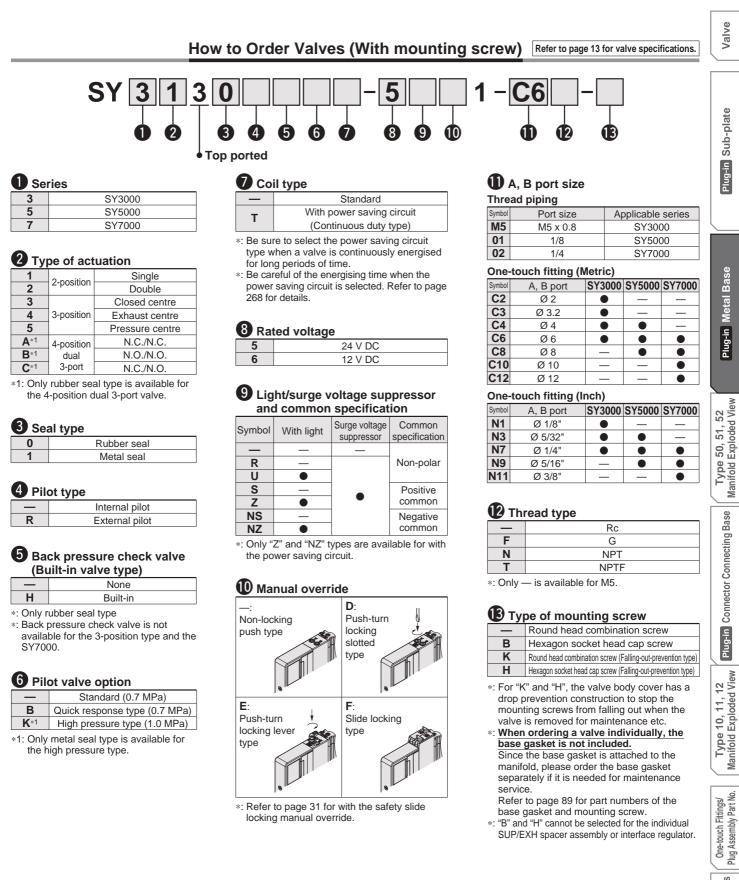

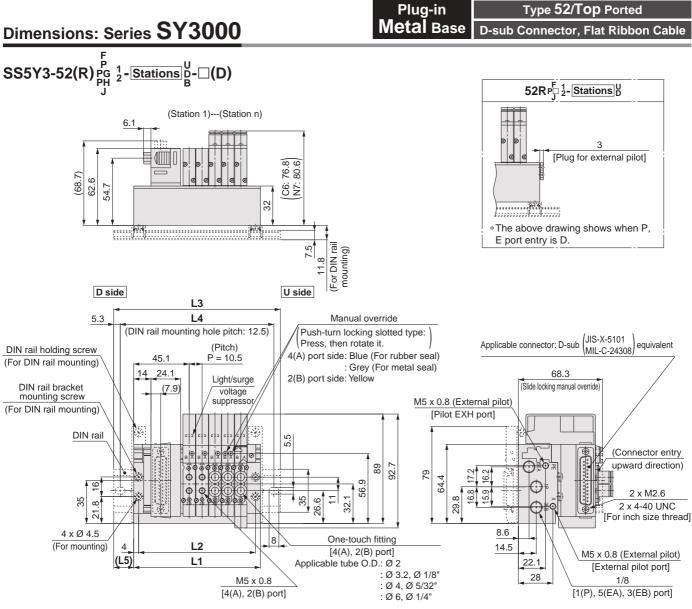


\*: These figures show the "SS5Y3-52F2-05B".

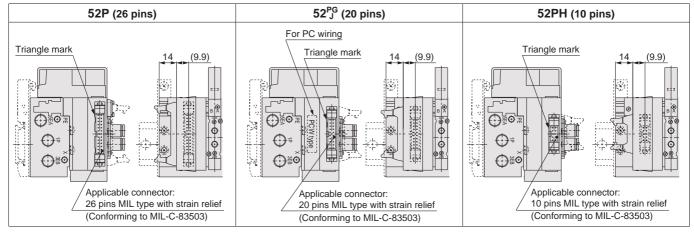


n: Stations	2	3	4	5	6	7	8	9	10	11	12
L1	71.5	82	92.5	103	113.5	124	134.5	145	155.5	166	176.5
L2	63.5	74	84.5	95	105.5	116	126.5	137	147.5	158	168.5
L3	98	110.5	123	135.5	148	160.5	160.5	173	185.5	198	210.5
L4	87.5	100	112.5	125	137.5	150	150	162.5	175	187.5	200
L5	13.5	14.5	15.5	16.5	17.5	18.5	13	14	15	16	17

## Elucetin Metal Base Series SY3000/5000/7000

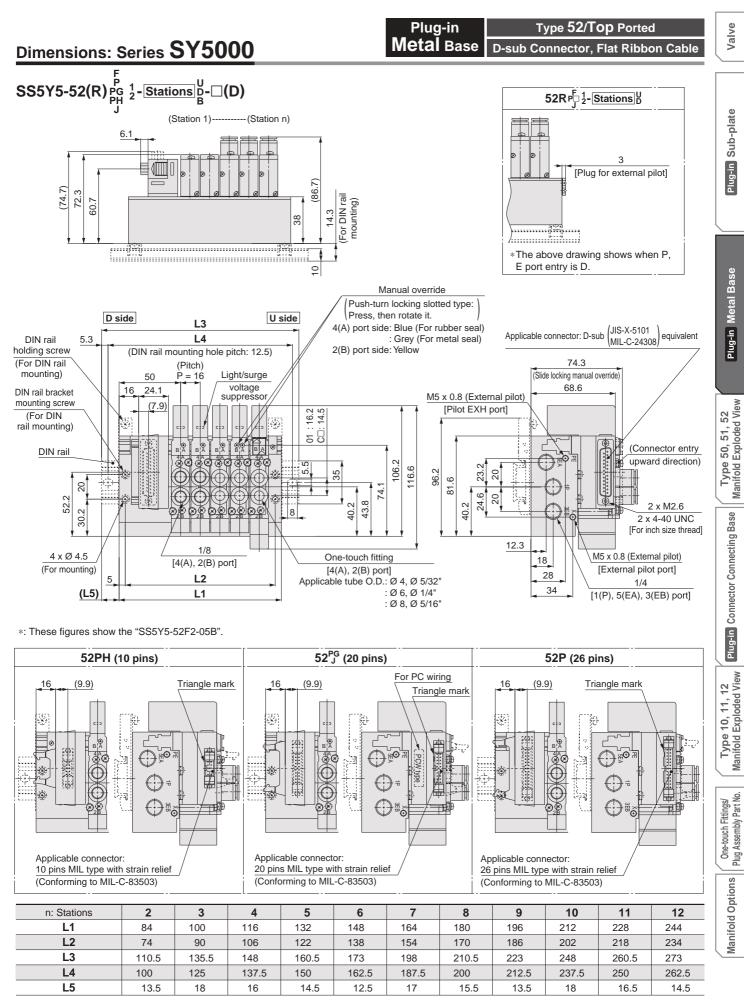


**⊘**SMC

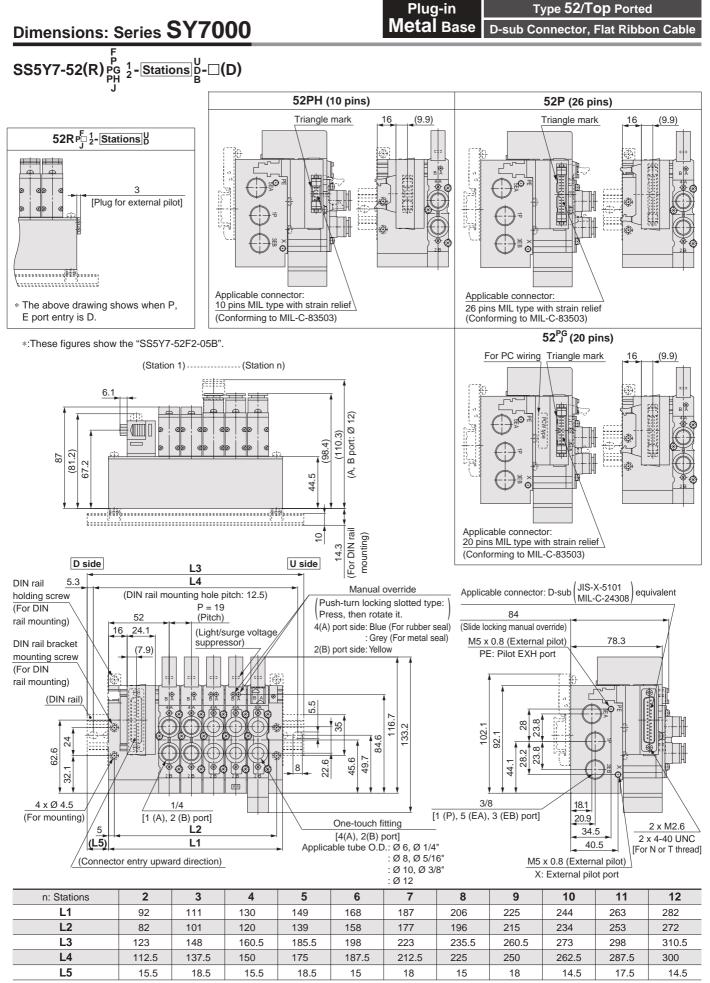

## Elugen Metal Base Series SY3000/5000/7000

- -13



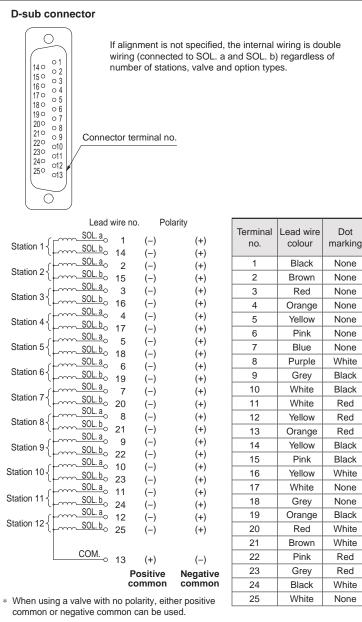

### **Connector Cable**


### GVVZS3000-21A-[][P40]

#### D-sub connector/cable

Cable length (L)	Assembly part no.	Note
1 m	GVVZS3000-21A-160	60°angled
3 m	GVVZS3000-21A-260	60°angled
5 m	GVVZS3000-21A-360	60°angled
8 m	GVVZS3000-21A-460	60°angled
3 m	GVVZS3000-21A-2	Standard
5 m	GVVZS3000-21A-3	Standard
8 m	GVVZS3000-21A-4	Standard

#### Shielded cable

Cable length (L)	Assembly part no.	Note
1 m	GVVZS3000-21A-1S	Shieled
3 m	GVVZS3000-21A-2S	Shieled
5 m	GVVZS3000-21A-3S	Shieled
8 m	GVVZS3000-21A-4S	Shieled
20 m	GVVZS3000-21A-5S	Made to order

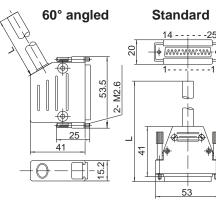


#### **Electrical characteristics**

Item	Property
Conductor resistance Ω/km, 20 °C	Max. 57
Voltage limit V, 5 minute, AC	1500
Insulation resistance MΩ/km, 20 °C	20


### Standard D-Sub connector cable assembly (option) AXT100-DS25- 015 030 050 (According to MIL-C24308)

\* Please contact SMC for details.

#### **Electrical Wiring Specifications**

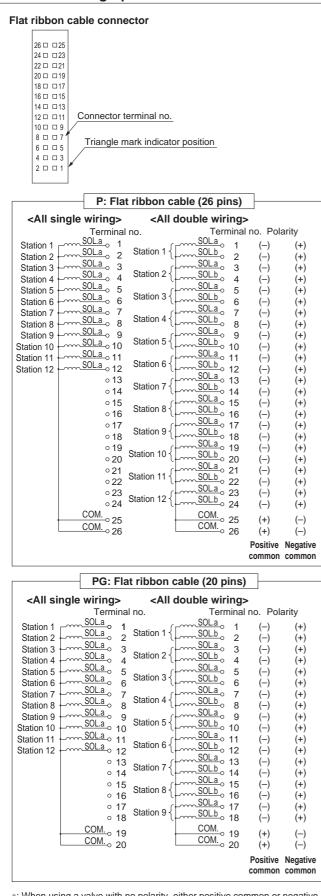


\*: When using a valve with no polarity, either positive common or negative common can be used.

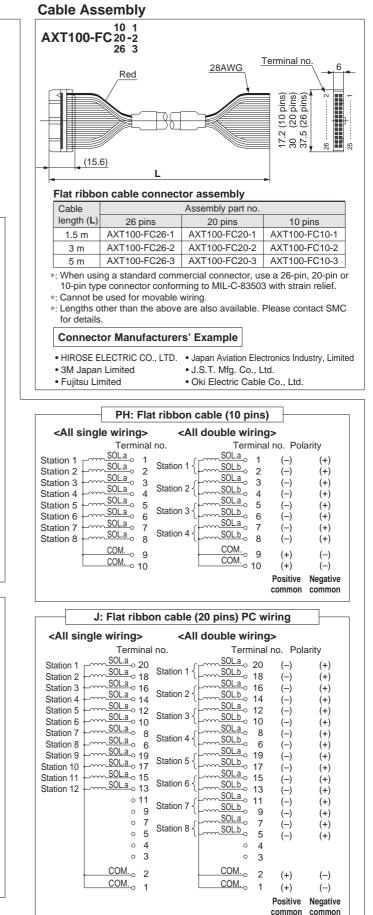

Valve
Plug-in Sub-plate
Plug-in Metal Base
Type 50, 51, 52 Manifold Exploded View
Plug-in Connector Connecting Base
Type 10, 11, 12 Manifold Exploded View
ö
One-touch Fittings/ Plug Assembly Part No
Manifold Options

## Plug-in Metal Base EX510 Series SY3000/5000/7000

How to Order Manifold

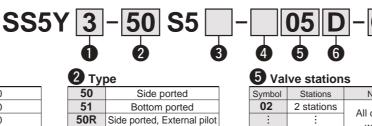

\*: External pilot is not available for the bottom ported type.

ß	SI	Unit	output	polarity	
	31	Unit	oulpul	polarity	

SY3000

SY5000 SY7000

_	Positive common

Negative	common

### **4** Wiring type

Series

3

5

7

N

Type 50


Type 51 Bottom Ported

Side Ported

—	All double wiring*1
S	All single wiring*2

- \*1: All double wiring: 2-position single, double, 3-position and 4-position valves can be used on all manifold stations.
- $\ast 2:$  All single wiring: Available only for the manifold which has 2-position single for all stations.
- Note that 2-position double, 3- or 4-position valves cannot be used. \*: If a mix of single and double wiring is required, it is supplied as a special order.

### How to Order Manifold Assembly

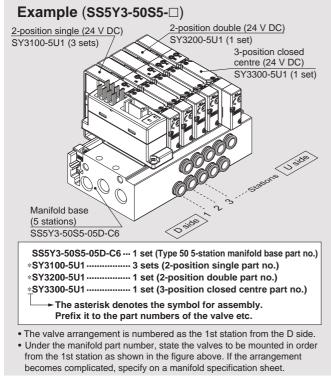

\*: When mixing top ported configurations, select from page 84. In this case, use caution as there is also output on the A and B port on base side. Specify on a manifold specification sheet if plugs are required on the A and B port on base side.

Symbol	Stations	Note	Symbol	Stations	Note
02	2 stations	All double	02	2 stations	All single
:	:	wiring	÷	:	wiring
08	8 stations	winng	12	12 stations	winng

\*: This also includes the number of blanking plate assembly.

### **6** P, E port entry

 U
 U side\*1

 D
 D side\*1\*2

 B
 Both sides

\*1: Plugs are mounted on the opposite side of the selected ports.
\*2: Only D side is available for Type 51
(Bottom ported).

### A, B port size

#### Thread piping

Symbol	A, B port	SY3000	SY5000	SY7000
M5	M5 x 0.8		—	—
01	1/8			_
02	1/4	—		

### One-touch fitting (Metric)

<u> </u>	ie-iou	ch nung (wei					
Sy	/mbol	A, B port	SY3000	SY5000	SY7000		
	C2	Ø 2		_			
	C3	Ø 3.2		_	_		
Fixed	C4	Ø 4			—		50
і. Т	<b>C</b> 6	Ø 6					<i>Tol</i> e
	C8	Ø 8	—			ju ju	pe
	C10	Ø 10	—				
	KC2	Ø 2		—	—	Type 50	Type 51
	KC3	Ø 3.2		_	_	(Side ported)	(Bottom ported)
le	KC4	Ø 4					
Replaceable	KC6	Ø6					· 99-
pla	KC8	Ø 8	—				
Re	KC10	Ø 10	—	_			
	KC12	Ø 12	—				
	<b>M</b> *1	Mixed sizes					
Ρ,	E port s	size (Thread piping)	1/8	1/4	3/8		

#### One-touch fitting (Inch)

	ie-tou	ch nung (incr	<b>1</b> )					
Sy	/mbol	A, B port	SY3000	SY5000	SY7000			
	N1	Ø 1/8"		—	—		//	
5	N3	Ø 5/32"			—			\$
Fixed	N7	Ø 1/4"			_		- OL	
ш	N9	Ø 5/16"	—				đ	<u>k</u>
	N11	Ø 3/8"	—	—		-		
	KN1	Ø 1/8"		—	—	Type 50		ype 51
e	KN3	Ø 5/32"	٠		_	(Side port	ed) (Bot	tom ported)
Replaceable	KN7	Ø 1/4"	•	•			.4	
plac	KN9	Ø 5/16"	—					83
Re	KN11	Ø 3/8"	_	_		U.S.	-	
	<b>M</b> *1	Mixed sizes	٠				) 1	
Ρ,	E port s	size (Thread piping)	1/8	1/4	3/8		2	

\*1: When ports are mixed sizes, indicate the piping specifications on the manifold specification sheet.

73



## Eller Metal Base Series SY3000/5000/7000

Valve

#### Rc Direct mounting F G **DIN** rail mounting D (With DIN rail) Ν NPT For details about the EX510 Gateway-type NPTF DIN rail mounting Т Serial Transmission System, refer to the D0 (Without DIN rail) WEB catalogue on SMC website D3 For 3 stations www.smc.eu and the Operation Manual. Specify a longer rail than Please download the Operation Manual via the standard length. SMC website, http://www.smc.eu For 12 stations D12 Only direct mounting is available for Type 51 (Bottom ported). \*: Refer to page 271 for the fixation of DIN rail mounting type manifold. How to Order Valves (With mounting screw) Refer to page 13 for valve specifications. SY<sub>3</sub> Ο $\left( \right)$ Manual override D: Push-turn Non-locking **Base mounted** locking push type slotted Series 6 Pilot valve option type SY3000 Standard (0.7 MPa) 3 B 5 SY5000 Quick response type (0.7 MPa) SY7000 **K**\*1 High pressure type (1.0 MPa) E: F: \*1: Only metal seal type is available for the Slide locking Push-turn high pressure type. 2 Type of actuation locking level type tvpe Single 1 💋 Coil type 2-position 2 Double Standard 3 Closed centre Т 4 With power saving circuit (Continuous duty type) 3-position Exhaust centre 5 \*: Be sure to select the power saving circuit Pressure centre \*: Refer to page 31 for with the safety slide N.C./N.C. type when the valve is continuously A locking manual override. 4-position energised for long periods of time. **B**\*1 N.O./N.O. dual 3-port \*: Be careful of the energising time when the **C**\*1 N.C./N.O. power saving circuit is selected. Refer to page Type of mounting screw \*1: Only rubber seal type is available for the 268 for details. 4-position dual 3-port valve.

9 Mounting

<b>3</b> Sea	al type	
0		

8 Thread type

0	Rubber seal	
1	Metal seal	

### 4 Pilot type

	Internal pilot
R	External pilot

#### Back pressure check valve (Built-in valve type)

—	None
Н	Built-in

\*: Only rubber seal type

\*: Back pressure check valve is not available for the 3-position type and the SY7000.

### 8 Rated voltage

24 V DC


### 9 Light/surge voltage suppressor and common specification

Symbol	With light	Surge voltage suppressor	Common specification
R	—		Non-polar
U	•		Νοπ-ροιαί
S	—		Positive common
Z	•	•	F USILIVE CUITITIUIT
NS	—		Nogativo common
NZ	•		Negative common

\*: Only "Z" and "NZ" types are available for with the power saving circuit. Select a valve from R, U, S or Z when the SI Unit output polarity is (positive common).

Select a valve from R, U, NS or NZ when the SI Unit output polarity is N (negative common).



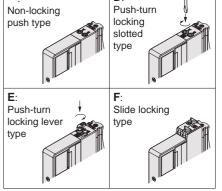



—	Round head combination screw
В	Hexagon socket head cap screw
K	Round head combination screw (Falling-out-prevention type)
Н	Hexagon socket head cap screw (Falling-out-prevention type)

- \*: For "K" and "H", the valve body cover has a drop prevention construction to stop the mounting screws from falling out when the valve is removed for maintenance etc.
- \*: When ordering a valve individually, the base gasket is not included. Since the base gasket is attached to the manifold, please order the base gasket separately if it is needed for maintenance service.

Refer to page 89 for part numbers of the base gasket and mounting screw.

\*: "B" and "H" cannot be selected for the individual SUP/EXH spacer assembly, interface regulator or double check spacer assembly with residual pressure release valve.

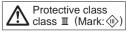

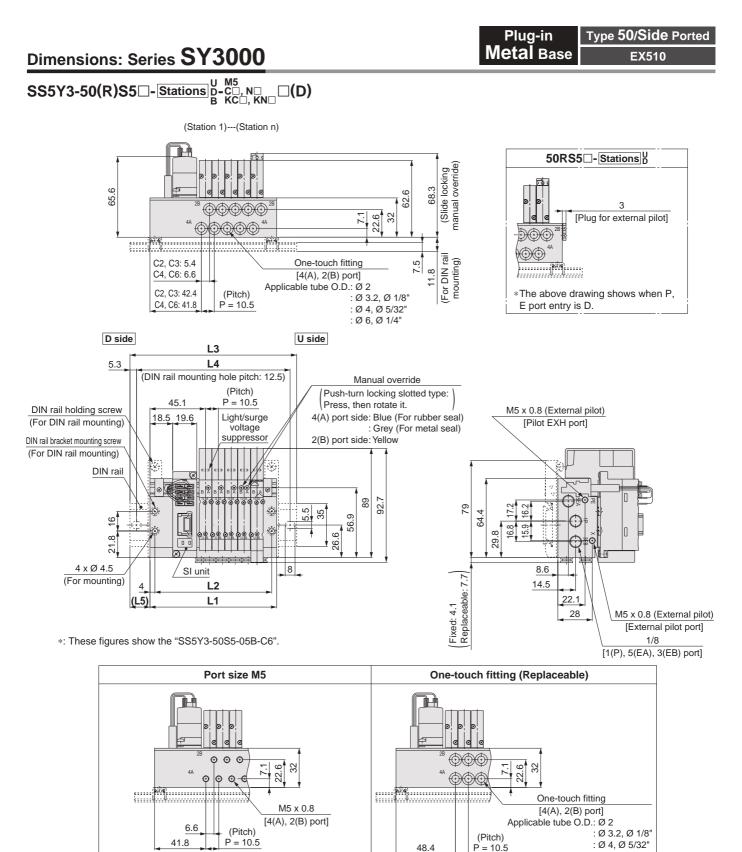


n: Stations	2	3	4	5	6	7	8	9	10	11	12
L1	71.5	82	92.5	103	113.5	124	134.5	145	155.5	166	176.5
L2	63.5	74	84.5	95	105.5	116	126.5	137	147.5	158	168.5
L3	98	110.5	123	135.5	148	160.5	160.5	173	185.5	198	210.5
L4	87.5	100	112.5	125	137.5	150	150	162.5	175	187.5	200
L5	13.5	14.5	15.5	16.5	17.5	18.5	13	14	15	16	17

:Ø6,Ø1/4"



## Elligetin Metal Base Series SY3000/5000/7000

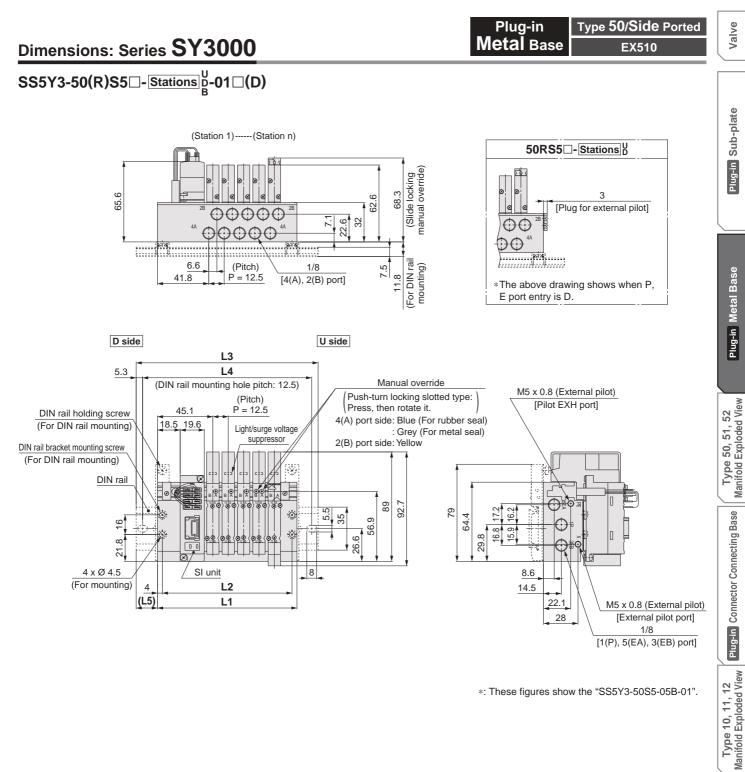

\*: These figures show the "SS5Y3-50S5-05B-01".

												One-touch Fittings/ Plug Assembly Part No.
					_						_	su
n: Stations	2	3	4	5	6	7	8	9	10	11	12	ptions
L1	76	88.5	101	113.5	126	138.5	151	163.5	176	188.5	201	
L2	68	80.5	93	105.5	118	130.5	143	155.5	168	180.5	193	fold
L3	110.5	123	135.5	148	160.5	173	185.5	198	210.5	223	235.5	Manifold
L4	100	112.5	125	137.5	150	162.5	175	187.5	200	212.5	225	< ≥
L5	17.5	17.5	17.5	17.5	17.5	17.5	17.5	17.5	17.5	17.5	17.5	

Æ

(કરને શ


, u

45.8

8.4

c - - -

lassas

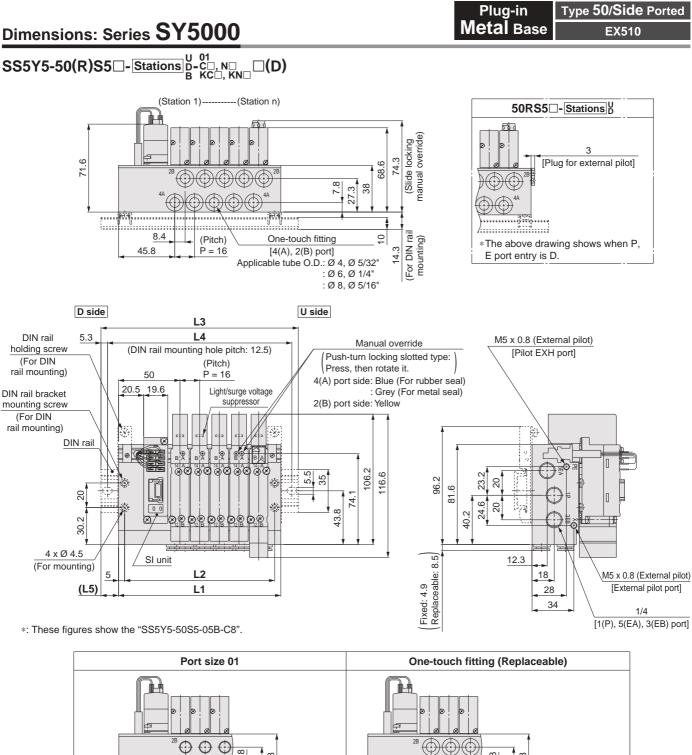


7.8 88 9.8 38 e, 27.3 27 . . . . . . . . . . . . . . . One-touch fitting 1/8 [4(A), 2(B) port] (Pitch) [4(A), 2(B) port] Applicable tube O.D.: Ø 4, Ø 5/32" P = 16 (Pitch) : Ø 6, Ø 1/4" 51.6 P = 16 :Ø8,Ø5/16"


n: Stations	2	3	4	5	6	7	8	9	10	11	12
L1	84	100	116	132	148	164	180	196	212	228	244
L2	74	90	106	122	138	154	170	186	202	218	234
L3	110.5	135.5	148	160.5	173	198	210.5	223	248	260.5	273
L4	100	125	137.5	150	162.5	187.5	200	212.5	237.5	250	262.5
L5	13.5	18	16	14.5	12.5	17	15.5	13.5	18	16.5	14.5




## Elligetin Metal Base Series SY3000/5000/7000

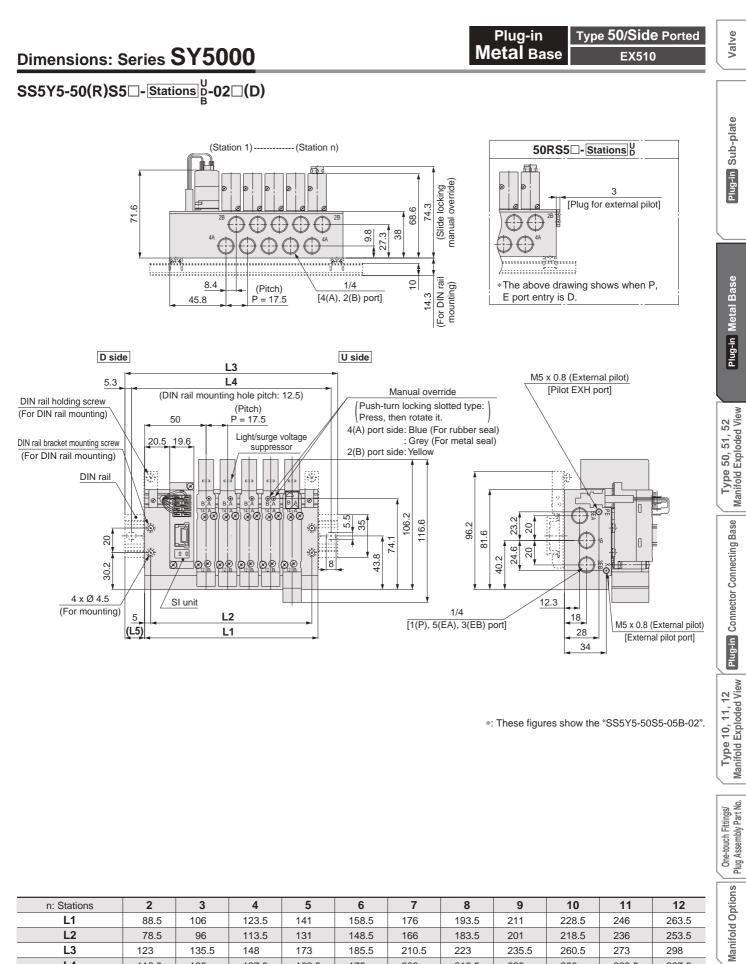


n: Stations	2	3	4	5	6	7	8	9	10	11	12
L1	88.5	106	123.5	141	158.5	176	193.5	211	228.5	246	263.5
L2	78.5	96	113.5	131	148.5	166	183.5	201	218.5	236	253.5
L3	123	135.5	148	173	185.5	210.5	223	235.5	260.5	273	298
L4	112.5	125	137.5	162.5	175	200	212.5	225	250	262.5	287.5
L5	17.5	15	12.5	16	13.5	17.5	15	12.5	16	13.5	17.5

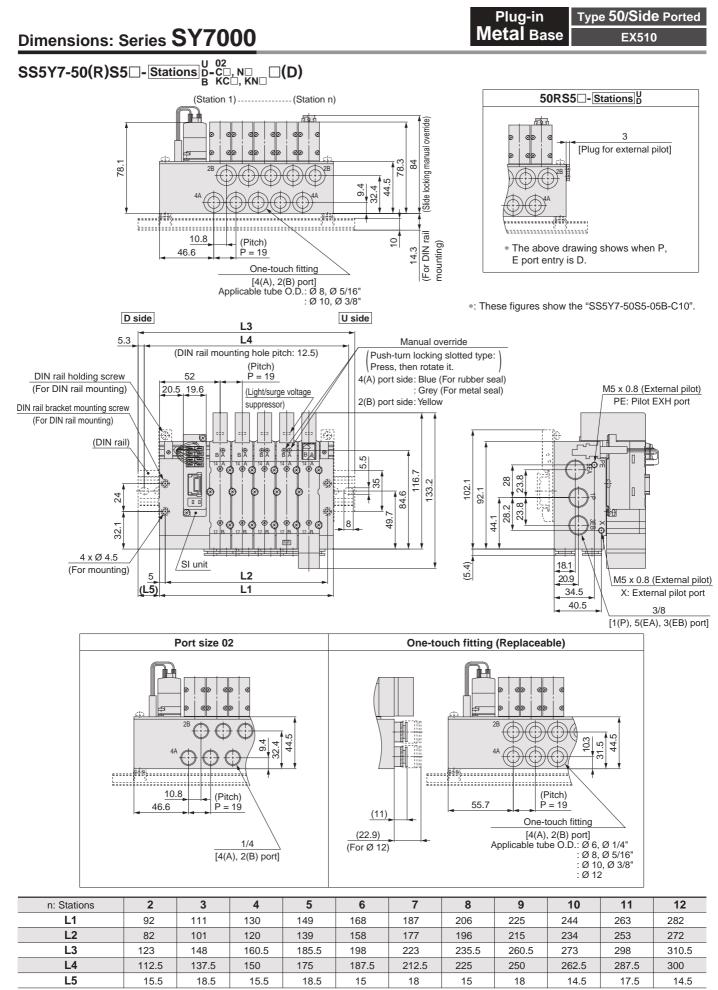


## Elligetin Metal Base Series SY3000/5000/7000

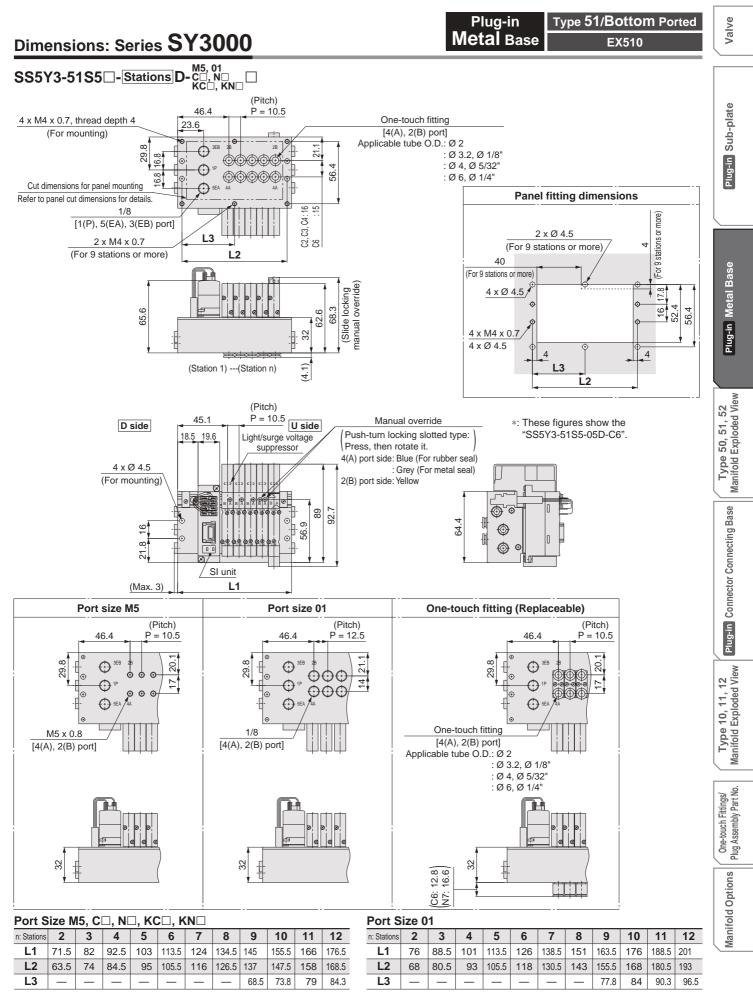

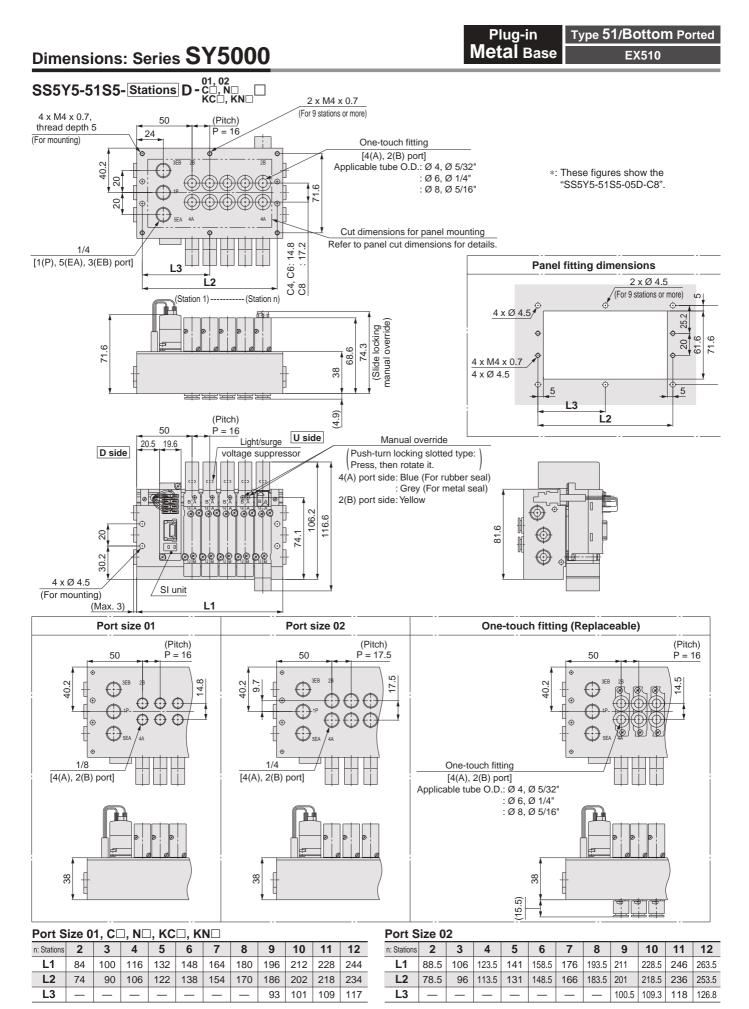


## Elligetin Metal Base Series SY3000/5000/7000

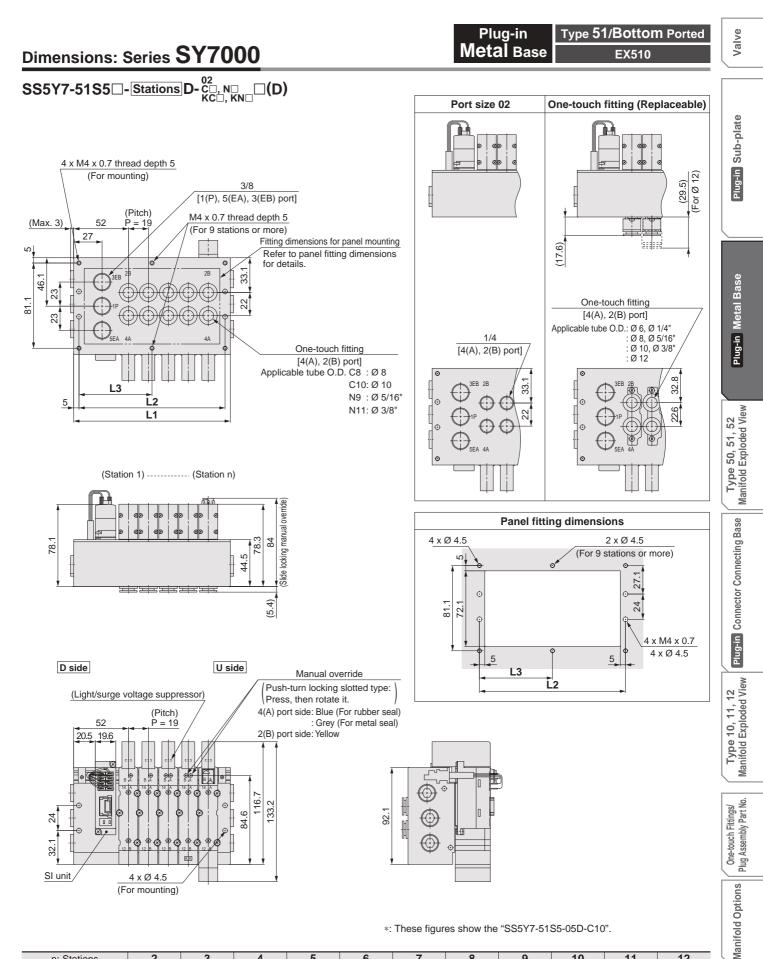

n: Stations	2	3	4	5	6	7	8	9	10	11	12
L1	92	111	130	149	168	187	206	225	244	263	282
L2	82	101	120	139	158	177	196	215	234	253	272
L3	_	—		_	_	_		107.5	117	126.5	136

## Plug-in Metal Base Ex510 Series SY3000/5000/7000

### How to Order Manifold

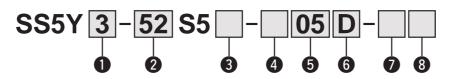

ype 52

3	SY3000
5	SY5000
7	SY7000

Giype									
52	Top ported								
52R	Top ported, External pilot								

### **4** Wiring type

—	All double wiring*1
S	All single wiring*2

- \*1: All double wiring: 2-position single, double, 3-position and 4-position valves can be used on all manifold stations.
- \*2: All single wiring: Available only for the manifold which has 2-position single for all stations. Note that 2-position double, 3- or 4-position valves cannot be used.
- If a mix of single and double wiring is required, it is supplied as a special order.

### **5** Valve stations

Sy	mbol	Stations	Note				
(	02	2 stations	All double				
	:	÷					
(	08	8 stations	wiring				
(	02	2 stations					
	: :		All single				
	12	12 stations	wiring				

\*: This also includes the number of blanking plate assembly.

\*1: Plugs are mounted on the opposite side of

U side\*1


D side\*

Both sides

### **3** SI Unit output polarity

	eutput pelainty
	Positive common
N	Negative common

### How to Order Manifold Assembly

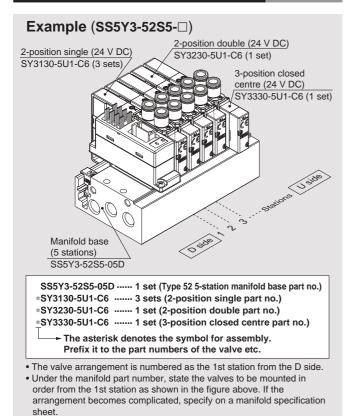

### 

the selected ports.

6 P, E port entry

U

D

В

Thread type											
_	Rc										
00F	G										
00N	NPT										
00T	NPTF										

### 8 Mounting


—		Direct mounting										
D	DIN rail mounting											
U		(With DIN rail)										
DO	DIN rail mounting											
D0	(Without DIN rail)											
D3	For 3 stations											
:	÷	<ul> <li>Specify a longer rail than</li> <li>the standard length.</li> </ul>										
D12	For 12 stations	the standard length.										


\*: Refer to page 271 for the fixation of DIN rail mounting type manifold.

For details on the EX510 Gateway-type Serial Transmission System, refer to the web catalogue on SMC website **www.smc.eu** and the Operation Manual. Please download the Operation Manual via SMC website, http://www.smc.eu



## Eller Metal Base Series SY3000/5000/7000

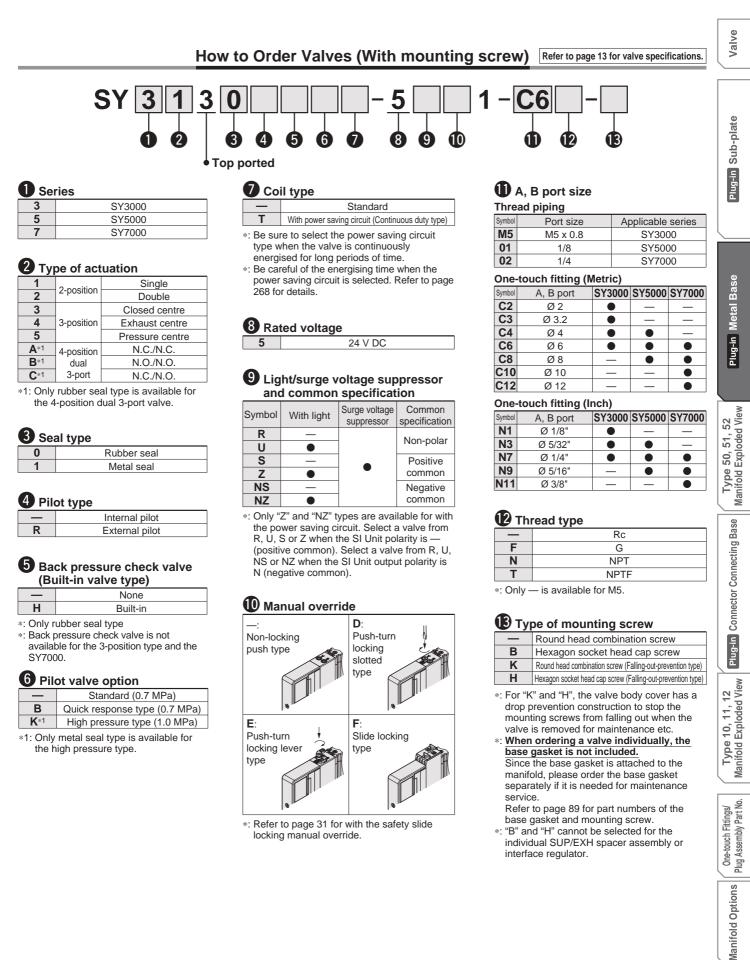


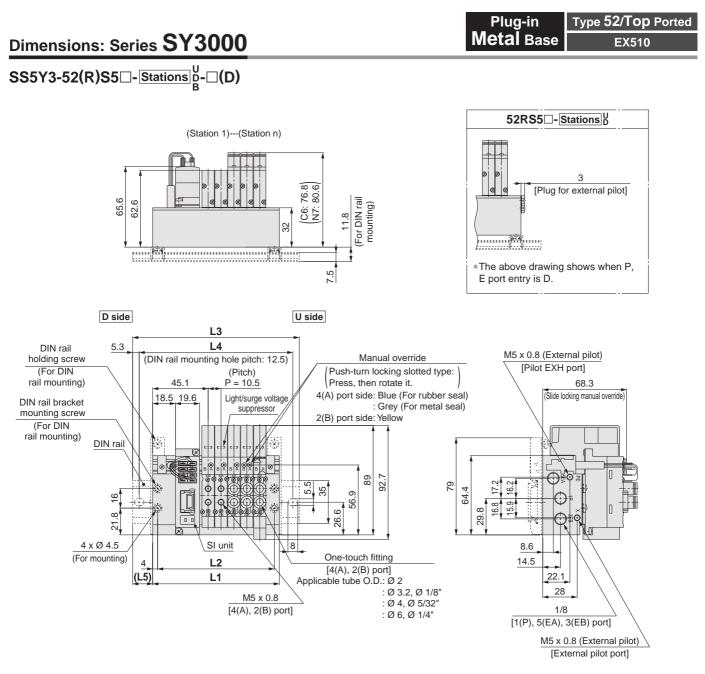

<sup>\*:</sup> These figures show the "SS5Y3-52S5-05B".

n: Stations	2	3	4	5	6	7	8	9	10	11	12
L1	71.5	82	92.5	103	113.5	124	134.5	145	155.5	166	176.5
L2	63.5	74	84.5	95	105.5	116	126.5	137	147.5	158	168.5
L3	98	110.5	123	135.5	148	160.5	160.5	173	185.5	198	210.5
L4	87.5	100	112.5	125	137.5	150	150	162.5	175	187.5	200
L5	13.5	14.5	15.5	16.5	17.5	18.5	13	14	15	16	17


## Plugetin Metal Base Series SY3000/5000/7000

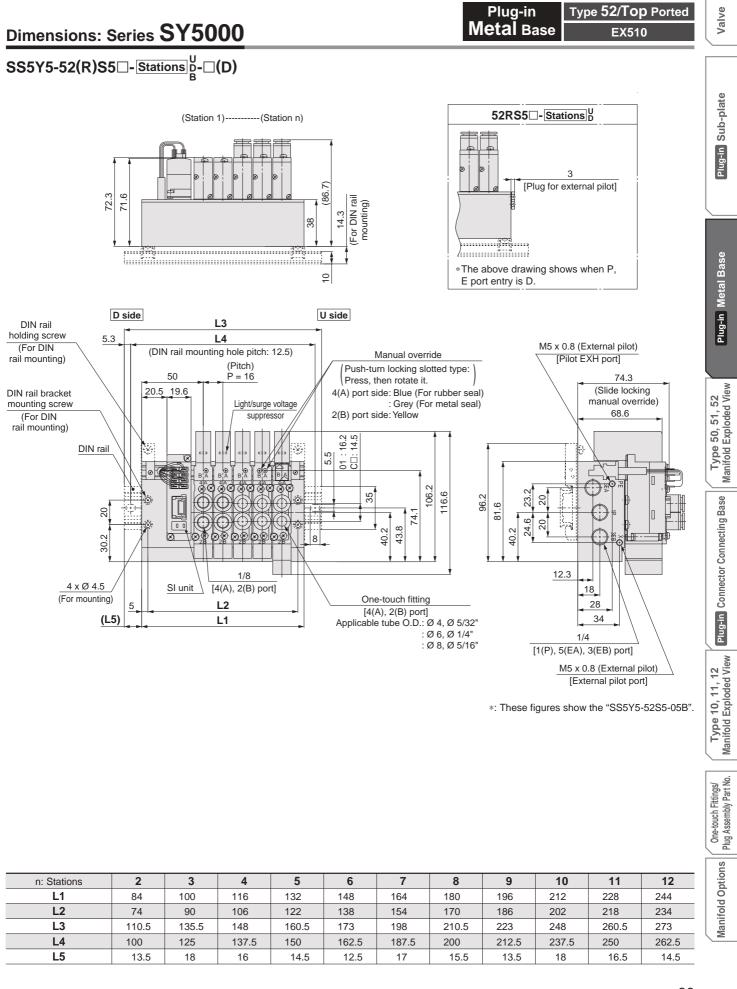

### Dimensions: Series SY7000

Plug-in Type 52/Top Ported
Metal Base EX510



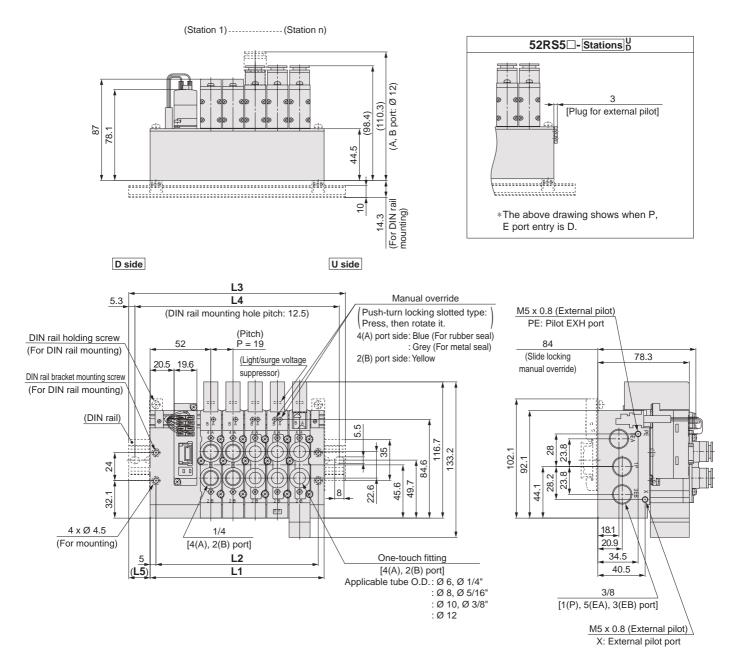

\*: These figures show the "SS5Y7-52S5-05B".


n: Stations	2	3	4	5	6	7	8	9	10	11	12
L1	92	111	130	149	168	187	206	225	244	263	282
L2	82	101	120	139	158	177	196	215	234	253	272
L3	123	148	160.5	185.5	198	223	235.5	260.5	273	298	310.5
L4	112.5	137.5	150	175	187.5	212.5	225	250	262.5	287.5	300
L5	15.5	18.5	15.5	18.5	15	18	15	18	14.5	17.5	14.5



Valve
Plug-in Sub-plate
Plug-in Metal Base
Type 50, 51, 52 Manifold Exploded View
Plug-in Connector Connecting Base
Type 10, 11, 12 Manifold Exploded View
One-touch Fittings/ Plug Assembly Part No.
Manifold Options

**SMC** 

## Series SY3000/5000/7000 Type 50, 51, 52 Plug-in Metal Base Manifold Exploded View

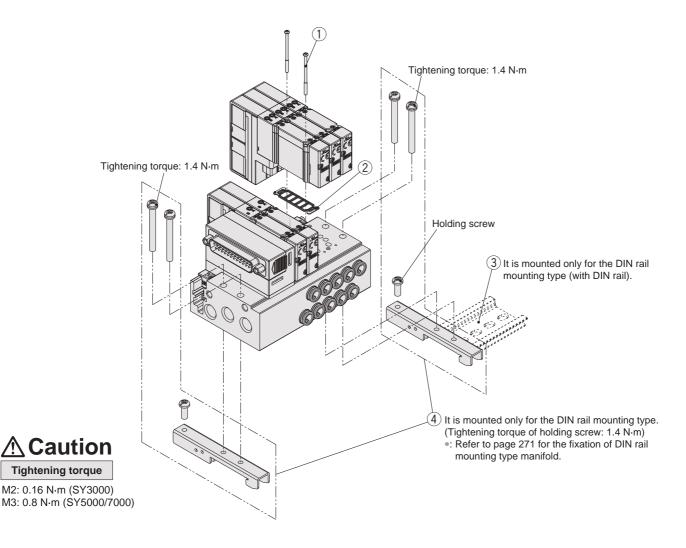

### Manifold Parts No.

No.	Dec	scription		Part no.		Note		
INO.	Des	scription	SY3000 SY5000		SY7000	Note		
(1)	Round headValve mounting					Part numbers shown on the left are for 10 valves (20 pcs.).		
	screw	Hexagon socket head cap screw	<b>SY3000-222-1A</b> (M2 x 32)	<b>SY5000-222-1A</b> (M3 x 32.5)	<b>SY7000-222-1A</b> (M3 x 36.5)	(30 pcs. for the SY7000)		
2	Base gasket (for <sup>plug-in</sup> metal	base and sub-plate)	SY30M-11-1A	SY50M-11-1A	SY70M-11-1A	Part numbers shown on the left are for 10 valves (10 pcs.).		
3	DIN rail		VZ1000-11-1-□	VZ1000-11-4-□	VZ1000-11-4-□	Refer to page 249.		
4	Clamp bracket as (for plug-in metal		SY30M-15-2A	SY50M-15-2A	SY70M-15-2A	Part numbers shown on the left are for the clamp bracket assembly for one manifold (two sets of clamp brackets).		

### Type 50, 51, 52 Plug-in Metal Base Manifold Exploded View Series SY3000/5000/7000

## Valve


## Type 10, 11, 12 Manifold Exploded View


### Manifold Parts No.

### Blanking plate assembly (With mounting screw)

Used when expecting valve additions, or for maintenance.

A structure to prevent screws falling out is in place on the blanking plate, making it much harder for the mounting screws to fall out.

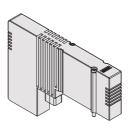

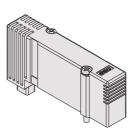

SY70M-26-2A (-B)


SY50M-26-2A (-B)

Refer to pages 260, 262, 264 for dimensions.


Refer to pages 250 to 254 for individual SUP/EXH and other options.

SY30M-26-2A (-B)

How to Order Blanking Plate Assembly

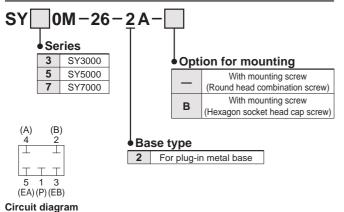

## **Plug-in Connector Connecting Base**

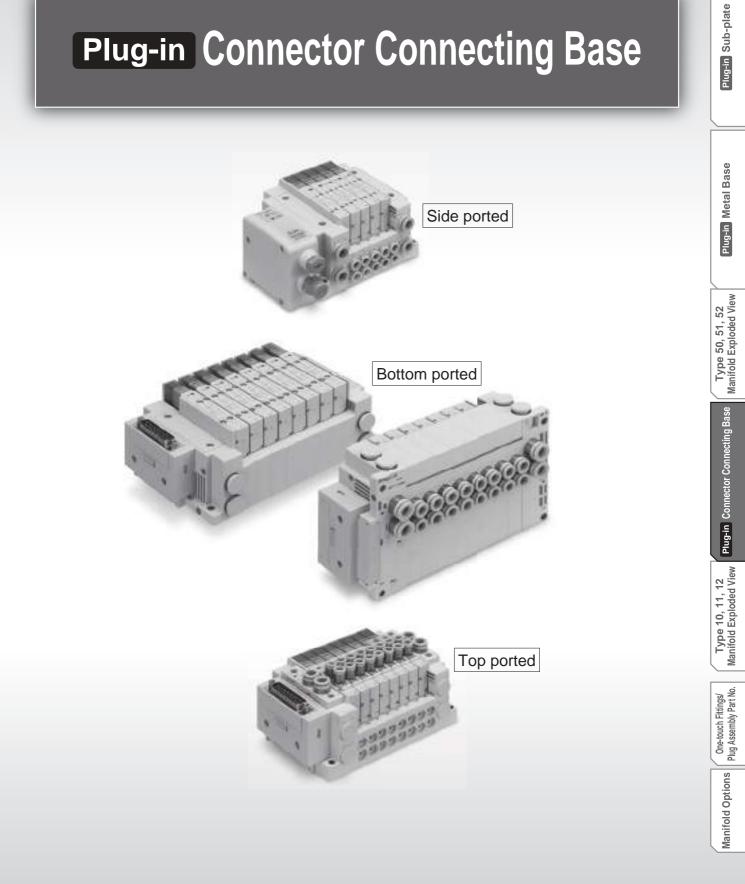

Valve

## Series SY3000/5000/7000 Type 10, 11, 12 Plug-in Connector Connecting Base

### **Manifold Specifications**

													_		
				sub iector	Fla	t ribbon ca	able	Terminal block box	Lead wire	Circular connector	Serial wiring				
Model		F type	FW type	P type	PG type J type G type	PH type	T type			S6⊟ type (EX600)	SA2 type (EX500) S4□ type (EX126)	S□ type (EX250) (EX260)	S3⊟ type (EX120)		
Manifold	d type			Plug-in connector connecting base											
SUP/EX	H port type		Common SUP/EXH (Common for 3/5 port)												
Valve st	ations		2 t	2 to 24 stations			2 to 8 stations	2 to 20 stations	2 t	2 to 24 stations			2 to 16 stations		
Applicable connector			D-sub connector Conforming to MIL-C-24308	Dedicated connector (Refer to			lief -C-83503 97.)								
			JIS-X-5101 (Refer to page 95.)	page 95.)	Socket: 26 pins MIL type	Socket: 20 pins MIL type	Socket: 10 pins MIL type								
Internal	wiring		Positive common, Negative common												
		SY3000	Ø 8 One-touch fitting Ø 5/16" One-touch fitting												
										0					
	1(P), 3/5(E) port	SY5000		Ø 10 One-touch fitting Ø 3/8" One-touch fitting											
Port		SY7000							touch fittin -touch fittir	•					
size				Ø2	One-touch	n fitting, Ø				-	ing, Ø 6 Or	ne-touch fi	ttina		
		SY3000				0					' One-toucl				
	4(A), 2(B)				Ø	4 One-tou	ch fitting,	Ø 6 One-t	ouch fitting	g, Ø 8 One	e-touch fitti	ng			
	port	SY5000			Ø 5/32"	One-touc	h fitting, Ø	1/4" One-	-touch fittir	ng, Ø 5/16	" One-touc	h fitting			
SY7000		0/7000		Ø 6	One-touch	n fitting, Ø	8 One-tou	ch fitting, 9	Ø 10 One-	touch fittir	ng, Ø 12 O	ne-touch f	itting		
				Ø 1/4"	One-touch	n fitting, Ø	5/16" One	e-touch fitti	ng, Ø 3/8"	One-toucl	h fitting				
Enclosu	re (Based on I	EC60529)	IP40	IP67*		IP40			IP67*		IP67* I/O unit: partially IP40	IP67* (EX500 gateway unit, input unit: IP65	IP67* (Partially IP40)	IP20	

\* In the case of a metal seal, there are restrictions in the operating environment. Refer to the Specific Product Precautions (page 242).

### Type 10, 11, 12 Plug-in Connector Connecting Base Series SY3000/5000/7000

### Manifold Flow Rate Characteristics\*1/Manifold Weight

#### Valve Seal Type: Rubber Seal

	Port	size		V	alve flow-rate				
		4.0	1→4/2 (P→A/B)			4/2→	5/3 (A/	′B→E)	Weight: W [q] *2
Model	1, 3/5 (P, E)	4, 2 (A, B)	C [dm³/(s·bar)]	b	Q [l/min] (ANR) * <sup>3</sup>	C [dm³/(s·bar)]	b	Q [l/min] (ANR) * <sup>3</sup>	(n: stations)
SS5Y3-10 (Side ported)	C8	C6	1.4	0.30	356	1.6	0.19	381	28.9n + 293
SS5Y3-12 (Top ported)	C8	C6	1.2	0.29	303	1.3	0.19	310	25.1n + 314
SS5Y5-10 (Side ported)	C10	C8	3.3	0.30	839	3.6	0.17	848	74.7n + 398
SS5Y5-11 (Bottom ported)	C10	C8	3.3	0.29	834	4.2	0.26	1042	76.8n + 445
SS5Y5-12 (Top ported)	C10	C8	2.8	0.27	699	3.8	0.23	926	66.3n + 417
SS5Y7-10 (Side ported)	C12	C12	6.2	0.23	1511	5.9	0.20	1413	106.6n + 496
SS5Y7-11 (Bottom ported)	C12	C12	6.2	0.25	1529	6.6	0.21	1590	117.9n + 532
SS5Y7-12 (Top ported)	C12	C12	5.6	0.31	1433	5.7	0.24	1397	84.1n + 519

### Valve Seal Type: Metal Seal

	Port	size		Va	alve flow-rate					
		4, 2 (A, B)	1→4/2 (P→A/B)			4/2→	5/3 (A/	′B→E)	Weight: W [g] *2	
Model	1, 3/5 (P, E)		C [dm³/(s·bar)]	b	Q [l/min] (ANR) * <sup>3</sup>	C [dm³/(s·bar)]	b	Q [l/min] (ANR) * <sup>3</sup>	(n: stations)	
SS5Y3-10 (Side ported)	C8	C6	1.2	0.19	286	1.3	0.18	308	28.9n + 293	
SS5Y3-12 (Top ported)	C8	C6	1.2	0.16	281	1.3	0.18	308	25.1n + 314	
SS5Y5-10 (Side ported)	C10	C8	2.7	0.24	662	3.1	0.17	730	74.7n + 398	
SS5Y5-11 (Bottom ported)	C10	C8	2.8	0.25	690	3.5	0.15	816	76.8n + 445	
SS5Y5-12 (Top ported)	C10	C8	2.6	0.18	616	3.0	0.16	703	66.3n + 417	
SS5Y7-10 (Side ported)	C12	C12	4.4	0.14	1020	4.4	0.17	1037	106.6n + 496	
SS5Y7-11 (Bottom ported)	C12	C12	4.6	0.16	1078	4.7	0.18	1113	117.9n + 532	
SS5Y7-12 (Top ported)	C12	C12	3.9	0.21	939	4.1	0.14	950	84.1n + 519	

 $\ast$  Calculation of effective area S and sonic conductance C: S = 5.0 x C

\*1: The value is for manifold base with 5 stations and individually operated 2-position type.


\*2: Weight: W is the value of the internal pilot, and D-sub connector manifold with One-touch fitting straight piping type.

To obtain the weight with valves attached, add the valve weights given on page 15 for the appropriate number of stations

\*3: These values have been calculated according to ISO6358 and indicate the flow rate under standard conditions with an inlet pressure of 0.6 MPa (relative pressure) and a pressure drop of 0.1 MPa.

### **Connector Wiring Layout**

For both serial and parallel wiring, additional valves are sequentially assigned pins on the connector. This makes it completely unnecessary to disassemble the connector unit.

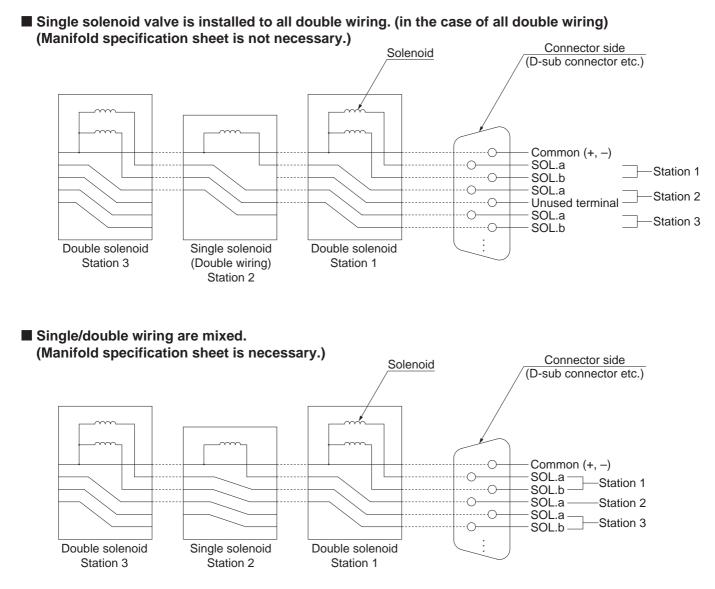

\*: These diagrams are for the purpose of explanation, and differ from the connector wiring used for testing.

Valve
Val
Plug-in Sub-plate
Plug-in Metal Base
Type 50, 51, 52 Manifold Exploded View
ing Base
Plug-in Connector Connecti
Type 10, 11, 12 Manifold Exploded View
Type 10, 11, 12 Plug-in Conn anifold Exploded View
ouch Fittings/ Type 10, 11, 12 Plug-in Connt sembly Part No. Manifold Exploded View

## Plug-in Connector Connecting Base

D-sub Connector Flat Ribbon Cable PC Wiring

# Series SY3000/5000/7000

05

### How to Order Manifold

Refer to pages 208 (SY5000) and 209 (SY7000) for dimensions of Type 11/Bottom ported type.

1 Series						
3	SY3000					
5	SY5000					
7	SY7000					

Type 10

Type 11

Side Ported

**Bottom Ported** 

2 Туре


SS5Y

 
 10
 Side ported

 11
 Bottom ported\*1


 \*1: The SY5000 manifold base is used for the bottom ported of the SY3000. When ordering, refer to "Plug-in Mixed Mounting Type Manifold" (from page 213).

### **4** Connector entry direction

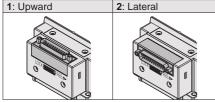


: The connector entry direction for connector type "FW" D-sub connector <IP67> can not be rotated. If it is necessary to change, order connector block assembly (page 231) separately.

### How to Order Manifold Assembly

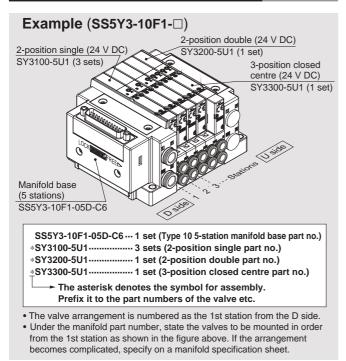

<sup>\*:</sup> When mixing top ported configurations, select from page 110. In this case, use caution as there is also output on the A and B port on base side. Specify on a manifold specification sheet if plugs are required on the A and B port on base side.

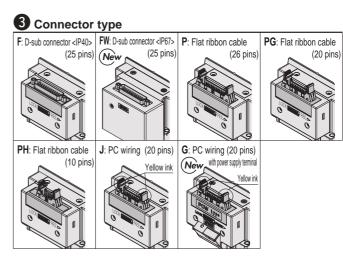

**C6** 

### **5** Valve stations

F/FV	V: D-s	ub connector (25 pins)	P: Flat ribbon cable (26 pins)					
Symbol	Stations	Note	Symbol Stations Note					
02	2 stations		02 2 stations					
:	:	Double wiring*1	: : Double wiring*1					
12	12 stations		12 12 stations					
02	2 stations	Specified layout*2	02 2 stations Specified layout*2					
÷	÷	(Available up to	: : (Available up to					
24	24 stations	24 solenoids)	24 solenoids)					
PG:	Flat ri	bbon cable (20 pins)	PH: Flat ribbon cable (10 pins)					
Symbol	Stations	Note	Symbol Stations Note					
02	2 stations		O2 2 stations					
:	÷	Double wiring*1	: : Double wiring*1					
09	9 stations		O4 4 stations					
02	2 stations	Specified layout*2	02 2 stations Specified layout*2					
:	÷	(Available up to	: : (Available up to					
18	18 stations	18 solenoids)	08 8 stations 8 solenoids)					
J/G:	PC w	riring (20 pins)	*1: Double wiring: 2-position single,					
Symbol	Stations	Note	double, 3-position and 4-position					
02	2 stations		valves can be used on all					
:	:	Double wiring*1	manifold stations. Use of a 2-position single					
08	8 stations		solenoid will result in an unused					
02	2 stations	Specified layout*2	control signal. If this is not					
:	:	(Available up to	desired, order with a specified					
16	16 stations	16 solenoids)	layout.					
*2: S	*2: Specified layout: Indicate the wiring specifications on the manifold							

\*2: Specified layout: Indicate the wiring specifications on the manifold specification sheet. (Note that 2-position double, 3-position and 4-position valves cannot be used where single wiring has been specified.)
\*: This also includes the number of blanking plate assembly.



### Elligent Connector Connecting Base Series SY3000/5000/7000

Valve

Type 50, 51, 52 Manifold Exploded View

Plug-in Connector Connecting Base

Type 10, 11, 12 Manifold Exploded View

6 P, E port entry U U side (2 to 10 stations) D D side (2 to 10 stations) В Both sides (2 to 24 stations)



Built-in silencer R External pilot \*: 3/5(E) port is plugged for the

built-in silencer type.

### 9 Mounting and Option

Symbol	Mounting	Option		DIN Rail	Option	
Symbol		Name plate	Station number	_	Dire	ct mounting
—	Direct		_	0	Without D	IN rail (with bracket)
AA	Direct mounting			3	For 3 stations	Specify a longer rail
BA	linounung		_	:	÷	than the total length
D	DIN rail	—		24	For 24 stations	of specified stations.
A						
B	mounting		_			

\*: Enter the number of stations inside 
when it is larger than the number of valve stations. (Refer to "DIN Rail Option" above.)

\*: Only direct mounting is available for Type 11 (Bottom ported). \*: Refer to page 271 for the fixation of DIN rail mounting type manifold.


-	A, B port size				10/Side		Type 11/Bo					
Symbol		Α,	B port		SY5000							
C2			Ø2		_	_	_	_				
C3						Ø 3.2		_	_	_	_	DE
C4			Ø 4			_		_				
C6	ight		Ø 6	•								
C8	Straight		Ø 8									
C10	0,		Ø 10	_	_		_		Con Star			
C12			Ø 12	_	_	•	_		- ar			
<b>CM</b> *1	1	Straig	ht port, mixed sizes									
L4			Ø 4			_	—	_				
L6		Id	Ø 6				—	—				
L8		Upward	Ø 8	—		•						
L10		ŋ	Ø 10	—	—	•	—	—	Colle			
L12	N		Ø 12	—	—		—	—	Jel Bas			
B4	Ň	_	Ø 4			_	—	—				
B6	Elbow*2	varc	Ø 6				_	_				
<b>B8</b>				Downward	Ø 8	—			—	—		
B10						Do	Ø 10	-				
B12			Ø 12		—		—	—	Just			
L <b>M</b> ∗1	Elbow port, mixed sizes (Including upward and downward piping)		•	•	•	_	_					
P, E port size (One-touch fittings)				Ø8	Ø 10	Ø 12	Ø 10	Ø 12				


A, B port size (Inch/One-touch fitting)

	A, B port Size (men/one toden ntting)								
Symbol	A, B port				10/Side		Type 11/Bo		
Oymbol		<i>,</i> ,	D poir	SY3000	SY5000	SY7000	SY5000	SY7000	
N1			Ø 1/8"		—		—	—	
N3	1	9	Ø 5/32"					_	
N7	igh		Ø 1/4"						
N9	Straight	9	Ø 5/16"					•	
N11	0)		Ø 3/8"	_				•	elons se
CM*1		Straig	ht port, mixed sizes					٠	
LN3		_	Ø 5/32"					_	
LN7		Jpward	Ø 1/4"			—	—	_	
LN9		Md	Ø 5/16"					_	
LN11	~		Ø 3/8"	—	—			_	el Sassa
BN3	Elbow*2	rd	Ø 5/32"		—	—	_	-	
BN7	2 al	Downward	Ø 1/4"			—	—		
BN9	_	owr	Ø 5/16"	—			—	_	
<b>BN11</b>		Õ	Ø 3/8"	—	—			—	and the second s
LM*1	Elbow port, mixed sizes (Including upward and downward piping)		•	•	•	_	_		
P, E port size (One-touch fittings)			Ø 5/16"	Ø 3/8"	Ø 1/2"	Ø 3/8"	Ø 1/2"		

\*1: Indicate the sizes on the manifold specification sheet in the case of "CM", "LM". The direction of P, E port fittings is the same as for A, B port. If selecting "LM", indicate it on the manifold specification sheet for the P, E port fitting direction.

\*2: To avoid interference with the body or piping, select downward elbow port when mounting the optional spacer assembly (pages 250 to 252).

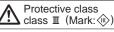

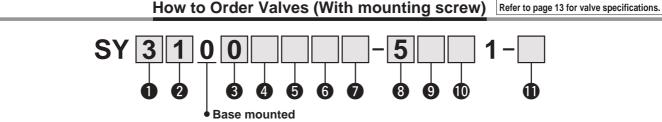

1 Series						
3	SY3000					
5	SY5000					
7	SY7000					

### 2 Type of actuation

1	2-position	Single		
2	2-розшон	Double		
3		Closed centre		
4	3-position	Exhaust centre		
5		Pressure centre		
<b>A</b> *1	4-position dual	N.C./N.C.		
<b>B</b> *1		N.O./N.O.		
<b>C</b> *1	3-port	N.C./N.O.		

\*1: Only rubber seal type is available for the 4-position dual 3-port valve.

### Seal type

000	u type
0	Rubber seal
1	Metal seal

### 4 Pilot type

	Internal pilot
R	External pilot

### **5** Back pressure check valve (Built-in valve type)

—	None
Н	Built-in
*: Only r	ubber seal type. Manifold installed typ

- ιyμ is available if the back pressure check valve is required for a valve with metal seal. Refer to page 256 for Ordering Example. However, it is not recommended to use the built-in valve type and the manifold installed type at the same time because it will reduce the flow
- \*: The built-in valve type back pressure check valve is not available for the 3-position type and the SY7000.

### 6 Pilot valve option

- Standard (0.7 MPa) В Quick response type (0.7 MPa) **K**\*1 High pressure type (1.0 MPa) \*1: Only metal seal type is available for the
- high pressure type.

### Coil type

- Standard
- Т With power saving circuit (Continuous duty type)
- \*: Be sure to select the power saving circuit type when the valve is continuously energised for long periods of time.
- \*: Be careful of the energising time when the power saving circuit is selected. Refer to page 268 for details.

### 8 Rated voltage

5	24 V DC				
6	12 V DC				
*: Connector type "C" (PC wiring with power					


Connector type "G" (PC wiring with power supply terminal) of the manifold type is only available in 24 V DC.

#### Uight/surge voltage suppressor and common specification

Symbol	With light	Surge voltage suppressor	Common specification
—	—		
R	—		Non-polar
U	•		
S	—		Positive
Z	•	•	common
NS	—		Negative
NZ	•		common
0	711 1 (() 1 711 (		Internet and a second date

- \*: Only "Z" and "NZ" types are available for with
- the power saving circuit. \*: For connector type "G" (PC wiring with power supply terminal) of the manifold type, select non-polar or positive common.

### Manual override

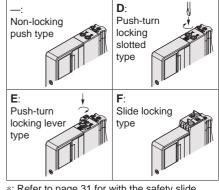


\*: Refer to page 31 for with the safety slide locking manual override.


### Type of mounting screw

_	Round head combination screw
В	Hexagon socket head cap screw
Κ	Round head combination screw (Falling-out-prevention type)
Н	Hexagon socket head cap screw (Falling-out-prevention type)

- \*: For "K" and "H", the valve body cover has a drop prevention construction to stop the mounting screws from falling out when the valve is removed for maintenance etc.
- When ordering a valve individually, the base gasket is not included. Since the base gasket is attached to the manifold, please order the base gasket separately if it is needed for maintenance service.
- Refer to page 244 for part numbers of the base gasket and mounting screw.
- \*: "B" and "H" cannot be selected for the individual SUP/EXH spacer assembly, interface regulator or double check spacer assembly with residual pressure release valve.

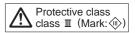

## Elligent Connector Connecting Base Series SY3000/5000/7000

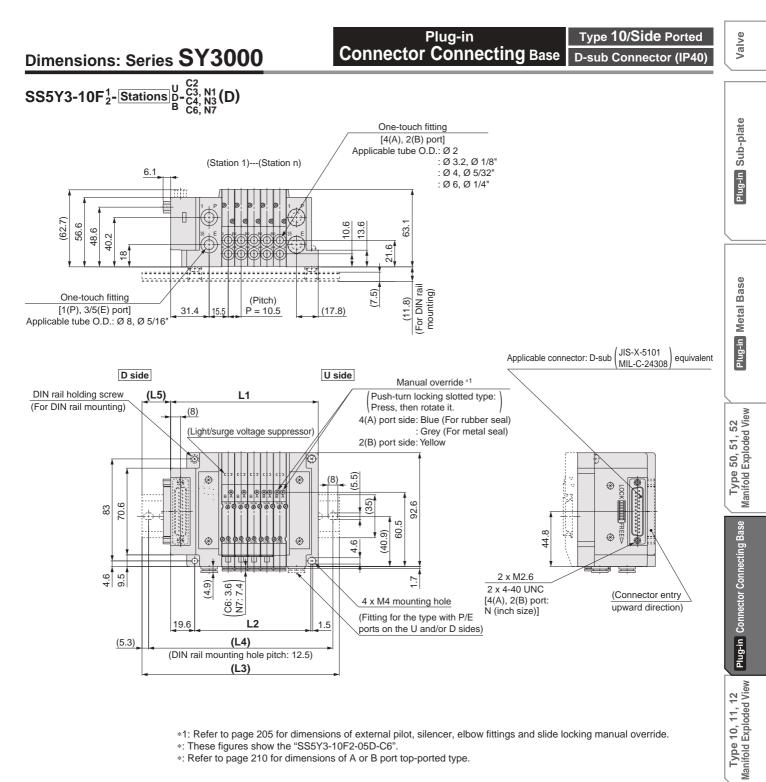


\*1: Refer to page 205 for dimensions of external pilot, silencer, elbow fittings and slide locking manual override.

\*: These figures show the "SS5Y3-10F2-05D-C6"

\*: Refer to page 210 for dimensions of A or B port top-ported type.

n: Stations	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	21	22	23	24
L1	88.6	99.1	109.6	120.1	130.6	141.1	151.6	162.1	172.6	183.1	193.6	204.1	214.6	225.1	235.6	246.1	256.6	267.1	277.6	288.1	298.6	309.1	319.6
L2	63	73.5	84	94.5	105	115.5	126	136.5	147	157.5	168	178.5	189	199.5	210	220.5	231	241.5	252	262.5	273	283.5	294
L3	123	135.5	148	160.5	160.5	173	185.5	198	210.5	223	223	235.5	248	260.5	273	285.5	298	298	310.5	323	335.5	348	360.5
L4	112.5	125	137.5	150	150	162.5	175	187.5	200	212.5	212.5	225	237.5	250	262.5	275	287.5	287.5	300	312.5	325	337.5	350
L5	20.5	21.5	22.5	23.5	18	19	20	21	22	23	18	19	20	21	22	23	23.5	18.5	19.5	20.5	21.5	22.5	23.5

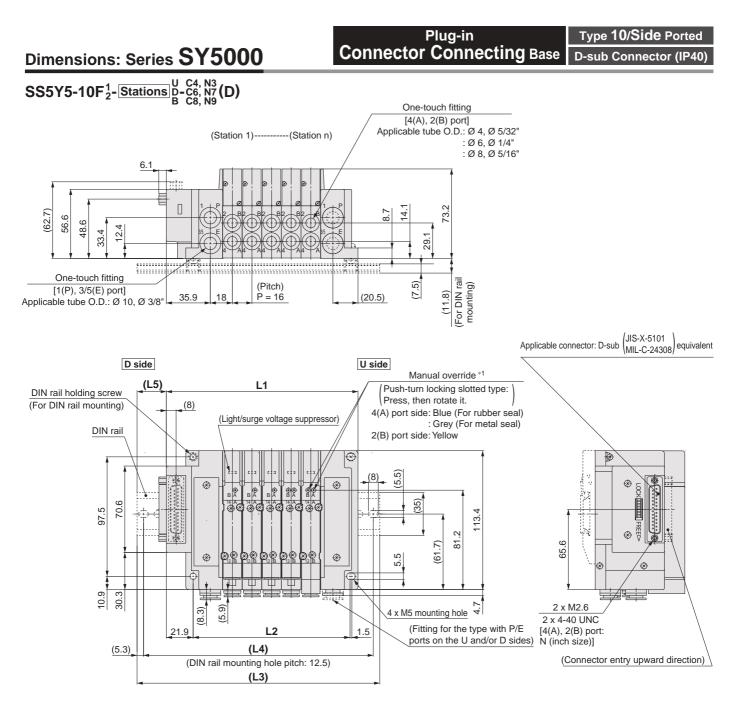

\*1: Refer to page 206 for dimensions of external pilot, silencer, elbow fittings and slide locking manual override.


\*: These figures show the "SS5Y5-10F2-05D-C8".

\*: Refer to page 211 for dimensions of A or B port top-ported type.

n: Stations	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	21	22	23	24
L1	108.4	124.4	140.4	156.4	172.4	188.4	204.4	220.4	236.4	252.4	268.4	284.4	300.4	316.4	332.4	348.4	364.4	380.4	396.4	412.4	428.4	444.4	460.4
L2	80	96	112	128	144	160	176	192	208	224	240	256	272	288	304	320	336	352	368	384	400	416	432
L3	148	160.5	173	198	210.5	223	235.5	260.5	273	285.5	298	323	335.5	348	373	385.5	398	410.5	435.5	448	460.5	485.5	498
L4	137.5	150	162.5	187.5	200	212.5	225	250	262.5	275	287.5	312.5	325	337.5	362.5	375	387.5	400	425	437.5	450	475	487.5
L5	23	21	19.5	24	22	20.5	18.5	23	21.5	19.5	18	22.5	20.5	19	23.5	21.5	20	18	22.5	21	19	23.5	22



### Elligent Connector Connecting Base Series SY3000/5000/7000

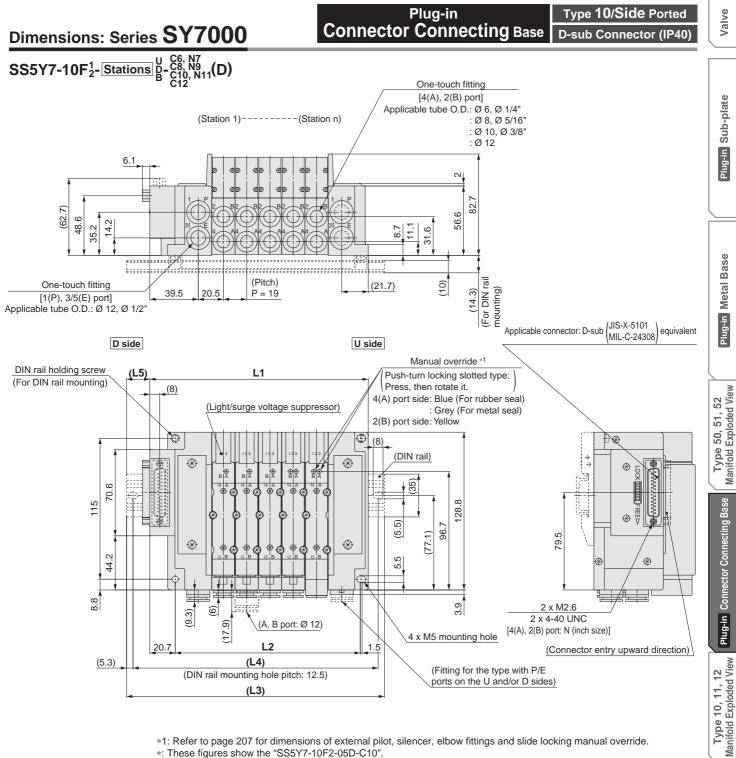


\*: These figures show the "SS5Y7-10F2-05D-C10"

\*: Refer to page 212 for dimensions of A or B port top-ported type.

n: Stations	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	21	22	23	24
L1	121.2	140.2	159.2	178.2	197.2	216.2	235.2	254.2	273.2	292.2	311.2	330.2	349.2	368.2	387.2	406.2	425.2	444.2	463.2	482.2	501.2	520.2	539.2
L2	94	113	132	151	170	189	208	227	246	265	284	303	322	341	360	379	398	417	436	455	474	493	512
L3	160.5	173	198	210.5	235.5	248	273	285.5	310.5	323	348	360.5	385.5	398	423	435.5	460.5	485.5	498	523	535.5	560.5	573
L4	150	162.5	187.5	200	225	237.5	262.5	275	300	312.5	337.5	350	375	387.5	412.5	425	450	475	487.5	512.5	525	550	562.5
L5	22.5	19.5	22.5	19	22	19	22	18.5	21.5	18.5	21.5	18	21	18	21	17.5	20.5	23.5	20.5	23.5	20	23	20

Manifold Options

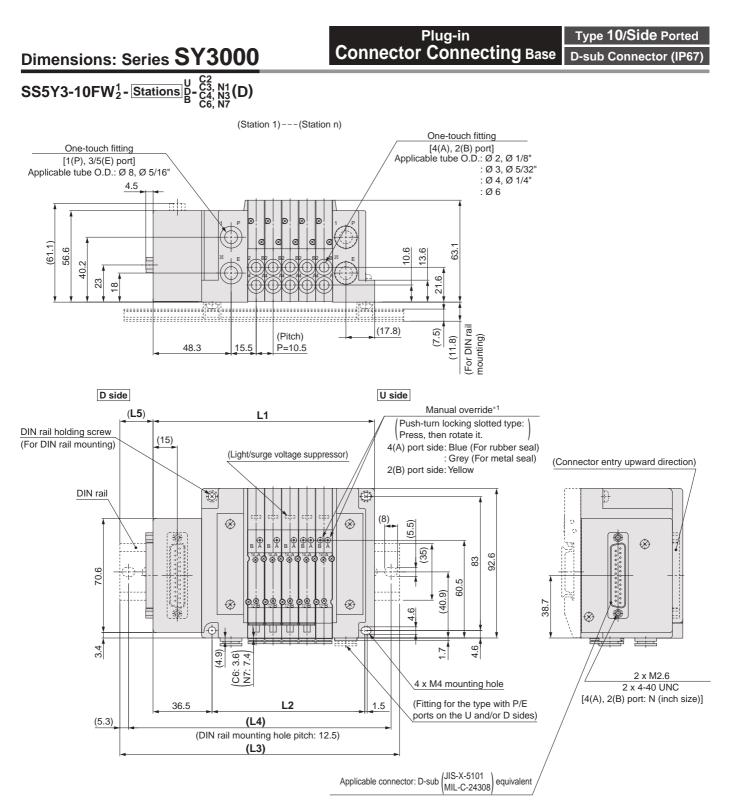


\*1: Refer to page 205 for dimensions of external pilot, silencer, elbow fittings and slide locking manual override.

\*: These figures show the "SS5Y3-10FW2-05D-C6".

\*: Refer to page 210 for dimensions of A or B port top-ported type.

n: Stations	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	21	22	23	24
L1	105.5	116	126.5	137	147.5	158	168.5	179	189.5	200	210.5	221	231.5	242	252.5	263	273.5	284	294.5	305	315.5	326	336.5
L2	63	73.5	84	94.5	105	115.5	126	136.5	147	157.5	168	178.5	189	199.5	210	220.5	231	241.5	252	262.5	273	283.5	294
L3	135.5	148	160.5	173	185.5	198	198	210.5	223	235.5	248	260.5	260.5	273	285.5	298	310.5	323	323	335.5	348	360.5	373
L4	125	137.5	150	162.5	175	187.5	187.5	200	212.5	225	237.5	250	250	262.5	275	287.5	300	312.5	312.5	325	337.5	350	362.5
L5	17.5	18.5	19.5	20.5	21.5	22.5	17	18	19	20	21	22	17	18	19	20	21	22	16.5	17.5	18.5	19.5	20.5

### Elucetin Connector Connecting Base Series SY3000/5000/7000

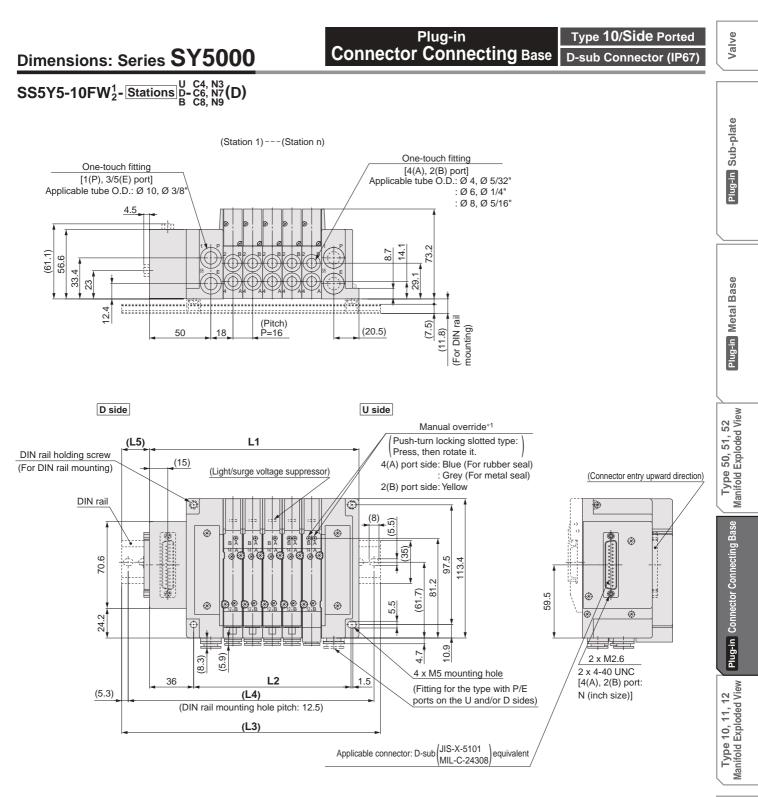

\*1: Refer to page 206 for dimensions of external pilot, silencer, elbow fittings and slide locking manual override.


\*: These figures show the "SS5Y5-10FW2-05D-C8".

\*: Refer to page 211 for dimensions of A or B port top-ported type.

n: Stations	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	21	22	23	24
L1	122.5	138.5	154.5	170.5	186.5	202.5	218.5	234.5	250.5	266.5	282.5	298.5	314.5	330.5	346.5	362.5	378.5	394.5	410.5	426.5	442.5	458.5	474.5
L2	80	96	112	128	144	160	176	192	208	224	240	256	272	288	304	320	336	352	368	384	400	416	432
L3	160.5	173	185.5	210.5	223	235.5	248	273	285.5	298	310.5	335.5	348	360.5	385.5	398	410.5	423	448	460.5	473	498	510.5
L4	150	162.5	175	200	212.5	225	237.5	262.5	275	287.5	300	325	337.5	350	375	387.5	400	412.5	437.5	450	462.5	487.5	500
L5	21.5	19.5	18	22.5	20.5	19	17	21.5	20	18	16.5	21	19	17.5	22	20	18.5	16.5	21	19.5	17.5	22	20.5

**SMC** 

Manifold Options

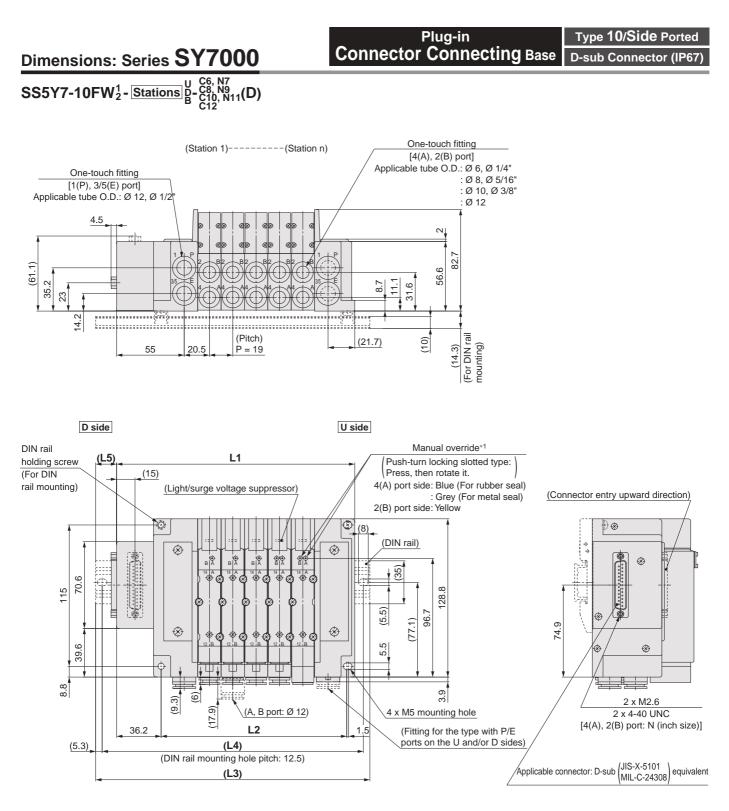


\*1: Refer to page 207 for dimensions of external pilot, silencer, elbow fittings and slide locking manual override.


\*: These figures show the "SS5Y7-10FW2-05D-C10".

\*: Refer to page 212 for dimensions of A or B port top-ported type.

n: Stations	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	21	22	23	24
L1	136.7	155.7	174.7	193.7	212.7	231.7	250.7	269.7	288.7	307.7	326.7	345.7	364.7	383.7	402.7	421.7	440.7	459.7	478.7	497.7	516.7	535.7	554.7
L2	94	113	132	151	170	189	208	227	246	265	284	303	322	341	360	379	398	417	436	455	474	493	512
L3	173	185.5	210.5	223	248	260.5	285.5	298	323	335.5	360.5	385.5	398	423	435.5	460.5	473	498	510.5	535.5	548	573	585.5
L4	162.5	175	200	212.5	237.5	250	275	287.5	312.5	325	350	375	387.5	412.5	425	450	462.5	487.5	500	525	537.5	562.5	575
L5	20.5	17	20	17	20	16.5	19.5	16.5	19.5	16	19	22	19	22	18.5	21.5	18.5	21.5	18	21	18	21	17.5

### Elucetin Connector Connecting Base Series SY3000/5000/7000

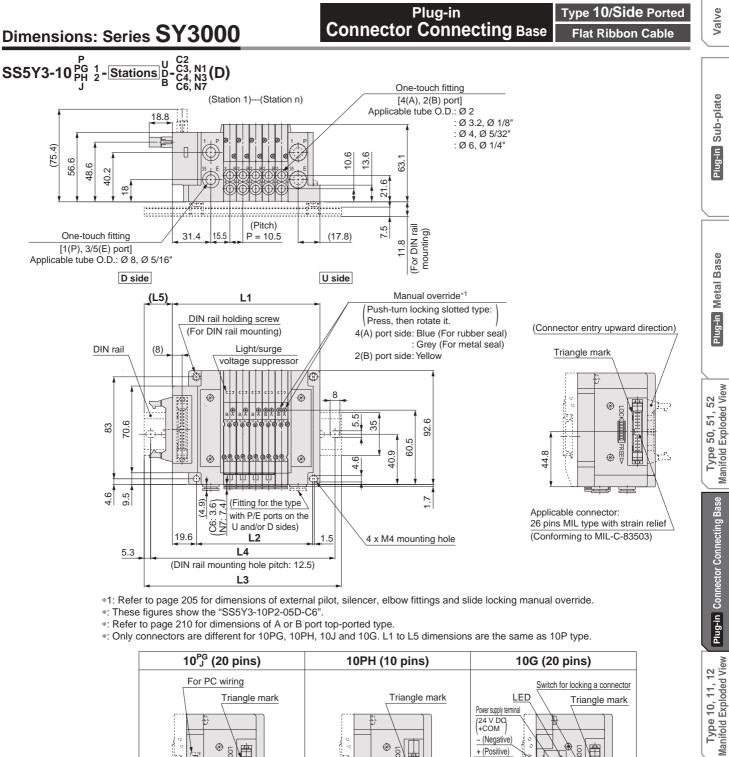

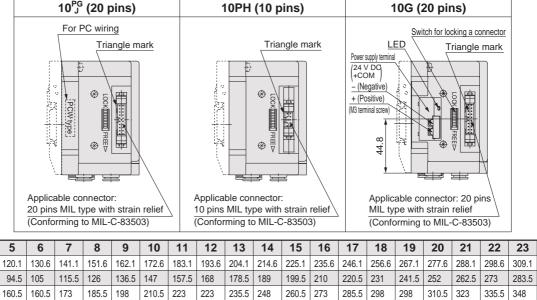

250

21

237.5

20

262.5 275

22

23

287.5

23.5

287.5 300

18.5

19.5

Manifold Options

23.5

19

212.5 225

18

212.5

23

2

88.6

63

123

112.5 125

20.5

3

99.1

73.5 84

135.5 148

21.5

4

109.6

137.5 150

22.5

150

23.5 18

162.5 175

19

20

187.5 200

21

22

n: Stations

L1

L2

L3

L4

L5

24

319.6

360.5

294

337.5 350


22.5

325

21.5


312.5

20.5

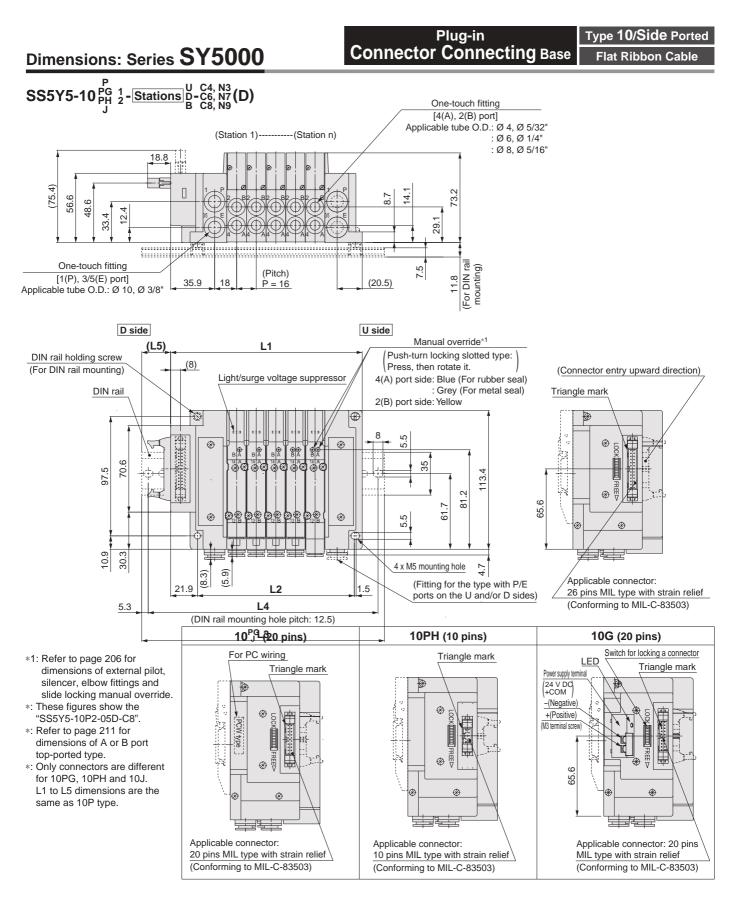

n: Stations	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	21	22	23	24
L1	108.4	124.4	140.4	156.4	172.4	188.4	204.4	220.4	236.4	252.4	268.4	284.4	300.4	316.4	332.4	348.4	364.4	380.4	396.4	412.4	428.4	444.4	460.4
L2	80	96	112	128	144	160	176	192	208	224	240	256	272	288	304	320	336	352	368	384	400	416	432
L3	148	160.5	173	198	210.5	223	235.5	260.5	273	285.5	298	323	335.5	348	373	385.5	398	410.5	435.5	448	460.5	485.5	498
L4	137.5	150	162.5	187.5	200	212.5	225	250	262.5	275	287.5	312.5	325	337.5	362.5	375	387.5	400	425	437.5	450	475	487.5
L5	23	21	19.5	24	22	20.5	18.5	23	21.5	19.5	18	22.5	20.5	19	23.5	21.5	20	18	22.5	21	19	23.5	22

## Elucetin Connector Connecting Base Series SY3000/5000/7000

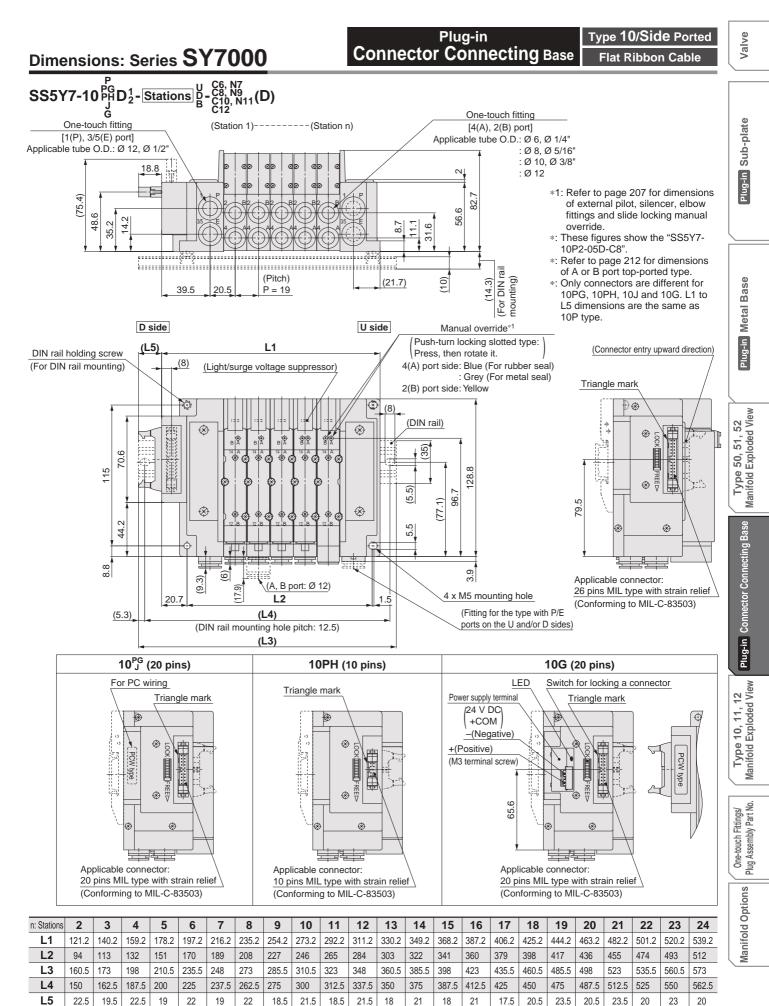


Type 12 Top Ported

# Series SY3000/5000/7000


D-sub Connector Flat Ribbon Cable PC Wiring

How to Order Manifold

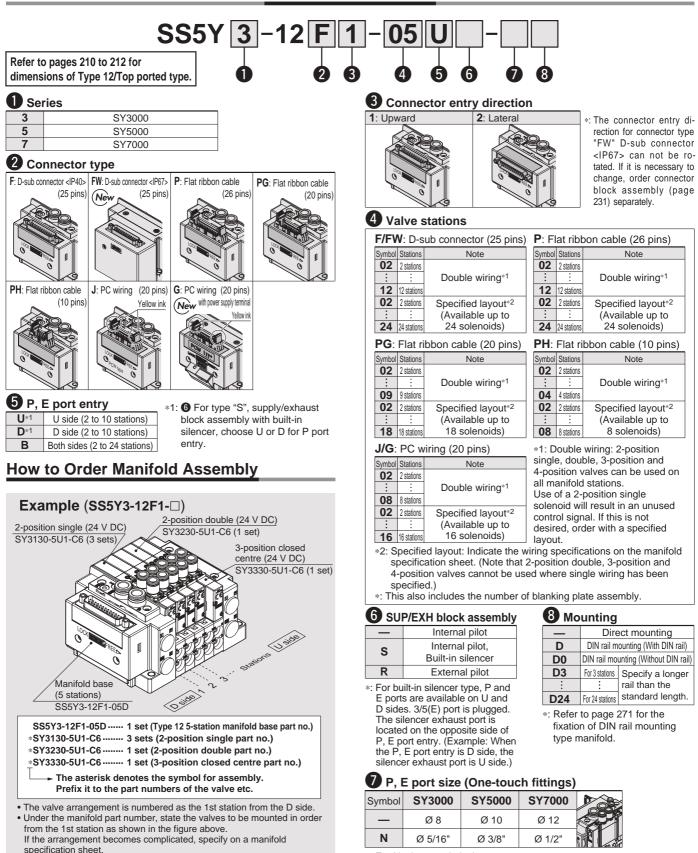

\*: For N, sizes are in inches.


## Elligent Connector Connecting Base Series SY3000/5000/7000

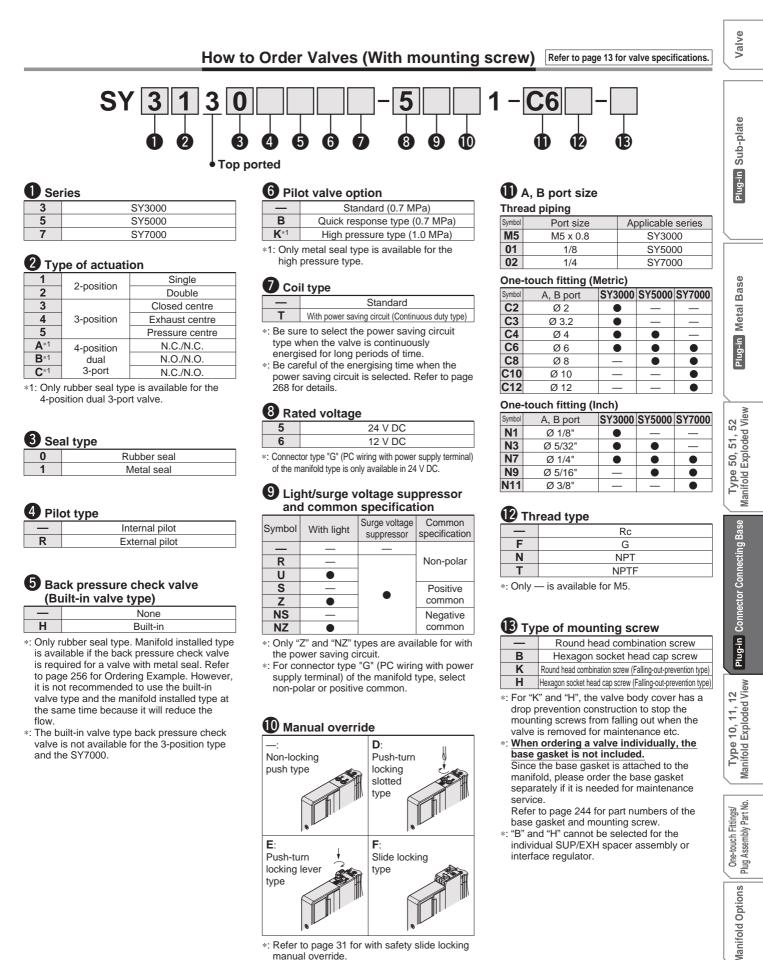

**多SMC** 


$\land$	Prote class	cti∖ Ⅲ	/e class (Mark:ŵ)
			440

## **Electrical Wiring Specifications**

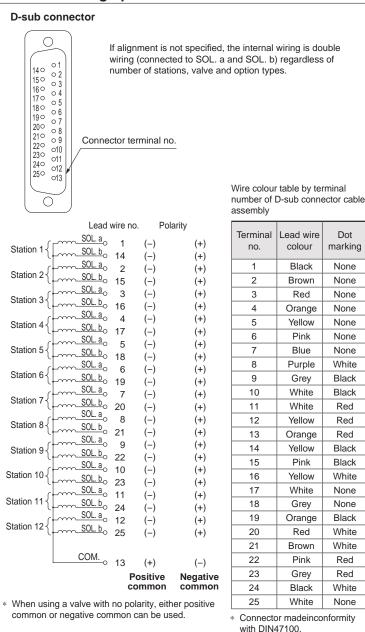

**Specified Layout** 

#### (25 pins)

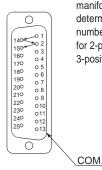

Mixed wiring of single and double wiring can be specified on the manifold specification sheet. The maximum number of stations is determined according to the number of solenoids. The total number of solenoids should be 24 or less. 1 solenoid is required for 2-position single, and 2 solenoids for 2-position double, 3-position and 4-position.

## **Connector Cable**

### GVVZS3000-21A-[IP40]

#### D-sub connector cable

Cable length (L)	Assembly part no.	Note
1 m	GVVZS3000-21A-160	60°angled
3 m	GVVZS3000-21A-260	60°angled
5 m	GVVZS3000-21A-360	60°angled
8 m	GVVZS3000-21A-460	60°angled
3 m	GVVZS3000-21A-2	Standard
5 m	GVVZS3000-21A-3	Standard
8 m	GVVZS3000-21A-4	Standard

#### Shielded cable

Dot

marking

None

None

None

None

None

None

None

White

Black

Black

Red

Red

Red

Black

Black

White

None

None

Black

White

White


Red

Red


White

None


Cable length (L)	Assembly part no.	Note
1 m	GVVZS3000-21A-1S	Shieled
3 m	GVVZS3000-21A-2S	Shieled
5 m	GVVZS3000-21A-3S	Shieled
8 m	GVVZS3000-21A-4S	Shieled
20 m	GVVZS3000-21A-5S	Made to order

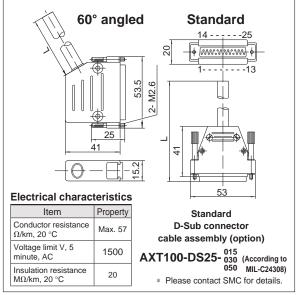

## Connector Cable [IP67]

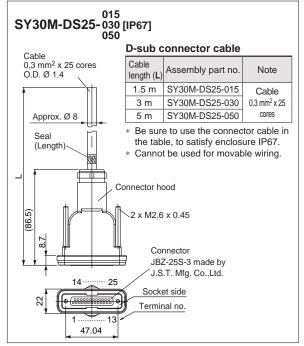


#### **Electrical Wiring Specifications**

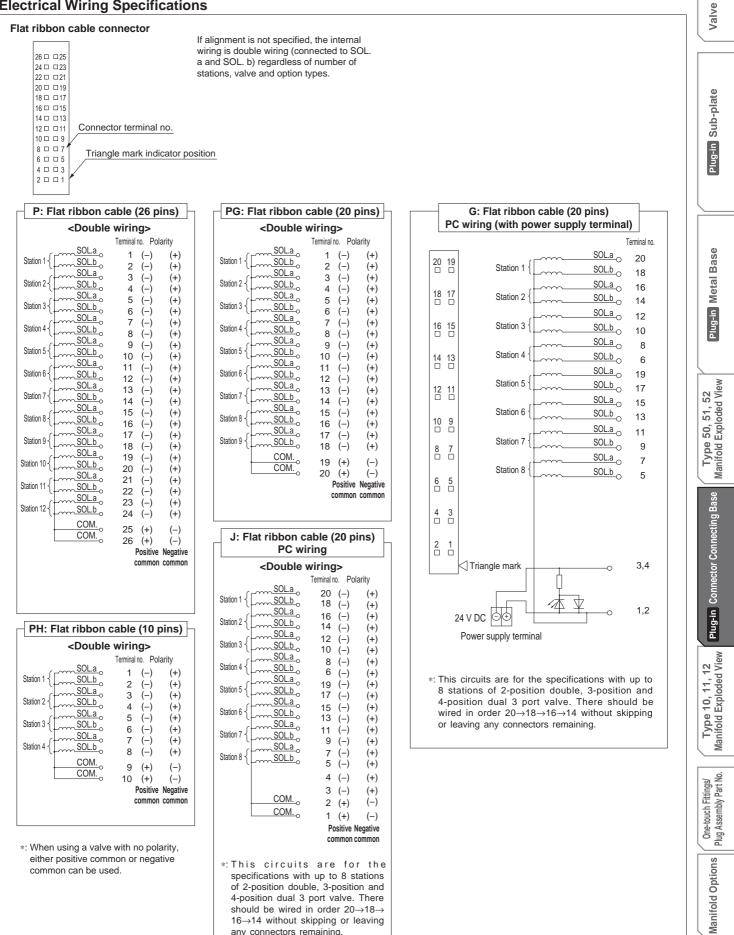


**SMC** 

112

#### Flat Ribbon Cable Assembly

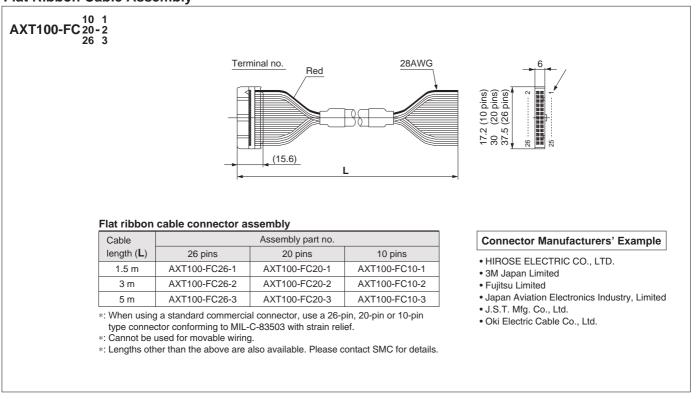

#### **Specified Layout**

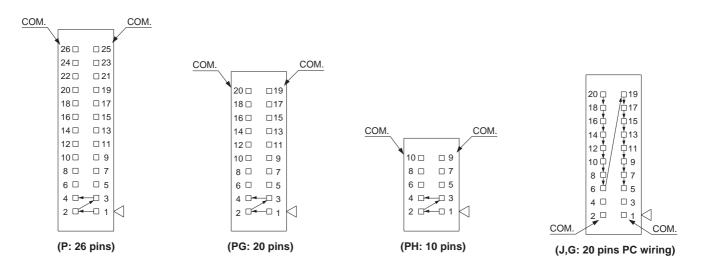

Mixed wiring of single and double wiring can be specified on the manifold specification. The maximum number of stations is determined according to the number of solenoids. The total number of solenoids should be 24 or less for P, 18 or less for PG, 8 or less for PH, and 16 or less for J/G. 1 solenoid is required for 2-position single, and 2 solenoids for 2-position double, 3-position and 4-position.

Valve
Plug-in Sub-plate
Plug-in Metal Base
Type 50, 51, 52 Manifold Exploded View
Plug-in Connector Connecting Base
Type 10, 11, 12 anifold Exploded View
Ë
One-touch Fittings/ Plug Assembly Part No.
e-touch Fit: Assembly F

Terminal Block Box

# Series SY3000/5000/7000

05

How to Order Manifold

Refer to pages 208 (SY5000) and 209 (SY7000) for dimensions of Type 11/Bottom ported type.

#### Series

Type 10

Type 11 Bottom Ported

Side Ported

3	SY3000
5	SY5000
7	SY7000

## 2 Type

10	Side ported	
11	Bottom ported*1	
-		

\*1: The SY5000 manifold base is used for the bottom ported of the SY3000. When ordering, refer to "Plug-in Mixed Mounting Type Manifold" (from page 213).


ons

SS5Y

Symbol	Stations	Note
02	2 stations	
:	:	Double wiring <sup>*1</sup>
10	10 stations	
02	2 stations	One a sifile of the second *2
÷	:	Specified layout* <sup>2</sup> (Available up to 20 solenoids)
20	20 stations	(Available up to 20 soleholds)

- \*1: Double wiring: 2-position single, double, 3-position and 4-position valves can be used on all manifold stations. Use of a 2-position single solenoid will result in an unused control signal. If this is not desired, order with a specified layout.
- \*2: Specified layout: Indicate the wiring specifications with the manifold specification sheet. (Note that 2-position double, 3-position and 4-position valves cannot be used where single wiring has been specified.)
- This also includes the number of blanking plate assembly.

## How to Order Manifold Assembly

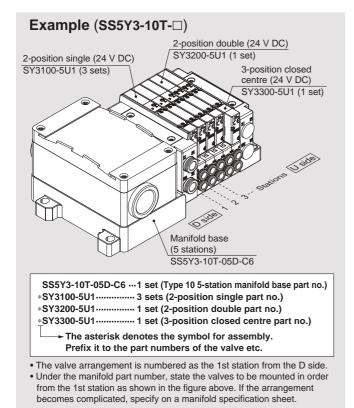

\*: When mixing top ported configurations, select from page 122. In this case, use caution as there is also output on the A and B port on base side. Specify on a manifold specification sheet if plugs are required on the A and B port on base side.

## P, E port entry

**C6** 

<u> </u>	
U U side (2 to 10 stations)	
D	D side (2 to 10 stations)
B Both sides (2 to 20 stations)	

## **5** SUP/EXH block assembly

-	
—	Internal pilot
S	Internal pilot, Built-in silencer
R	External pilot

\*: 3/5(E) port is plugged for the built-in silencer type.

\*: When the built-in silencer type is used, keep the exhaust port from coming in direct contact with water or other liquids.

Refer to the page on the right for **6**.

## Mounting and Option

Symbol	Mounting	Option	
Symbol	Mounting	Name plate	Station number
—	Direct mounting	—	—
AA			
BA	mounting		—
D	DIN rail mounting	—	_
A			
B			—

\*: Enter the number of stations inside □ when it is larger than the number of valve stations. (Refer to "DIN Rail Option" below.)

- (Refer to "DIN Rail Option" below.)\*: Only direct mounting is available for Type 11 (Bottom ported).
- Refer to page 271 for the fixation of DIN rail mounting type manifold.


#### **DIN Rail Option**

—	Direct mounting		
0	Without DIN rail (with bracket)		
3	For 3 stations		
:	:	Specify a longer rail than the	
20	For 20 stations	total length of specified stations	



## Elucin Connector Connecting Base Series SY3000/5000/7000


Valve

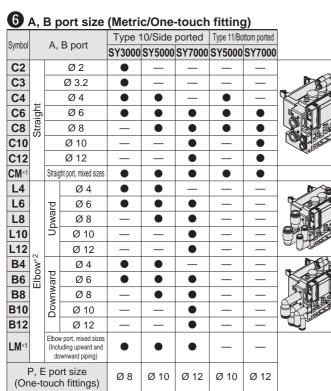


<u>A, B</u>	A, B port size (Inch/One-touch fitting)													
Symbol		Δ	B port	Туре 2										
Symbol		Λ,	D poit	SY3000	SY5000	SY7000	SY5000	SY7000						
N1			Ø 1/8"		_	—		—						
N3			Ø 5/32"		•			—						
N7	Straight		Ø 1/4"		•			•						
N9	Stra	!	Ø 5/16"	—	•			•						
N11	•,		Ø 3/8"	—	_			•	elons					
<b>CM</b> *1		Straig	ht port, mixed sizes		•			•						
LN3		7	Ø 5/32"			—	—							
LN7		Jpward	Ø 1/4"		$\bullet$		—	—						
LN9		Ъ	Ø 5/16"	—	•			_						
LN11	0		Ø 3/8"	—	_			_	el Salar					
BN3	Elbow*2	p	Ø 5/32"		_		—	_						
BN7	Elbo	Downward	Ø 1/4"		•	—	_	—						
BN9	_	owr	Ø 5/16"	—	•	—	_	_						
BN11		Ω	Ø 3/8"	—	_			—	Ter					
<b>LM</b> *1	M*1 Elbow port, mixed sizes (Including upward and downward piping)		•	•	•	_	—							
			rt size h fittings)	Ø 5/16"	Ø 3/8"	Ø 1/2"	Ø 3/8"	Ø 1/2"						

\*1: Indicate the sizes on the manifold specification sheet in the case of "CM", "LM". The direction of P, E port fittings is the same as for A, B port. If selecting "LM", indicate it on the manifold specification sheet for the P, E port fitting direction.

\*2: To avoid interference with the body or piping, select downward elbow port when mounting the optional spacer assembly (pages 250 to 252).

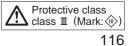



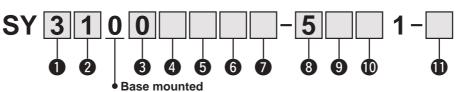

1 Series											
3	SY3000										
5	SY5000										
7	SY7000										

## 2 Type of actuation

1	2 position	Single							
2	2-position	Double							
3		Closed centre							
4	3-position	Exhaust centre							
5		Pressure centre							
<b>A</b> *1	1	N.C./N.C.							
<b>B</b> *1	4-position dual 3-port	N.O./N.O.							
<b>C</b> *1	uuai 5-port	N.C./N.O.							

\*1: Only rubber seal type is available for the 4-position dual 3-port valve.

## **B** Seal type

0 36	artype
0	Rubber seal
1	Metal seal

## 4 Pilot type

-	71
—	Internal pilot
R	External pilot

## **5** Back pressure check valve (Built-in valve type)

—		None	
Н		Built-in	

- \*: Only rubber seal type. Manifold installed type is available if the back pressure check valve is required for a valve with metal seal. Refer to page 256 for Ordering Example. However, it is not recommended to use the built-in valve type and the manifold installed type at the same time because it will reduce the flow.
- \*: The built-in valve type back pressure check valve is not available for the 3-position type and the SY7000.

#### 6 Pilot valve option

<u> </u>	
—	Standard (0.7 MPa)
В	Quick response type (0.7 MPa)
<b>K</b> *1	High pressure type (1.0 MPa)
⊧1: Onlv	metal seal type is available for the high

1: Only metal seal type is available for the high pressure type.



- Standard
- T
   With power saving circuit (Continuous duty type)

   \*: Be sure to select the power saving circuit
- type when the valve is continuously energised for long periods of time.
- \*: Be careful of the energising time when the power saving circuit is selected. Refer to page 268 for details.

## 8 Rated voltage


5	24 V DC
6	12 V DC

## 9 Light/surge voltage suppressor and common specification

Symbol	With light	Surge voltage suppressor	Common specification
_	—		
R	—		Non-polar
U	•		
S	—		Positive
Z	•		common
NS	—		Negative
NZ	•		common
w Only "	7" and "NI7" t		loble for with

\*: Only "Z" and "NZ" types are available for with the power saving circuit.

#### Manual override

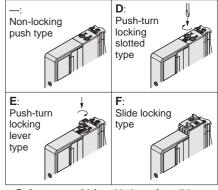

\*: Refer to page 31 for with the safety slide locking manual override.

#### Type of mounting screw

—	Round head combination screw
В	Hexagon socket head cap screw
K	Round head combination screw (Falling-out-prevention type)
Н	Hexagon socket head cap screw (Falling-out-prevention type)


- \*: For "K" and "H", the valve body cover has a drop prevention construction to stop the mounting screws from falling out when the valve is removed for maintenance etc.
- \*: When ordering a valve individually, the base gasket is not included. Since the base gasket is attached to the manifold, please order the base gasket separately if it is needed for maintenance service.

Refer to page 244 for part numbers of the base gasket and mounting screw.

\*: "B" and "H" cannot be selected for the individual SUP/EXH spacer assembly, interface regulator or double check spacer assembly with residual pressure release valve.




## Elucia Connector Connecting Base Series SY3000/5000/7000

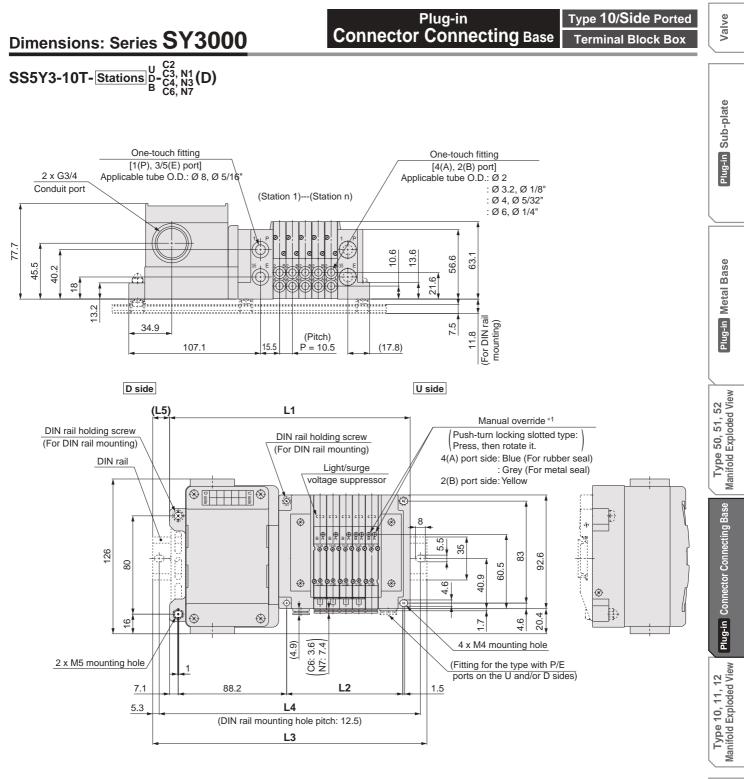

\*1: Refer to page 205 for dimensions of external pilot, silencer, elbow fittings and slide locking manual override.

					*: The	se figur	es show	the "S	S5Y3-10	of exte )T-05D- of A or E	C6".			w fitting	s and sl	ide lock	ing man	iual ove	rride.		One-touch Fittings/ Plug Assembly Part No.
																		-			suc
n: Sta	ations	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	ptio
L	.1 1	164.3	174.8	185.3	195.8	206.3	216.8	227.3	237.8	248.3	258.8	269.3	279.8	290.3	300.8	311.3	321.8	332.3	342.8	353.3	Op
L	.2	63	73.5	84	94.5	105	115.5	126	136.5	147	157.5	168	178.5	189	199.5	210	220.5	231	241.5	252	fold
L	. <b>3</b> 1	198	198	210.5	223	235.5	248	260.5	273	273	285.5	298	310.5	323	335.5	335.5	348	360.5	373	385.5	Manifol
L	.4 1	187.5	187.5	200	212.5	225	237.5	250	262.5	262.5	275	287.5	300	312.5	325	325	337.5	350	362.5	375	2
L	.5	17	11.5	12.5	13.5	14.5	15.5	16.5	17.5	12.5	13.5	14.5	15.5	16.5	17.5	12	13	14	15	16	

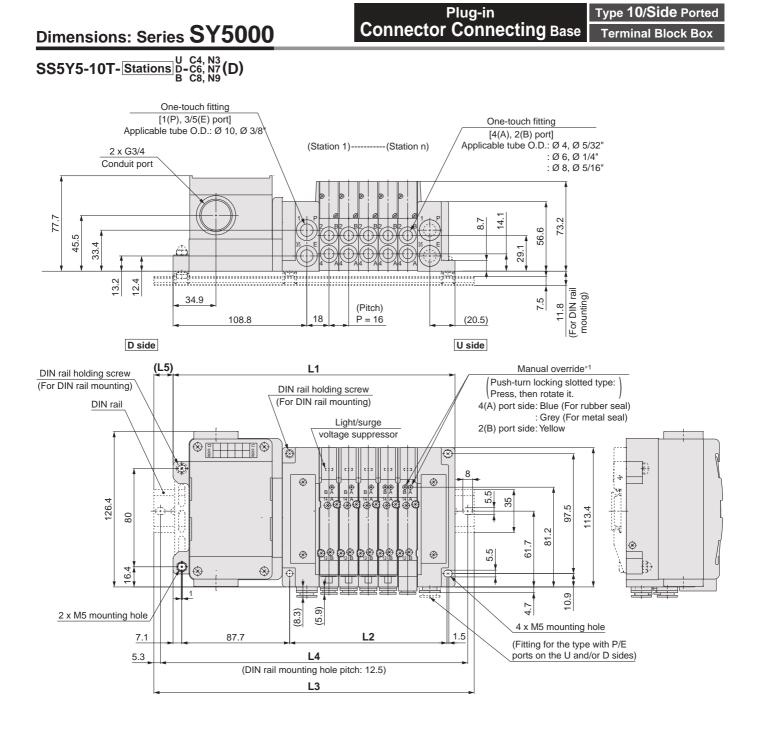


\*1: Refer to page 206 for dimensions of external pilot, silencer, elbow fittings and slide locking manual override.

\*: These figures show the "SS5Y5-10T-05D-C8".

\*: Refer to page 211 for dimensions of A or B port top-ported type.

n: Stations	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20
L1	181.3	197.3	213.3	229.3	245.3	261.3	277.3	293.3	309.3	325.3	341.3	357.3	373.3	389.3	405.3	421.3	437.3	453.3	469.3
L2	80	96	112	128	144	160	176	192	208	224	240	256	272	288	304	320	336	352	368
L3	210.5	223	248	260.5	273	285.5	310.5	323	335.5	360.5	373	385.5	398	423	435.5	448	460.5	485.5	498
L4	200	212.5	237.5	250	262.5	275	300	312.5	325	350	362.5	375	387.5	412.5	425	437.5	450	475	487.5
L5	14.5	13	17.5	15.5	14	12	16.5	15	13	17.5	16	14	12.5	17	15	13.5	11.5	16	14.5

## Elucia Connector Connecting Base Series SY3000/5000/7000

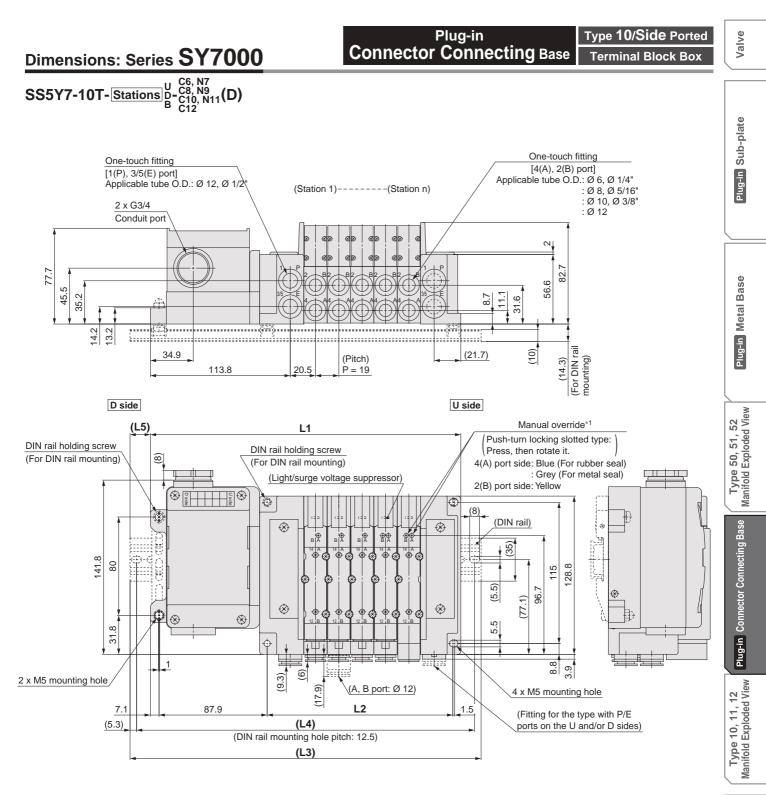

<ul> <li>*1: Refer to page 207 for dimensions of external pilot, silencer, elbow fittings and slide locking manual override.</li> <li>*: These figures show the "SS5Y7-10T-05D-C10".</li> <li>*: Refer to page 212 for dimensions of A or B port top-ported type.</li> </ul>							One-touch Fittings/ Plug Assembly Part No.													
n: Stations	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	ptions
L1	195.5	214.5	233.5	252.5	271.5	290.5	309.5	328.5	347.5	366.5	385.5	404.5	423.5	442.5	461.5	480.5	499.5	518.5	537.5	9
L2	94	113	132	151	170	189	208	227	246	265	284	303	322	341	360	379	398	417	436	Manifolo
L3	223	248	260.5	285.5	298	323	335.5	360.5	373	398	410.5	435.5	448	473	485.5	510.5	523	548	573	lan
L4	212.5	237.5	250	275	287.5	312.5	325	350	362.5	387.5	400	425	437.5	462.5	475	500	512.5	537.5	562.5	
L5	14	17	13.5	16.5	13.5	16.5	13	16	13	16	12.5	15.5	12.5	15.5	12	15	12	15	18	

Terminal Block Box

## Type 12 Top Ported

# Series SY3000/5000/7000

## How to Order Manifold



#### Series

3	SY3000
5	SY5000
7	SY7000

## B P, E port entry

<u> </u>	
<b>U</b> *1	U side (2 to 10 stations)
<b>D</b> *1	D side (2 to 10 stations)
В	Both sides (2 to 20 stations)

\*1: For type "S", supply/exhaust block assembly with built-in silencer, choose U or D for P port entry.

2	Val	ve	stations

Symbol	Stations	Note
02	2 stations	
:	:	Double wiring <sup>*1</sup>
10	10 stations	_
02	2 stations	Creatian lawayts?
÷	÷	Specified layout*2 (Available up to 20 solenoids)
20	20 stations	(Available up to 20 soleriolus)

- \*1: Double wiring: 2-position single, double, 3-position and 4-position valves can be used on all manifold stations. Use of a 2-position single solenoid will result in an unused control signal. If this is not desired, order with a specified layout.
- \*2: Specified layout: Indicate the wiring specifications on the manifold specification sheet. (Note that 2-position double, 3-position and 4-position valves cannot be used where single wiring has been specified.)
- This also includes the number of blanking plate assembly.

## **4** SUP/EXH block assembly

—	Internal pilot
S	Internal pilot, Built-in silencer
R	External pilot

- \*: For built-in silencer type, P and E ports are available on U and D sides. 3/5(E) port is plugged. The silencer exhaust port is located on the opposite side of P, E port entry. (Example: When the P, E port entry is D side, the silencer exhaust port is U side.)
- \*: When the built-in silencer type is used, keep the exhaust port from coming in direct contact with water or other liquids.

## **5** P, E port size

	(One-touch fittings)					
Symbol	SY3000	SY5000	SY7000			
—	Ø 8	Ø 10	Ø 12			
Ν	Ø 5/16"	Ø 3/8"	Ø 1/2"			


\*: For N, sizes are in inches.

## 6 Mounting

• mounting								
	Direct mounting							
D		DIN rail mounting						
U		(With DIN rail)						
DO	DIN rail mounting							
D0	(Without DIN rail)							
D3	For 3 stations	Specify a longer rail than						
:	:	Specify a longer rail than						
D20	For 20 stations	the standard length.						


\*: Refer to page 271 for the fixation of DIN rail mounting type manifold.

## How to Order Manifold Assembly

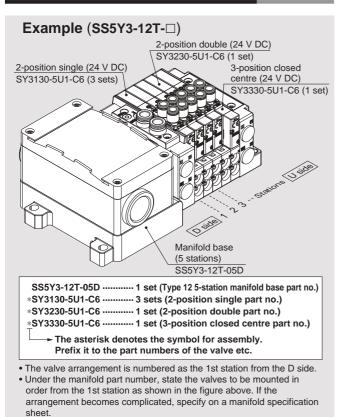



## Elucein Connector Connecting Base Series SY3000/5000/7000

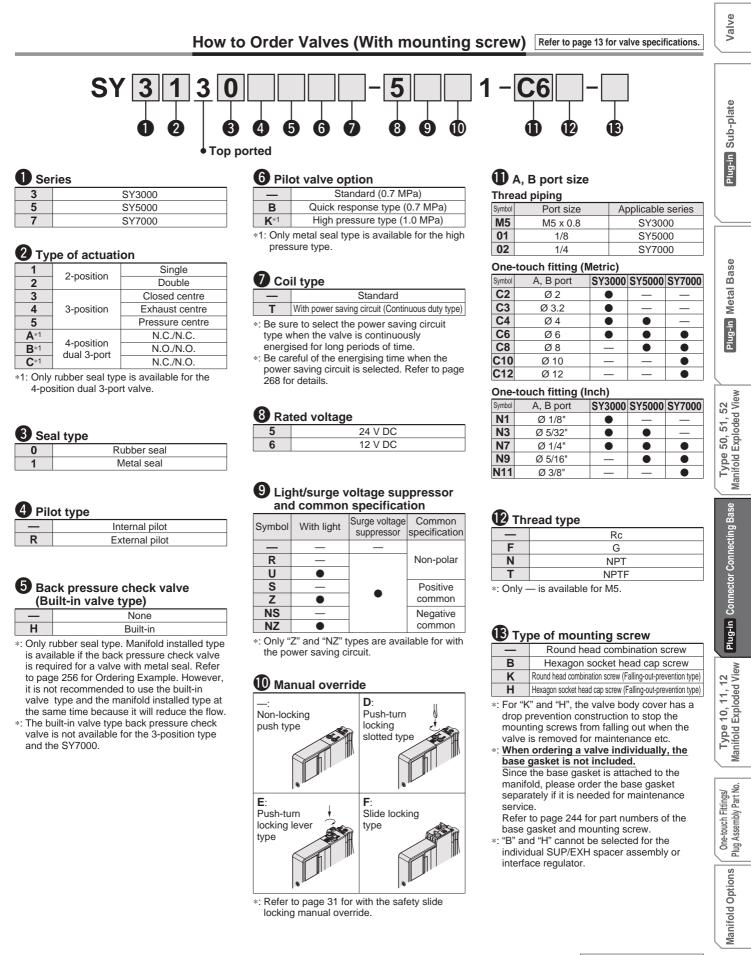


**SMC** 

Λ	Prote	ctiv	ve class (Mark: ())
<u>/!\</u>	class	Ш	(Mark: (Mark)


122

#### **Terminal Block Connection**

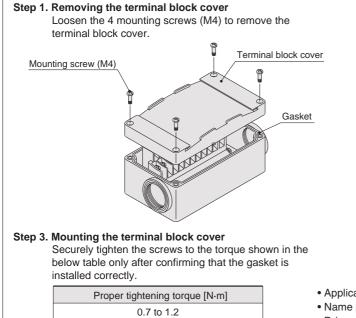

#### Step 2. The below diagram shows the terminal block wiring. All stations are provided with double wiring regardless of the mounted valves.

Connect each wire to the power supply side, according to the markings provided inside the terminal block.

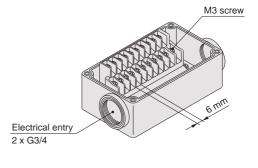


- Applicable crimped terminal: 1.25-3S, 1.25Y-3, 1.25Y-3N, 1.25Y-3.5
- Name plate: VVQ5000-N-T
- Drip-proof plug assembly (for G 3/4): AXT100-B06A

## **Electrical Wiring Specifications (IP67 compatible)**

		Standard	wiri	na	
				•	
			mina	I no. Pola	arity
	Station 1 {	SOL.a	1A	(-)	(+)
	Station 1	SOL.b SOL.a	1B	(-)	(+)
	Station 2 {		2A	(-)	(+)
	Station 2	SOL.b	2B	(-)	(+)
	Station 3 {	0011	ЗA	(-)	(+)
	Station 3	SOL.b SOL.a	3B	(-)	(+)
	Station 4 {	SOL.a	4A	(-)	(+)
		SOL.0	4B	(-)	(+)
	Station 5 {		5A	(-)	(+)
	Station 5	SOL.b SOL.a	5B	(-)	(+)
	Station 6 {	SOL.b	6A	(-)	(+)
		SOL.0	6B	(-)	(+)
	Station 7 {	SOL.a	7A	(-)	(+)
		SOL.a	7B	(-)	(+)
	Station 8 {	SOL.b	8A	(-)	(+)
If alignment is not specified, the internal wiring is double wiring		SOL.a	8B	(-)	(+)
(connected to SOL. a and SOL. b)	Station 9 {	SOL.b	9A	(-)	(+)
regardless of number of stations,		SOL.a	9B	(–)	(+)
valve and option types.	Station 10 {	SOL h	10A	(–)	(+)
			10B	(–)	(+)
			004	(.)	
*: When using a valve with no		0	COM.	(+)	(-)
polarity, either positive				Positive	Negative
common or negative common can be used.				common	common
un be useu.					

#### **Specified Layout**

Mixed wiring of single and double wiring can be specified on the manifold specification sheet. The maximum number of stations is determined according to the number of solenoids. The total number of solenoids should be 20 or less. 1 solenoid is required for 2-position single, and 2 solenoids for 2-position double, 3-position and 4-position.

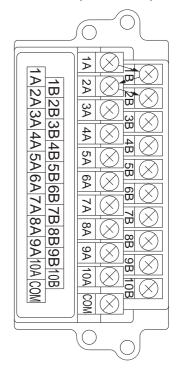


Valve	
Plug-in Sub-plate	
Plug-in Metal Base	
Type 50, 51, 52 Manifold Exploded View	
Plug-in Connector Connecting Base	
Type 10, 11, 12 Manifold Exploded View	
One-touch Fittings/ Plug Assembly Part No.	
Manifold Options	

Lead Wire

## Series SY3000/5000/7000 RoHS

How to Order Manifold

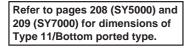

0	Series

Type 10

Type 11 **Bottom Ported** 

Side Ported

3	SY3000				
5	5 SY5000				
7	SY7000				

2 Туре
--------

	10	Side ported							
ĺ	11	Bottom ported*1							

\*1: The SY5000 manifold base is used for the bottom ported of the SY3000. When ordering, refer to "Plug-in Mixed Mounting Type Manifold" (from page 213).

How to Order Manifold Assembly

Example (SS5Y3-10L11-D)

Manifold base

SS5Y3-10L11-05D-C6

(5 stations)

2-position single (24 V DC

SY3100-5U1 (3 sets)

## **3** Number of cores

SS5Y

(Lead wire)						
L1 34 cores						
L2	17 cores					
L3	9 cores					

4 Lead wire length						
1	0.6 m					
2	1.5 m					
3	3 m					

3-position closed

centre (24 V DC) SY3300-5U1 (1 set)

she u

2-position double (24 V DC)

SY3200-5U1 (1 set)

## 5 Valve stations

05

(L10	□)		<b>(L3</b> [	⊐)	
Symbol	Stations	Note	Symbol	Stations	Note
02	2 stations		02	2 stations	
:	:	Double wiring <sup>*1</sup>	:	:	Double wiring*1
16	16 stations		04	4 stations	
02	2 stations	Specified layout*2	02	2 stations	Specified layout*2
÷	:	(Available up to	:	:	(Available up to
24	24 stations	32 solenoids)	08	8 stations	8 solenoids)
(L2	⊐)				

**C6** 

(	_2	L	_)	

(	<i>/</i> /							
Symbol	Stations	Note						
02	2 stations							
÷	:	Double wiring*1						
08	8 stations							
02	2 stations	Specified layout*2						
:	:	(Available up to						
16	16 stations	16 solenoids)						

- \*1: Double wiring: 2-position single, double, 3-position and 4-position valves can be used on all manifold stations.
- Use of a 2-position single solenoid will result in an unused control signal. If this is not desired, order with a specified layout.
- \*2: Specified layout: Indicate the wiring specifications on the manifold specification sheet. (Note that 2-position double, 3-position and 4-position valves cannot be used where single wiring has been specified.)
- \*: This also includes the number of blanking plate assembly.


## 6 P, E port entry

U	U side (2 to 10 stations)
D	D side (2 to 10 stations)
В	Both sides (2 to 24 stations)

## SUP/EXH block assembly

	Internal pilot					
S	Internal pilot, Built-in silencer					
R	External pilot					

- \*: 3/5(E) port is plugged for the built-in silencer type.
- \*: When the built-in silencer type is used, keep the exhaust port from coming in direct contact with water or other liquids.

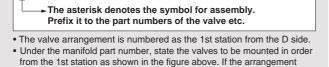

SS5Y3-10L11-05D-C6 --- 1 set (Type 10 5-station manifold base part no.) \*SY3200-5U1 ...... 1 set (2-position double part no.) SY3300-5U1...... 1 set (3-position closed centre part no.)

becomes complicated, specify on a manifold specification sheet. \*: When mixing top ported configurations, select from page 132. In this case, use caution as there is also output on the A and B port on base side. Specify on a manifold specification sheet if plugs are required on the A and B



port on base side

## Elucin Connector Connecting Base Series SY3000/5000/7000


Valve

Plug-in Sub-plate

Plug-in Metal Base

Type 50, 51, 52 Manifold Exploded View

Plug-in Connector Connecting Base

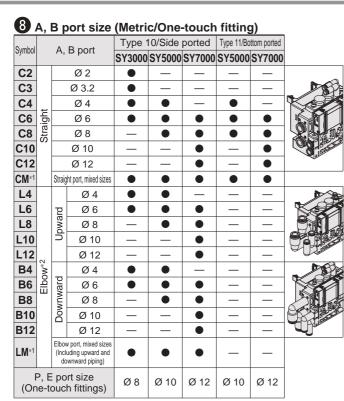

A, B port size (Inch/One-touch fitting)									
Symbol	A, B port		Type 10/Side ported Type 11/Bottom ported						
Symbol			SY3000	SY5000	SY7000	SY5000	SY7000		
N1			Ø 1/8"				—	—	
N3	t	9	Ø 5/32"					_	
N7	igh		Ø 1/4"					•	
N9	Straight	9	Ø 5/16"	—				•	
N11			Ø 3/8"	—	_		_		el Sala
<b>CM</b> *1		Straig	ht port, mixed sizes		٠			•	
LN3		-	Ø 5/32"		—			_	
LN7		varc	Ø 1/4"					—	
LN9		Upward	Ø 5/16"	—		—	—	—	
LN11	~		Ø 3/8"	—	—			_	eleaster
BN3	Elbow* <sup>2</sup>	d	Ø 5/32"	٠	—	—	—	—	
BN7	llbo	wa	Ø 1/4"					_	
BN9		Downward	Ø 5/16"	—		—	—	—	
BN11		ŏ	Ø 3/8"	—	—			—	Take
<b>LM</b> *1	Elbow port, mixed sizes (Including upward and downward piping)		•	•	•	_	_		
	P, E port size (One-touch fittings)			Ø 5/16"	Ø 3/8"	Ø 1/2"	Ø 3/8"	Ø 1/2"	

\*1: Indicate the sizes on the manifold specification sheet in the case of "CM", "LM". The direction of P, E port fittings is the same as for A, B port. If selecting "LM", indicate it on the manifold specification sheet for the P, E port fitting direction.

\*2: To avoid interference with the body or piping, select downward elbow port when mounting the optional spacer assembly (pages 250 to 252).

## 9 Mounting and Option


Symbol	Mounting	Option		DIN Rail Option			
Symbol	wounting	Name plate	Station number			Direct mounting	
	Discot	_		0	Withou	ut DIN rail (with bracket)	
AA	Direct mounting			3	For 3 stations	Specify a longer rail than the	
BA	mounting		_	:	:	total length of specified	
D	DIN mil	—	_	24	For 24 stations	stations.	
A	DIN rail mounting						
B	mounting		_				

\*: Enter the number of stations inside □ when it is larger than the number of valve stations. (Refer to "DIN Rail Option" above.)

error valve stations. (Refer to "DIN Rail Option" above.)
 error valve stations. (Refer to "DIN Rail Option" above.)
 error valve stations. (Refer to "DIN Rail Option" above.)
 error valve stations. (Refer to "DIN Rail Option" above.)

\*: Refer to page 271 for the fixation of DIN rail mounting type manifold.



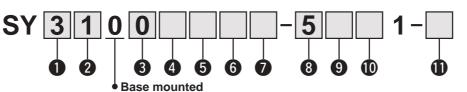

🚺 Sei	ries
3	SY3000
5	SY5000
7	SY7000

## 2 Type of actuation

1	2-position	Single
2	2-position	Double
3		Closed centre
4	3-position	Exhaust centre
5		Pressure centre
<b>A</b> *1	4 position	N.C./N.C.
<b>B</b> *1	4-position dual 3-port	N.O./N.O.
<b>C</b> *1	uuai 3-port	N.C./N.O.

\*1: Only rubber seal is available for the 4-position dual 3-port valve.

## **3** Seal type

0 36	aitype
0	Rubber seal
1	Metal seal

## 4 Pilot type

-	71
	Internal pilot
R	External pilot

## **5** Back pressure check valve (Built-in valve type)

		<b>, , ,</b>	
[	—	None	
	Н	Built-in	
	<u> </u>		

- \*: Only rubber seal type. Manifold installed type is available if the back pressure check valve is required for a valve with metal seal. Refer to page 256 for Ordering Example. However, it is not recommended to use the built-in valve type and the manifold installed type at the same time because it will reduce the flow.
- \*: The built-in valve type back pressure check valve is not available for the 3-position type and the SY7000.

#### 6 Pilot valve option

—	Standard (0.7 MPa)		
B Quick response type (0.7 MPa) K <sup>∗1</sup> High pressure type (1.0 MPa)			
<b>K</b> *1	High pressure type (1.0 MPa)		
1: Only	metal seal type is available for the high		

pressure type.

## Coil type

- Standard
- T With power saving circuit (Continuous duty type) \*: Be sure to select the power saving circuit type when the valve is continuously energised for
- long periods of time. \*: Be careful of the energising time when the
- \*: Be careful of the energising time when the power saving circuit is selected. Refer to page 268 for details.

## 8 Rated voltage


5	24 V DC
6	12 V DC

## **9** Light/surge voltage suppressor and common specification

Symbol	With light	Surge voltage suppressor	Common specification
_	—		
R	—		Non-polar
U	•		
S	—		Positive
Z	•	•	common
NS			Negative
NZ	•		common
*· Only "	7" and "N7" t	vnos aro avai	lable for with

\*: Only "Z" and "NZ" types are available for with the power saving circuit.

#### 10 Manual override

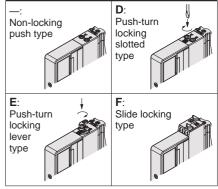


\*: Refer to page 31 for with the safety slide locking manual override.


#### Type of mounting screw

—	Round head combination screw
В	Hexagon socket head cap screw
Κ	Round head combination screw (Falling-out-prevention type)
н	Hexagon socket head cap screw (Falling-out-prevention type)

- \*: For "K" and "H", the valve body cover has a drop prevention construction to stop the mounting screws from falling out when the valve is removed for maintenance etc.
- \*: When ordering a valve individually, the base gasket is not included. Since the base gasket is attached to the manifold, please order the base gasket separately if it is needed for maintenance service.
- Refer to page 244 for part numbers of the base gasket and mounting screw.
- \*: "B" and "H" cannot be selected for the individual SUP/EXH spacer assembly, interface regulator or double check spacer assembly with residual pressure release valve.

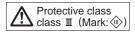

## Elucia Connector Connecting Base Series SY3000/5000/7000

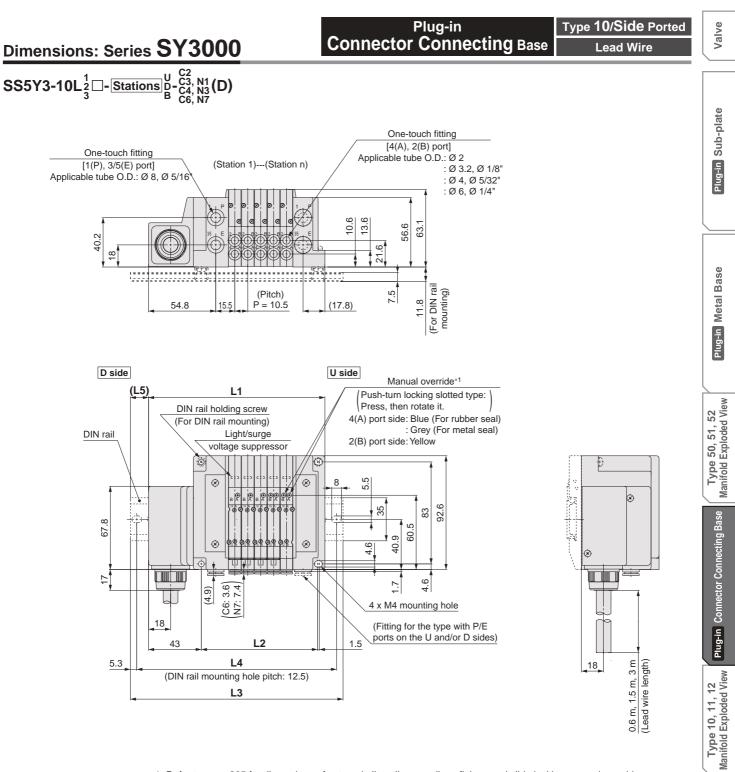


\*1: Refer to page 205 for dimensions of external pilot, silencer, elbow fittings and slide locking manual override.

\*: These figures show the "SS5Y3-10L1 -05D-C6".

																e-touch Fittings	Plug Assembly Part No.								
n: Stations	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	21	22	23	24	- 6	ptions
L1	112	122.5	133	143.5	154	164.5	175	185.5	196	206.5	217	227.5	238	248.5	259	269.5	280	290.5	301	311.5	322	332.5	343		d O b
L2	63	73.5	84	94.5	105	115.5	126	136.5	147	157.5	168	178.5	189	199.5	210	220.5	231	241.5	252	262.5	273	283.5	294	ļ,	0
L3	135.5	148	160.5	173	185.5	198	210.5	210.5	223	235.5	248	260.5	273	273	285.5	298	310.5	323	335.5	335.5	348	360.5	373	- uch	Man
L4	125	137.5	150	162.5	175	187.5	200	200	212.5	225	237.5	250	262.5	262.5	275	287.5	300	312.5	325	325	337.5	350	362.5		
L5	12	13	14	15	16	17	18	12.5	13.5	14.5	15.5	16.5	17.5	12.5	13.5	14.5	15.5	16.5	17.5	12	13	14	15		



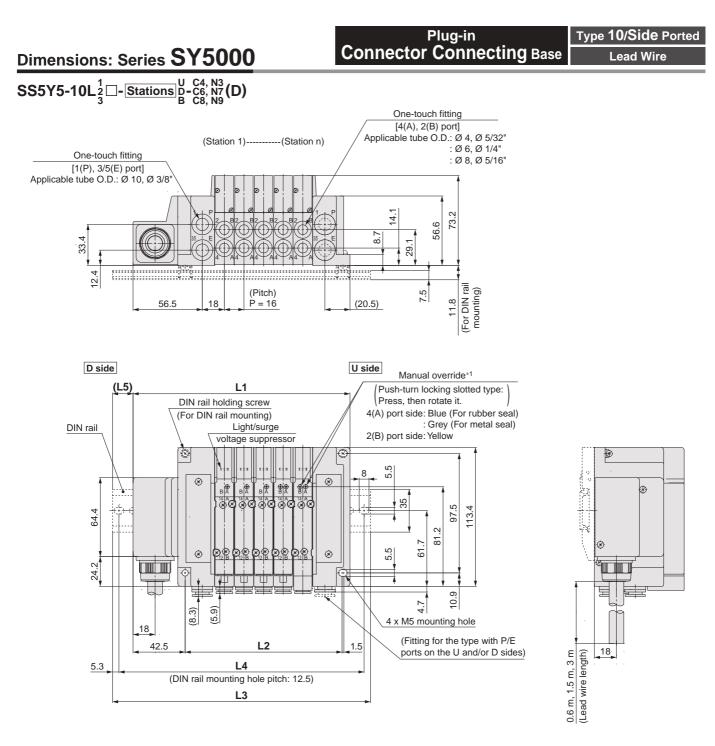


\*1: Refer to page 206 for dimensions of external pilot, silencer, elbow fittings and slide locking manual override. \*: These figures show the "SS5Y5-10L1D-05D-C8".

\*: Refer to page 211 for dimensions of A or B port top-ported type.

n: Stations	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	21	22	23	24
L1	129	145	161	177	193	209	225	241	257	273	289	305	321	337	353	369	385	401	417	433	449	465	481
L2	80	96	112	128	144	160	176	192	208	224	240	256	272	288	304	320	336	352	368	384	400	416	432
L3	160.5	173	185.5	210.5	223	235.5	260.5	273	285.5	298	323	335.5	348	360.5	385.5	398	410.5	435.5	448	460.5	473	498	510.5
L4	150	162.5	175	200	212.5	225	250	262.5	275	287.5	312.5	325	337.5	350	375	387.5	400	425	437.5	450	462.5	487.5	500
L5	16	14	12.5	17	15	13.5	18	16	14.5	12.5	17	15.5	13.5	12	16.5	14.5	13	17.5	15.5	14	12	16.5	15

## Plug-in Connector Connecting Base Series SY3000/5000/7000

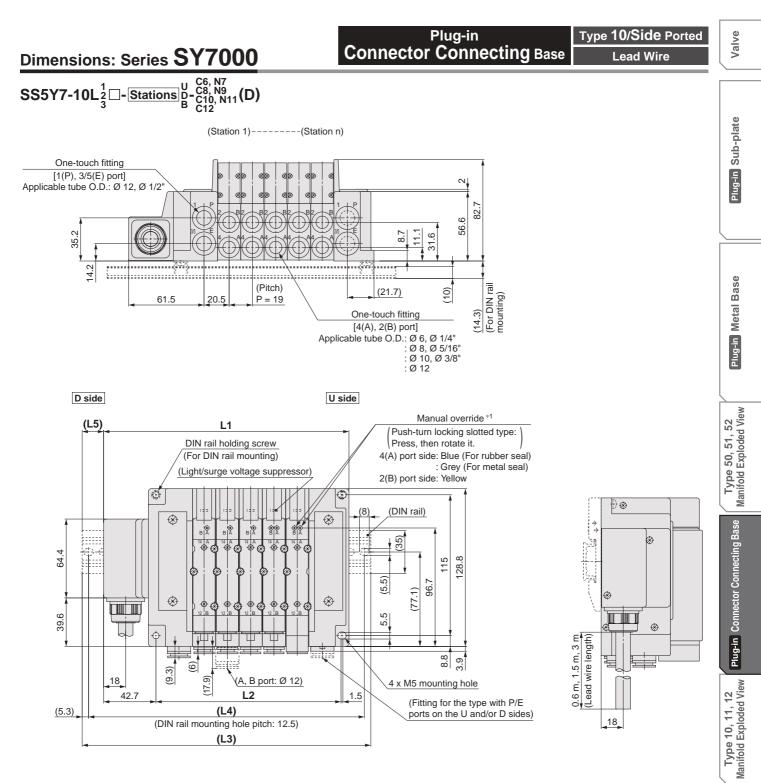

\*1: Refer to page 207 for dimensions of external pilot, silencer, elbow fittings and slide locking manual override.

\*: These figures show the "SS5Y7-10L1□-05D-C10".

\*: Refer to page 212 for dimensions of A or B port top-ported type.

n: Stations	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	21	22	23	24
L1	143.2	162.2	181.2	200.2	219.2	238.2	257.2	276.2	295.2	314.2	333.2	352.2	371.2	390.2	409.2	428.2	447.2	466.2	485.2	504.2	523.2	542.2	561.2
L2	94	113	132	151	170	189	208	227	246	265	284	303	322	341	360	379	398	417	436	455	474	493	512
L3	173	185.5	210.5	235.5	248	273	285.5	310.5	323	348	360.5	385.5	398	423	435.5	460.5	473	498	510.5	535.5	548	573	585.5
L4	162.5	175	200	225	237.5	262.5	275	300	312.5	337.5	350	375	387.5	412.5	425	450	462.5	487.5	500	525	537.5	562.5	575
L5	15	11.5	14.5	17.5	14.5	17.5	14	17	14	17	13.5	16.5	13.5	16.5	13	16	13	16	12.5	15.5	12.5	15.5	12

Manifold Options


Lead Wire

SS5Y 3 - 12 I

## Type 12 Top Ported

## Series SY3000/5000/7000

How to Order Manifold

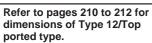

Sorios

3	SY3000
5	SY5000
7	SY7000

## 2 Number of cores


(Lead wire)		<b>3</b> Lea	ad wire length	
	L1	34 cores	1	0.6 m
	L2	17 cores	2	1.5 m
	L3	9 cores	3	3 m

## **5** P. E port entry

<u> </u>	
<b>U</b> *1	U side (2 to 10 stations)
<b>D</b> *1	D side (2 to 10 stations)
В	Both sides (2 to 24 stations)

\*1: 6 For type "S", supply/exhaust block assembly with built-in silencer, choose U or D for P port entry.

## How to Order Manifold Assembly

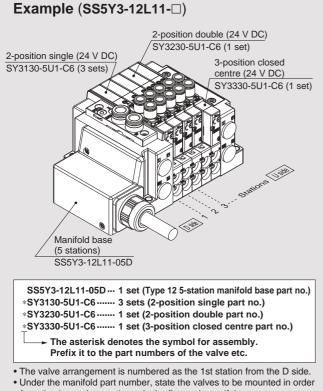

from the 1st station as shown in the figure above. If the arrangement becomes complicated, specify on a manifold specification sheet.

#### 4 Valve stations

()

<b>(L1</b>	⊐)		<b>(L3</b> ]	⊐)	
Symbol	Stations	Note	Symbol	Stations	Note
02	2 stations		02	2 stations	
:	:	Double wiring*1	:	:	Double wiring*1
16	16 stations		04	4 stations	
02	2 stations	Specified layout*2	02	2 stations	Specified layout*2
:	:	(Available up to	:	:	(Available up to
24	24 stations	32 solenoids)	08	8 stations	8 solenoids)
(1.0				-	

#### (L2□)

(	-/	
Symbol	Stations	Note
02	2 stations	
÷	:	Double wiring*1
08	8 stations	
02	2 stations	Specified layout*2
:	:	(Available up to
16	16 stations	16 solenoids)

- \*1: Double wiring: 2-position single, double, 3-position and 4-position valves can be used on all manifold stations. Use of a 2-position single solenoid will result in an unused control
- signal. If this is not desired, order with a specified layout. \*2: Specified layout: Indicate the wiring specifications on the manifold
- specification sheet. (Note that 2-position double, 3-position and 4-position valves cannot be used where single wiring has been specified.)
- \*: This also includes the number of blanking plate assembly.

#### 6 SUP/EXH block assembly

—	Internal pilot
S	Internal pilot, Built-in silencer
R	External pilot

- \*: For built-in silencer type, P and E ports are available on U and D sides. 3/5(E) port is plugged. The silencer exhaust port is located on the opposite side of P, E port entry. (Example: When the P, E port entry is D side, the silencer exhaust port is U side.)
- \*: When the built-in silencer type is used, keep the exhaust port from coming in direct contact with water or other liquids.

## P, E port size (One-touch fittings)

Symbol	SY3000	SY5000	SY7000	
_	Ø 8	Ø 10	Ø 12	
N	Ø 5/16"	Ø 3/8"	Ø 1/2"	

\*: For N, sizes are in inches


#### 

	o mounting				
_	Direct mounting				
D	DIN rail mounting (With DIN rail)				
D0	DIN rail mounting (Without DIN rail)				
D3	For 3 stations	Specify a longer rail than			
:		the standard length.			
D24	For 24 stations	the standard length.			

\*: Refer to page 271 for the fixation of DIN rail mounting type manifold.




## Elucein Connector Connecting Base Series SY3000/5000/7000

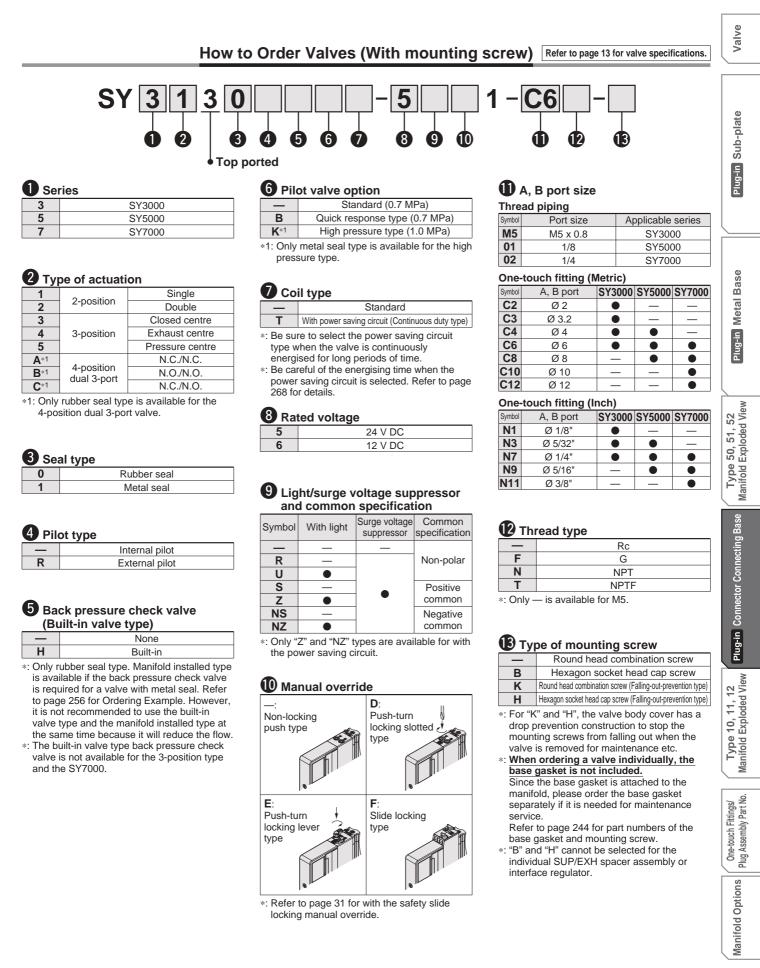

A	Prote	cti∖	ve class
	class	Ⅲ	(Mark: ())

#### **Electrical Wiring Specifications**

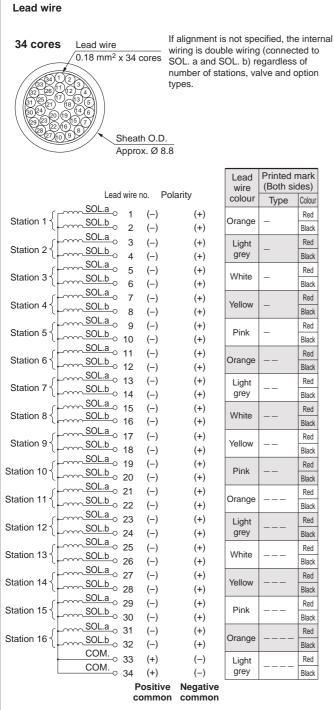

\*: For negative common specification, a valve for negative common or a valve without polarity should be used.

#### **Specified Layout**

Mixed wiring of single and double wiring can be specified on the manifold specification. The maximum number of stations is determined according to the number of solenoids. The total number of solenoids should be 32 or less. 1 solenoid is required for 2-position single, and 2 solenoids for 2-position double, 3-position and 4-position.

#### **Electrical characteristics**


Item	Property
Conductor resistance Ω/km, 20 °C	143 or less
Voltage limit V, 1 minute, AC	2000
Insulation resistance MΩ/km, 20 °C	10 or more

\*: Cannot be used for movable wiring. The minimum bending radius of the cable is 55 mm.



## Elug-in Connector Connecting Base Series SY3000/5000/7000

#### **Electrical Wiring Specifications**

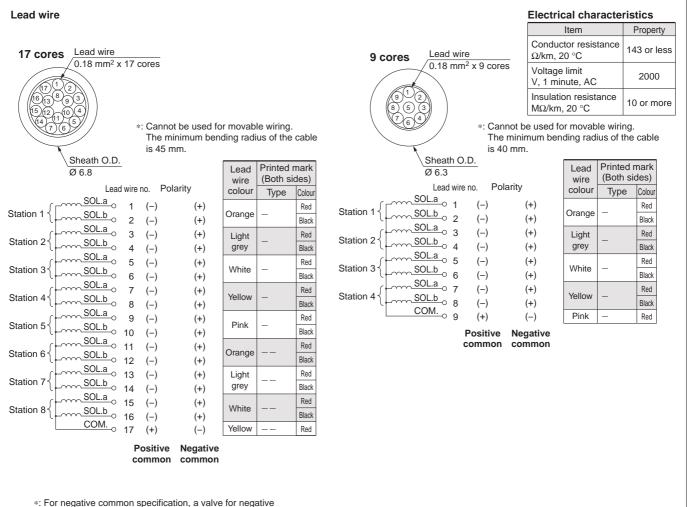

common or a valve without polarity should be used.

134

Valve

Plug-in Sub-plate

\_\_\_\_\_

One-touch Fittings/ Plug Assembly Part No.

Manifold Options

**Circular Connector** 

SS5Y 5

# Series SY3000/5000/7000

05

How to Order Manifold

10 M

Refer to pages 208 (SY5000) and 209 (SY7000) for dimensions of Type 11/Bottom ported type.

#### Series

Type 10

Type 11 Bottom Ported

Side Ported

3	SY3000
5	SY5000
7	SY7000

## 2 Type


10 Side ported	
11 Bottom ported*1	

\*1: The SY5000 manifold base is used for the bottom ported of the SY3000. When ordering, refer to "Plug-in Mixed Mounting Type Manifold" (from page 213).

<b>3</b> Valve stations					
Symbol	Stations	Note			
02	2 stations				
:	:	Double wiring*1			
12	12 stations				
02	2 stations	0 10 10 100			
:	:	Specified layout*2			
24	24 stations	(Available up to 24 solenoids)			

- \*1: Double wiring: 2-position single, double, 3-position and 4-position valves can be used on all manifold stations. Use of a 2-position single solenoid will result in an unused control signal. If this is not desired, order with a specified layout.
- \*2: Specified layout: Indicate the wiring specifications on the manifold specification sheet. (Note that 2-position double, 3-position and 4-position valves cannot be used where single wiring has been specified.)
- \*: This also includes the number of blanking plate assembly.

## How to Order Manifold Assembly

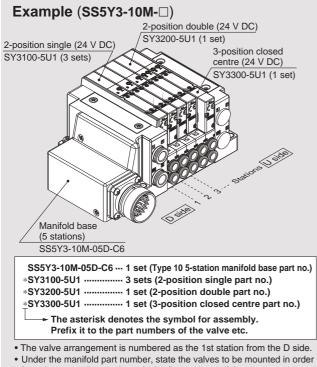

from the 1st station as shown in the figure above. If the arrangement becomes complicated, specify on a manifold specification sheet.

\*: When mixing top ported configurations, select from page 142. In this case, use caution as there is also output on the A and B port on base side. Specify on a manifold specification sheet if plugs are required on the A and B port on base side.

## P, E port entry

	. ,
U	U side (2 to 10 stations)
D	D side (2 to 10 stations)
В	Both sides (2 to 24 stations)

#### **5** SUP/EXH block assembly

—	Internal pilot
S	Internal pilot, Built-in silencer
R	External pilot
	•

\*: 3/5(E) port is plugged for the built-in silencer type.

\*: When the built-in silencer type is used, keep the exhaust port from coming in direct contact with water or other liquids.

Refer to the page on the right for 6.

## Mounting and Option

Symbol	Mounting	Option			
Symbol		Name plate	Station number		
—	Direct	—	—		
AA	mounting				
BA	mounting		—		
D	DIN rail		—		
A	mounting				
B	mounting		—		

\*: Enter the number of stations inside □ when it is larger than the number of valve stations. (Refer to "DIN Rail Option" below.)

 Only direct mounting is available for Type 11 (Bottom ported).

\*: Refer to page 271 for the fixation of DIN rail mounting type manifold.


#### **DIN Rail Option**

—	Direct mounting				
0	Without DIN rail (with bracket)				
3	For 3 stations	Specify a longer rail than the			
:	:				
24	For 24 stations				



## Elucin Connector Connecting Base Series SY3000/5000/7000


Valve

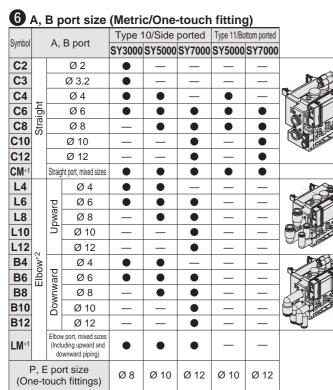

<u>A, B</u>	A, B port size (Inch/One-touch fitting)								
Symbol A		Δ	B port	Туре 2	10/Side	ported	Type 11/Bo	ttom ported	
Symbol		А,	D poit	SY3000	SY5000	SY7000	SY5000	SY7000	
N1			Ø 1/8"		—	—	—	—	
N3			Ø 5/32"					—	
N7	igh		Ø 1/4"					•	
N9	Straight	!	Ø 5/16"	—				•	
N11			Ø 3/8"	—		•	—	•	elons.
<b>CM</b> *1		Straight port, mixed sizes						•	
LN3		7	Ø 5/32"		—	—	—		
LN7		Jpward	Ø 1/4"			—	—	—	
LN9		Ъ	Ø 5/16"	—			—	_	
LN11	0		Ø 3/8"	—	—		—	—	el Salar
BN3	Elbow*2	p	Ø 5/32"		—		—	_	
BN7	glii	Downward	Ø 1/4"				—	—	
BN9		owr	Ø 5/16"	—			—	_	
<b>BN11</b>		Ω	Ø 3/8"	—	—		—	—	Ter
<b>LM</b> *1		Elbow port, mixed sizes (Including upward and downward piping)		•	•	•	_	_	
	P, E port size (One-touch fittings)			Ø 5/16"	Ø 3/8"	Ø 1/2"	Ø 3/8"	Ø 1/2"	

\*1: Indicate the sizes on the manifold specification sheet in the case of "CM", "LM". The direction of P, E port fittings is the same as for A, B port. If selecting "LM", indicate it on the manifold specification sheet for the P, E port fitting direction.


\*2: To avoid interference with the body or piping, select downward elbow port when mounting the optional spacer assembly (pages 250 to 252).

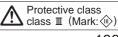

**SMC** 

136



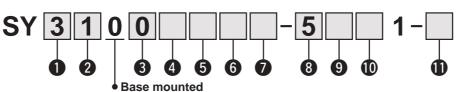

1 Series				
3	SY3000			
5	SY5000			
7	SY7000			

## 2 Type of actuation

1	2-position	Single		
2	2-00311011	Double		
3		Closed centre		
4	3-position	Exhaust centre		
5		Pressure centre		
<b>A</b> *1	4 position	N.C./N.C.		
<b>B</b> *1	4-position dual 3-port	N.O./N.O.		
<b>C</b> *1		N.C./N.O.		

\*1: Only rubber seal type is available for the 4-position dual 3-port valve.

## **3** Seal type

Seal type					
0	Rubber seal				
1	Metal seal				

## 4 Pilot type

	<u>, , , , , , , , , , , , , , , , , , , </u>
—	Internal pilot
R	External pilot

## **5** Back pressure check valve (Built-in valve type)

	None			
Н	Built-in			
*: Only rubber seal type. Manifold installed type				

- is available if the back pressure check valve is required for a valve with metal seal. Refer to page 256 for Ordering Example. However, it is not recommended to use the built-in valve type and the manifold installed type at the same time because it will reduce the flow.
- \*: The built-in valve type back pressure check valve is not available for the 3-position type and the SY7000.

## 6 Pilot valve option

—	Standard (0.7 MPa)			
В	Quick response type (0.7 MPa)			
<b>K</b> *1	High pressure type (1.0 MPa)			

\*1: Only metal seal type is available for the high pressure type.



- Standard
- T
   With power saving circuit (Continuous duty type)

   \*: Be sure to select the power saving circuit
- type when the valve is continuously energised for long periods of time.
- \*: Be careful of the energising time when the power saving circuit is selected. Refer to page 268 for details.

## 8 Rated voltage


5	24 V DC
6	12 V DC

## 9 Light/surge voltage suppressor and common specification

Symbol	With light	Surge voltage suppressor	Common specification			
—						
R	—		Non-polar			
U						
S	—		Positive			
Z	•		common			
NS			Negative			
NZ	•		common			
*: Only "7" and "N7" types are available for with						

\*: Only "Z" and "NZ" types are available for with the power saving circuit.

#### Manual override

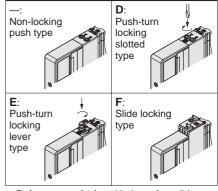

\*: Refer to page 31 for with the safety slide locking manual override.

#### Type of mounting screw

—	Round head combination screw
В	Hexagon socket head cap screw
K	Round head combination screw (Falling-out-prevention type)
Н	Hexagon socket head cap screw (Falling-out-prevention type)

- \*: For "K" and "H", the valve body cover has a drop prevention construction to stop the mounting screws from falling out when the valve is removed for maintenance etc.
- \*: When ordering a valve individually, the base gasket is not included. Since the base gasket is attached to the manifold, please order the base gasket separately if it is needed for maintenance service.

Refer to page 244 for part numbers of the base gasket and mounting screw.


\*: "B" and "H" cannot be selected for the individual SUP/EXH spacer assembly, interface regulator or double check spacer assembly with residual pressure release valve.



137




## Elucia Connector Connecting Base Series SY3000/5000/7000

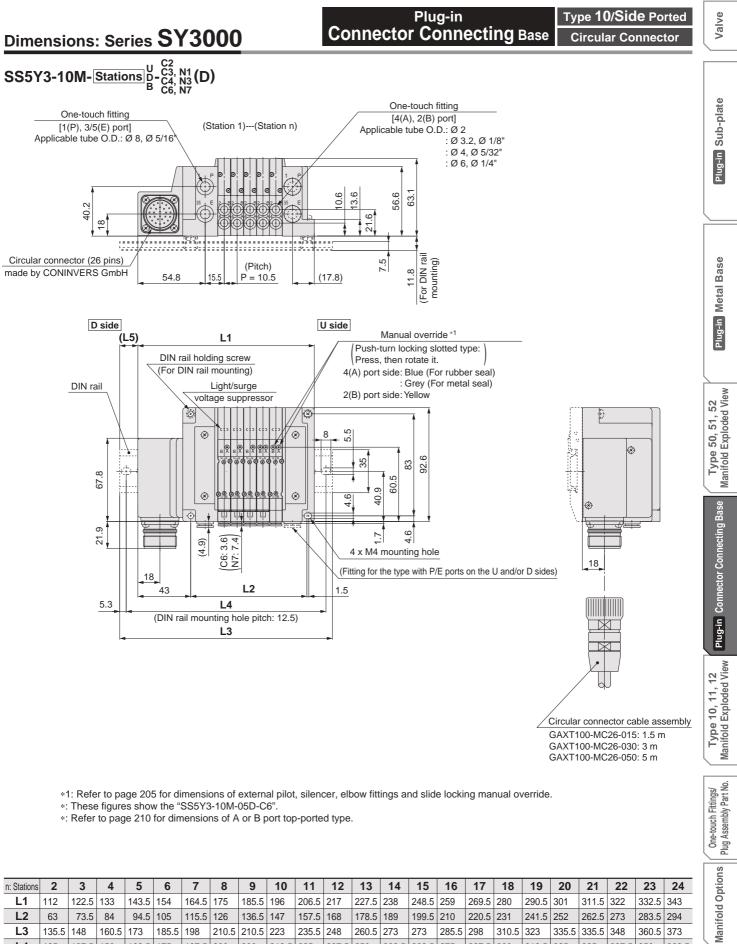

- \*: These figures show the "SS5Y3-10M-05D-C6".
- \*: Refer to page 210 for dimensions of A or B port top-ported type.

n: Stations	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	21	22	23	24
L1	112	122.5	133	143.5	154	164.5	175	185.5	196	206.5	217	227.5	238	248.5	259	269.5	280	290.5	301	311.5	322	332.5	343
L2	63	73.5	84	94.5	105	115.5	126	136.5	147	157.5	168	178.5	189	199.5	210	220.5	231	241.5	252	262.5	273	283.5	294
L3	135.5	148	160.5	173	185.5	198	210.5	210.5	223	235.5	248	260.5	273	273	285.5	298	310.5	323	335.5	335.5	348	360.5	373
L4	125	137.5	150	162.5	175	187.5	200	200	212.5	225	237.5	250	262.5	262.5	275	287.5	300	312.5	325	325	337.5	350	362.5
L5	12	13	14	15	16	17	18	12.5	13.5	14.5	15.5	16.5	17.5	12.5	13.5	14.5	15.5	16.5	17.5	12	13	14	15

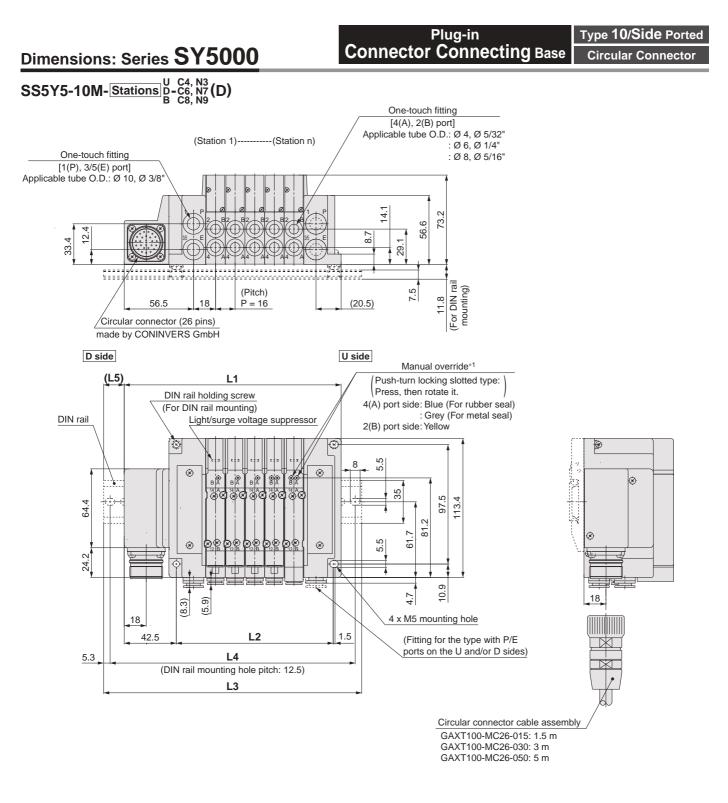


\*1: Refer to page 206 for dimensions of external pilot, silencer, elbow fittings and slide locking manual override.

\*: These figures show the "SS5Y5-10M-05D-C8". \*: Refer to page 211 for dimensions of A or B port top-ported type.

n: Stations	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	21	22	23	24
L1	129	145	161	177	193	209	225	241	257	273	289	305	321	337	353	369	385	401	417	433	449	465	481
L2	80	96	112	128	144	160	176	192	208	224	240	256	272	288	304	320	336	352	368	384	400	416	432
L3	160.5	173	185.5	210.5	223	235.5	260.5	273	285.5	298	323	335.5	348	360.5	385.5	398	410.5	435.5	448	460.5	473	498	510.5
L4	150	162.5	175	200	212.5	225	250	262.5	275	287.5	312.5	325	337.5	350	375	387.5	400	425	437.5	450	462.5	487.5	500
L5	16	14	12.5	17	15	13.5	18	16	14.5	12.5	17	15.5	13.5	12	16.5	14.5	13	17.5	15.5	14	12	16.5	15



## Elucian Connector Connecting Base Series SY3000/5000/7000

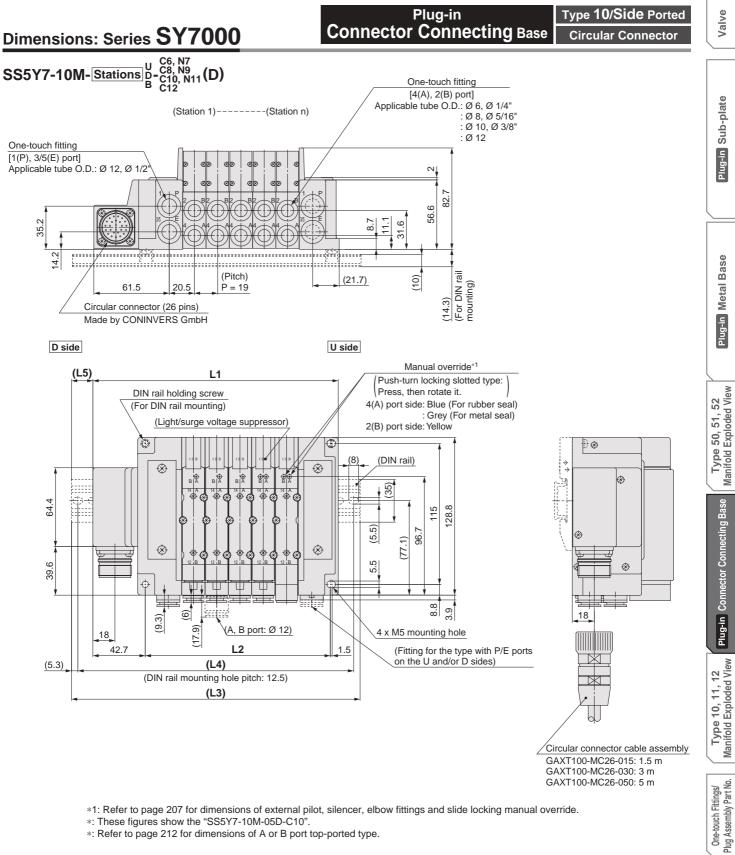

\*: Refer to page 212 for dimensions of A or B port top-ported type.

n: Stations	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	21	22	23	24
L1	143.2	162.2	181.2	200.2	219.2	238.2	257.2	276.2	295.2	314.2	333.2	352.2	371.2	390.2	409.2	428.2	447.2	466.2	485.2	504.2	523.2	542.2	561.2
L2	94	113	132	151	170	189	208	227	246	265	284	303	322	341	360	379	398	417	436	455	474	493	512
L3	173	185.5	210.5	235.5	248	273	285.5	310.5	323	348	360.5	385.5	398	423	435.5	460.5	473	498	510.5	535.5	548	573	585.5
L4	162.5	175	200	225	237.5	262.5	275	300	312.5	337.5	350	375	387.5	412.5	425	450	462.5	487.5	500	525	537.5	562.5	575
L5	15	11.5	14.5	17.5	14.5	17.5	14	17	14	17	13.5	16.5	13.5	16.5	13	16	13	16	12.5	15.5	12.5	15.5	12


**SMC** 

Manifold Options

**Circular Connector** 

## Series SY3000/5000/7000

## How to Order Manifold

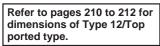

Type 12 Top Ported

1 Se	ries
3	SY3000
5	SY5000
7	SY7000

#### 2 Valve stations

SS5Y 3-12M-05

Symbol	Stations	Note
02	2 stations	
:	:	Double wiring*1
12	12 stations	
02	2 stations	Creating loweut*?
:	:	Specified layout*2 (Available up to 24 solenoids)
24	24 stations	

\*1: Double wiring: 2-position single, double, 3-position and 4-position valves can be used on all manifold stations. Use of a 2-position single solenoid will result in an unused control signal. If this is not desired, order with a specified layout.

\*2: Specified layout: Indicate the wiring specifications on the manifold specification sheet. (Note that 2-position double, 3-position and 4-position valves cannot be used where single wiring has been specified.)

\*: This also includes the number of blanking plate assembly.

## B P, E port entry

<b>U</b> *1	U side (2 to 10 stations)
<b>D</b> *1	D side (2 to 10 stations)
В	Both sides (2 to 24 stations)
-	


\*1: 4 For type "S", supply/exhaust block assembly with built-in silencer, choose U or D for P port entry.

#### 4 SUP/EXH block assembly

—	Internal pilot
S	Internal pilot, Built-in silencer
R	External pilot

- \*: For built-in silencer type, P and E ports are available on U and D sides. 3/5(E) port is plugged. The silencer exhaust port is located on the opposite side of P, E port entry. (Example: When the P, E port entry is D side, the silencer exhaust port is U side.)
- \*: When the built-in silencer type is used, keep the exhaust port from coming in direct contact with water or other liquids.

## How to Order Manifold Assembly

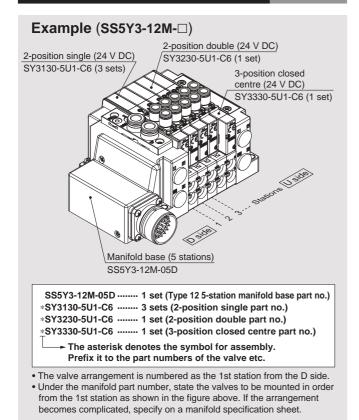

## **5** P, E port size (One-touch fittings)

Symbol	SY3000	SY5000	SY7000	
—	Ø 8	Ø 10	Ø 12	
Ν	Ø 5/16"	Ø 3/8"	Ø 1/2"	


\*: For N, sizes are in inches.

## 6 Mounting

—	C	Direct mounting						
D		DIN rail mounting (With DIN rail)						
D0		IN rail mounting Vithout DIN rail)						
D3	For 3 stations	Specify a langer roll than						
:		Specify a longer rail than the standard length.						
D24	For 24 stations							

\*: Refer to page 271 for the fixation of DIN rail mounting type manifold.

## Elucein Connector Connecting Base Series SY3000/5000/7000

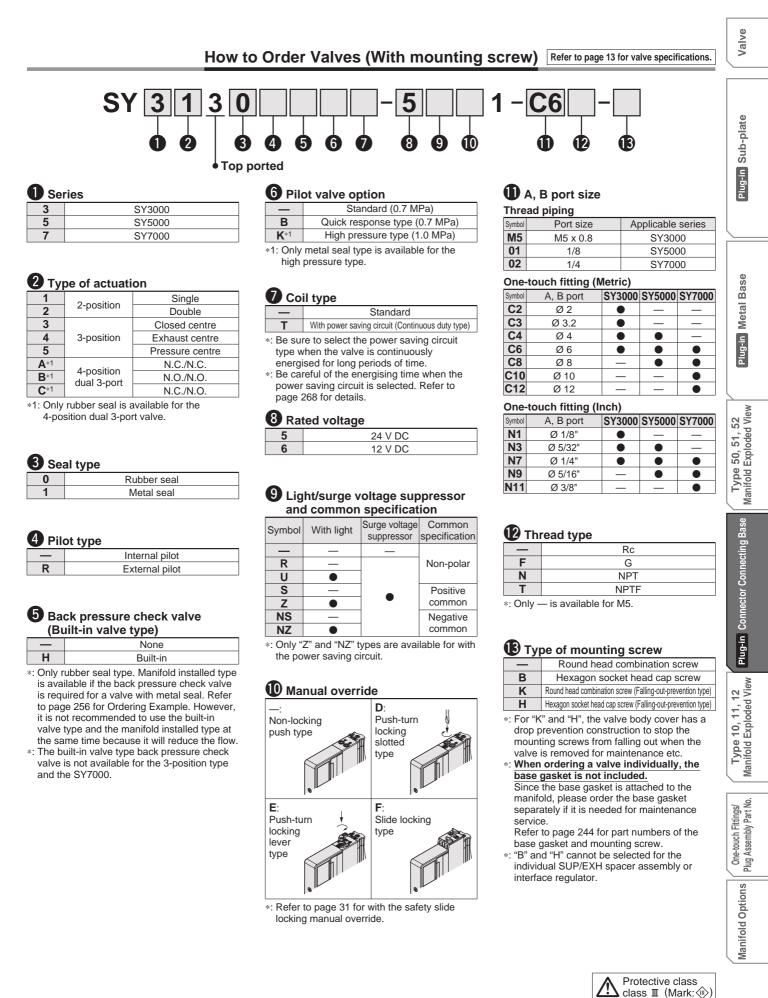

## **Electrical Wiring Specifications**

#### **Circular connector**



If alignment is not specified, the internal wiring is double wiring (connected to SOL. a and SOL. b) regardless of number of stations, valve and option types.


	ninal	no. Pol	arity
Suit of SOL.a	1	(-)	(+)
Station 1 { SOL.b	2	(-)	(+)
Sol.a	3	(-)	(+)
Station 2	4	(-)	(+)
Otation of SOL.a	5	(-)	(+)
Station 3 { SOL.b	6	(-)	(+)
Station 4 { SOL.a SOL.b	7	(-)	(+)
	8	(-)	(+)
Station 5 { SOL.a SOL.b	9	(-)	(+)
	10	(-)	(+)
Station 6 SOL.a	11	(-)	(+)
	12	(-)	(+)
Station 7 { SOL.a SOL.b	13	(–)	(+)
SOL.a	14	(-)	(+)
Station 8 SOL.a	15	(–)	(+)
SOL.a	16	(–)	(+)
Station 9	17	(–)	(+)
SOL.a	18	(–)	(+)
Station 10 { SOL.b	19	(–)	(+)
SOL.a	20	(-)	(+)
Station 11 { SOL.b	21	(-)	(+)
SOL.a	22	(-)	(+)
Station 12	23	(-)	(+)
	24	(–)	(+)
COM. COM.	25	(+)	(-)
	26	(+)	(-)
		ositive ommon	Negative common
using a valve with no polarity	oith	er nositiv	

\*: When using a valve with no polarity, either positive common or negative common can be used.

#### **Specified Layout**

Mixed wiring of single and double wiring can be specified on the manifold specification sheet. The maximum number of stations is determined according to the number of solenoids. The total number of solenoids should be 24 or less. 1 solenoid is required for 2-position single, and 2 solenoids for 2-position double, 3-position and 4-position.

#### **Cable Assembly**

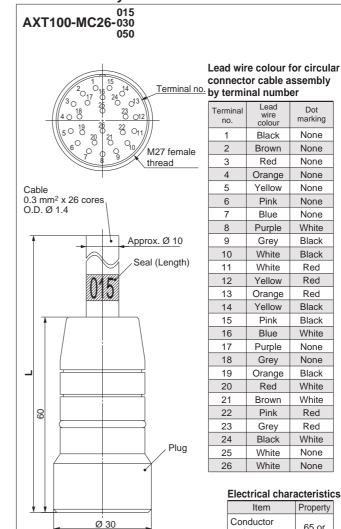

#### Circular connector cable assembly

Cable	Assembly part no.
length (L)	26 pins
1.5 m	GAXT100-MC26-015
3 m	GAXT100-MC26-030
5 m	GAXT100-MC26-050

\*: Cannot be used for movable wiring.

\*: Lengths other than the above is also available. Please contact SMC for details.

	Item	Property	
res	nductor istance (m, 20 °C	65 or less	

Ω/κm, 20 °C	
Voltage limit V, 1 minute, AC	1000
Insulation resistance MΩ/km, 20 °C	5 or more

\*: The minimum bending radius of the circular connector cable is 20 mm.

Valve	
Plug-in Sub-plate	
Plug-in Metal Base	
Type 50, 51, 52 Manifold Exploded View	
Plug-in Connector Connecting Base	
Type 10, 11, 12 Manifold Exploded View	
One-touch Fittings/ Plug Assembly Part No.	
Manifold Options	

EX500 Gateway Decentralised System 2 (128 Points)

# Series SY3000/5000/7000

3N

05

Δ

#### How to Order Manifold

Refer to pages 208 (SY5000) and 209 (SY7000) for dimensions of Type 11/Bottom ported type.

Type 10 Side Ported

**Bottom Ported** 

Type 11

#### Series

Contes		
3	SY3000	
5	SY5000	
7	SY7000	

SS5Y

3

\*: For mixed mounting, refer to page 213 and later.

#### 2 Туре


10	Side ported		
11	Bottom ported*1		

\*1: The SY5000 manifold base is used for the bottom ported of the SY3000. When ordering, refer to "Plug-in Mixed Mounting Type Manifold" (from page 213).

\*: When mixing top ported configurations, select from page 158.

In this case, use caution as there is also output on the A and B port on base side. Specify on a manifold specification sheet if plugs are required on the A and B port on base side.

#### How to Order Manifold Assembly

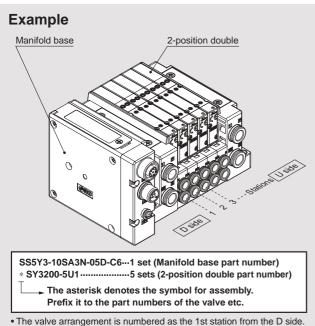

The valve arrangement is numbered as the 1st station from the D side.
 Under the manifold base part number, state the valves to be mounted in order from the 1st station as shown in the figure above. If the arrangement becomes complicated, specify on the manifold specification sheet.

#### SI Unit (Number of outputs, Output polarity, Max. number of valve stations)

0	Without SI Unit		
A3N	32 outputs <sup>*1*4</sup> , 1 to 16 stations (24 stations <sup>*3</sup> ), Negative common <sup>*2</sup>		

- \*1: 16 outputs can be set by switching the built-in setting switch.
- \*2: Ensure a match with the common specification of the valve.
- \*3: (): Maximum number of stations for mixed single and double wiring.
- \*4: When using the SI Unit with 32 outputs, use the GW Unit compatible with the EX500 Gateway Decentralised System 2 (128 points).

#### 4 Valve stations

		Stations	Note		
	02	2 stations			
	:		Double wiring*1		
	16	16 stations			
	02	2 stations	Mixed winner Creation lawout*2		
	:	:	Mixed wiring, Specified layout*2		
	24	24 stations			
	: 24	24 stations	(Available up to 32 solenoids)		

- \*1: Double wiring: 2-position single, double, 3-position and 4-position valves can be used on all manifold stations. Use of a 2-position single solenoid will result
- in an unused control signal. If this is not desired, order with a specified layout.
- \*2: Specified layout: Indicate the wiring specifications on the manifold specification sheet. (Note that 2-position double, 3-position and 4-position valves cannot be used where single wiring has been specified.)
- \*: When the product without the SI Unit (S0) is selected, note the maximum number of solenoids of the SI Unit that will be mounted. If the layout is specified, indicate it on the manifold specification sheet.
- \*: This also includes the number of blanking plate assembly.

#### 9 P, E port entry

U	U side (2 to 10 stations)
D	D side (2 to 10 stations)
В	Both sides (2 to 24 stations)

#### 6 SUP/EXH block assembly

—	Internal pilot	
S Internal pilot, Built-in silencer*1*2		
R External pilot		

\*1: 3/5(E) port is plugged for the built-in silencer type.

\*2: When built-in silencer type is used, keep the exhaust port from coming in direct contact with water or other liquids.

\*: A separate GW Unit and communication cable are required.

For details about the EX 5 0 0 Gateway-type Serial Transmission System, refer to the WEB catalogue on SMC website **www.smc.eu** and the Operation Manual. For details about part numbers of SI Units to be mounted, refer to page 235 in this catalogue. Please download the Operation Manual via SMC website, http://www.smc.eu

## Elligent Connector Connecting Base Series SY3000/5000/7000

Valve


Plug-in Metal Base

Type 50, 51, 52 Manifold Exploded View

Plug-in Connector Connecting Base

Type 10, 11, 12 Manifold Exploded View

Manifold Options

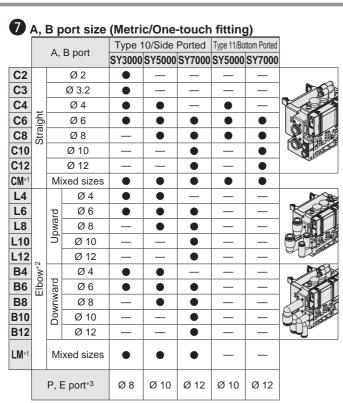

A, B port         Type 10/Side Ported         Type 11/Bottom Ported           N1         Ø 1/8"         —         …         Ø <thø< th="">         Ø         Ø</thø<>	Α, Β	B port size (Inch/One-touch fitting)																	
$ \begin{array}{ c c c c c c c c c c c c c c c c c c c$			A D mont		Type 1	0/Side	Ported	Type 11/Bo	ttom Ported										
$\begin{array}{c c c c c c c c c c c c c c c c c c c $			А,	в роп	SY3000	SY5000	SY7000	SY5000	SY7000										
$\begin{array}{c c c c c c c c c c c c c c c c c c c $	N1			Ø 1/8"			_		_										
$\begin{array}{c c c c c c c c c c c c c c c c c c c $	N3			Ø 5/32"	٠	٠	—		—										
$\begin{array}{c c c c c c c c c c c c c c c c c c c $	N7	igh		Ø 1/4"		•													
$\begin{array}{c c c c c c c c c c c c c c c c c c c $	N9	Stra		Ø 5/16"	—	•		•	•										
$ \begin{array}{c ccccccccccccccccccccccccccccccccccc$	N11	0,		Ø 3/8"	—				•	elGasse									
$ \begin{array}{c c c c c c c c c c c c c c c c c c c $	<b>CM</b> *1		Μ	ixed sizes		•													
$\begin{array}{c c c c c c c c c c c c c c c c c c c $	LN3		_	Ø 5/32"		—	_	—	—										
$\begin{array}{c c c c c c c c c c c c c c c c c c c $	LN7		/arc	Ø 1/4"		•	_												
$\begin{array}{c c c c c c c c c c c c c c c c c c c $	LN9	11		d	Ø 5/16"	—	•	_		—									
$     \begin{array}{c cccccccccccccccccccccccccccccccc$	LN11							~	~	~		~	~		Ø 3/8"	—			
$     \begin{array}{c cccccccccccccccccccccccccccccccc$	BN3	N <sup>*</sup>	p	Ø 5/32"		_		_	_										
$     \begin{array}{c cccccccccccccccccccccccccccccccc$	BN7	lbo	wal	Ø 1/4"		٠		_	_										
	BN9		INC	Ø 5/16"	—	•	_		_										
LM <sup>•1</sup> Mixed sizes • • •	<b>BN11</b>		ŏ	Ø 3/8"	—	—		_	_	de la la									
	<b>LM</b> *1	Mixed sizes		•	•	•	—	_											
P, E port*3 Ø 5/16" Ø 3/8" Ø 1/2" Ø 3/8" Ø 1/2"		P, E port <sup>*3</sup>		Ø 5/16"	Ø 3/8"	Ø 1/2"	Ø 3/8"	Ø 1/2"											

\*1: Indicate the sizes on the manifold specification sheet.

\*2: To avoid interference with the body or piping, select downward elbow port when mounting the optional spacer assembly (pages 250 to 252).
\*3: The direction of P, E port fittings is the same as for A, B port. If selecting "LM", indicate it on the manifold specification sheet for the P, E port fitting direction.

#### 8 Mounting and Option

	Mounting	Opt	tion
	wounting	Name plate	Station number
—	Direct		—
AA	Direct mounting		
BA	mounting		—
<b>D</b> □*1	D⊡*1 A⊡*1 B⊡*1	_	_
<b>A</b> □*1			
<b>B</b> □*1			_

\*1: Refer to "DIN Rail Option" below.

\*: Select the direct mounting type for Type 11 (Bottom ported).

#### **DIN Rail Option**


	—	With DIN bracket, DIN rail with standard length
	0	With DIN bracket, without DIN rail
	<b>3</b> *1	With DIN bracket, DIN rail for 3 stations
	:	
	<b>3/</b> *1	With DIN bracket, DIN roll for 24 stations


**24**<sup>\*1</sup> With DIN bracket, DIN rail for 24 stations

\*1: Specify a longer rail than the length of valve stations.

\*: If the DIN rail must be mounted without an SI Unit, select "D0" and order the DIN rail separately. Refer to L3 of the dimensions for the DIN rail length. Refer to page 249 for the DIN rail part number.

\*: Refer to page 271 for the fixation of DIN rail mounting type manifold.

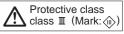

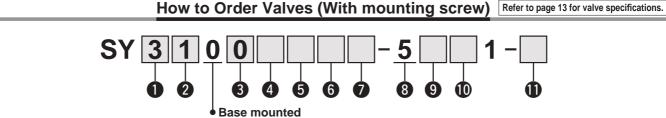

1 Series				
3	SY3000			
5	SY5000			
7	SY7000			

#### 2 Type of actuation

1	2 position	Single
2	2-position	Double
3	3-position	Closed centre
4		Exhaust centre
5		Pressure centre
<b>A</b> *1		N.C./N.C.
<b>B</b> *1	4-position dual 3-port valve	N.O./N.O.
<b>C</b> *1	5-poir valve	N.C./N.O.

\*1: Select the rubber seal type for the 4-position dual 3-port valve.

#### **3** Seal type

-	
0	Rubber seal
1	Metal seal

4	Pilot ty	ре

	Internal pilot
R	External pilot

#### **5** Back pressure check valve

—	None
<b>H</b> *1	Built-in

- \*1: Select the rubber seal type when the back pressure check valve is built-in. Manifold installed type is available if the back pressure check valve is required for a valve with metal seal. For ordering example, refer to page 256. However, it is not recommended to use the built-in valve type and the manifold installed type at the same
- time because it will reduce the flow. \*: Select "—" for 3-position type and the
- SY7000.

#### 6 Pilot valve option

_	Standard (0.7 MPa)
В	Quick response type (0.7 MPa)
<b>K</b> ∗1	High pressure type (1.0 MPa)
4. 0-1-	

\*1: Select the metal seal type for high pressure type.

#### Coil type

	Standard
т	With power saving circuit (Continuous duty type)*1*2

- \*1: Be sure to select the power saving circuit type when the valve is continuously energised for long periods of time.
- \*2: Be careful of the energising time when the power saving circuit is selected. For details, refer to page 268.


#### 8 Rated voltage

#### 9 Light/surge voltage suppressor and common specification

	With light	Surge voltage suppressor	Common specification								
R	—		Non polor								
U	•		Non-polar								
NS	—		Negative								
NZ			common								
** Salast "NZ" for with the newer serving sirewit											

\*: Select "NZ" for with the power saving circuit.

#### Manual override

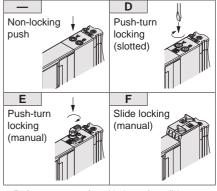


\*: Refer to page 31 for with the safety slide locking manual override.

#### Type of mounting screw


_	Round head combination screw
В	Hexagon socket head cap screw
К	Round head combination screw (Falling-out-prevention type)*1
н	Hexagon socket head cap screw (Falling-out-prevention type)*1

- \*1: For "K" and "H", the valve body cover has a drop prevention construction to stop the mounting screws from falling out when the valve is removed for maintenance etc.
- \*: When ordering a valve individually, the base gasket is not included. Since the base gasket is attached to the manifold, please order the base gasket separately if it is needed for maintenance service.
- Refer to page 244 for part numbers of the base gasket and mounting screw.
- \*: Select "—" or "K" for the optional individual SUP/EXH spacer assembly, interface regulator or double check spacer assembly with residual pressure release valve.

## Plug-in Connector Connecting Base Series SY3000/5000/7000

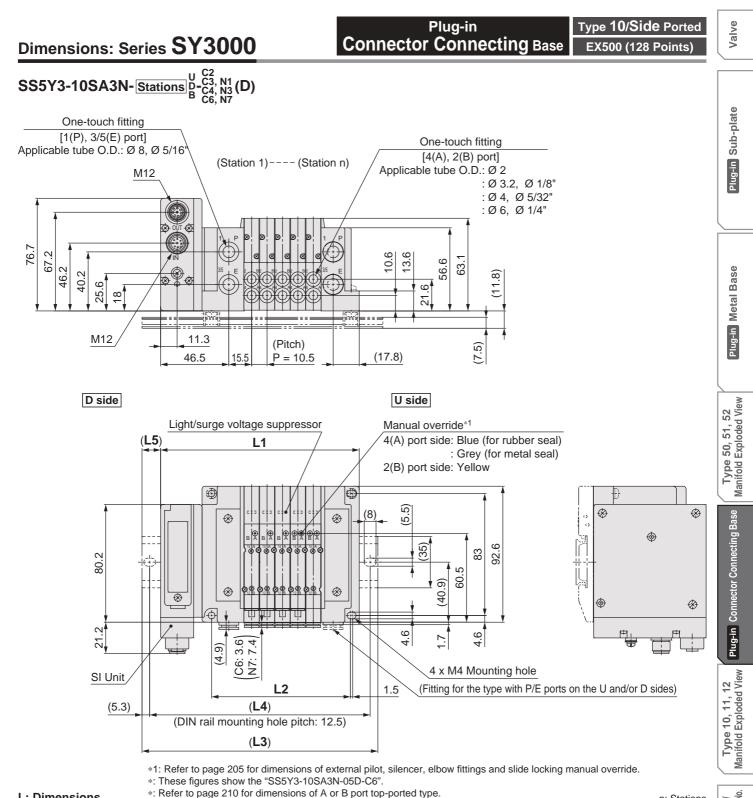

L: Dime	ensions		*: Refer	to page 2'	10 for dim	mensions of A or B port top-ported type.										gs/ rt No.
L	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	e-touch Fittings/ Assembly Part No
L1	103.7	114.2	124.7	135.2	145.7	156.2	166.7	177.2	187.7	198.2	208.7	219.2	229.7	240.2	250.7	uch emb
L2	63	73.5	84	94.5	105	115.5	126	136.5	147	157.5	168	178.5	189	199.5	210	One-touch ug Assemt
L3	135.5	148	148	160.5	173	185.5	198	210.5	223	223	235.5	248	260.5	273	285.5	Plug
L4	125	137.5	137.5	150	162.5	175	187.5	200	212.5	212.5	225	237.5	250	262.5	275	S
L5	16	17	11.5	12.5	13.5	14.5	15.5	16.5	17.5	12.5	13.5	14.5	15.5	16.5	17.5	ptions
<u> </u>	47	40	40		04			04								do
L n	17	18	19	20	21	22	23	24								P
L1	261.2	271.7	282.2	292.7	303.2	313.7	324.2	334.7								life
L2	220.5	231	241.5	252	262.5	273	283.5	294								Manifol
L3	285.5	298	310.5	323	335.5	348	348	360.5								<u></u>
L4	275	287.5	300	312.5	325	337.5	337.5	350								
L5	12	13	14	15	16	17	12	13								

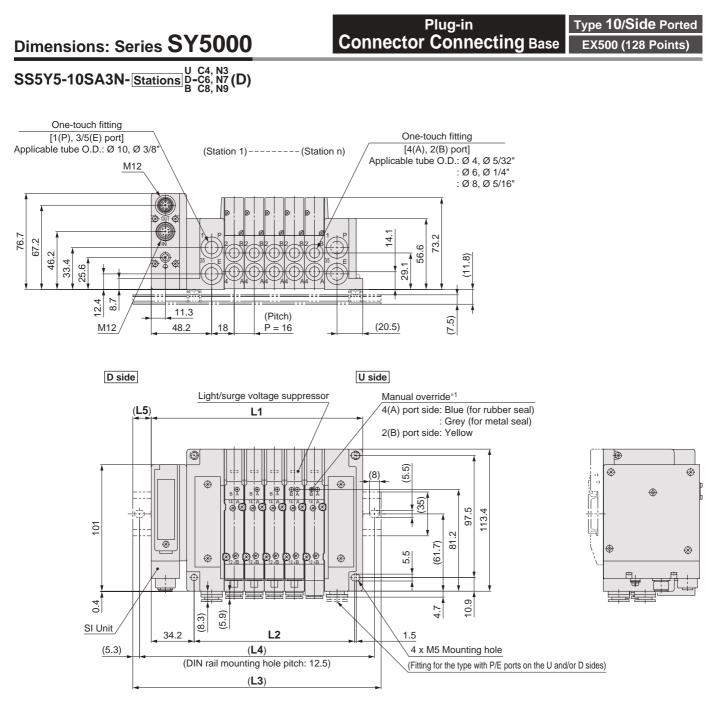


\*1: Refer to page 206 for dimensions of external pilot, silencer, elbow fittings and slide locking manual override. \*: These figures show the "SS5Y5-10SA3N-05D-C8".

\*: Refer to page 211 for dimensions of A or B port top-ported type.

L: Dim	ensions	i									r	n: Stations			
L	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16
L1	120.7	136.7	152.7	168.7	184.7	200.7	216.7	232.7	248.7	264.7	280.7	296.7	312.7	328.7	344.7
L2	80	96	112	128	144	160	176	192	208	224	240	256	272	288	304
L3	148	160.5	185.5	198	210.5	235.5	248	260.5	273	298	310.5	323	348	360.5	373
L4	137.5	150	175	187.5	200	225	237.5	250	262.5	287.5	300	312.5	337.5	350	362.5
L5	13.5	12	16.5	14.5	13	17.5	15.5	14	12	16.5	15	13	17.5	16	14
_															
Ln	17	18	19	20	21	22	23	24							
L1	360.7	376.7	392.7	408.7	424.7	440.7	456.7	472.7							
L2	320	336	352	368	384	400	416	432							
L3	385.5	410.5	423	435.5	448	473	485.5	498							
L4	375	400	412.5	425	437.5	462.5	475	487.5							
L5	12.5	17	15	13.5	11.5	16	14.5	12.5							

## Elugein Connector Connecting Base Series SY3000/5000/7000

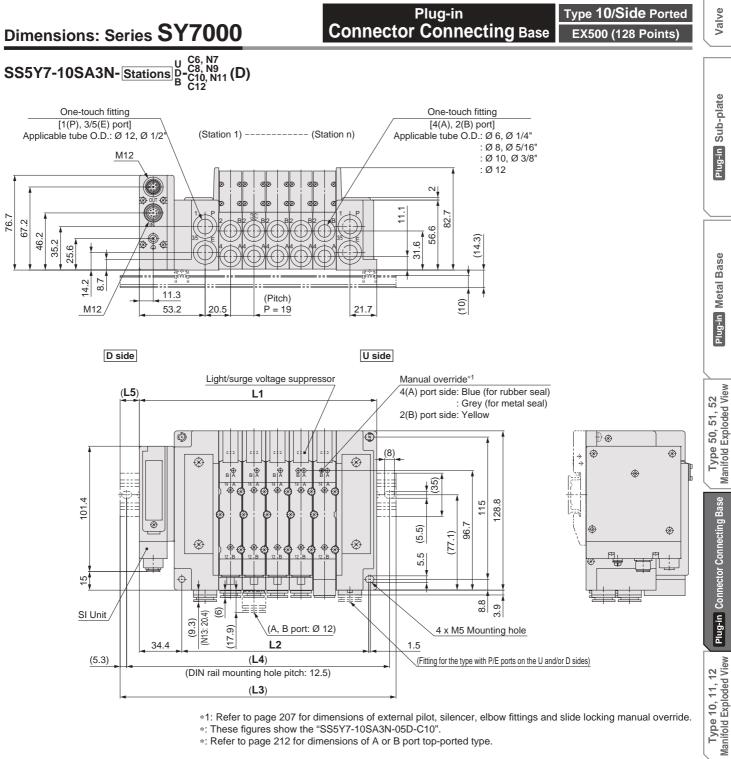

\*: Refer to page 212 for dimensions of A or B port top-ported type.

L: Dim	ensions													r	: Stations	+touch Fittings/ \ssembly Part No.
Ln	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	Fittin ly Pa
L1	134.9	153.9	172.9	191.9	210.9	229.9	248.9	267.9	286.9	305.9	324.9	343.9	362.9	381.9	400.9	emb
L2	94	113	132	151	170	189	208	227	246	265	284	303	322	341	360	
L3	160.5	185.5	198	223	235.5	260.5	273	298	310.5	335.5	348	373	398	410.5	435.5	Plug
L4	150	175	187.5	212.5	225	250	262.5	287.5	300	325	337.5	362.5	387.5	400	425	
L5	13	16	12.5	15.5	12.5	15.5	12	15	12	15	11.5	14.5	17.5	14.5	17.5	ptions
				·				r								0 d
Ln	17	18	19	20	21	22	23	24								
L1	419.9	438.9	457.9	476.9	495.9	514.9	533.9	552.9								Manifold
L2	379	398	417	436	455	474	493	512								Mar
L3	448	473	485.5	510.5	523	548	560.5	585.5								
L4	437.5	462.5	475	500	512.5	537.5	550	575								
L5	14	17	14	17	13.5	16.5	13.5	16.5								

**EX500 Gateway Decentralised System (64 Points)** 

## Series SY3000/5000/7000 RoHS

05

4

#### How to Order Manifold

SA2

10

SS5Y 3 -

Refer to pages 208 (SY5000) and 209 (SY7000) for dimensions of Type 11/Bottom ported type.

#### Series

Type 10

Type 11 **Bottom Ported** 

Side Ported

	100
3	SY3000
5	SY5000
7	SY7000


\*: For mixed mounting, refer to page 213 and later

#### 

	Je
10	Side ported
11	Bottom ported*1


- \*1: The SY5000 manifold base is used for the bottom ported of the SY3000. When ordering, refer to "Plug-in Mixed Mounting Type Manifold" (from page 213).
- \*: When mixing top ported configurations, select from page 160. In this case, use caution as there is also output on the A and B port on base side. Specify on a manifold specification sheet if plugs are required on the A and B port on base side.

#### How to Order Manifold Assembly

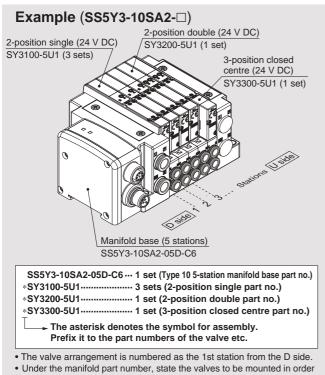

from the 1st station as shown in the figure above. If the arrangement becomes complicated, specify on a manifold specification sheet.

#### SI Unit (Number of outputs, Output polarity,

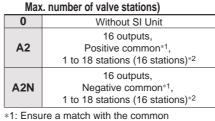

- specification of the valve to be used
- \*2: ( ): Maximum number of stations for mixed single and double wiring.

#### Valve stations

	Stations	Note	
02	2 stations		
	:	Double wiring*1	
08	8 stations		
02	2 stations	Creating loweut*?	
:	:	Specified layout*2 (Available up to 16 solenoids)	
16	16 stations	(Available up to 10 soleriolds)	

**C6** 

- \*1: Double wiring: 2-position single, double, 3-position and 4-position valves can be used on all manifold stations. Use of a 2-position single solenoid will result in an unused control signal. If this is not desired, order with a specified layout.
- \*2: Specified layout: Indicate the wiring specifications on the manifold specification sheet. (Note that 2-position double, 3-position and 4-position valves cannot be used where single wiring has been specified.)
- \*: When the product without the SI Unit (S0) is selected, note the maximum number of solenoids of the SI Unit that will be mounted. If the layout is specified, indicate it on the manifold specification sheet.
- \*: This also includes the number of blanking plate assembly.

#### D P. E port entry

U	U side (2 to 10 stations)			
D	D side (2 to 10 stations)			
В	Both sides (2 to 16 stations)			

#### 6 SUP/EXH block assembly

	· · · · · · · · · · · · · · · · · · ·
_	Internal pilot
S	Internal pilot, Built-in silencer
R	External pilot

\*: 3/5(E) port is plugged for the built-in silencer type.

\*: When the built-in silencer type is used, keep the exhaust port from coming in direct contact with water or other liquids.

\*: A separate GW Unit and communication cable are required.

For details about the EX500 Gateway-type Serial Transmission System, refer to the WEB catalogue on SMC website www.smc.eu and the Operation Manual. For details about part numbers of SI Units to be mounted, refer to page 236 in this catalogue. Please download the Operation Manual via SMC website, http://www.smc.eu

## Plug-in Connector Connecting Base Series SY3000/5000/7000

Valve

Plug-in Metal Base


Type 50, 51, 52 Manifold Exploded View

Plug-in Connector Connecting Base

Type 10, 11, 12 Manifold Exploded View

One-touch Fittings/ Plug Assembly Part No.

Manifold Options

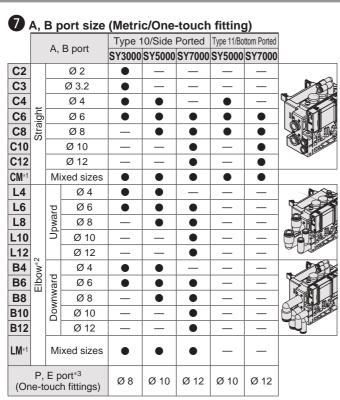

А, С	A, B port size (Inch/One-touch fitting)									
	A, B port					Type 11/Bo				
				SY3000	SY5000	SY/000	SY5000	SY/000		
N1			Ø 1/8"		—	_	—	—		
N3		9	Ø 5/32"			—		_		
N7	idhi		Ø 1/4"							
N9	Straight	9	Ø 5/16"	_						
N11	0		Ø 3/8"	_	_		_		al Cast	
<b>CM</b> *1	1	Mi	xed sizes						¥	
LN3			Ø 5/32"		—	_	—	—		
LN7	1	Jpward	Ø 1/4"			_	_	_		
LN9		d d	Ø 5/16"	_	٠	_	_	_		
LN11	N			Ø 3/8"	—	—		_	_	elsession
BN3		g	Ø 5/32"	•	—	—	—	—		
BN7	18	wa	Ø 1/4"			_	_	_		
BN9		Downward	Ø 5/16"	—		—	—	—		
<b>BN11</b>		ŏ	Ø 3/8"	—	—		—	—	C dela	
<b>LM</b> *1	Mixed sizes		•	•	•	_	_			
(Or	P, E port <sup>*3</sup> (One-touch fittings)			Ø 5/16"	Ø 3/8"	Ø 1/2"	Ø 3/8"	Ø 1/2"		

. ....

.

\*1: Indicate the sizes on the manifold specification sheet.

\*2: To avoid interference with the body or piping, select downward elbow port when mounting the optional spacer assembly (pages 250 to 252).

\*3: The direction of P, E port fittings is the same as for A, B port. If selecting "LM", indicate it on the manifold specification sheet for the P, E port fitting direction.

#### 8 Mounting and Option

	Mounting	Option	
	wounting	Name plate	Station number
—	Direct mounting		—
AA			
BA	mounting		—
<b>D</b> □*1		_	_
<b>A</b> □*1	DIN rail mounting		
<b>B</b> □*1			_

\*1: Refer to "DIN Rail Option" below.

\*: Select the direct mounting type for Type 11 (Bottom ported).

#### **DIN Rail Option**


—	With DIN bracket, DIN rail with standard length With DIN bracket, without DIN rail					
0						
<b>3</b> *1	With DIN bracket, DIN rail for 3 stations					
:						
<b>16</b> *1	With DIN bracket, DIN rail for 16 stations					

**16**<sup>\*1</sup> With DIN bracket, DIN rail for 16 stations


\*1: Specify a longer rail than the length of valve stations.

\*: If the DIN rail must be mounted without an SI Unit, select "D0" and order the DIN rail separately. Refer to L3 of the dimensions for the DIN rail length. Refer to page 249 for the DIN rail part number.

\*: Refer to page 271 for the fixation of DIN rail mounting type manifold.

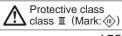



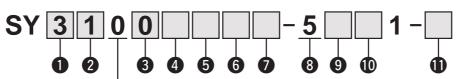

1 Series				
3	SY3000			
5	SY5000			
7	SY7000			

#### 2 Type of actuation

1	2 position	Single	
2	2-position	Double	
3		Closed centre	
4	3-position	Exhaust centre	
5		Pressure centre	
<b>A</b> *1	4-position dual 3-port	N.C./N.C.	
<b>B</b> *1		N.O./N.O.	
<b>C</b> *1		N.C./N.O.	

\*1: Only rubber seal type is available for the 4-position dual 3-port valve.

#### **3** Seal type

<b>Sea</b>	агтуре
0	Rubber seal
1	Metal seal

4	Pile	ot	type	
_	_			

	Internal pilot
R	External pilot

## **5** Back pressure check valve (Built-in valve type)

		/1: :/
—		None
Н		Built-in
Only r	ubbor agal tura	Manifold installed ty

- \*: Only rubber seal type. Manifold installed type is available if the back pressure check valve is required for a valve with metal seal. Refer to page 256 for Ordering Example. However, it is not recommended to use the built-in valve type and the manifold installed type at the same time because it will reduce the flow.
- \*: The built-in valve type back pressure check valve is not available for the 3-position type and the SY7000.

#### 6 Pilot valve option

Base mounted

Pliot valve option						
_	Standard (0.7 MPa)					
В	Quick response type (0.7 MPa)					
<b>K</b> *1	High pressure type (1.0 MPa)					
1: Only	metal seal type is available for the					

high pressure type.

#### Coil type

- Standard
- T With power saving circuit (Continuous duty type) \*: Be sure to select the power saving circuit type when the valve is continuously
- energised for long periods of time. E Be careful of the energising time when the
- \*: Be careful of the energising time when the power saving circuit is selected. Refer to page 268 for details.

24 V DC


### 8 Rated voltage

#### 9 Light/surge voltage suppressor and common specification

Symbol	With light	Surge voltage suppressor	Common specification
R	_		Non-polar
U			Νοπ-ροιαί
S	_		Positive
Z	•	•	common
NS	_		Negative
NZ	•		common
* Only "	Z" and "NZ" a	are available f	or with the

Conjy Z and NZ are available for with the power saving circuit. Select a valve from R, U, S or Z when the SI Unit specification is A2 (positive common). Select a valve from R, U, NS or NZ when the SI Unit specification is A2N (negative common).

#### 10 Manual override

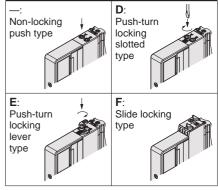

Refer to page 31 for with the safety slide locking manual override.


#### Type of mounting screw

—	Round head combination screw
В	Hexagon socket head cap screw
K	Round head combination screw (Falling-out-prevention type)
Н	Hexagon socket head cap screw (Falling-out-prevention type)

- \*: For "K" and "H", the valve body cover has a drop prevention construction to stop the mounting screws from falling out when the valve is removed for maintenance etc.
- \*: When ordering a valve individually, the base gasket is not included. Since the base gasket is attached to the manifold, please order the base gasket separately if it is needed for maintenance service.
- Refer to page 244 for part numbers of the base gasket and mounting screw.
- \*: "B" and "H" cannot be selected for the individual SUP/EXH spacer assembly, interface regulator or double check spacer assembly with residual pressure release valve.



## Elucia Connector Connecting Base Series SY3000/5000/7000

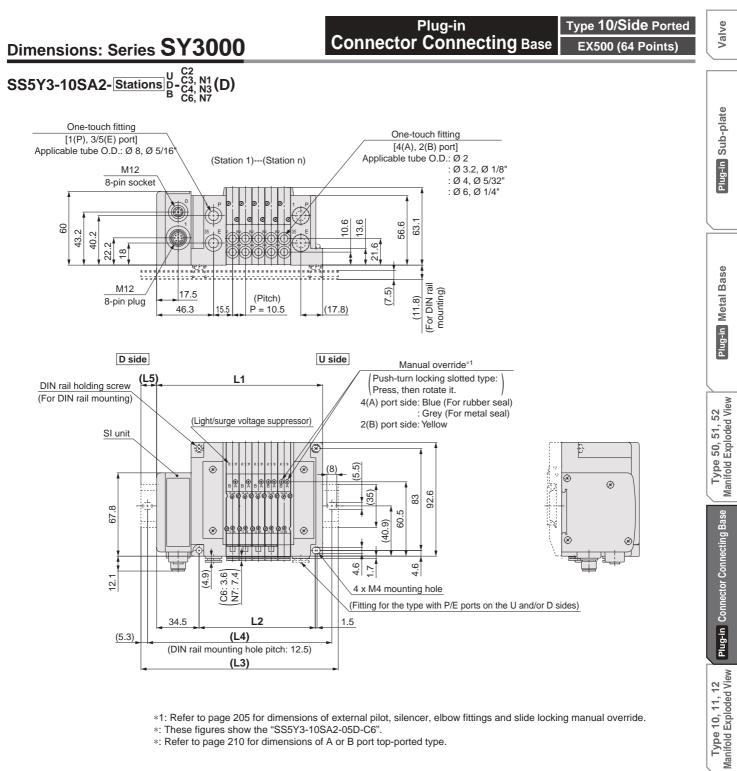

\*1: Refer to page 205 for dimensions of external pilot, silencer, elbow fittings and slide locking manual override.

\*: These figures show the "SS5Y3-10SA2-05D-C6".


\*: Refer to page 210 for dimensions of A or B port top-ported type.


																One-touch Fittings/ Plug Assembly Part No.
					-											ptions
n: Stations	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	ptio
L1	103.5	114	124.5	135	145.5	156	166.5	177	187.5	198	208.5	219	229.5	240	250.5	
L2	00															
LZ	63	73.5	84	94.5	105	115.5	126	136.5	147	157.5	168	178.5	189	199.5	210	fold
L2 L3	135.5	73.5 148	84 148	94.5 160.5	105 173	115.5 185.5	126 198	136.5 210.5	147 223	157.5 223	168 235.5	178.5 248	189 260.5	199.5 273	210 285.5	lanifold
			-				-								-	Manifold




### Dimensions: Series SY5000

#### SS5Y5-10SA2-Stations D - C6, N7 B - C6, N7 B - C8, N9

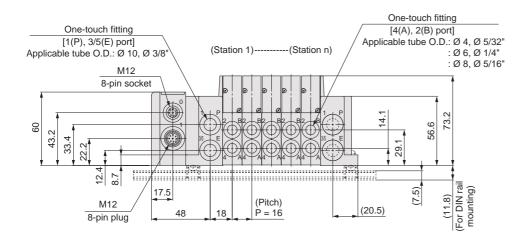

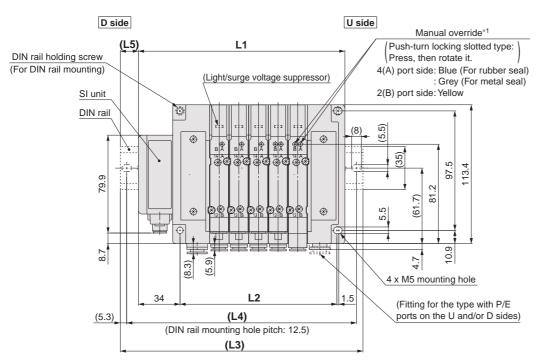

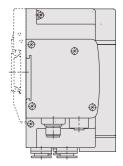

\*1: Refer to page 206 for dimensions of external pilot, silencer, elbow fittings and slide locking manual override.


\*: These figures show the "SS5Y5-10SA2-05D-C8".

\*: Refer to page 211 for dimensions of A or B port top-ported type.

n: Stations	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16
L1	120.5	136.5	152.5	168.5	184.5	200.5	216.5	232.5	248.5	264.5	280.5	296.5	312.5	328.5	344.5
L2	80	96	112	128	144	160	176	192	208	224	240	256	272	288	304
L3	148	160.5	185.5	198	210.5	235.5	248	260.5	273	298	310.5	323	348	360.5	373
L4	137.5	150	175	187.5	200	225	237.5	250	262.5	287.5	300	312.5	337.5	350	362.5
L5	14	12	16.5	15	13	17.5	16	14	12.5	17	15	13.5	18	16	14.5

**SMC** 

## Elucia Connector Connecting Base Series SY3000/5000/7000

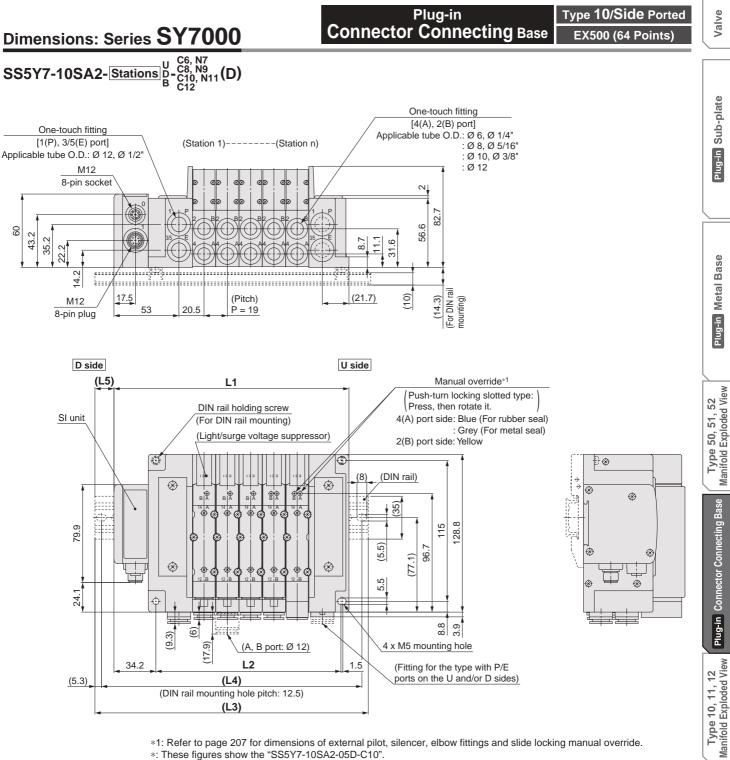

\*: These figures show the "SS5Y7-10SA2-05D-C10".

\*: Refer to page 212 for dimensions of A or B port top-ported type.

																One-touch Fittings/ Plug Assembly Part No.
																suc
n: Stations	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	ptions
L1	134.7	153.7	172.7	191.7	210.7	229.7	248.7	267.7	286.7	305.7	324.7	343.7	362.7	381.7	400.7	Op
L2	94	113	132	151	170	189	208	227	246	265	284	303	322	341	360	10 I
L3	160.5	185.5	198	223	235.5	260.5	273	298	310.5	335.5	348	373	398	410.5	435.5	Mani
L4	150	175	187.5	212.5	225	250	262.5	287.5	300	325	337.5	362.5	387.5	400	425	< ≥

EX500 Gateway Decentralised System 2 (128 Points)

# Series SY3000/5000/7000

05

#### How to Order Manifold



Type 12 Top Ported

#### Series

	100
3	SY3000
5	SY5000
7	SY7000

\*: For mixed mounting, refer to page 213 and later.

#### SI Unit (Number of outputs, Output polarity, Max, number of valve stations)

Mux. Hulli	
0	Without SI Unit
A3N	32 outputs <sup>*1*4</sup> , 1 to 16 stations (24 stations <sup>*3</sup> ), Negative common <sup>*2</sup>

- \*1: 16 outputs can be set by switching the built-in setting switch.
- \*2: Ensure a match with the common specification of the valve.
- \*3: ( ): Maximum number of stations for mixed single and double wiring.
- \*4: When using the SI Unit with 32 outputs, use the GW Unit compatible with the EX500 Gateway Decentralised System 2 (128 points).

C	5	Valve s	tations
		Stations	Note
0	)2	2 stations	
:		÷	Double wiring <sup>*1</sup>
1	6	16 stations	
0	)2	2 stations	Crastin d laws ut*2
:		÷	Specified layout*2 (Available up to 32 solenoids)
2	24	24 stations	(Available up to 32 soleholds)

**A**...

- \*1: Double wiring: 2-position single, double, 3-position and 4-position valves can be used on all manifold stations. Use of a 2-position single solenoid will result in an unused control signal. If this is not desired, order with a specified layout.
- \*2: Specified layout: Indicate the wiring specifications on the manifold specification sheet. (Note that 2-position double, 3-position and 4-position valves cannot be used where single wiring has been specified.)
- \*: When the product without the SI Unit (S0) is selected, note the maximum number of solenoids of the SI Unit that will be mounted. If the layout is specified, indicate it on the manifold specification sheet.
- \*: This also includes the number of blanking plate assembly.

#### P, E port entry

••••	
<b>U</b> *1	U side (2 to 10 stations)
<b>D</b> *1	D side (2 to 10 stations)
В	Both sides (2 to 24 stations)


\*1: For type "S", supply/exhaust block assembly with built-in silencer, choose "U" or "D" for P, E port entry.

#### **5** SUP/EXH block assembly

—	Internal pilot			
<b>S</b> ∗1	Internal pilot, Built-in silencer*2			
R	External pilot			

- \*1: For type "S", supply/exhaust block assembly with built-in silencer, choose "U" or "D" for P, E port entry. 3/5(E) port is plugged. The silencer exhaust port is located on the opposite side of P, E port entry. (Example: When the P, E port entry is D side, the silencer exhaust port is U side.)
- \*2: When the built-in silencer type is used, keep the exhaust port from coming in direct contact with water or other liquids.

#### How to Order Manifold Assembly

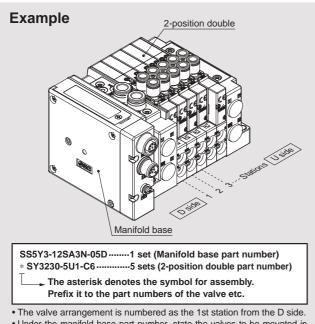

The valve arrangement is numbered as the 1st station from the D side.
Under the manifold base part number, state the valves to be mounted in order from the 1st station as shown in the figure above. If the arrangement becomes complicated, specify on the manifold specification sheet.

#### **6** P, E port size (One-touch fittings)

<b>•</b> ,				
	SY3000	SY5000	SY7000	
_	Ø 8	Ø 10	Ø 12	
<b>N</b> *1	Ø 5/16"	Ø 3/8"	Ø 1/2"	
*1: For "	N". sizes are	in inches.		

,

#### Mounting

	Direct mounting
D	With DIN bracket, DIN rail with standard length
D0	With DIN bracket, without DIN rail
D3*1	With DIN bracket, DIN rail for 3 stations
:	
D24*1	With DIN bracket, DIN rail for 24 stations


\*1: Specify a longer rail than the length of valve stations.

- \*: If the DIN rail must be mounted without an SI Unit, select "D0". Then, refer to L3 of the dimensions for the DIN rail length and
- order separately. Refer to page 249 for the DIN rail part number. \*: Refer to page 271 for the fixation of DIN rail mounting type manifold.

\*: A separate GW Unit and communication cable are required.

For details about the EX500 Gateway-type Serial Transmission System, refer to the WEB catalogue on SMC website **www.smc.eu** and the Operation Manual. For details about part numbers of SI Units to be mounted, refer to page 235 in this catalogue. Please download the Operation Manual via SMC website, **http://www.smc.eu** 

## Elligent Connector Connecting Base Series SY3000/5000/7000

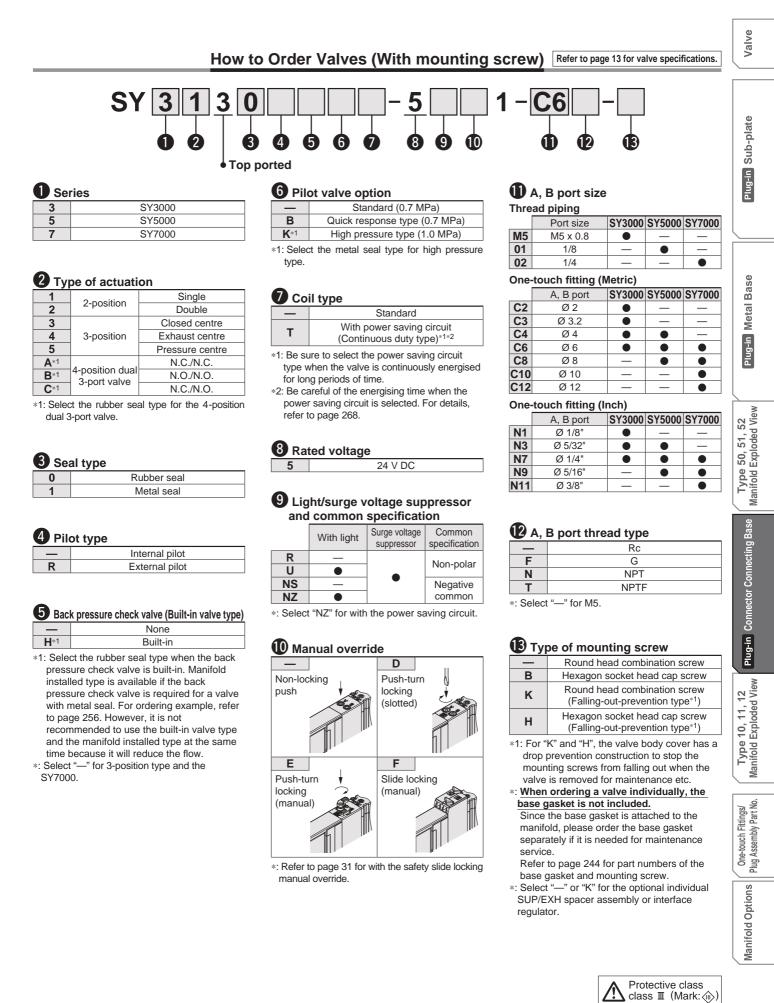

EX500 Gateway Decentralised System (64 Points)

# Series SY3000/5000/7000

05

#### How to Order Manifold

Refer to pages 210 to 212 for dimensions of Type 12/Top ported type.

O	Series

Type 12 Top Port<u>ed</u>

U Sei	les
3	SY3000
5	SY5000
7	SY7000

\*: For mixed mounting, refer to page 213 and later.


#### 2 SI Unit (Number of outputs, Output polarity, Max. number of valve stations)

maxi number er farte statieneg		
0	Without SI Unit	
16 outputs,		
A2	Positive common*1,	
	1 to 8 stations (16 stations)*2	
	16 outputs,	
A2N	Negative common*1,	
	1 to 8 stations (16 stations)*2	

\*1: Ensure a match with the common specification of the valve to be used.

 \*2: (): Maximum number of stations for mixed single and double wiring.

#### How to Order Manifold Assembly

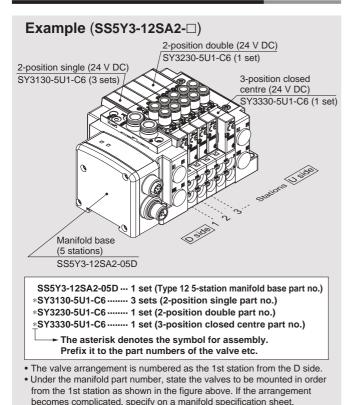

SS5Y 3-12S A2

<b>U</b> *1	U side (2 to 10 stations)
<b>D</b> *1	D side (2 to 10 stations)
В	Both sides (2 to 16 stations)

\*1: So For type "S", supply/exhaust block assembly with built-in silencer, choose U or D for P port entry.

#### **5** SUP/EXH block assembly

	Internal pilot
S	Internal pilot/Built-in silencer
R	External pilot

- \*: For built-in silencer type, P and E ports are available on U and D sides. 3/5(E) port is plugged. The silencer exhaust port is located on the opposite side of P, E port entry. (Example: When the P, E port entry is D side, the silencer exhaust port is U side.)
- \*: When the built-in silencer type is used, keep the exhaust port from coming in direct contact with water or other liquids.

#### **3** Valve stations

Symbol	Stations	Note
02	2 stations	
:	:	Double wiring*1
08	8 stations	
02	2 stations	Creatian lawayt*?
1	:	Specified layout*2 (Available up to 16 solenoids)
16	16 stations	

- \*1: Double wiring: 2-position single, double, 3-position and 4-position valves can be used on all manifold stations. Use of a 2-position single solenoid will result in an unused control signal. If this is not desired, order with a specified layout.
- \*2: Specified layout: Indicate the wiring specifications on the manifold specification sheet. (Note that 2-position double, 3-position and 4-position valves cannot be used where single wiring has been specified.)
- \*: When the product without the SI Unit (S0) is selected, note the maximum number of solenoids of the SI Unit that will be mounted. If the layout is specified, indicate it on the manifold specification sheet.
- \*: This also includes the number of blanking plate assembly.

#### **6** P, E port size (One-touch fittings)

Symbol	SY3000	SY5000	SY7000	
—	Ø 8	Ø 10	Ø 12	
Ν	Ø 5/16"	Ø 3/8"	Ø 1/2"	

\*: For N, sizes are in inches

#### **7** Mounting

—	Direct mounting		
D	With DIN bracket, DIN rail with standard length		
D0	With DIN bracket, without DIN rail		
<b>D3</b> *1	With DIN bracket, DIN rail for 3 stations		
:			
D16*1	With DIN bracket, DIN rail for 16 stations		

\*1: Specify a longer rail than the length of valve stations

- \*: If the DIN rail must be mounted without an SI Unit, select "D0". Then, refer to L3 of the dimensions for the DIN rail length and order separately. Refer to page 249 for the DIN rail part number.
- \*: Refer to page 271 for the fixation of DIN rail mounting type manifold.


\*: A separate GW Unit and communication cable are required.

For details about the EX500 Gateway-type Serial Transmission System, refer to the WEB catalogue on SMC website **www.smc.eu** and the Operation Manual. For details about part numbers of SI Units to be mounted, refer to page 236 in this catalogue. Please download the Operation Manual via SMC website, **http://www.smc.eu** 



P, E port entry

## Elucein Connector Connecting Base Series SY3000/5000/7000

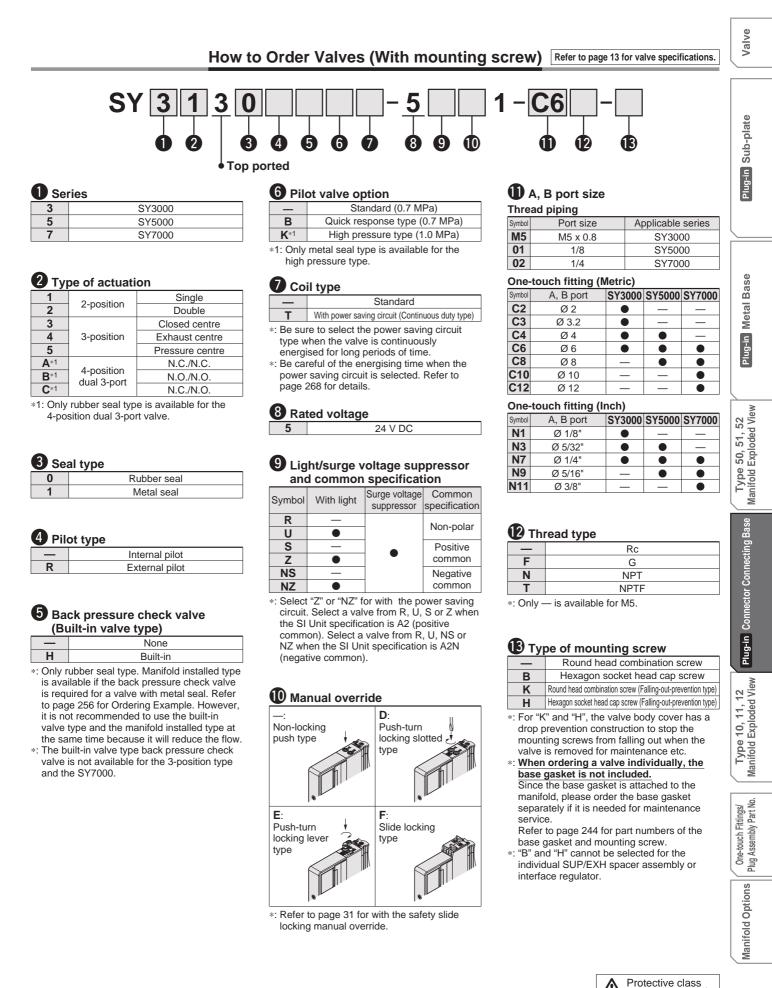

**SMC** 

**EX600** 

SS5Y

# Series SY3000/5000/7000

4

#### How to Order Manifold

S6Q

Refer to pages 208 (SY5000) and 209 (SY7000) for dimensions of Type 11/Bottom ported type.

#### Series

Type 10

Type 11 Bottom Ported

Side Ported

3	SY3000
5	SY5000
7	SY7000

2 ту	be
10	

/		
10	Side ported	
11 Bottom ported*1		
4 TI OV(5000 10 111 1 10 10 11		

\*1: The SY5000 manifold base is used for the bottom ported of the SY3000. When ordering, refer to "Plug-in Mixed Mounting Type Manifold" (from page 213).

#### **3** SI Unit

0	Without SI Unit	
Q	DeviceNet™	
N	PROFIBUS DP	
V	CC-Link	
ZE	EtherNet/IP™ (1 port)	
EA	EtherNet/IP™ (2 ports)	
D	EtherCAT <sup>®</sup>	
F	PROFINET	
WE	EtherNet/IP <sup>™</sup> compatible wireless base *1	
WF	PROFINET compatible wireless base *1	
WS	Wireless remote *1	

\*1 The wireless system is suitable for use only in a country where it is in accordance with the Radio Act and regulations of that country.

 I/O Unit cannot be mounted without SI Unit.
 Valve plate which connects manifold and SI Unit is not mounted to a valve without SI Unit. Refer to the EX600 catalogue (CAT.EU02-24E-UK) for mounting.

#### **5** I/O Unit stations

3

None
1 station
:
9 stations

\*: Without SI Unit, the symbol is ---.

10

- \*: SI Unit is not included in I/O Unit stations.
- \*: When I/O Unit is selected, it is shipped separately, and assembled by users. Refer to the attached operation manual for mounting.

#### 6 Valve stations


Stations	Note		
2 stations			
:	Double wiring <sup>*1</sup>		
16 stations			
2 stations	0		
:	Specified layout <sup>*2</sup> (Available up to 32 solenoids)		
24 stations	(Available up to 52 soleriolds)		
	2 stations i 16 stations 2 stations i		

- \*1: Double wiring: 2-position single, double, 3-position and 4-position valves can be used on all manifold stations. Use of a 2-position single solenoid will result in an unused control signal. If this is not desired, order with a specified layout.
- \*2: Specified layout: Indicate the wiring specifications on the manifold specification sheet. (Note that 2-position double, 3-position and 4-position valves cannot be used where single wiring has been specified.)
- This also includes the number of blanking plate assembly.

#### 9 Mounting and Option

05

2

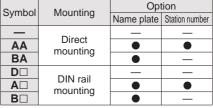

Enter the number of stations inside □ when it is larger than the number of valve stations. (Refer to "DIN Rail Option" below.)

- \*: Only direct mounting is available for Type 11 (Bottom ported).
- \*: Refer to page 271 for the fixation of DIN rail mounting type manifold.

#### **DIN Rail Option**

—	Direct mounting				
0	Without DIN rail (with bracket)				
3	For 3 stations				
:	:	Specify a longer rail than the total length of specified stations.			
24	For 24 stations	total length of specified stations.			

\*: If the DIN rail must be mounted without an SI Unit, select D0. Then, refer to L3 of the dimensions for the DIN rail length and order separately. (Refer to page 249 for the DIN rail part number.)

#### **4** SI Unit output polarity, end plate type

SI Unit output polarity	Power supply with M12 connector	Power supply with 7/8 inch connector	Power supply with M12 connector. IN/OUT pin arrangement 1	Power supply with M12 connector. IN/OUT pin arrangement 2
Without SI Unit		-	_	
SI Unit positive common	2	3	6	8
SI Unit negative common	4	5	7	9

\*: Ensure a match with the common specification of the valve to be used. \*: Without SI Unit, the symbol is —.

#### P, E port entry, SUP/EXH block assembly

P, E port entry	Internal pilot	Internal pilot, Built-in silencer	External pilot	
U side (2 to 10 stations)	U	С	G	
D side (2 to 10 stations)	D	E	Н	
Both sides (2 to 24 stations)	В	F	J	

\*: 3/5(E) port is plugged for the built-in silencer type.

\*: When the built-in silencer type is used, keep the exhaust port from coming in direct contact with water or other liquids.

Refer to the page on the right for (3).

For details about the EX600 Integrated-type (For Input/Output) Serial Transmission System, refer to the WEB catalogue on SMC website **www.smc.eu** and the Operation Manual. For details about part numbers of SI Units to be mounted, refer to pages 237 and 238 in this catalogue. (IP40 specifications may be required according to the I/O Unit to be selected.) Please download the Operation Manual via SMC website, **http://www.smc.eu** 



## Plug-in Connector Connecting Base Series SY3000/5000/7000

Plug-in Sub-plate

**Metal Base** 

Plug-in

Type 50, 51, 52 Manifold Exploded View

Plug-in Connector Connecting Base

8 A, B port size (Metric/One-touch fitting) Type 10/Side ported Type 11/Bottom ported Symbo A, B port SY3000 SY5000 SY7000 SY5000 SY7000 C2 Ø2 C3 Ø 3.2 C4 Ø 4 Straight **C**6 Ø 6 **C**8 Ø 8 Ø 10 C10 C12 Ø 12 CM\* Straight port, mixed sizes L4 Ø4 L6 Ø 6 Upward L8 Ø 8 \_ L10 Ø 10 \_\_\_\_ L12 \_\_\_\_ Ø 12 Elbow\*2 **B4** Ø 4 Downward **B6** Ø 6 **B**8 Ø 8 \_ B10 Ø 10 \_ B12 Ø 12 \_\_\_\_\_ Elbow port, mixed sizes LM\* (Including upward and downward piping) P, E port size Ø 10 Ø 8 Ø 10 Ø 12 Ø 12 (One-touch fittings)


<u>A, B</u>	A, B port size (Inch/One-touch fitting)								
Sumbol	A, B port		Type 1	0/Side	ported	Type 11/Bo	ttom ported		
Symbol		А,	ь роп	SY3000	SY5000	SY7000	SY5000	SY7000	
N1			Ø 1/8"		_			_	
N3			Ø 5/32"		•			_	
N7	Straight		Ø 1/4"		•				
N9	Stra		Ø 5/16"		•	•			
N11	•••		Ø 3/8"	—	_				elSas
<b>CM</b> *1		Straig	ht port, mixed sizes		•				
LN3		T	Ø 5/32"				—		
LN7		Jpward	Ø 1/4"		•			_	
LN9		Ъ	Ø 5/16"	—	•			_	
LN11	0		Ø 3/8"	—		•	—		al Salar
BN3	Elbow*2	p	Ø 5/32"		_			_	
BN7	llbo	wa	Ø 1/4"		•			_	
BN9		Downward	Ø 5/16"	—	•		—	_	
<b>BN11</b>		Õ	Ø 3/8"	—	_		—	_	Total State
<b>LM</b> *1		(Incl	v port, mixed sizes uding upward and wnward piping)	•	•	•	_	—	
	P, E port size (One-touch fittings)			Ø 5/16"	Ø 3/8"	Ø 1/2"	Ø 3/8"	Ø 1/2"	

\*1: Indicate the sizes on the manifold specification sheet in the case of "CM", "LM". The direction of P, E port fittings is the same as for A, B port. If selecting "LM", indicate it on the manifold specification sheet for the P, E port fitting direction.

**GSMC** 

\*2: To avoid interference with the body or piping, select downward elbow port when mounting the optional spacer assembly (pages 250 to 252).

#### How to Order Manifold Assembly

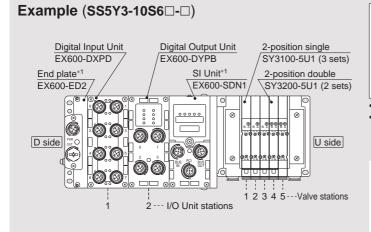

SS5Y3-10S6Q42-05B-C6 1 set (Type 10 5-station manifold base part no.)
*SY3100-5U1 3 sets (2-position single part no.)
*SY3200-5U1 2 sets (2-position double part no.)
*EX600-DXPD 1 set I/O Unit part number (Station 1)
*EX600-DYPB 1 set I/O Unit part number (Station 2)
■ The asterisk denotes the symbol for assembly.
Prefix it to the part numbers of the valve etc.

The valve arrangement is numbered as the 1st station from the D side.
Under the manifold part number, state the valves to be mounted, then the I/O Units in order from the 1st station as shown in the figure on the left. If the arrangement becomes complicated, specify on a manifold

specification sheet.\*1: Do not enter the SI Unit part number and the end plate part number together.

 When mixing top ported configurations, select from page 172.
 In this case, use caution as there is also output on the A and B port on base side.

Specify on a manifold specification sheet if plugs are required on the A and B port on base side.


Manifold Options

Type 10, 11, 12 Manifold Exploded View



162



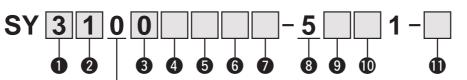

1 Series				
3	SY3000			
5	SY5000			
7	SV7000			

#### 2 Type of actuation

1	2 position	Single		
2	2-position	Double		
3		Closed centre		
4	3-position	Exhaust centre		
5		Pressure centre		
<b>A</b> *1	4	N.C./N.C.		
<b>B</b> *1	4-position dual 3-port	N.O./N.O.		
<b>C</b> *1	uuai 3-port	N.C./N.O.		

\*1: Only rubber seal type is available for the 4-position dual 3-port valve.

#### **3** Seal type

0.96	aitype
0	Rubber seal
1	Metal seal

#### 4 Pilot type

—	Internal pilot
R	External pilot

#### Back pressure check valve (Built-in valve type)

	(-,		
ſ	—	None	
	Н	Built-in	

- \*: Only rubber seal type. Manifold installed type is available if the back pressure check valve is required for a valve with metal seal. Refer to page 256 for Ordering Example. However, it is not recommended to use the built-in valve type and the manifold installed type at the same time because it will reduce the flow.
- and the SY7000.

#### 6 Pilot valve option

Base mounted

—	Standard (0.7 MPa)										
В	Quick response type (0.7 MPa)										
<b>K</b> *1	High pressure type (1.0 MPa)										
*1: Only	metal seal type is available for the										

high pressure type.

#### Coil type

- Standard
- T With power saving circuit (Continuous duty type) \*: Be sure to select the power saving circuit type when the valve is continuously
- energised for long periods of time.\*: Be careful of the energising time when the
- be called of the energising time when the power saving circuit is selected. Refer to page 268 for details.

#### 8 Rated voltage




### 9 Light/surge voltage suppressor and common specification

Symbol	With light	Surge voltage suppressor	Common specification					
R	_		Non-polar					
U	•		Non-polar					
S	—		Positive					
Z		•	common					
NS	_		Negative					
NZ	•		common					

 Select a valve from R, U, S or Z when the SI Unit polarity is positive common. Select a valve from R, U, NS or NZ when the SI Unit output polarity is negative common.
 Only "Z" and "NZ" types are available for with

\*: Only "Z" and "NZ" types are available for with the power saving circuit.

#### 0 Manual override

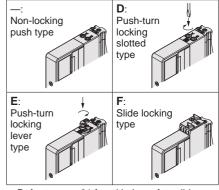

\*: Refer to page 31 for with the safety slide locking manual override.


#### Type of mounting screw

_	Round head combination screw
В	Hexagon socket head cap screw
K	Round head combination screw (Falling-out-prevention type)
Н	Hexagon socket head cap screw (Falling-out-prevention type)


- \*: For "K" and "H", the valve body cover has a drop prevention construction to stop the mounting screws from falling out when the valve is removed for maintenance etc.
- \*: When ordering a valve individually, the base gasket is not included. Since the base gasket is attached to the manifold, please order the base gasket separately if it is needed for maintenance service.

Refer to page 244 for part numbers of the base gasket and mounting screw.


\*: "B" and "H" cannot be selected for the individual SUP/EXH spacer assembly, interface regulator or double check spacer assembly with residual pressure release valve.

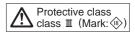

## Elucein Connector Connecting Base Series SY3000/5000/7000

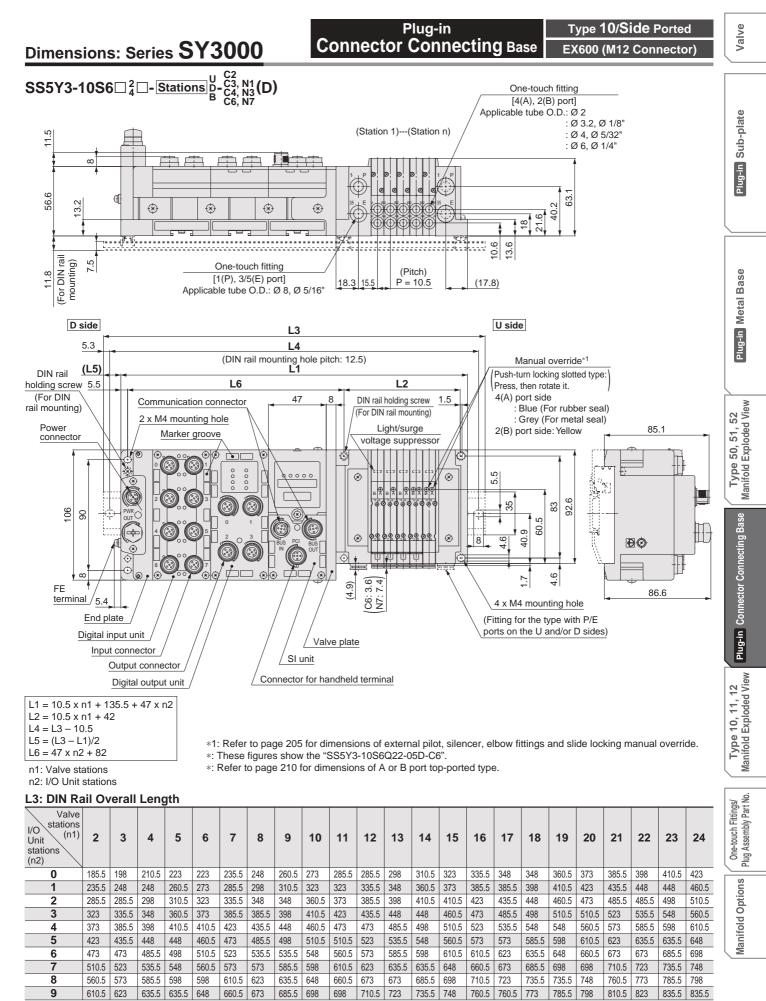



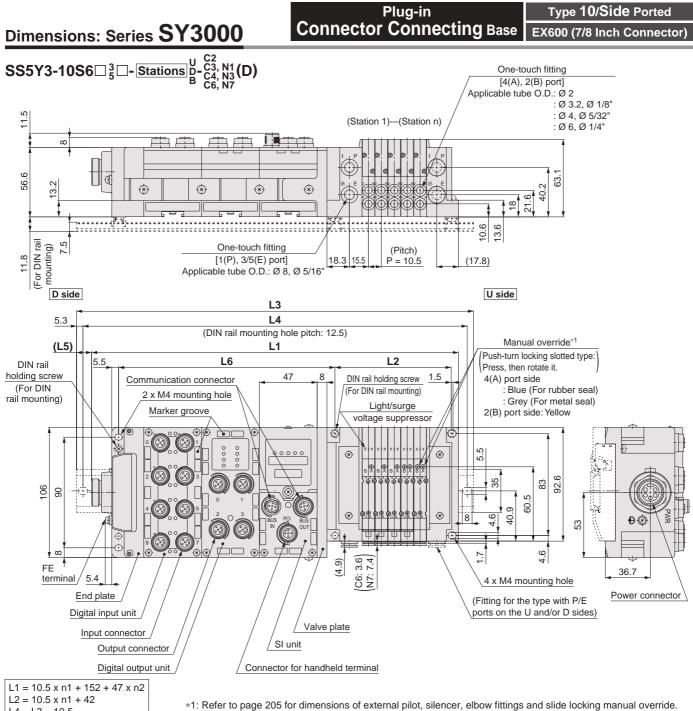

	10.5 x n1 + 4
L4 =	L3 – 10.5
I	



|--|

n1: Valve stations

#### n2: I/O Unit stations

#### L3: DIN Rail Overall Length

LO. DIN INC																							
Valve I/O stations Unit stations (n2)	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	21	22	23	24
0	198	210.5	223	235.5	248	260.5	260.5	273	285.5	298	310.5	323	323	335.5	348	360.5	373	385.5	385.5	398	410.5	423	435.5
1	248	260.5	273	285.5	285.5	298	310.5	323	335.5	348	360.5	360.5	373	385.5	398	410.5	423	423	435.5	448	460.5	473	485.5
2	298	310.5	323	323	335.5	348	360.5	373	385.5	385.5	398	410.5	423	435.5	448	448	460.5	473	485.5	498	510.5	523	523
3	348	348	360.5	373	385.5	398	410.5	423	423	435.5	448	460.5	473	485.5	485.5	498	510.5	523	535.5	548	548	560.5	573
4	385.5	398	410.5	423	435.5	448	448	460.5	473	485.5	498	510.5	510.5	523	535.5	548	560.5	573	585.5	585.5	598	610.5	623
5	435.5	448	460.5	473	485.5	485.5	498	510.5	523	535.5	548	548	560.5	573	585.5	598	610.5	610.5	623	635.5	648	660.5	673
6	485.5	498	510.5	510.5	523	535.5	548	560.5	573	573	585.5	598	610.5	623	635.5	648	648	660.5	673	685.5	698	710.5	710.5
7	535.5	548	548	560.5	573	585.5	598	610.5	610.5	623	635.5	648	660.5	673	673	685.5	698	710.5	723	735.5	735.5	748	760.5
8	573	585.5	598	610.5	623	635.5	635.5	648	660.5	673	685.5	698	710.5	710.5	723	735.5	748	760.5	773	773	785.5	798	810.5
9	623	635.5	648	660.5	673	673	685.5	698	710.5	723	735.5	735.5	748	760.5	773	785.5	798	798	810.5	823	835.5	848	860.5


\*: These figures show the "SS5Y3-10S6Q32-05D-C6".

\*: Refer to page 210 for dimensions of A or B port top-ported type.






## Elucein Connector Connecting Base Series SY3000/5000/7000

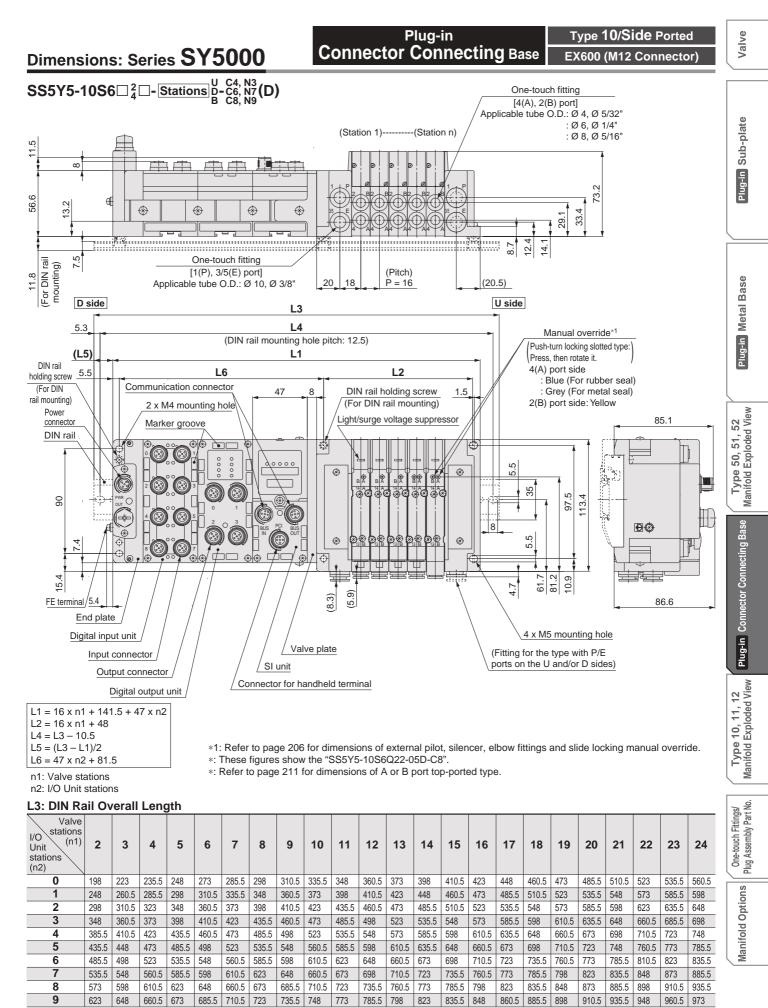

**⊘**SMC

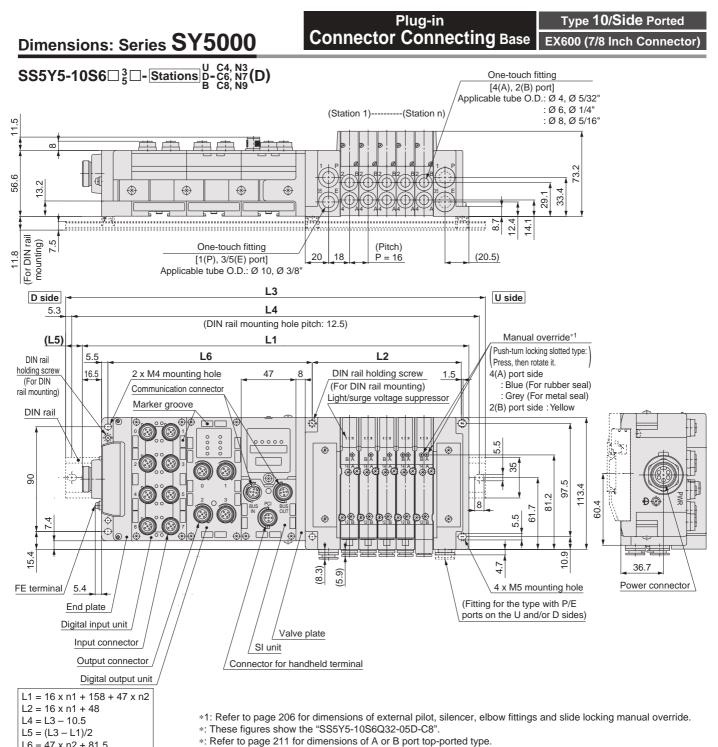

L6 = 47 x n2 + 81.5

n1: Valve stations n2: I/O Unit stations


n2: I/O Unit stations

#### L3: DIN Rail Overall Length

Valve stations Unit stations (n2)	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	21	22	23	24
0	223	235.5	248	273	285.5	298	310.5	335.5	348	360.5	385.5	398	410.5	423	448	460.5	473	485.5	510.5	523	535.5	560.5	573
1	260.5	285.5	298	310.5	335.5	348	360.5	373	398	410.5	423	448	460.5	473	485.5	510.5	523	535.5	560.5	573	585.5	598	623
2	310.5	335.5	348	360.5	373	398	410.5	423	435.5	460.5	473	485.5	510.5	523	535.5	548	573	585.5	598	623	635.5	648	660.5
3	360.5	373	398	410.5	423	435.5	460.5	473	485.5	510.5	523	535.5	548	573	585.5	598	610.5	635.5	648	660.5	685.5	698	710.5
4	410.5	423	435.5	460.5	473	485.5	498	523	535.5	548	573	585.5	598	610.5	635.5	648	660.5	685.5	698	710.5	723	748	760.5
5	460.5	473	485.5	498	523	535.5	548	560.5	585.5	598	610.5	635.5	648	660.5	673	698	710.5	723	748	760.5	773	785.5	810.5
6	498	523	535.5	548	560.5	585.5	598	610.5	635.5	648	660.5	673	698	710.5	723	735.5	760.5	773	785.5	810.5	823	835.5	848
7	548	560.5	585.5	598	610.5	623	648	660.5	673	698	710.5	723	735.5	760.5	773	785.5	810.5	823	835.5	848	873	885.5	898
8	598	610.5	623	648	660.5	673	685.5	710.5	723	735.5	760.5	773	785.5	798	823	835.5	848	873	885.5	898	910.5	935.5	948
9	648	660.5	673	685.5	710.5	723	735.5	760.5	773	785.5	798	823	835.5	848	860.5	885.5	898	910.5	935.5	948	960.5	973	—



## Elugein Connector Connecting Base Series SY3000/5000/7000

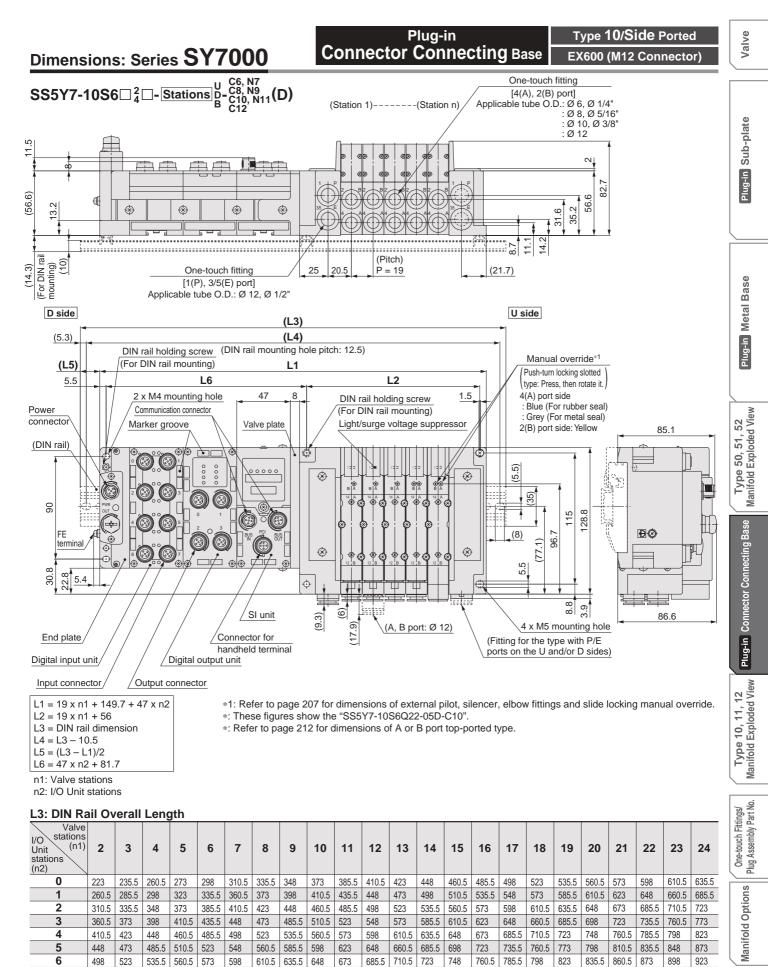



848

735.5 760.5

785.5 798 773

823

873

798

835.5

885.5

810.5

910.5 923

860.5 873

835.5 848

898

948

873

910.5

960.5

885.5

935.5 948

985.5

910.5 923

973

7

8

9

548

598

560.5

610.5

635.5 660.5

598

698

623

673

710.5

585.5

635.5 648

673

660.5

685.5 710.5

673

723

773

698

748

798

723


760.5

810.5

635.5

735.5 748 960.5

948

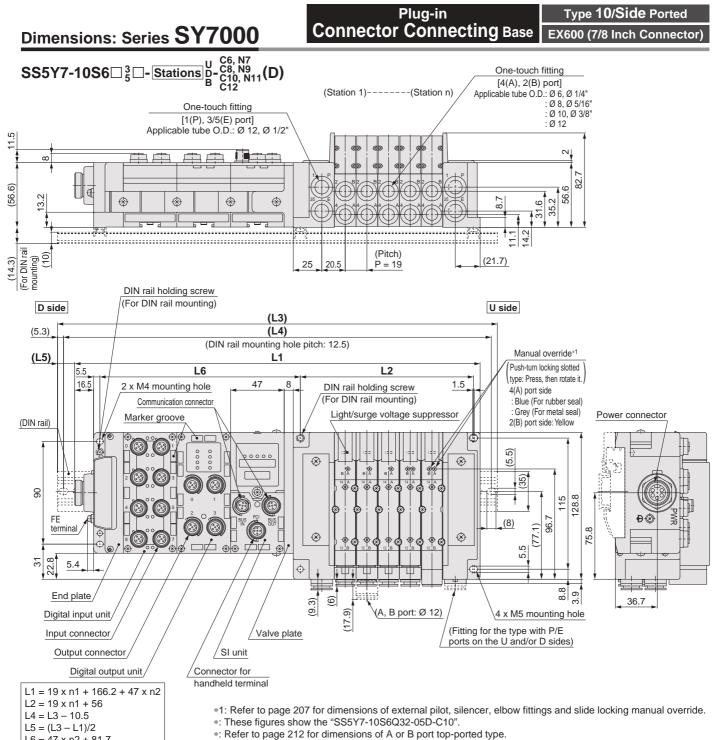

L6 = 47 x n2 + 81.7

n1: Valve stations

n2: I/O Unit stations

#### L3: DIN Rail Overall Length

Valve I/O stations Unit (n1) stations (n2)	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	21	22	23	24
0	235.5	248	273	285.5	310.5	323	348	360.5	385.5	410.5	423	448	460.5	485.5	498	523	535.5	560.5	573	598	610.5	635.5	648
1	285.5	298	323	335.5	360.5	373	398	410.5	435.5	448	473	485.5	510.5	523	548	560.5	585.5	598	623	635.5	660.5	685.5	698
2	323	348	360.5	385.5	398	423	435.5	460.5	485.5	498	523	535.5	560.5	573	598	610.5	635.5	648	673	685.5	710.5	723	748
3	373	398	410.5	435.5	448	473	485.5	510.5	523	548	560.5	585.5	598	623	635.5	660.5	673	698	710.5	735.5	760.5	773	798
4	423	435.5	460.5	473	498	510.5	535.5	560.5	573	598	610.5	635.5	648	673	685.5	710.5	723	748	760.5	785.5	798	823	835.5
5	473	485.5	510.5	523	548	560.5	585.5	598	623	635.5	660.5	673	698	710.5	735.5	748	773	785.5	810.5	835.5	848	873	885.5
6	510.5	535.5	548	573	585.5	610.5	635.5	648	673	685.5	710.5	723	748	760.5	785.5	798	823	835.5	860.5	873	898	910.5	935.5
7	560.5	585.5	598	623	635.5	660.5	673	698	710.5	735.5	748	773	785.5	810.5	823	848	860.5	885.5	910.5	923	948	960.5	985.5
8	610.5	623	648	660.5	685.5	710.5	723	748	760.5	785.5	798	823	835.5	860.5	873	898	910.5	935.5	948	973	985.5	_	—
9	660.5	673	698	710.5	735.5	748	773	785.5	810.5	823	848	860.5	885.5	898	923	935.5	960.5	985.5	_	—	_	_	_





Valve	
Plug-in Sub-plate	
Plug-in Metal Base	
Type 50, 51, 52 Manifold Exploded View	
Plug-in Connector Connecting Base	
Type 10, 11, 12 Manifold Exploded View	
One-touch Fittings/ Plug Assembly Part No.	
Manifold Options	

**EX600** 

## Series **SY3000/5000/7000 C** €

How to Order Manifold

Refer to pages 210 to 212 for dimensions of Type 12/Top ported type.

SY3000

SY5000

SY7000

Type 12 To<u>p Ported</u>

<b>3</b> SI Unit output polarity, end plate typ	е
---	---

SI Unit output polarity	Power supply with M12 connector	Power supply with 7/8 inch connector	Power supply with M12 connector. IN/OUT pin arrangement 1	Power supply with M12 connector. IN/OUT pin arrangement 2
Without SI Unit		-	_	
SI Unit positive common	2	3	6	8
SI Unit negative common	4	5	7	9

SS5Y 3 - 12S6 Q

\*: Ensure a match with the common specification of the valve to be used. \*: Without SI Unit, the symbol is —.

1

ŝ

9

4 I/O Unit stations

Without SI Unit, the symbol is -

\*: SI Unit is not included in I/O Unit stations.

separately, and assembled by users. Refer to

the attached operation manual for mounting.

\*: When I/O Unit is selected, it is shipped

None

1 station

÷

9 stations

#### 2 SI Unit

Series

3

5

7

<b>G</b> Si Unit				
0	Without SI Unit			
Q	DeviceNet™			
N	PROFIBUS DP			
V	CC-Link			
ZE	EtherNet/IP™ (1 port)			
EA	EtherNet/IP™ (2 ports)			
D	EtherCAT <sup>®</sup>			
F	PROFINET			
WE	EtherNet/IP <sup>™</sup> compatible wireless base *1			
WF	PROFINET compatible wireless base *1			
WS	Wireless remote *1			


\*1 The wireless system is suitable for use only in a country where it is in accordance with the Radio Act and regulations of that country.

\*: I/O Unit cannot be mounted without SI Unit.

\*: Valve plate which connects manifold and SI Unit is not mounted to a valve without SI Unit. Refer to the EX600 catalogue (CAT.EU02-24E-UK) for mounting.

#### How to Order Manifold Assembly

#### Example (SS5Y3-12S6□-□)

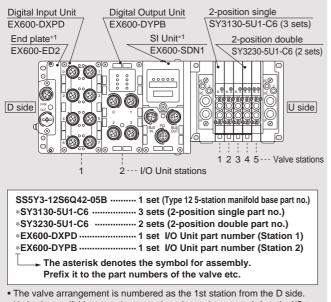

 The valve arrangement is numbered as the 1st station from the D side.
 Under the manifold part number, state the valves to be mounted, then the I/O Units in order from the 1st station as shown in the figure above. If the arrangement becomes complicated, specify on a manifold specification sheet.

 \*1: Do not enter the SI Unit part number and the end plate part number together.

#### **5** Valve stations

05

Symbol	Stations	Note		
02	2 stations			
:	:	Double wiring*1		
16	16 stations			
02	2 stations	Specified layout*2 (Available up to 32 solenoids)		
:	:			
24	24 stations			

 \*1: Double wiring: 2-position single, double, 3-position and 4-position valves can be used on all manifold stations. Use of a 2-position single solenoid will result

- in an unused control signal. If this is not desired, order with a specified layout.
- \*2: Specified layout: Indicate the wiring specifications on the manifold specification sheet. (Note that 2-position double, 3-position and 4-position valves cannot be used where single wiring has been specified.)
- \*: This also includes the number of blanking plate assembly.

#### **6** P, E port entry, SUP/EXH block assembly

P, E port entry	Internal pilot	Internal pilot, Built-in silencer	External pilot		
U side (2 to 10 stations)	U	<b>C</b> *1	G		
D side (2 to 10 stations)	D	<b>E</b> *1	Н		
Both sides (2 to 24 stations)	В		J		

- \*1: For SUP/EXH block assembly specifications, built-in silencer types will have P port entry stipulated.
- \*: For built-in silencer type, P and E ports are available on U and D sides. 3/5(E) port is plugged. The silencer exhaust port is located on the opposite side of P, E port entry. (Example: When the P, E port entry is D side, the silencer exhaust port is U side.)
- \*: When the built-in silencer type is used, keep the exhaust port from coming in direct contact with water or other liquids.

#### P, E port size (One-touch fittings)

Symbol	SY3000	SY5000	SY7000	
_	Ø 8	Ø 10	Ø 12	
Ν	Ø 5/16"	Ø 3/8"	Ø 1/2"	

\*: For N, sizes are in inches.

#### 8 Mounting

_	Direct mounting			
D	DIN rail mounting (With DIN rail)			
D0	DIN rail mounting (Without DIN rail)			
D3	For 3 stations	Specify a longer rail than the standard length.		
:	:			
D24	For 24 stations			


\*: When it is necessary to mount a DIN rail without an SI Unit, select D0 and order DIN rail length separately, referring to L3 in the dimensions. (Refer to page 249 for part numbers of DIN rail.)

\*: Refer to page 271 for the fixation of DIN rail mounting type manifold.

For details about the EX600 Integrated-type (For Input/Output) Serial Transmission System, refer to the WEB catalogue on SMC website www.smc.eu and the Operation Manual. For details about part numbers of SI Units to be mounted, refer to pages 237 and 238 in this catalogue. (IP40 specifications may be required according to the I/O Unit to be selected.) Please download the Operation Manual via SMC website, http://www.smc.eu



## Elucein Connector Connecting Base Series SY3000/5000/7000

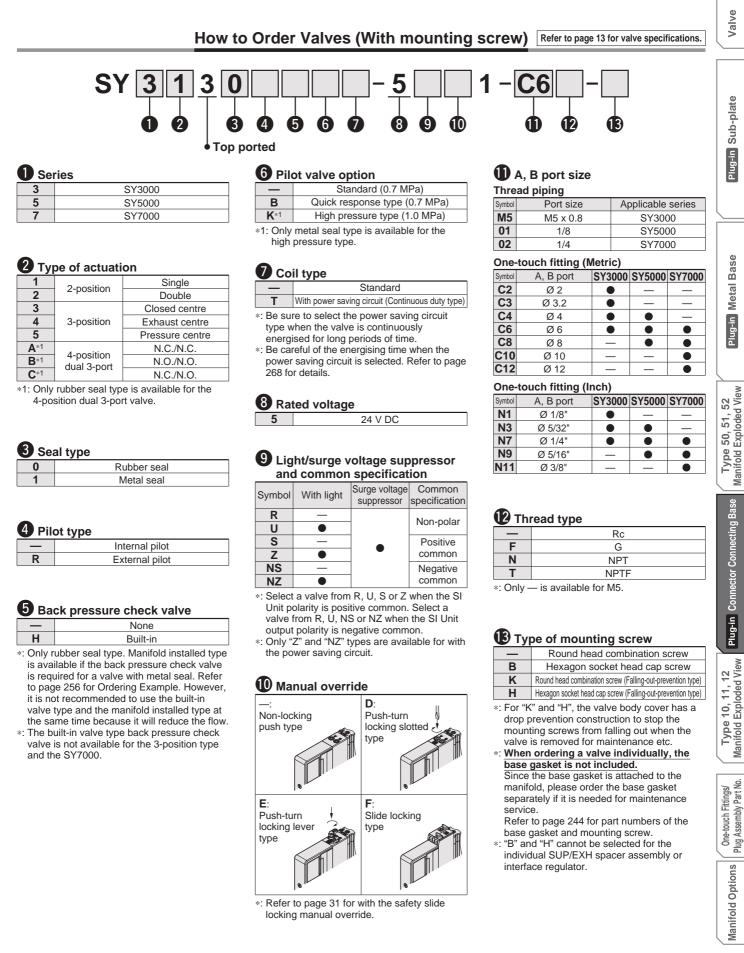

**GSMC** 

Λ	Prote	ctiv	/e class (Mark: ŵ
$\sim$	class	Ш	(Mark: 🕪

**EX250** 

# Series SY3000/5000/7000

#### How to Order Manifold

Refer to pages 208 (SY5000) and 209 (SY7000) for dimensions of Type 11/Bottom ported type.

#### Series

Type 10

Type 11 Bottom Ported

Side Ported

3	SY3000
5	SY5000
7	SY7000

#### 2 Туре

10 11		Side ported	
		Bottom ported*1	
	1. The EVENNO manifold base is used for the		


\*1: The SY5000 manifold base is used for the bottom ported of the SY3000. When ordering, refer to "Plug-in Mixed Mounting Type Manifold" (from page 213).

#### 4 Input block stations

_	None			
1	1 station			
:	:			
8	8 stations			


\*: Without SI Unit, the symbol is —. The maximum number of stations is limited for the AS-Interface applicable SI Unit.

#### How to Order Manifold Assembly

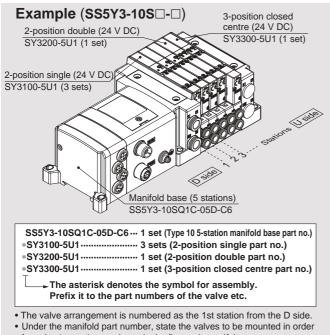

from the 1st station as shown in the figure above. If the arrangement becomes complicated, specify on a manifold specification sheet.

\*: When mixing top ported configurations, select from page 180. In this case, use caution as there is also output on the A and B port on base side. Specify on a manifold specification sheet if plugs are required on the A and B port on base side.

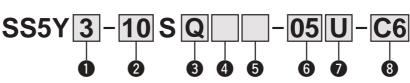

#### **B** SI Unit

0	Without SI Unit			
Q	Device	Net™ (N	legative common)	
Ν	PROFIBUS DP (Negative common)			
V	CC-Link (Positive common)			
TA	AS-Interface	supply	8 in/8 out, 31 slave modes	
TB			4 in/4 out, 31 slave modes	
TC	(Negative common)	1 power supply	8 in/8 out, 31 slave modes	
TD	commony	systems	4 in/4 out, 31 slave modes	
Y	CANopen (Negative common)			
ZE	EtherNet/IP™ (Negative common)			

\*: Ensure a match with the common specification of the valve to be used.

\*: Input block cannot be mounted without SI Unit.

\*: The supply current from the SI Unit of AS-Interface applicable 1 power supply system specification to the input block and valve is limited.

### **5** Input block type

	PNP	NPN	
	sensor input	sensor input	
Without input block	_		
M12, 2 inputs	Α	D	
M12, 4 inputs	В	E	
M8, 4 inputs	С	F	

\*: Without SI Unit, the symbol is -.

#### **6** Valve stations

_		
Symbol	Stations	Note
02	2 stations	
:	:	Double wiring <sup>*1</sup>
16	16 stations	
02	2 stations	Creating law out*2
:	:	Specified layout <sup>*2</sup> (Available up to 32 solenoids)
24	24 stations	(Available up to 52 soleholds)

- \*1: Double wiring: 2-position single, double, 3-position and 4-position valves can be used on all manifold stations. Use of a 2-position single solenoid will result in an unused control signal. If this is not desired, order with a specified layout.
- \*2: Specified layout: Indicate the wiring specifications on the manifold specification sheet. (Note that 2-position double, 3-position and 4-position valves cannot be used where single wiring has been specified.) When determining the number of valve stations, note that the maximum number of solenoids for the AS-Interface applicable SI Unit specification is as follows.

8 in/8 out specification: Max. 8 solenoids
4 in/4 out specification: Max. 4 solenoids

- This also includes the number of blanking plate assembly.
- For the product without the SI Unit (S0), note the maximum number of solenoids of the SI Unit that will be mounted. If the layout is specified, indicate it on the manifold specification sheet.

#### P, E port entry, SUP/EXH block assembly

P, E port entry	Internal pilot	Internal pilot, Built-in silencer	External pilot
U side (2 to 10 stations)	U	С	G
D side (2 to 10 stations)	D	E	Н
Both sides (2 to 24 stations)	В	F	J

\*: 3/5(E) port is plugged for the built-in silencer type.

\*: When the built-in silencer type is used, keep the exhaust port from coming in direct contact with water or other liquids.

For details about the EX250 Integrated-type (For Input/Output) Serial Transmission System, refer to the WEB catalogue on SMC website **www.smc.eu** and the Operation Manual. For details about part numbers of SI Units to be mounted, refer to page 239 in this catalogue. Please download the Operation Manual via SMC website, **http://www.smc.eu** 




## Elucin Connector Connecting Base Series SY3000/5000/7000

Plug-in Sub-plate

Plug-in Metal Base

Type 50, 51, 52 Manifold Exploded View

Plug-in Connector Connecting Base

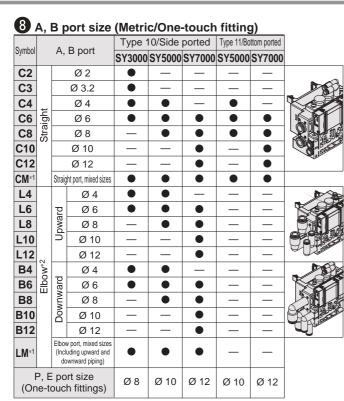

А, В	A, B port size (Inch/One-touch fitting)								
Cumbol	bol A, B port		Type 1	10/Side	ported	Type 11/Bo	ttom ported		
Symbol		А,	ь роп	SY3000	SY5000	SY7000	SY5000	SY7000	
N1			Ø 1/8"		—	_		—	
N3			Ø 5/32"	٠	٠	-		—	
N7	igh		Ø 1/4"	٠	٠	•			
N9	Straight	!	Ø 5/16"	_		•			
N11	•,		Ø 3/8"	—	—		—		el Sasa
<b>CM</b> *1		Straig	ht port, mixed sizes		٠	•			
LN3		_	Ø 5/32"	٠	—	_	—	—	
LN7	1	Jpward	Ø 1/4"						
LN9		Ъ	Ø 5/16"	—		_	—	—	
LN11	0		Ø 3/8"	—	—	•	—	—	alsassas
BN3	W.	b	Ø 5/32"		—	_	—	—	
BN7	Elbow*2	Downward	Ø 1/4"						
BN9		owr	Ø 5/16"	—		_	—	—	
<b>BN11</b>		Õ	Ø 3/8"						Take
<b>LM</b> *1		Elbow port, mixed sizes (Including upward and downward piping)		•	•	•	_	_	
	P, E port size (One-touch fittings)				Ø 3/8"	Ø 1/2"	Ø 3/8"	Ø 1/2"	

\*1: Indicate the sizes on the manifold specification sheet in the case of "CM", "LM". The direction of P, E port fittings is the same as for A, B port. If selecting "LM", indicate it on the manifold specification sheet for the P, E port fitting direction.

**SMC** 

\*2: To avoid interference with the body or piping, select downward elbow port when mounting the optional spacer assembly (pages 250 to 252).

#### 9 Mounting and Option


Symbol Mounting		Option			DIN Rail Option		
Symbol	wounting	Name plate	Station number	1		Direct	mounting
_					0	Without DIN	rail (with bracket)
AA	Direct mounting			1	3	For 3 stations	Specify a longer
BA			_	1		:	rail than the total length of specified
D	DIN rail mounting	_		1	24	For 24 stations	stations.
A				1			
B			_	1			

\*: Enter the number of stations inside 
when it is larger than the number of valve stations. (Refer to "DIN Rail Option" above.)


\*: Only direct mounting is available for Type 11 (Bottom ported).

- \*: Refer to page 271 for the fixation of DIN rail mounting type manifold.
- \*: When it is necessary to mount a DIN rail without an SI Unit, select D0 and order DIN rail length separately, referring to L3 in the dimensions. (Refer to page 249 for part numbers of DIN rail.)

Manifold Options

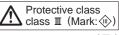



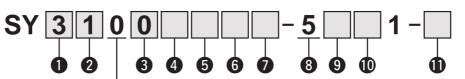

<b>O</b> Series				
3	SY3000			
5	SY5000			
7	SY7000			

#### 2 Type of actuation

1	O magitian	Single	
2	2-position	Double	
3		Closed centre	
4	3-position	Exhaust centre	
5		Pressure centre	
<b>A</b> *1	4-position dual 3-port	N.C./N.C.	
<b>B</b> *1		N.O./N.O.	
<b>C</b> *1		N.C./N.O.	

\*1: Only rubber seal type is available for the 4-position dual 3-port valve.

<b>B</b> Sea		
0		Rubber

#### 4 Pilot type

1

	Internal pilot			
R	External pilot			

seal

Metal seal

## **5** Back pressure check valve (Built-in valve type)

—	None				
Н	Built-in				
*: Only rubber seal type. Manifold installed type					

- is available if the back pressure check valve is required for a valve with metal seal. Refer to page 256 for Ordering Example. However, it is not recommended to use the built-in valve type and the manifold installed type at the same time because it will reduce the flow.
- \*: The built-in valve type back pressure check valve is not available for the 3-position type and the SY7000.

#### 6 Pilot valve option

Base mounted

- Standard (0.7 MPa)				
B Quick response type (0.7 MPa)				
<b>K</b> *1	High pressure type (1.0 MPa)			
1: Only metal seal type is available for the				

high pressure type.

#### Coil type

- Standard
- T With power saving circuit (Continuous duty type) \*: Be sure to select the power saving circuit
- type when the valve is continuously energised for long periods of time.
- \*: Be careful of the energising time when the power saving circuit is selected. Refer to page 268 for details.

#### 8 Rated voltage

5

24 V DC


## 9 Light/surge voltage suppressor and common specification

Symbol	With light	Surge voltage suppressor	Common specification		
R	—		Non-polar		
U			Non-polai		
S	—		Positive		
Z		•	common		
NS			Negative		
NZ			common		
* "R" and "LI" are applicable for every SLUnit					

\*: "R" and "U" are applicable for every SI Unit. However, "S" and "Z" can be used only for CC-Link applicable Unit and "NS" and "NZ" are for Units which are not CC-Link applicable.

\*: Only "Z" and "NZ" types are available for with the power saving circuit.

#### 0 Manual override

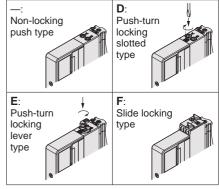


\*: Refer to page 31 for with the safety slide locking manual override.


#### Type of mounting screw

_	Round head combination screw
В	Hexagon socket head cap screw
Κ	Round head combination screw (Falling-out-prevention type)
Н	Hexagon socket head cap screw (Falling-out-prevention type)

- \*: For "K" and "H", the valve body cover has a drop prevention construction to stop the mounting screws from falling out when the valve is removed for maintenance etc.
- \*: When ordering a valve individually, the base gasket is not included. Since the base gasket is attached to the manifold, please order the base gasket separately if it is needed for maintenance service.
- Refer to page 244 for part numbers of the base gasket and mounting screw.
- \*: "B" and "H" cannot be selected for the individual SUP/EXH spacer assembly, interface regulator or double check spacer assembly with residual pressure release valve.

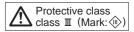

## Plug-in Connector Connecting Base Series SY3000/5000/7000

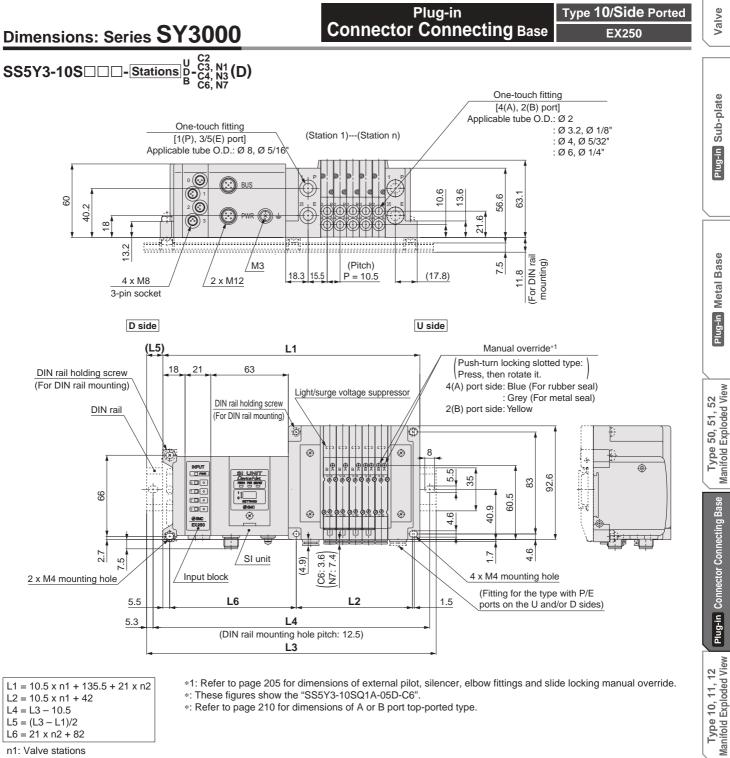

L2 = 10.5 x n1 + 42 L4 = L3 - 10.5L5 = (L3 - L1)/2 $L6 = 21 \times n2 + 82$ 

\*: These figures show the "SS5Y3-10SQ1A-05D-C6". \*: Refer to page 210 for dimensions of A or B port top-ported type.


n1: Valve stations

n2: Input block stations

#### L3: DIN Rail Overall Length


L3: DIN Ra	ail Ov	verall	Leng	gth																				No.
Valve stations (n1) block stations (n2)	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	21	22	23	24	One-touch Fittings/ Plug Assembly Part N
0	185.5	198	210.5	223	223	235.5	248	260.5	273	285.5	285.5	298	310.5	323	335.5	348	348	360.5	373	385.5	398	410.5	423	
1	210.5	223	223	235.5	248	260.5	273	285.5	285.5	298	310.5	323	335.5	348	348	360.5	373	385.5	398	410.5	423	423	435.5	ons
2	223	235.5	248	260.5	273	285.5	285.5	298	310.5	323	335.5	348	348	360.5	373	385.5	398	410.5	423	423	435.5	448	460.5	pti
3	248	260.5	273	285.5	285.5	298	310.5	323	335.5	348	348	360.5	373	385.5	398	410.5	423	423	435.5	448	460.5	473	485.5	Op
4	273	285.5	285.5	298	310.5	323	335.5	348	348	360.5	373	385.5	398	410.5	423	423	435.5	448	460.5	473	485.5	485.5	498	lifol
5	285.5	298	310.5	323	335.5	348	348	360.5	373	385.5	398	410.5	423	423	435.5	448	460.5	473	485.5	485.5	498	510.5	523	Manifol
6	310.5	323	335.5	348	348	360.5	373	385.5	398	410.5	423	423	435.5	448	460.5	473	485.5	485.5	498	510.5	523	535.5	548	
7	335.5	348	348	360.5	373	385.5	398	410.5	423	423	435.5	448	460.5	473	485.5	485.5	498	510.5	523	535.5	548	548	560.5	
8	348	360.5	373	385.5	398	410.5	423	423	435.5	448	460.5	473	485.5	485.5	498	510.5	523	535.5	548	548	560.5	573	585.5	



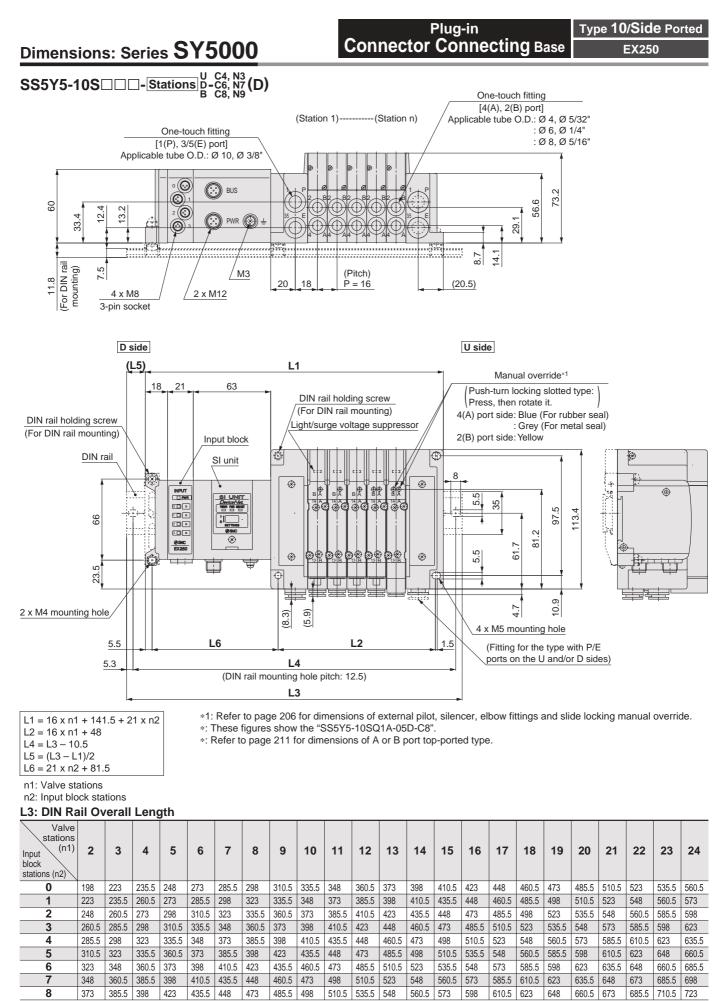



## Elucia Connector Connecting Base Series SY3000/5000/7000

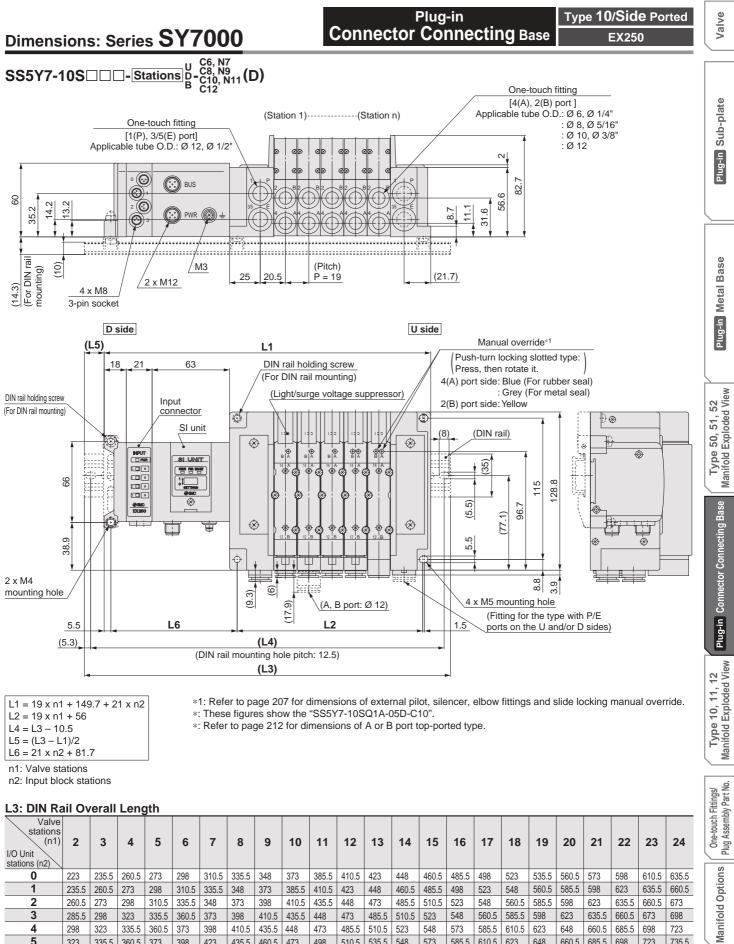

Stations		-		_	_		-	-																
(n1)	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	21	22	23	24	8
I/O Unit																								
stations (n2)																								È
0	223	235.5	260.5	273	298	310.5	335.5	348	373	385.5	410.5	423	448	460.5	485.5	498	523	535.5	560.5	573	598	610.5	635.5	
1	235.5	260.5	273	298	310.5	335.5	348	373	385.5	410.5	423	448	460.5	485.5	498	523	548	560.5	585.5	598	623	635.5	660.5	
2	260.5	273	298	310.5	335.5	348	373	398	410.5	435.5	448	473	485.5	510.5	523	548	560.5	585.5	598	623	635.5	660.5	673	
3	285.5	298	323	335.5	360.5	373	398	410.5	435.5	448	473	485.5	510.5	523	548	560.5	585.5	598	623	635.5	660.5	673	698	
4	298	323	335.5	360.5	373	398	410.5	435.5	448	473	485.5	510.5	523	548	573	585.5	610.5	623	648	660.5	685.5	698	723	
5	323	335.5	360.5	373	398	423	435.5	460.5	473	498	510.5	535.5	548	573	585.5	610.5	623	648	660.5	685.5	698	723	735.5	$\langle$
6	348	360.5	385.5	398	423	435.5	460.5	473	498	510.5	535.5	548	573	585.5	610.5	623	648	660.5	685.5	698	723	748	760.5	
7	360.5	385.5	398	423	435.5	460.5	473	498	510.5	535.5	548	573	598	610.5	635.5	648	673	685.5	710.5	723	748	760.5	785.5	
8	385.5	398	423	448	460.5	485.5	498	523	535.5	560.5	573	598	610.5	635.5	648	673	685.5	710.5	723	748	760.5	785.5	798	
										-													470	



**EX250** 

## Series SY3000/5000/7000 C €

How to Order Manifold

Refer to pages 210 to 212 for dimensions of Type 12/Top ported type.

Series
--------

Type 12

Top Ported

3	SY3000
5	SY5000
7	SY7000

#### **3** Input block stations

—	None						
1	1 station						
:	:						
8	8 stations						


\*: Without SI Unit, the symbol is -.. The maximum number of stations is limited for the AS-Interface applicable SI Unit.

#### Input block type

	PNP	NPN			
	sensor input	sensor input			
Without input block	_	_			
M12, 2 inputs	A	D			
M12, 4 inputs	В	E			
M8, 4 inputs	С	F			

\*: Without SI Unit, the symbol is -..

#### How to Order Manifold Assembly

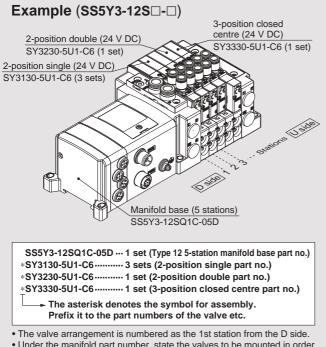

• Under the manifold part number, state the valves to be mounted in order from the 1st station as shown in the figure above. If the arrangement becomes complicated, specify on a manifold specification sheet.

SS5Y 3-12S	Q		- 05	<b>U</b> -	
	2	6 6	6	6	

#### 2 SI Unit

0	Without SI Unit								
Q	Device	Net™ (N	legative common)						
N	PROFIB								
V	CC-Link (Positive common)								
TA		2 power	8 in/8 out, 31 slave modes						
TB	AS-Interface (Negative	supply systems	4 in/4 out, 31 slave modes						
ТС	common)	1 power	8 in/8 out, 31 slave modes						
TD		supply systems	4 in/4 out, 31 slave modes						
Y	CANC	pen (Ne	gative common)						
ZE	EtherNe	et/IP™ (I	Vegative common)						

\*: Ensure a match with the common specification of the valve to be used.

- \*: Input block cannot be mounted without SI Unit. \*: The supply current from the SI Unit of
- AS-Interface applicable 1 power supply system specification to the input block and valve is limited.

#### **6** Valve stations

-		
Symbol	Stations	Note
02	2 stations	
1	:	Double wiring*1
16	16 stations	
02	2 stations	Creatified lowerst*?
:	:	Specified layout <sup>*2</sup> (Available up to 32 solenoids)
24	24 stations	

- \*1: Double wiring: 2-position single, double, 3-position and 4-position valves can be used on all manifold stations. Use of a 2-position single solenoid will result in an unused control signal. If this is not desired, order with a specified layout.
- \*2: Specified layout: Indicate the wiring specifications on the manifold specification sheet. (Note that 2-position double, 3-position and 4-position valves cannot be used where single wiring has been specified.) When determining the number of valve stations, note that the maximum number of solenoids for the AS-Interface applicable SI Unit specification is as follows. 8 in/8 out specification: Max. 8 solenoids

 4 in/4 out specification: Max 4 solenoids \*: This also includes the number of blanking plate assembly.

\*: For the product without the SI Unit (S0), note the maximum number of solenoids of the SI Unit that will be mounted. If the layout is specified, indicate it on the manifold specification sheet.

#### 6 P, E port entry, SUP/EXH block assembly

P, E port entry	Internal pilot	Internal pilot, Built-in silencer	External pilot
U side (2 to 10 stations)	U	<b>C</b> *1	G
D side (2 to 10 stations)	D	<b>E</b> *1	Н
Both sides (2 to 24 stations)	В	—	J

\*1: For SUP/EXH block assembly specifications, built-in silencer types will have

P port entry stipulated. \*: For built-in silencer type, P and E ports are available on U and D sides. 3/5(E) port is plugged. The silencer exhaust port is located on the opposite side of P, E port entry. (Example: When the P, E port entry is D side, the silencer exhaust port is U side.)

\*: When the built-in silencer type is used, keep the exhaust port from coming in direct contact with water or other liquids.

#### P, E port size (One-touch fittings)

			57	
Symbol	SY3000	SY5000	SY7000	
_	Ø 8	Ø 10	Ø 12	
N	Ø 5/16"	Ø 3/8"	Ø 1/2"	

\*: For N, sizes are in inches

#### 8 Mounting


<b>W</b> mounting		
_	Direct mounting	
D	DIN rail mounting (With DIN rail)	
D0	DIN rail mounting (Without DIN rail)	
D3	For 3 stations	Specify a longer
	:	rail than the
D24	For 24 stations	standard length.

\*: If the DIN rail must be mounted without an SI Unit, select D0, Then, refer to L3 of the dimensions for the DIN rail length and order separately. (Refer to page 249 for the DIN rail part number.)

\*: Refer to page 271 for the fixation of DIN rail mounting type manifold.

For details about the EX250 Integrated-type (For Input/Output) Serial Transmission System, refer to the WEB catalogue on SMC website www.smc.eu and the Operation Manual. For details about part numbers of SI Units to be mounted, refer to page 239 in this catalogue. Please download the Operation Manual via SMC website, http://www.smc.eu

## Elucein Connector Connecting Base Series SY3000/5000/7000

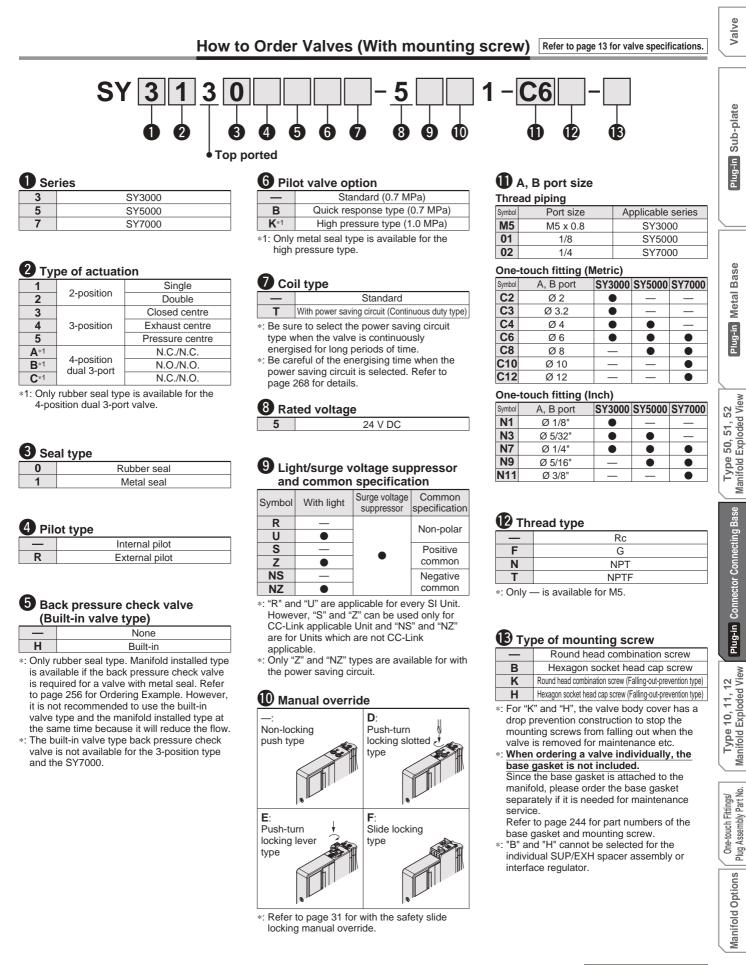

**GSMC** 

Λ	Protective class class Ⅲ (Mark: <)			
<u> </u>	class	Ш	(Mark: (M))	

## Plug-in Connector Connecting Base

**EX260** 

SS5Y

# Series SY3000/5000/7000

NAN

05

#### How to Order Manifold

#### Refer to pages 208 (SY5000) and 209 (SY7000) for dimensions of Type 11/Bottom ported type.

#### Series

Type 10

Type 11 Bottom Ported

**Side Ported** 

#### 2 Туре

<b>U</b> . 7 r	
10	Side ported
11	Bottom ported*1

\*1: The SY5000 manifold base is used for the bottom ported of the SY3000. When ordering, refer to "Plug-in Mixed Type Manifold" (from page 213).

#### **3** SI Unit specifications

outr	out polarity, pro	tocol, number of outputs	, communicati	ion connecto	
	utput polarity) n Negative common (PNP)	Protocol	Number of outputs	Communication connector	
0	*1	Without SI unit			
QA QAN		DeviceNet™	32	M10	
QB	QBN	Devicerver	16	M12	
NA	NAN		32	M12	
NB	NBN	PROFIBUS	16	IVITZ	
NC	NCN	DP	32	*4	
ND	NDN		16	D-sub	
VA	VAN	CC-Link	32	M12	
VB	VBN	00 Enik	16	IVITZ	
DA	DAN	EtherCAT	32	M12	
DB	DBN	Euleron	16	10112	
FA	FAN	PROFINET	32	M12	
FB	FBN		16		
EA	EAN	EtherNet/	32	M12	
EB	EBN	IP™	16		
<u>*3</u>	GAN	EtherNet	32	M12	
<u> </u>	GBN	POWERLINK			

\*1 Without SI unit, the output polarity is decided by

- Ensure a match with the common specification of the valves to be used.
- \*2 DIN rail cannot be mounted without SI Unit.
- \*3 Positive common (NPN) type is not applicable.
- \*4 IP40 for the D-sub applicable communication connector specification.

#### 4 Valve stations

3

In the case of the 32-output SI Unit

Ο

Symbol Stations		Note			
02 2 stations					
	:	Double wiring <sup>*1</sup>			
16	16 stations				
02	2 stations	0 10 10 100			
:	:	Specified layout*2			
24	24 stations	(Available up to 32 solenoids)			

#### In the case of the 16-output SI Unit

Stations	Note			
2 stations				
:	Double wiring*1			
8 stations				
2 stations	0 17 11 182			
:	Specified layout*2			
16 stations	(Available up to 16 solenoids)			
	2 stations E 8 stations 2 stations E			

\*1: Double wiring: 2-position single, double, 3-position and 4-position valves can be used on all manifold stations. Use of a 2-position single solenoid will result in an unused control signal. If this is not desired, order with a specified layout

\*2: Specified layout: Indicate the wiring specifications on the manifold specification sheet.

(Note that 2-position double, 3-position and 4-position valves cannot be used where single wiring has been specified.)

- \*: This also includes the number of blanking plate assembly.
- \*: For the model without the SI Unit (S0), note the maximum number of solenoids of the SI Unit that will be mounted. If the layout is specified, indicate it on the manifold specification sheet.

#### **5** P, E port entry

<u> </u>	
U	U side (2 to 10 stations)
D	D side (2 to 10 stations)
В	Both sides (2 to 24 stations)

#### 6 SUP/EXH block assembly

—	Internal pilot	
S	Internal pilot, Built-in silencer	
R	External pilot	
*: 3/5(F)	port is plugged for the built-in silencer	

\*: 3/5(E) port is plugged for the built-in silencer type.

\*: When the built-in silencer type is used, keep the exhaust port from coming in direct contact with water or other liquids.

Refer to the page on the right for 7.

#### 8 Mounting and Option

Symbol	Mounting	Option			
Symbol	wounting	Name plate	Station number		
—	Direct	_	—		
AA	Direct mounting				
BA	mounting		—		
D	DIN	—	—		
A	DIN rail mounting				
B	mounting		—		

- \*: Enter the number of stations inside □ when it is larger than the number of valve stations. (Refer to "DIN Rail Option" below.)
- \*: Only direct mounting is available for Type 11 (Bottom ported).
- \*: Refer to page 271 for the fixation of DIN rail mounting type manifold.

#### **DIN Rail Option**

_	Standard length				
0	Without DIN rail (with bracket)				
3	For 3 stations	Specify a longer rail than the			
:	:				
24	For 24 stations				

\*: When it is necessary to mount a DIN rail without an SI Unit, select D0 and order DIN rail length separately, referring to L3 in the dimensions. (Refer to page 249 for part numbers of DIN rail.)

For details about the EX260 Integrated-type (For Output) Serial Transmission System, refer to the WEB catalogue on SMC website **www.smc.eu** and the Operation Manual. For details about part numbers of SI Units to be mounted, refer to page 240 in this catalogue. Please download the Operation Manual via SMC website, http://www.smc.eu

## Elug-in Connector Connecting Base Series SY3000/5000/7000

Plug-in Sub-plate


Metal Base

Plug-in

Type 50, 51, 52 Manifold Exploded View

Plug-in Connector Connecting Base

Type 10, 11, 12 Manifold Exploded View

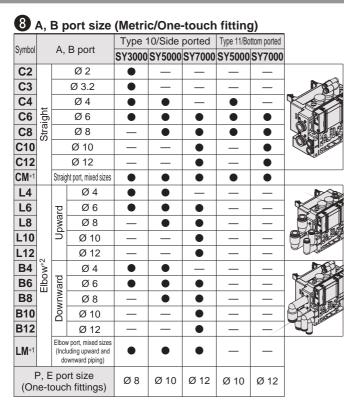

A, B	р	ort	size (Inc	h/One	-toucl	n fittin	g)						
Cumbal		A, B port		Туре 2	10/Side	ported	Type 11/Bo	ttom ported					
Symbol				SY3000	SY5000	SY7000	SY5000	SY7000					
N1			Ø 1/8"	٠				_					
N3			Ø 5/32"	٠	•			_					
N7	Straight		Ø 1/4"	٠	•	•	•	•					
N9	Stra		Ø 5/16"		•	•		•					
N11	0,		Ø 3/8"			•		•	eloss.				
<b>CM</b> *1		Straig	ht port, mixed sizes		•	•	•	•					
LN3			Ø 5/32"					_					
LN7		Jpward	Ø 1/4"		•			_					
LN9						d ∆	Ø 5/16"	_				_	
LN11			Ø 3/8"			•		_	elsession				
BN3	N*2	p	Ø 5/32"			_		_					
BN7	ш	Elbo	Elbo	Mai	Ø 1/4"	•	•			_			
BN9				-	Downward	Ø 5/16"		•			_		
BN11		ă	Ø 3/8"			•		_	a state				
<b>LM</b> *1		Elbow port, mixed sizes (Including upward and downward piping)		•	•	•	_	_					
	P, E port size (One-touch fittings)				Ø 3/8"	Ø 1/2"	Ø 3/8"	Ø 1/2"					


\*1: Indicate the sizes on the manifold specification sheet in the case of "CM", "LM". The direction of P, E port fittings is the same as for A, B port. If selecting "LM", indicate it on the manifold specification sheet for the P, E port fitting direction.

**GSMC** 

\*2: To avoid interference with the body or piping, select downward elbow port when mounting the optional spacer assembly (pages 250 to 252).

#### How to Order Manifold Assembly


#### Example (SS5Y3-10SNAN-D)

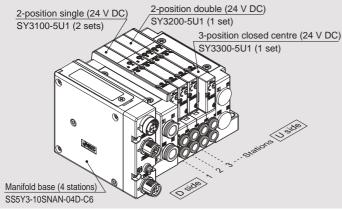


SS5Y3-10SNAN-04D-C61 set (Type 10 4-station manifold base part no.)
*SY3100-5U12 sets (2-position single part no.)
*SY3200-5U11 set (2-position double part no.)
*SY3300-5U11 set (3-position closed centre part no.)
└──►The asterisk denotes the symbol for assembly.
Prefix it to the part numbers of the valve etc.

The valve arrangement is numbered as the 1st station from the D side.
Under the manifold part number, state the valves to be mounted in order from the 1st station as shown in the figure on the left. If the arrangement becomes complicated, specify on a manifold specification sheet.

\*: When mixing top ported configurations, select from page 188. Specify on a manifold specification sheet if plugs are required on the A and B port on the manifold.

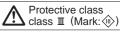



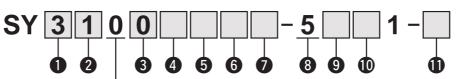

🚺 Sei	ries
3	SY3000
5	SY5000
7	SY7000

#### 2 Type of actuation

1	2-position	Single							
2	2-розшон	Double							
3		Closed centre							
4	3-position	Exhaust centre							
5		Pressure centre							
<b>A</b> *1	4	N.C./N.C.							
<b>B</b> *1	4-position dual 3-port	N.O./N.O.							
<b>C</b> *1	uuai 5-port	N.C./N.O.							

\*1: Only rubber seal type is available for the 4-position dual 3-port valve.

#### **3** Seal type

<b>Seartype</b>											
0	Rubber seal										
1	Metal seal										

4 Pile	ot type	
		Internal pilot
R		External pilot

## **5** Back pressure check valve (Built-in valve type)

(		/ /						
—		None						
Н		Built-in						
* Only r	ubbor cool typo	Manifold installed tw						

- \*: Only rubber seal type. Manifold installed type is available if the back pressure check valve is required for a valve with metal seal. Refer to page 256 for details. However, it is not recommended to use the built-in valve type and the manifold installed type at the same time because it will reduce the flow.
- \*: The built-in valve type back pressure check valve is not available for the 3-position type and the SY7000.

#### 6 Pilot valve option

Base mounted

—	Standard (0.7 MPa)								
В	Quick response type (0.7 MPa)								
<b>K</b> *1	High pressure type (1.0 MPa)								
1: Only metal seal type is available for the									

high pressure type.



- Standard

- T With power saving circuit (Continuous duty type)
- \*: Be sure to select the power saving circuit type when a valve is continuously energised for long periods of time.
- Be careful of the energising time when the power saving circuit is selected. Refer to page 268 for details.

#### 8 Rated voltage

24 V DC


## 9 Light/surge voltage suppressor and common specification

Symbol	With light	Surge voltage suppressor	Common specification				
R	_		Non-polar				
U	•		поп-рогаг				
S	—		Positive				
Z	•	•	common				
NS			Negative				
NZ	•		common				

\*: Select a valve from R, U, S or Z when the SI Unit output polarity is — (positive common). Select a valve from R, U, NS or NZ when the SI Unit output polarity is N (negative common).

\*: Only "Z" and "NZ" types are available for with the power saving circuit.

#### 10 Manual override

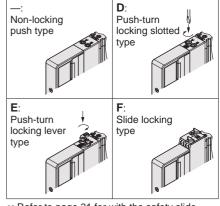

 Refer to page 31 for with the safety slide locking manual override.

#### **①** Type of mounting screw


_	Round head combination screw
В	Hexagon socket head cap screw
к	Round head combination screw (Falling-out-prevention type)
н	Hexagon socket head cap screw (Falling-out-prevention type)

\*: For "K" and "H", the valve body cover has a drop prevention construction to stop the mounting screws from falling out when the valve is removed for maintenance etc.


\*: When ordering a valve individually, the base gasket is not included. Since the base gasket is attached to the manifold, please order the base gasket separately if it is needed for maintenance service.

Refer to page 244 for part numbers of the base gasket and mounting screw.

\*: "B" and "H" cannot be selected for the individual SUP/EXH spacer assembly, interface regulator or double check spacer assembly with residual pressure release valve.

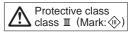

## Elucia Connector Connecting Base Series SY3000/5000/7000

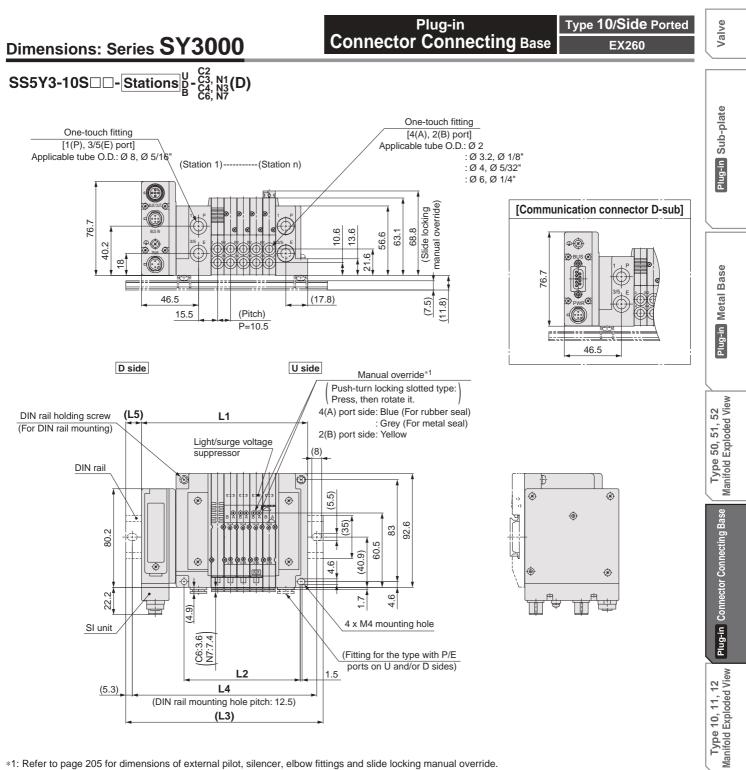


\*1: Refer to page 205 for dimensions of external pilot, silencer, elbow fittings and slide locking manual override.

\*: These figures show the "SS5Y3-10SQA-05D-C6".

\*: Refer to page 210 for dimensions of A or B port top-ported type.

Refer to page 2	10 for din	nensions	of A or I	B port top	o-ported	type.											No.
n: Stations	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	One-touch Fittings/ Ind Assembly Part No.
L1	103.7	114.2	124.7	135.2	145.7	156.2	166.7	177.2	187.7	198.2	208.7	219.2	229.7	240.2	250.7	261.2	Ich F
L2	63	73.5	84	94.5	105	115.5	126	136.5	147	157.5	168	178.5	189	199.5	210	220.5	e-tol
L3	135.5	148	148	160.5	173	185.5	198	210.5	223	223	235.5	248	260.5	273	285.5	285.5	l o B
L4	125	137.5	137.5	150	162.5	175	187.5	200	212.5	212.5	225	237.5	250	262.5	275	275	s l
L5	16	17	11.5	12.5	13.5	14.5	15.5	16.5	17.5	12.5	13.5	14.5	15.5	16.5	17.5	12	ption
n: Stations	18	19	20	21	22	23	24										0
L1	271.7	282.2	292.7	303.2	313.7	324.2	334.7	-									Manifold
L2	231	241.5	252	262.5	273	283.5	294										lani
L3	298	310.5	323	335.5	348	348	360.5	-									2
L4	287.5	300	312.5	325	337.5	337.5	350										
L5	13	14	15	16	17	12	13	-									

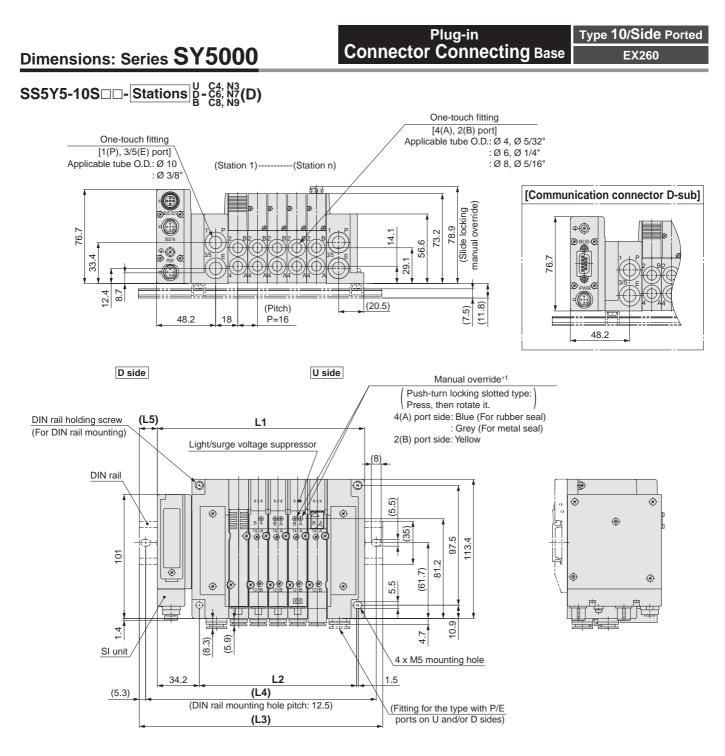


\*1: Refer to page 206 for dimensions of external pilot, silencer, elbow fittings and slide locking manual override.

\*: These figures show the "SS5Y5-10SQA-05D-C8".

\*: Refer to page 211 for dimensions of A or B port top-ported type.

n: Stations	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17
L1	120.7	136.7	152.7	168.7	184.7	200.7	216.7	232.7	248.7	264.7	280.7	296.7	312.7	328.7	344.7	360.7
L2	80	96	112	128	144	160	176	192	208	224	240	256	272	288	304	320
L3	148	160.5	185.5	198	210.5	235.5	248	260.5	273	298	310.5	323	348	360.5	373	385.5
L4	137.5	150	175	187.5	200	225	237.5	250	262.5	287.5	300	312.5	337.5	350	362.5	375
L5	13.5	12	16.5	14.5	13	17.5	15.5	14	12	16.5	15	13	17.5	16	14	12.5
n: Stations	18	19	20	21	22	23	24									
L1	376.7	392.7	408.7	424.7	440.7	456.7	472.7									
L2	336	352	368	384	400	416	432									
L3	410.5	423	435.5	448	473	485.5	498									
L4	400	412.5	425	437.5	462.5	475	487.5									
L5	17	15	13.5	11.5	16	14.5	12.5									

## Elucia Connector Connecting Base Series SY3000/5000/7000

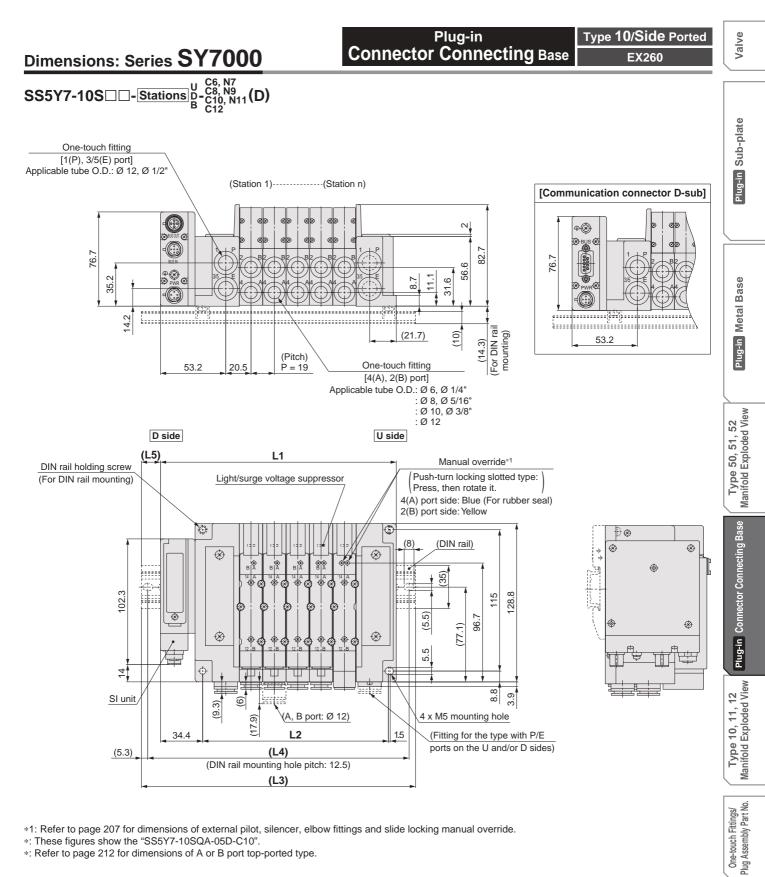

\*1: Refer to page 207 for dimensions of external pilot, silencer, elbow fittings and slide locking manual override.

\*: These figures show the "SS5Y7-10SQA-05D-C10".

\*: Refer to page 212 for dimensions of A or B port top-ported type.

n: Stations	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	21	22	23	24
L1	134.9	153.9	172.9	191.9	210.9	229.9	248.9	267.9	286.9	305.9	324.9	343.9	362.9	381.9	400.9	419.9	438.9	457.9	476.9	495.9	514.9	533.9	552.9
L2	94	113	132	151	170	189	208	227	246	265	284	303	322	341	360	379	398	417	436	455	474	493	512
L3	160.5	185.5	198	223	235.5	260.5	273	298	310.5	335.5	348	373	398	410.5	435.5	448	473	485.5	510.5	523	548	560.5	585.5
L4	150	175	187.5	212.5	225	250	262.5	287.5	300	325	337.5	362.5	387.5	400	425	437.5	462.5	475	500	512.5	537.5	550	575
L5	13	16	12.5	15.5	12.5	15.5	12	15	12	15	11.5	14.5	17.5	14.5	17.5	14	17	14	17	13.5	16.5	13.5	16.5



Manifold Options

## Plug-in Connector Connecting Base

**EX260** 

# Series SY3000/5000/7000 € €

How to Order Manifold

## SS5Y 3-12S NAN -05 U -

#### **1** Series

dimensions.

Type 12

Top Ported

3	SY3000
5	SY5000
7	SY7000

#### 2 SI Unit specifications

Refer to pages 210 to 212 for Type 12/Top ported

(output polarity, protocol, number of outputs, communication connecto				
	tput polarity)		Number	Communication
Positive common	Negative common	Protocol	of	connector
(NPN)	(PNP)		outputs	CONTROLOT
0	*1	Withou	t SI unit	
QA	QAN	DeviceNet™	32	M12
QB	QBN	Devicerter	16	IVITZ
NA	NAN		32	M12
NB	NBN	PROFIBUS	16	
NC	NCN	DP	32	*4
ND	NDN		16	D-sub
VA	VAN	CC-Link	32	M12
VB	VBN	00 Enik	16	
DA	DAN	EtherCAT	32	M12
DB	DBN	Eulorox	16	11/12
FA	FAN	PROFINET	32	M12
FB	FBN		16	
EA	EAN	EtherNet/	32	M12
EB	EBN	IP™	16	
*3	GAN	EtherNet	32	M12
<u>*3</u>	GBN	POWERLINK	16	

\*1 Without SI unit, the output polarity is decided by the SI unit used.

Ensure a match with the common specification of the valves to be used.

\*2 DIN rail cannot be mounted without SI Unit.

\*3 Positive common (NPN) type is not applicable. \*4 IP40 for the D-sub applicable communication

connector specification.

#### **3** Valve stations

<u> </u>	-					
n th	۱e	case	of the	32-output	SI Unit	

Symbol	Stations	Note	
02	2 stations		
:	:	Double wiring*1	
16	16 stations	_	
02	2 stations		
:	:	Specified layout <sup>*2</sup> (Available up to 32 solenoids)	
24	24 stations		

#### In the case of the 16-output SI Unit

Symbol	Stations	Note	
02	2 stations		
:	:	Double wiring <sup>*1</sup>	
08	8 stations		
02	2 stations		
:	:	Specified layout <sup>*2</sup> (Available up to 16 solenoids)	
16	16 stations	(Available up to 16 solenoids)	

\*1: Double wiring: 2-position single, double, 3-position and 4-position valves can be used on all manifold stations. Use of a 2-position single solenoid will result in an unused control signal. If this is not desired,

order with a specified layout. \*2: Specified layout: Indicate the wiring

specifications on the manifold specification sheet. (Note that 2-position double, 3-position and

(Note that 2-position double, 3-position and 4-position valves cannot be used where single wiring has been specified.)

- \*: This also includes the number of blanking plate assembly.
- \*: For the model without the SI Unit (S0), note the maximum number of solenoids of the SI Unit that will be mounted. If the layout is specified, indicate it on the manifold specification sheet.

#### **P**, E port entry

<b>U</b> *1	U side (2 to 10 stations)	
<b>D</b> *1	D side (2 to 10 stations)	
В	Both sides (2 to 24 stations)	
*1: 6 For type "S", supply/exhaust block assembly		

with built-in silencer, choose U or D for P port entry.

#### **5** SUP/EXH block assembly

-	Internal pilot		
S	Internal pilot, Built-in silencer		
R	External pilot		

- \*: For built-in silencer type, P and E ports are available on U and D sides. 3/5(E) port is plugged. The silencer exhaust port is located on the opposite side of P, E port entry. (Example: When the P, E port entry is D side, the silencer exhaust port is U side.)
- \*: When the built-in silencer type is used, keep the exhaust port from coming in direct contact with water or other liquids.

#### 6 P, E port size (One-touch fittings)

Symbol	SY3000	SY5000	SY7000	
—	Ø 8	Ø 10	Ø 12	
Ν	Ø 5/16"	Ø 3/8"	Ø 1/2"	

\*: For N, sizes are in inches.


#### **7** Mounting

_	Direct mounting		
D	DIN rail mounting (With DIN rail)		
D0	DIN rail mounting (Without DIN rail)		
D3	For 3 stations	Specify a longer rail than the standard length.	
:	:		
D24	For 24 stations		

When it is necessary to mount a DIN rail without an SI Unit, select D0 and order DIN rail length separately, referring to L3 in the dimensions. Refer to page 249 for part numbers of DIN rail.
Refer to page 271 for the fixation of DIN rail mounting type manifold.

How to Order Manifold Assembly

Operation Manual via SMC website, http://www.smc.eu

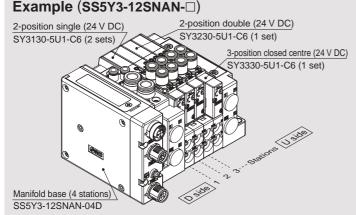

For details about the EX260 Integrated-type (For Output) Serial Transmission System, refer to the

WEB catalogue on SMC website www.smc.eu and the Operation Manual. For details about part

numbers of SI Units to be mounted, refer to page 240 in this catalogue. Please download the


SS5Y3-12SNAN-04D ····· 1 set (Type 12 4-station manifold base part no.)
*SY3130-5U1-C6 2 sets (2-position single part no.)
*SY3230-5U1-C6 1 set (2-position double part no.)
*SY3330-5U1-C6 1 set (3-position closed centre part no.)
► The asterisk denotes the symbol for assembly. Prefix it to the part numbers of the valve etc.

• The valve arrangement is numbered as the 1st station from the D side.

• Under the manifold part number, state the valves to be mounted in order from the 1st station as shown in the figure on the left. If the arrangement becomes complicated, specify on a manifold specification sheet.



## Elucein Connector Connecting Base Series SY3000/5000/7000

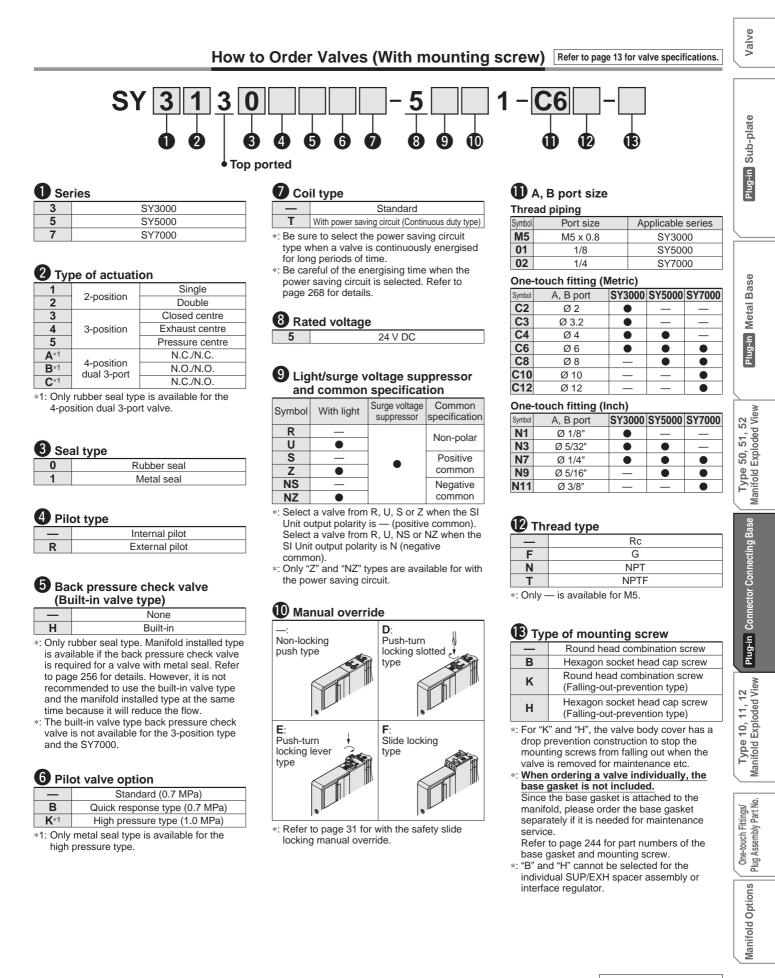

188

## Plug-in Connector Connecting Base

EX126

# Series SY3000/5000/7000

05 U

How to Order Manifold

Refer to pages 208 (SY5000) and 209 (SY7000) for dimensions of Type 11/Bottom ported type.

#### Series

Type 10

Type 11 Bottom Ported

Side Ported

	3	SY3000
	5	SY5000
ĺ	7	SY7000

#### 2 Туре

SS5Y 3 - 10 S4 V

10	Side ported			
11	Bottom ported*1			
1: The SY5000 manifold base is used for the bottom ported of the SY3000. When				

ordering, refer to "Plug-in Mixed Mounting Type Manifold" (from page 213).


#### **3** SI Unit

0 Without SI Unit

V CC-Link (Positive common NPN)

\*: Only a terminal block plate is mounted for the valve without SI Unit.

#### How to Order Manifold Assembly

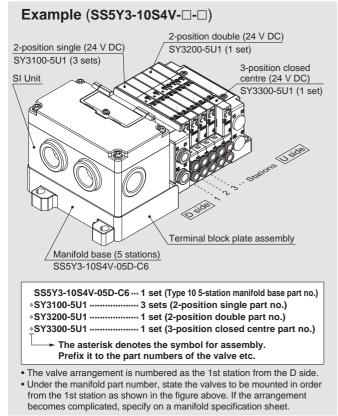

\*: When mixing top ported configurations, select from page 196. In this case, use caution as there is also output on the A and B port on base side.

Specify on a manifold specification sheet if plugs are required on the A and B port on base side.

4	Valve	stations

6

**C6** 

Symbol	Stations	Note	
02	2 stations		
		Double wiring*1	
08	8 stations		
02	2 stations	Creating loweut*?	
:	:	Specified layout*2 (Available up to 16 solenoids)	
16	16 stations	(Available up to To soleholds)	

- \*1: Double wiring: 2-position single, double, 3-position and 4-position valves can be used on all manifold stations. Use of a 2-position single solenoid will result in an unused control signal. If this is
- not desired, order with a specified layout. \*2: Specified layout: Indicate the wiring specifications with the manifold specification sheet. (Note that 2-position double, 3-position and 4-position valves cannot be used where single wiring has been specified.)
- \*: This also includes the number of blanking plate assembly.

#### **5** P, E port entry


U	U side (2 to 10 stations)			
D	D side (2 to 10 stations)			
В	Both sides (2 to 16 stations)			

#### **6** SUP/EXH block assembly

-	
_	Internal pilot
S	Internal pilot, Built-in silencer
R	External pilot

\*: 3/5(E) port is plugged for the built-in silencer type.

\*: When the built-in silencer type is used, keep the exhaust port from coming in direct contact with water or other liquids.

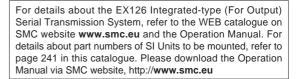

## Elucin Connector Connecting Base Series SY3000/5000/7000

Valve

#### A, B port size (Metric/One-touch fitting) Type 10/Side ported Type 11/Bottom ported A, B port Symbol SY3000 SY5000 SY7000 SY5000 SY7000 C2 Ø2 Ø 3.2 C3 C4 Ø4 • Straight C6 Ø 6 • **C**8 Ø 8 C10 Ø 10 C12 Ø 12 CM\* Straight port, mixed sizes L4 Ø 4 L6 Ø 6 • Upward L8 Ø 8 \_ L10 Ø 10 \_\_\_\_ L12 Ø 12 \_ Elbow\*2 **B4** Ø 4 • \_ Downward **B6** Ø 6 \_ **B**8 Ø 8 • \_ B10 Ø 10 \_ B12 Ø 12 \_\_\_\_ Elbow port, mixed sizes LM\* (Including upward and downward piping) \_ P, E port size Ø 8 Ø 10 Ø 12 Ø 10 Ø 12 (One-touch fittings)

<u>A, B</u>	A, B port size (Inch/One-touch fitting)									
Sumbol				Type 1	10/Side	ported	Type 11/Bo	ttom ported		
Symbol		А,	B port	SY3000	SY5000	SY7000	SY5000	SY7000		
N1			Ø 1/8"					_		
N3		1	Ø 5/32"					—		
N7	Straight		Ø 1/4"							
N9	Stra		Ø 5/16"	—				•		
N11	•,		Ø 3/8"	—	—		—	•	el Sast	
<b>CM</b> *1		Straig	ht port, mixed sizes					•		
LN3		~	Ø 5/32"		—	_	_	—		
LN7	17 19	Jpward	Ø 1/4"					—		
LN9			Ъ	Ø 5/16"	—		—	—	—	
LN11	N		Ø 3/8"	—				_	al series	
BN3	Elbow*2	Š	Ð	Ø 5/32"					_	
BN7		Ma	Ø 1/4"		•					
BN9		Downward	Ø 5/16"	—		—	—			
<b>BN11</b>			Ø 3/8"	—					Jar	
<b>LM</b> *1	1 (Includi		v port, mixed sizes uding upward and wnward piping)	•	•	•	_	—		
	P, E port size (One-touch fittings)			Ø 5/16"	Ø 3/8"	Ø 1/2"	Ø 3/8"	Ø 1/2"		

\*1: Indicate the sizes on the manifold specification sheet in the case of "CM", "LM". The direction of P, E port fittings is the same as for A, B port. If selecting "LM", indicate it on the manifold specification sheet for the P, E port fitting direction.

\*2: To avoid interference with the body or piping, select downward elbow port when mounting the optional spacer assembly (pages 250 to 252).

#### 8 Mounting and Option

Symbol	Mounting	Option		
Symbol		Name plate	Station number	
—	Direct		—	
AA	Direct mounting			
BA	mounting		_	
D	DIN mil	_	_	
A	DIN rail mounting			
B	mounting		—	


\*: Enter the number of stations inside □ when it is larger than the number of valve stations. (Refer to "DIN Rail Option" below.)

\*: Only direct mounting is available for Type 11 (Bottom ported).

\*: Refer to page 271 for the fixation of DIN rail mounting type manifold.

#### **DIN Rail Option**

—	Direct mounting			
0	Without DIN rail (with bracket)			
3	For 3 stations	Specify a longer rail		
:	:	than the total length		
16	For 16 stations	of specified stations.		

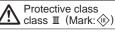

Plug-in Metal Base

Type 50, 51, 52 Manifold Exploded View


Plug-in Connector Connecting Base

Type 10, 11, 12 Manifold Exploded View

One-touch Fittings/ Plug Assembly Part No.

Manifold Options



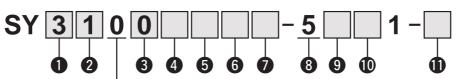

Series		
3	SY3000	
5	SY5000	
7	SY7000	

#### 2 Type of actuation

1	2-position	Single
2	2-position	Double
3		Closed centre
4	3-position	Exhaust centre
5		Pressure centre
<b>A</b> *1	4-position dual 3-port	N.C./N.C.
<b>B</b> *1		N.O./N.O.
<b>C</b> *1	uuai 3-puit	N.C./N.O.

\*1: Only rubber seal type is available for the 4-position dual 3-port valve.

#### **3** Seal type

O bear type		
0	Rubber seal	
1	Metal seal	

#### 4 Pilot type

—	Internal pilot
R	External pilot

## **5** Back pressure check valve (Built-in valve type)

—	None			
Н	Built-in			

- \*: Only rubber seal type. Manifold installed type is available if the back pressure check valve is required for a valve with metal seal. Refer to page 256 for Ordering Example. However, it is not recommended to use the built-in valve type and the manifold installed type at the same time because it will reduce the flow.
- \*: The built-in valve type back pressure check valve is not available for the 3-position type and the SY7000.

#### 6 Pilot valve option

Base mounted

—	Standard (0.7 MPa)	
В	Quick response type (0.7 MPa)	
<b>K</b> *1	High pressure type (1.0 MPa)	
1: Only metal seal type is available for the		

high pressure type.

#### Coil type

- \_
- T
   With power saving circuit (Continuous duty type)

   \*: Be sure to select the power saving circuit

Standard

- type when the valve is continuously energised for long periods of time.
- \*: Be careful of the energising time when the power saving circuit is selected. Refer to page 268 for details.


#### 8 Rated voltage 5 24 V DC

## 9 Light/surge voltage suppressor and common specification

Symbo	I With light	Surge voltage suppressor	Common specification		
R	_		Non-polar		
U	•		Non-pola		
S	-		Positive		
Z			common		

\*: Only "Z" type is available for with the power saving circuit.

#### Manual override

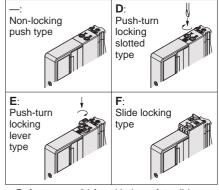

\*: Refer to page 31 for with the safety slide locking manual override.


#### Type of mounting screw

—	Round head combination screw
В	Hexagon socket head cap screw
K	Round head combination screw (Falling-out-prevention type)
Н	Hexagon socket head cap screw (Falling-out-prevention type)


- \*: For "K" and "H", the valve body cover has a drop prevention construction to stop the mounting screws from falling out when the valve is removed for maintenance etc.
- \*: When ordering a valve individually, the base gasket is not included. Since the base gasket is attached to the manifold, please order the base gasket separately if it is needed for maintenance service.

Refer to page 244 for part numbers of base gasket and mounting screw.

\*: "B" and "H" cannot be selected for the individual SUP/EXH spacer assembly, interface regulator or double check spacer assembly with residual pressure release valve.

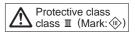

## Elucia Connector Connecting Base Series SY3000/5000/7000

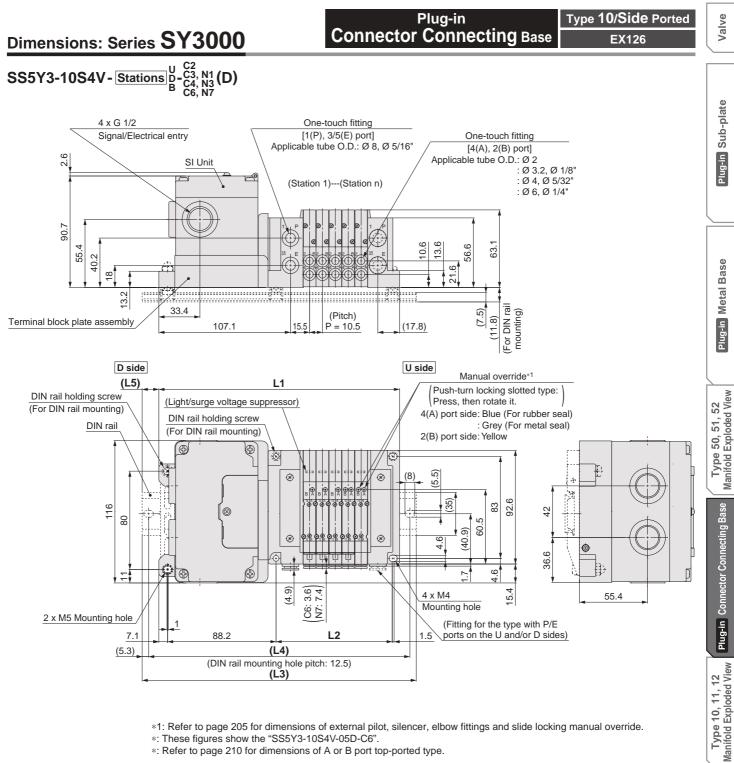


\*1: Refer to page 205 for dimensions of external pilot, silencer, elbow fittings and slide locking manual override.

\*: These figures show the "SS5Y3-10S4V-05D-C6".

\*: Refer to page 210 for dimensions of A or B port top-ported type.

																One-touch Fittings/ Plug Assembly Part No.
																ptions
n: Stations	2	3	A	E	6	7	8	0	40	44	12	13	14	15	16	.0
	_	3	4	5	6	1	0	9	10	11	12	15		15	10	<u>b</u>
L1	164.3	<b>3</b> 174.8	<b>4</b> 185.3	<b>9</b> 195.8	206.3	216.8	<b>o</b> 227.3	<b>9</b> 237.8	248.3	258.8	269.3	279.8	290.3	300.8	311.3	
L1 L2	164.3 63	-	-	-	-	216.8 115.5	-	-	-			-		-	-	l Op
		174.8	185.3	195.8	206.3		227.3	237.8	248.3	258.8	269.3	279.8	290.3	300.8	311.3	l Op
L2	63	174.8 73.5	185.3 84	195.8 94.5	206.3 105	115.5	227.3 126	237.8 136.5	248.3 147	258.8 157.5	269.3 168	279.8 178.5	290.3 189	300.8 199.5	311.3 210	

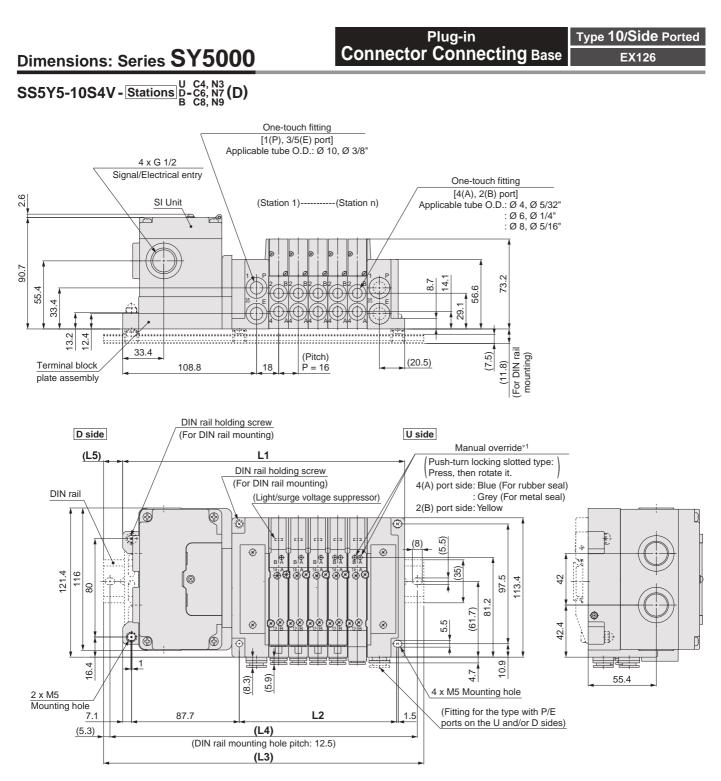

\*1: Refer to page 206 for dimensions of external pilot, silencer, elbow fittings and slide locking manual override.


\*: These figures show the "SS5Y5-10S4V-05D-C8".

\*: Refer to page 211 for dimensions of A or B port top-ported type.

n: Stations	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16
L1	181.3	197.3	213.3	229.3	245.3	261.3	277.3	293.3	309.3	325.3	341.3	357.3	373.3	389.3	405.3
L2	80	96	112	128	144	160	176	192	208	224	240	256	272	288	304
L3	210.5	223	248	260.5	273	285.5	310.5	323	335.5	360.5	373	385.5	398	423	435.5
L4	200	212.5	237.5	250	262.5	275	300	312.5	325	350	362.5	375	387.5	412.5	425
L5	14.5	13	17.5	15.5	14	12	16.5	15	13	17.5	16	14	12.5	17	15



## Elucia Connector Connecting Base Series SY3000/5000/7000

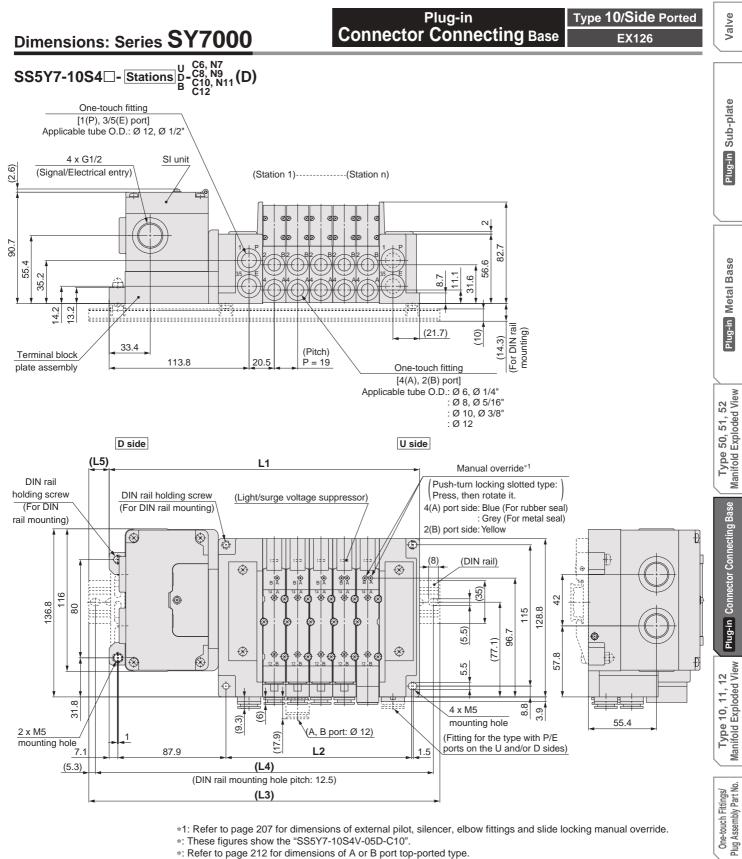

\*1: Refer to page 207 for dimensions of external pilot, silencer, elbow fittings and slide locking manual override.

\*: These figures show the "SS5Y7-10S4V-05D-C10".

\*: Refer to page 212 for dimensions of A or B port top-ported type.

n: Stations	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16
L1	195.5	214.5	233.5	252.5	271.5	290.5	309.5	328.5	347.5	366.5	385.5	404.5	423.5	442.5	461.5
L2	94	113	132	151	170	189	208	227	246	265	284	303	322	341	360
L3	223	248	260.5	285.5	298	323	335.5	360.5	373	398	410.5	435.5	448	473	485.5
L4	212.5	237.5	250	275	287.5	312.5	325	350	362.5	387.5	400	425	437.5	462.5	475
L5	14	17	13.5	16.5	13.5	16.5	13	16	13	16	12.5	15.5	12.5	15.5	12

**SMC** 

Manifold Options


## Plug-in Connector Connecting Base

**EX126** 

#### Type 12 Top Ported

## Series SY3000/5000/7000 ( E RoHS

How to Order Manifold

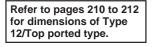

Series
--------

3	SY3000
5	SY5000
7	SY7000

#### 2 SI Unit

0	Without SI Unit				
V	CC-Link (Positive common NPN)				

\*: Only a terminal block plate is mounted for the valve without SI Unit.

3	Valve	stations

SS5Y 3-12S4

Symbol	Stations	Note
02	2 stations	
:	:	Double wiring <sup>*1</sup>
08	8 stations	
02	2 stations	Creating law out *2
:	:	Specified layout <sup>*2</sup> (Available up to 16 solenoids)
16	16 stations	(Available up to To soleholds)

 \*1: Double wiring: 2-position single, double, 3-position and 4-position valves can be used on all manifold stations.

Use of a 2-position single solenoid will result in an unused control signal. If this is not desired, order with a specified layout.

- \*2: Specified layout: Indicate the wiring specifications on the manifold specification sheet. (Note that 2-position double, 3-position and 4-position valves cannot be used where single wiring has been specified.)
- This also includes the number of blanking plate assembly.

#### P, E port entry

<b>U</b> *1	U side (2 to 10 stations)
<b>D</b> *1	D side (2 to 10 stations)
В	Both sides (2 to 16 stations)


\*1: For type "S", supply/exhaust block assembly with built-in silencer, choose U or D for P port entry.

#### **5** SUP/EXH block assembly

_	Internal pilot
S	Internal pilot, Built-in silencer
R	External pilot

- \*: For built-in silencer type, P and E ports are available on U and D sides. 3/5(E) port is plugged. The silencer exhaust port is located on the opposite side of P, E port entry. (Example: When the P, E port entry is D side, the silencer exhaust port is U side.)
- \*: When the built-in silencer type is used, keep the exhaust port from coming in direct contact with water or other liquids.

#### How to Order Manifold Assembly

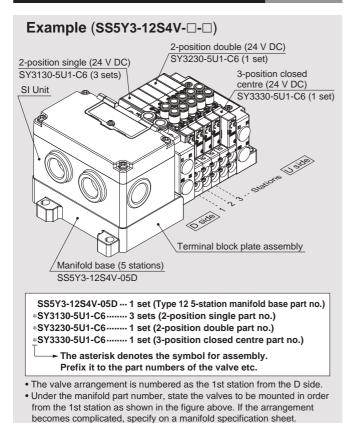

#### **6** P, E port size (One-touch fittings)

Symbol	SY3000	SY5000	SY7000	
—	Ø 8	Ø 10	Ø 12	
Ν	Ø 5/16"	Ø 3/8"	Ø 1/2"	

\*: For N, sizes are in inches.

#### Mounting


-			
—	Direct mounting		
D	DIN rail mounting (With DIN rail)		
D0	DIN rail mounting (Without DIN rail)		
D3	For 3 stations Specify a longer ra		
:	:	than the standard	
D16	For 16 stations length.		

\*: Refer to page 271 for the fixation of DIN rail mounting type manifold.

For details about the EX126 Integrated-type (For Output) Serial Transmission System, refer to the WEB catalogue on SMC website **www.smc.eu** and the Operation Manual. For details about part numbers of SI Units to be mounted, refer to page 241 in this catalogue. Please download the Operation Manual via SMC website, http://www.smc.eu



## Elucein Connector Connecting Base Series SY3000/5000/7000

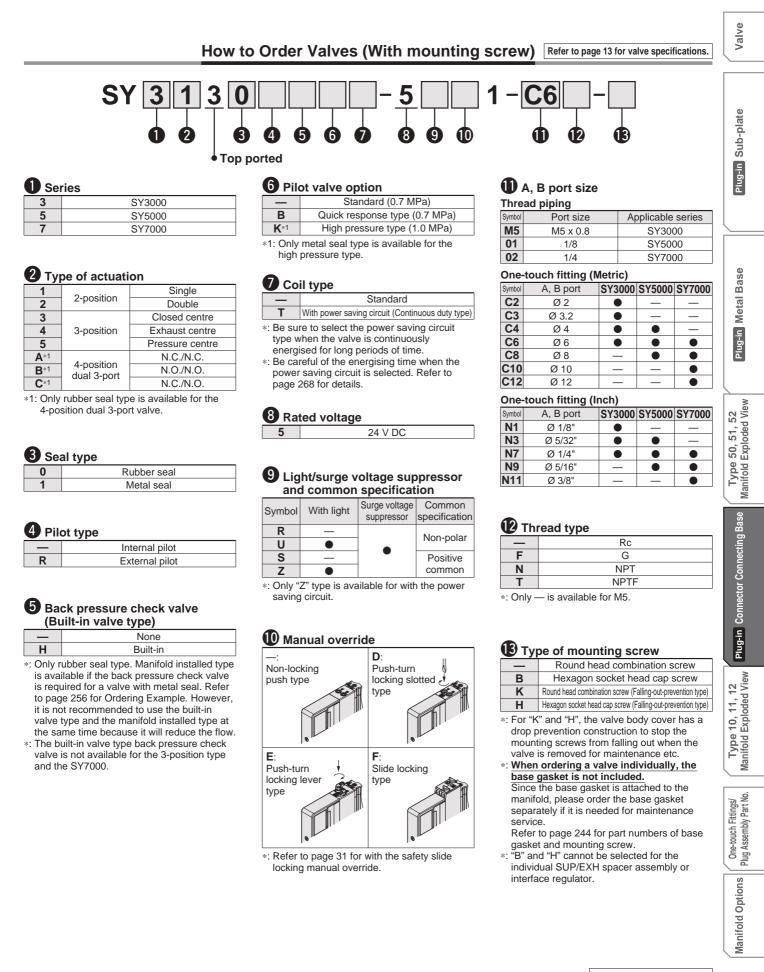

## Plug-in Connector Connecting Base

**EX120** 

# Series SY3000/5000/7000

Δ

How to Order Manifold

SS5Y 3 - 10 S3 R1 - 05

Refer to pages 208 (SY5000) and 209 (SY7000) for dimensions of Type 11/Bottom ported type.

#### Series

Type 10

Type 11 Bottom Ported

Side Ported

3	SY3000
5	SY5000
7	SY7000

#### **2** Type

<u> </u>	
10	Side ported
11	Bottom ported*1

\*1: The SY5000 manifold base is used for the bottom ported of the SY3000. When ordering, refer to "Plug-in Mixed Mounting Type Manifold" (from page 213).

Example (SS5Y3-10S3V-D)

2-position single (24 V DC

Manifold base (5 stations) SS5Y3-10S3V-05D-C6

SY3100-5U1 (3 sets)

How to Order Manifold Assembly

#### **3** SI Unit

0	Without SI Unit				
Q	DeviceNet <sup>™</sup> (Positive common NPN)				
R1	OMRON CompoBus/S				
R2	(Positive common NPN)	8 outputs			
V	CC-Link (Positive common NPN)				
<b>ZB</b> *1	CompoNet™	Positive common NPN			
ZBN*1	Componet	Negative common PNP			

 The communication connector (for the opposite side) is not provided. Please order it separately.

\*: Ensure a match with the common specification of the valve to be used.

#### **4** Valve stations

Symbol	Stations	Note			
02	2 stations				
:	:	Double wiring <sup>*1</sup>			
08	8 stations				
02	2 stations	Creatified lowert*?			
:	:	Specified layout*2 (Available up to 16 solenoids)			
16	16 stations	(Available up to 10 soleriolds)			

**C6** 

- \*1: Double wiring: 2-position single, double, 3-position and 4-position valves can be used on all manifold stations. Use of a 2-position single solenoid will result in an unused control signal. If this is not desired, order with a specified layout.
- \*2: Specified layout: Indicate the wiring specifications on the manifold specification sheet. (Note that 2-position double, 3-position and 4-position valves cannot be used where single wiring has been specified.)
- \*: This also includes the number of blanking plate assembly.
- \*: Since R2 type SI Unit has 8 outputs, note that up to 8 solenoids can be accommodated.

#### **5** P, E port entry

<u> </u>	
U	U side (2 to 10 stations)
D	D side (2 to 10 stations)
В	Both sides (2 to 16 stations)

#### 6 SUP/EXH block assembly

-	Internal pilot	
S	Internal pilot, Built-in silencer	
R	External pilot	

\*: 3/5(E) port is plugged for the built-in silencer type.

Dide

2-position double (24 V DC)

3-position closed centre (24 V DC) SY3300-5U1 (1 set)

Uside

. Statione

SY3200-5U1 (1 set)

The valve arrangement is numbered as the 1st station from the D side.
Under the manifold part number, state the valves to be mounted in order from the 1st station as shown in the figure above. If the arrangement becomes complicated, specify on a manifold specification sheet.

\*: When mixing top ported configurations, select from page 204. In this case, use caution as there is also output on the A and B port on base side.


Specify on a manifold specification sheet if plugs are required on the A and B port on base side.

For details about the EX120 Integrated-type (For Output)

In this case, use side. Specify on a ma port on base sid



## Plug-in Connector Connecting Base Series SY3000/5000/7000

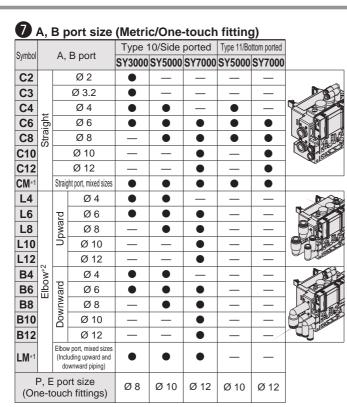

A, B port size (Inch/One-touch fitting)										
Cumbal	A, B port		Туре 2	10/Side	ported	Type 11/Bo	ttom ported			
Symbol		А,	ь роп	SY3000	SY5000	SY7000	SY5000	SY7000		
N1			Ø 1/8"				—			
N3			Ø 5/32"							
N7	igh		Ø 1/4"							
N9	Straight		Ø 5/16"	_						
N11			Ø 3/8"	—	_	•	—		eloss a	
<b>CM</b> *1		Straig	ht port, mixed sizes		•					
LN3				Ø 5/32"	٠					
LN7		Jpward	Ø 1/4"		•					
LN9		Ndr	Ø 5/16"		•					
LN11	~		Ø 3/8"	—					elsesses	
BN3	Elbow*2	р	Ø 5/32"	٠						
BN7	lbc	Downward	Ø 1/4"	•	•					
BN9		JWC	Ø 5/16"	—	•					
BN11	ă	ŏ	Ø 3/8"	—		•			Hele	
<b>LM</b> *1	.M*1 Elbow port, mixed sizes (Including upward and downward piping)		•	•	•	_	_			
			rt size h fittings)	Ø 5/16"	Ø 3/8"	Ø 1/2"	Ø 3/8"	Ø 1/2"		

\*1: Indicate the sizes on the manifold specification sheet in the case of "CM", "LM". The direction of P, E port fittings is the same as for A, B port. If selecting "LM", indicate it on the manifold specification sheet for the P, E port fitting direction

\*2: To avoid interference with the body or piping, select downward elbow port when mounting the optional spacer assembly (pages 250 to 252).

#### 8 Mounting and Option

Symbol	Mounting	Option		
Symbol	wounting	Name plate	Station number	
—	Direct	—	—	
AA	Direct mounting			
BA	mounting		_	
D	DIN mil	_	_	
A	DIN rail mounting			
B	mounting		—	

\*: Enter the number of stations inside 
when it is larger than the number of valve stations. (Refer to "DIN Rail Option" below.)


\*: Only direct mounting is available for Type 11 (Bottom ported).

\*: Refer to page 271 for the fixation of DIN rail mounting type manifold.

#### **DIN Rail Option**

—	Direct mounting		
0	Without DIN rail (with bracket)		
3	For 3 stations Specify a longer rai		
:	than the total leng		
16	For 16 stations	of specified stations.	


\*: When it is necessary to mount a DIN rail without an SI Unit, select D0 and order DIN rail length separately, referring to L3 in the dimensions. (Refer to page 249 for part numbers of DIN rail.)

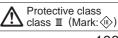

Plug-in Sub-plate

Plug-in Metal Base

Type 50, 51, 52 Manifold Exploded View

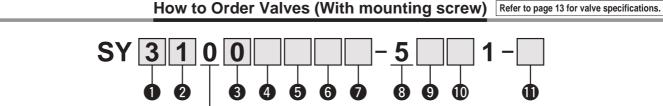

0	Series
	001103

3	SY3000
5	SY5000
7	SY7000

#### 2 Type of actuation

1	2-position	Single					
2	2-position	Double					
3		Closed centre					
4	3-position	Exhaust centre					
5		Pressure centre					
<b>A</b> *1	4	N.C./N.C.					
<b>B</b> *1	4-position dual 3-port	N.O./N.O.					
<b>C</b> *1	uuai 5-port	N.C./N.O.					

\*1: Only rubber seal type is available for the 4-position dual 3-port valve.

#### **3** Seal type

0	Rubber seal
1	Metal seal

#### 4 Pilot type

	<i>,</i> ,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,
—	Internal pilot
R	External pilot

## **5** Back pressure check valve (Built-in valve type)

<u> </u>		/ /
—		None
Н		Built-in
* Only r	ubbor agal tura	Manifold installed tyr

- \*: Only rubber seal type. Manifold installed type is available if the back pressure check valve is required for a valve with metal seal. Refer to page 256 for Ordering Example. However, it is not recommended to use the built-in valve type and the manifold installed type at the same time because it will reduce the flow.
- \*: The built-in valve type back pressure check valve is not available for the 3-position type and the SY7000.

#### 6 Pilot valve option

Base mounted

—	Standard (0.7 MPa)							
В	Quick response type (0.7 MPa)							
<b>K</b> *1	High pressure type (1.0 MPa)							
1. Only metal seal type is available for the								

high pressure type.

#### Coil type

- Standard

   With power saving circuit (Continuous duty type)
- Es Be sure to select the power saving circuit type when the valve is continuously energised for long periods of time.
- \*: Be careful of the energising time when the power saving circuit is selected. Refer to page 268 for details.

#### 8 Rated voltage




#### 9 Light/surge voltage suppressor and common specification

Symbol	With light	Surge voltage suppressor	Common specification
R	—		Non-polar
U			Νοπ-ροιαί
S	—		Positive
Z	•	•	common
NS	—		Negative
NZ	•		common
* Soloot	a valvo from	PIL Sor 7	when the SI

\*: Select a valve from R, U, S or Z when the SI Unit specification is positive common. Select a valve from R, U, NS or NZ when the SI Unit specification is ZBN (negative common).

\*: Only "Z" and "NZ" types are available for with the power saving circuit.

#### 10 Manual override

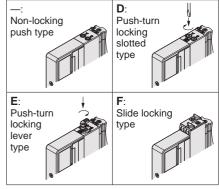

\*: Refer to page 31 for with the safety slide locking manual override.


#### Type of mounting screw

—	Round head combination screw
В	Hexagon socket head cap screw
Κ	Round head combination screw (Falling-out-prevention type)
Н	Hexagon socket head cap screw (Falling-out-prevention type)


- \*: For "K" and "H", the valve body cover has a drop prevention construction to stop the mounting screws from falling out when the valve is removed for maintenance etc.
- \*: When ordering a valve individually, the base gasket is not included. Since the base gasket is attached to the manifold, please order the base gasket separately if it is needed for maintenance service.

Refer to page 244 for part numbers of the base gasket and mounting screw.

\*: "B" and "H" cannot be selected for the individual SUP/EXH spacer assembly, interface regulator or double check spacer assembly with residual pressure release valve.

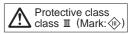

## Elucia Connector Connecting Base Series SY3000/5000/7000

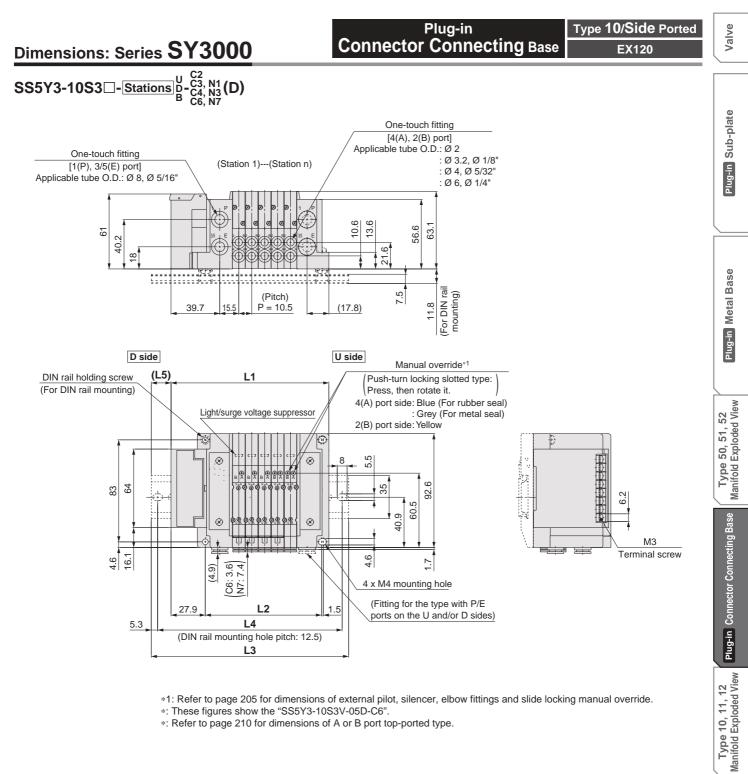


\*1: Refer to page 205 for dimensions of external pilot, silencer, elbow fittings and slide locking manual override.

\*: These figures show the "SS5Y3-10S3V-05D-C6".

\*: Refer to page 210 for dimensions of A or B port top-ported type.

																One-touch Fittings/ Plug Assembly Part No.
																ptions
n: Stations	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	ptic
L1	96.9	107.4	117.9	128.4	138.9	149.4	159.9	170.4	180.9	191.4	201.9	212.4	222.9	233.4	243.9	Op
L2	63	73.5	84	94.5	105	115.5	126	136.5	147	157.5	168	178.5	189	199.5	210	fold
L3	123	135.5	148	160.5	173	173	185.5	198	210.5	223	235.5	235.5	248	260.5	273	Manifolo
L4	112.5	125	137.5	150	162.5	162.5	175	187.5	200	212.5	225	225	237.5	250	262.5	< ≥
L5	13	14	15	16	17	12	13	14	15	16	17	11.5	12.5	13.5	14.5	

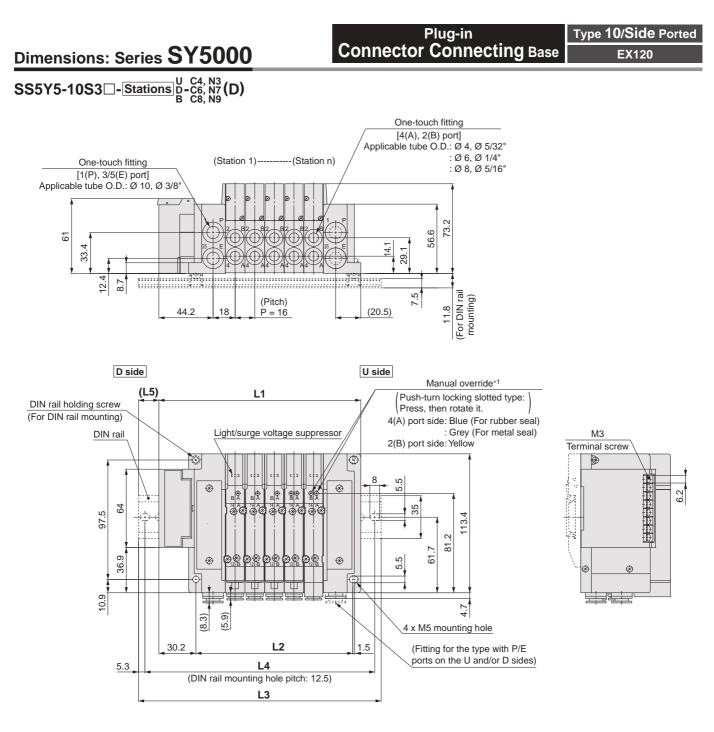

\*1: Refer to page 206 for dimensions of external pilot, silencer, elbow fittings and slide locking manual override.


\*: These figures show the "SS5Y5-10S3V-05D-C8".

\*: Refer to page 211 for dimensions of A or B port top-ported type.

n: Stations	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16
L1	116.7	132.7	148.7	164.7	180.7	196.7	212.7	228.7	244.7	260.7	276.7	292.7	308.7	324.7	340.7
L2	80	96	112	128	144	160	176	192	208	224	240	256	272	288	304
L3	148	160.5	173	198	210.5	223	248	260.5	273	285.5	310.5	323	335.5	348	373
L4	137.5	150	162.5	187.5	200	212.5	237.5	250	262.5	275	300	312.5	325	337.5	362.5
L5	15.5	14	12	16.5	15	13	17.5	16	14	12.5	17	15	13.5	11.5	16



## Elucia Connector Connecting Base Series SY3000/5000/7000

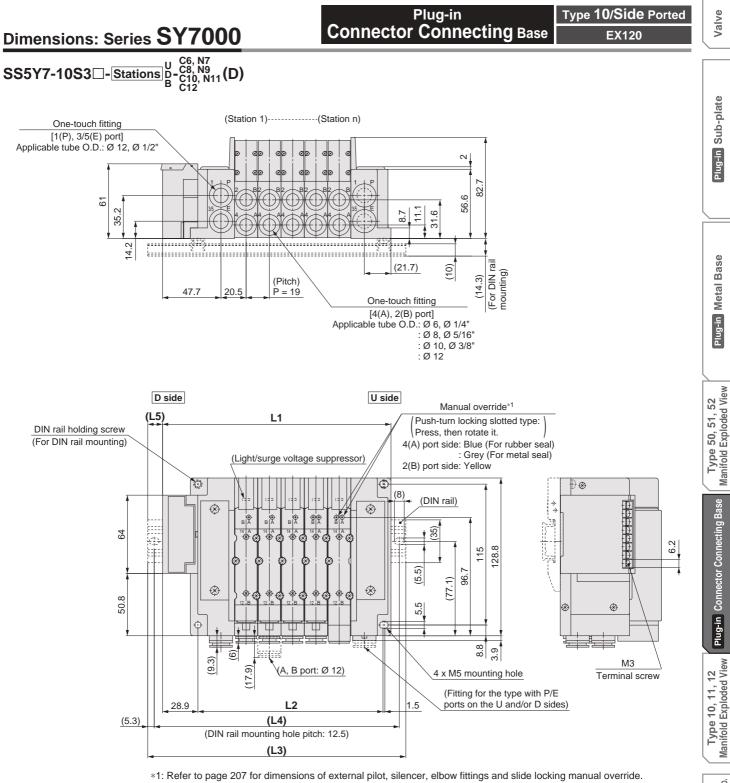

				figures sh	now the "S 12 for dim	SS5Y7-10	S3V-05D	-C10".			IS AND SIL	ie locking	manuaro	overnde.		One-touch Fittings/ Plug Assembly Part No.
		•		_		_			4.0		40	40		4.5	10	ons
n: Stations	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	ptio
L1	129.4	148.4	167.4	186.4	205.4	224.4	243.4	262.4	281.4	300.4	319.4	338.4	357.4	376.4	395.4	Op
L2	94	113	132	151	170	189	208	227	246	265	284	303	322	341	360	fol
L3	160.5	173	198	210.5	235.5	248	273	285.5	310.5	335.5	348	373	385.5	410.5	423	Mani
L4	150	162.5	187.5	200	225	237.5	262.5	275	300	325	337.5	362.5	375	400	412.5	2
L5	15.5	12.5	15.5	12	15	12	15	11.5	14.5	17.5	14.5	17.5	14	17	14	


## Plug-in Connector Connecting Base

**EX120** 

## Series SY3000/5000/7000 RoHS

05

How to Order Manifold

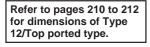

Type 12 Top Ported

#### Series

3	SY3000
5	SY5000
7	SY7000

#### 2 SI Unit

0	Without SI Unit		
Q	DeviceNet <sup>™</sup> (Positive common NPN)		
R1	OMRON CompoBus/S	16 outputs	
R2	(Positive common NPN)	8 outputs	
V	CC-Link (Positive common NPN)		
<b>ZB</b> *1	CompoNet™	Positive common NPN	
ZBN*1	Componet	Negative common PNP	

\*1: The communication connector (for the opposite side) is not provided. Please order it separately.

\*: Ensure a match with the common

specification of the valve to be used.

#### **3** Valve stations

SS5Y 3 - 12S3 R1 -

Symbol	Stations	Note	
02	2 stations		
:	:	Double wiring*1	
08	8 stations		
02	2 stations	Creatified lawayt*?	
:	:	Specified layout <sup>*2</sup> (Available up to 16 solenoids)	
16	16 stations	(Available up to 16 soleholds)	

\*1: Double wiring: 2-position single, double, 3-position and 4-position valves can be used on all manifold stations.

Use of a 2-position single solenoid will result in an unused control signal. If this is not desired, order with a specified layout.

- \*2: Specified layout: Indicate the wiring specifications on the manifold specification sheet. (Note that 2-position double, 3-position and 4-position valves cannot be used where single wiring has been specified.)
- \*: This also includes the number of blanking plate assembly.
- \*: Since R2 type SI Unit has 8 outputs, note that up to 8 solenoids can be accommodated.

#### P, E port entry

<b>U</b> *1	U side (2 to 10 stations)
<b>D</b> *1	D side (2 to 10 stations)
В	Both sides (2 to 16 stations)


\*1: 5 For type "S", supply/exhaust block assembly with built-in silencer, choose U or D for P port entry.

#### **5** SUP/EXH block assembly


_	Internal pilot
S	Internal pilot, Built-in silencer
R	External pilot

\*: For built-in silencer type, P and E ports are available on U and D sides. 3/5(E) port is plugged. The silencer exhaust port is located on the opposite side of P, E port entry. (Example: When the P, E port entry is D side, the silencer exhaust port is U side.)

#### How to Order Manifold Assembly

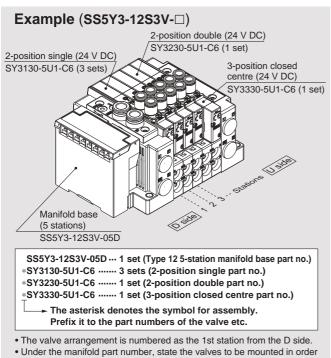

from the 1st station as shown in the figure above. If the arrangement becomes complicated, specify on a manifold specification sheet.

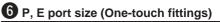

Symbol	SY3000	SY5000	SY7000	
_	Ø 8	Ø 10	Ø 12	
Ν	Ø 5/16"	Ø 3/8"	Ø 1/2"	
*: For N	sizes are in	inches		

#### 7 Mounting


—	Direct mounting	
D	DIN rail mounting (With DIN rail)	
D0	DIN rail mounting (Without DIN rail)	
D3	For 3 stations Specify a longer ra	
:	:	than the standard
D16	For 16 stations	length.

- \*: When mounted on the DIN rail without the SI Unit, please select D0 and refer to L3 of the dimensions for the DIN rail length, then order separately. (Refer to page 249 for the DIN rail part number.)
- \*: Refer to page 271 for the fixation of DIN rail mounting type manifold.

For details about the EX120 Integrated-type (For Output) Serial Transmission System, refer to the WEB catalogue on SMC website www.smc.eu and the Operation Manual. For details about part numbers of SI Units to be mounted, refer to page 242 in this catalogue. Please download the Operation Manual via SMC website, http://www.smc.eu



## Elucein Connector Connecting Base Series SY3000/5000/7000

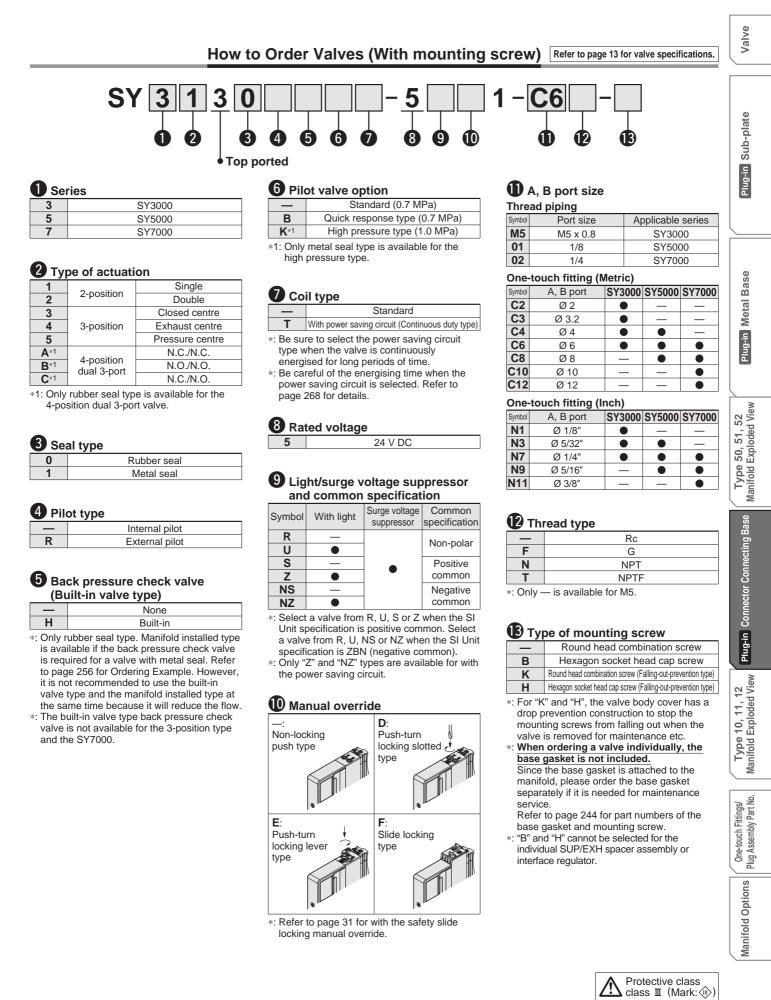


## Series SY3000/5000/7000 Common Dimensions


Plug-in Series SY3000 Connector Connecting Base Type 10/Side Ported


External Pilot, Silencer, Elbow Fittings, Slide Locking Manual Override



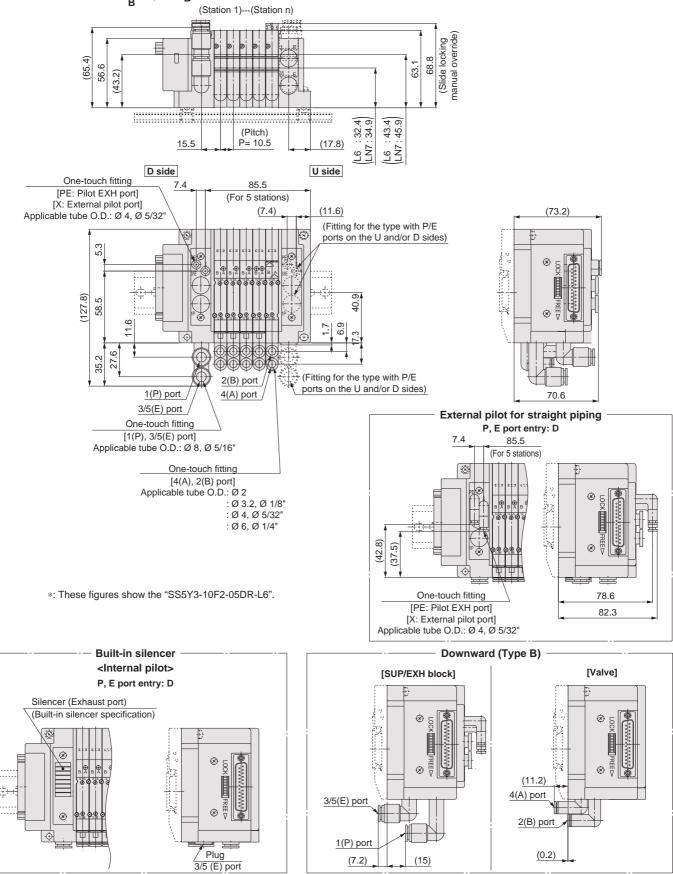



## Common Dimensions Series SY3000/5000/7000

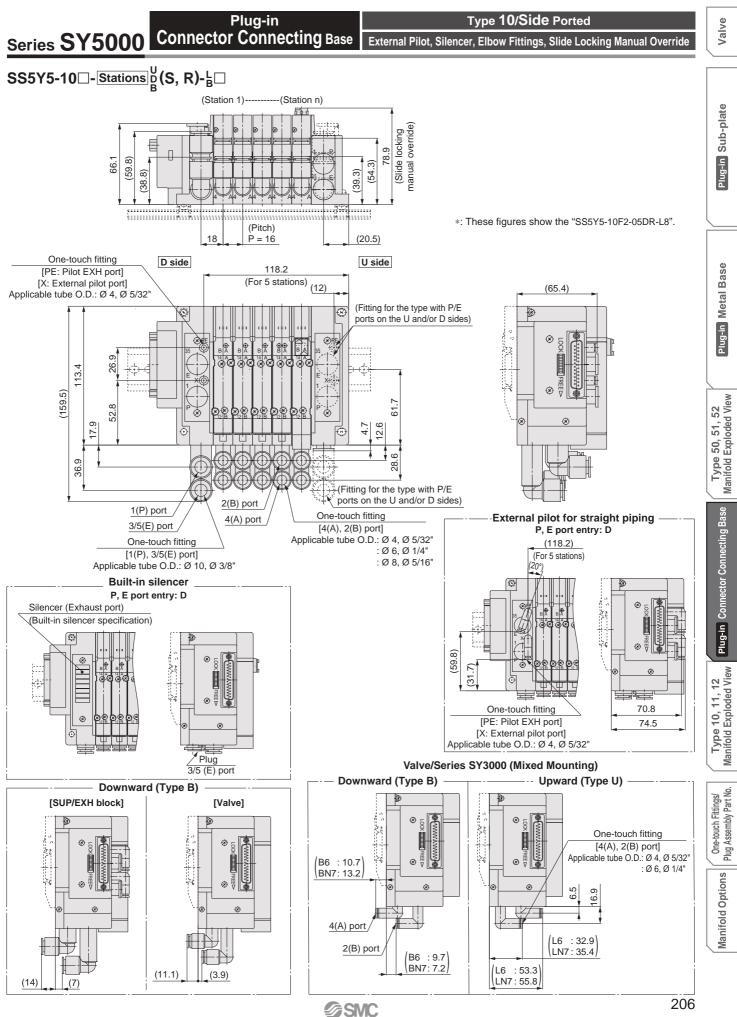

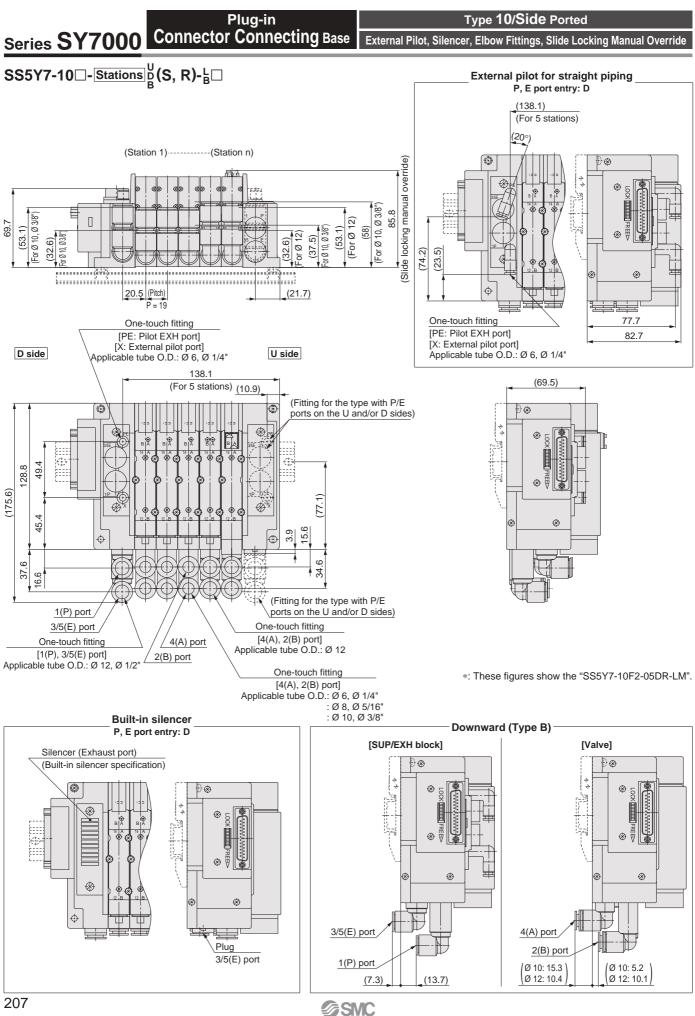


## Common Dimensions Series SY3000/5000/7000

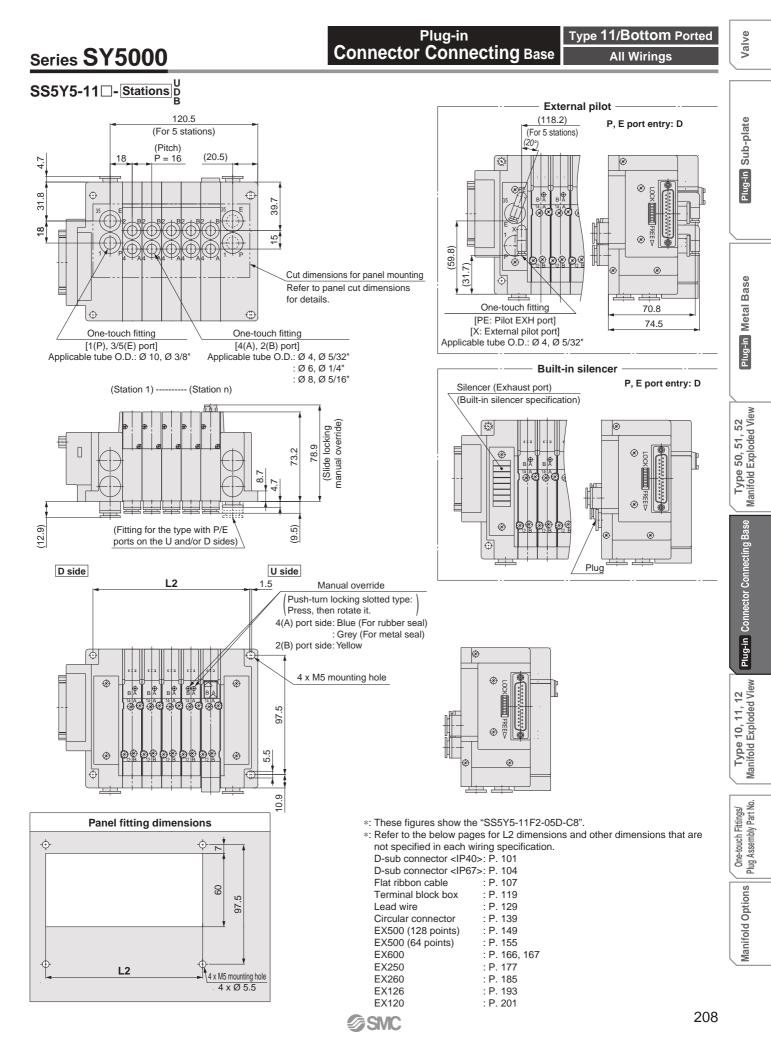

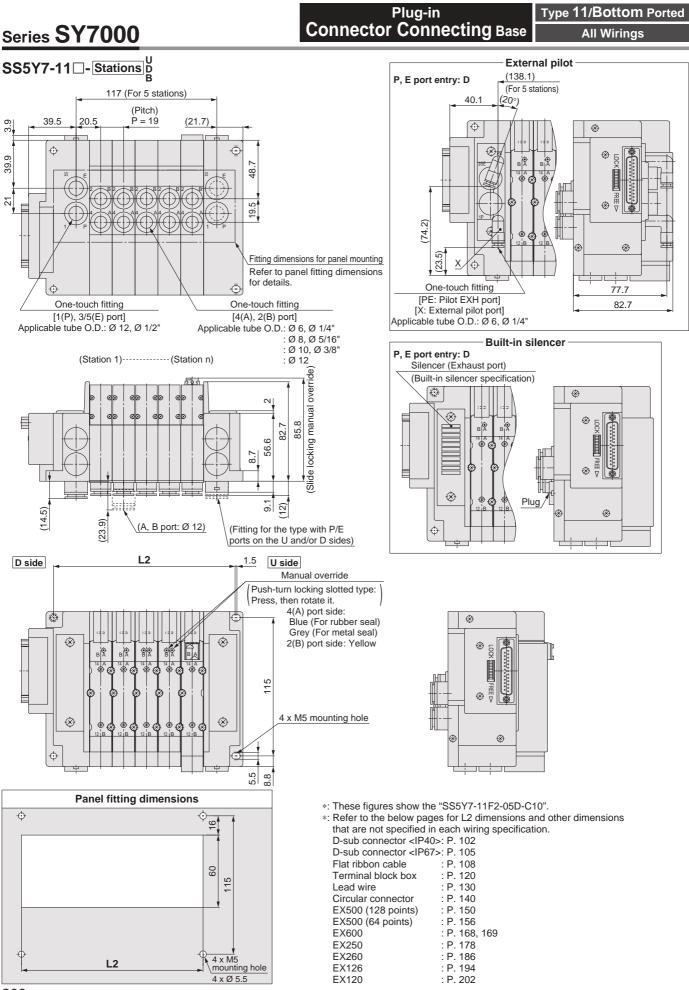

**GSMC** 

## Common Dimensions Series SY3000/5000/7000

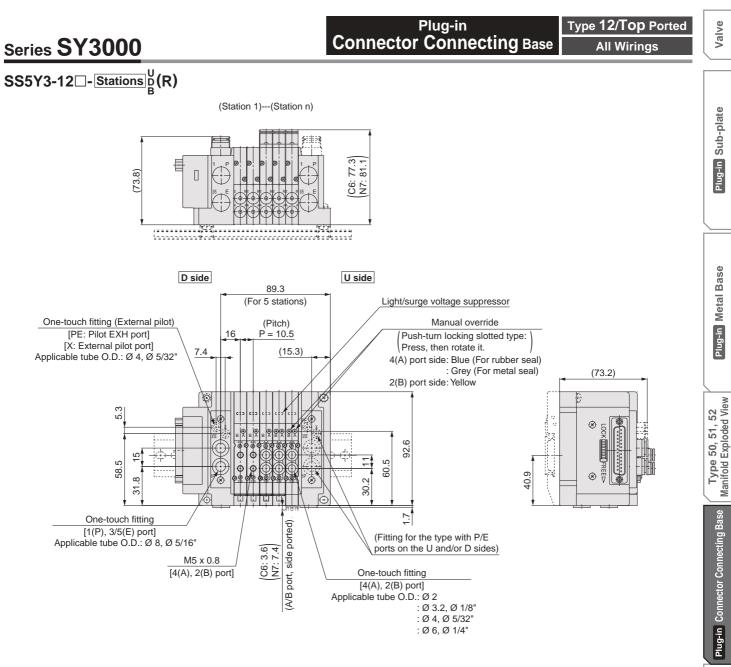


\*: These figures show the "SS5Y3-12F2-05D".

- \*: For built-in silencer type, a silencer is mounted on the opposite side of U or D side with P or E port. Refer to page 205 for dimensions of silencer.
- \*: Refer to the below pages for dimensions that are not specified in each wiring specification.

Refer to the below pa	ages for dimensio
D-sub connector <ip< td=""><td>40&gt;: P. 100</td></ip<>	40>: P. 100
D-sub connector <ip< td=""><td>67&gt;: P. 103</td></ip<>	67>: P. 103
Flat ribbon cable	: P. 106
Terminal block box	: P. 118
Lead wire	: P. 128
Circular connector	: P. 138
EX500 (128 points)	: P. 148
EX500 (64 points)	: P. 154
EX600	: P. 164, 165
EX250	: P. 176
EX260	: P. 184
EX126	: P. 192
EX120	: P. 200

Ins One-touch Fittings/ Plug Assembly Part No.

Type 10, 11, 12 Manifold Exploded View

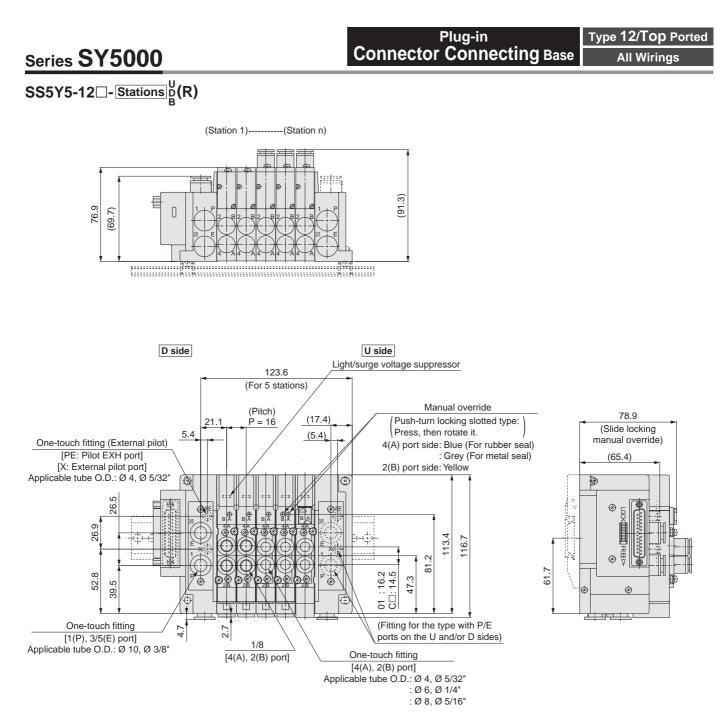

\*: These figures show the "SS5Y5-12F2-05D".


\*: For built-in silencer type, a silencer is mounted on the opposite side of U or D side with P or E port. Refer to page 206 for dimensions of silencer.

\*: Refer to the below pages for dimensions that are not specified in each wiring specification.

D-sub connector <ip< td=""><td>40&gt;: P. 101</td></ip<>	40>: P. 101
D-sub connector <ip< td=""><td>67&gt;: P. 104</td></ip<>	67>: P. 104
Flat ribbon cable	: P. 107
Terminal block box	: P. 119
Lead wire	: P. 129


Lead wire	: P. 129
Circular connector	: P. 139
EX500 (128 points)	: P. 149
EX500 (64 points)	: P. 155
EX600	: P. 166, 167
EX250	: P. 177
EX260	: P. 185
EX126	: P. 193
EX120	: P. 201

## Common Dimensions Series SY3000/5000/7000

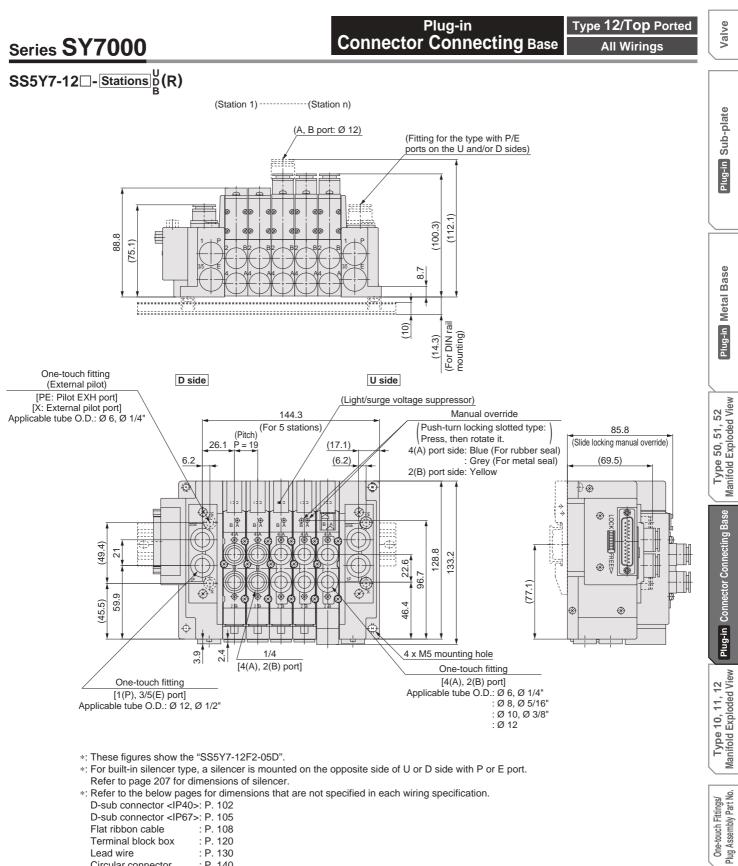

D-sub connector <ip6< td=""><td>7&gt;: P. 105</td></ip6<>	7>: P. 105
Flat ribbon cable	: P. 108
Terminal block box	: P. 120
Lead wire	: P. 130
Circular connector	: P. 140
EX500 (128 points)	: P. 150
EX500 (64 points)	: P. 156
EX600	: P. 168, 169
EX250	: P. 178
EX260	: P. 186
EX126	: P. 194
EX120	: P. 202

Manifold Options

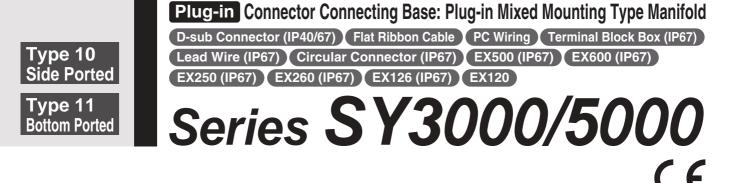

The SY3000 can be mounted onto the SY5000 size manifold.

How to Order Manifold

05

Refer to page 222 for dimensions of Type 11/Bottom ported type.

## SS5Y5-<u>M</u>10 F 1

Mixed Mounting Type It is possible to mount the SY3000 size valves on all stations. In this case, there is no need to fill in part (3) in the order code. However, the manifold block width should be 12.5 mm.

#### • Туре

10	Side ported
11	Bottom ported

#### **2** Connector type

Symbol	Туре		Page
F	D-sub connector	IP40	
FW	(25 pins)	IP67	
Р		26 pins	
PG	Flat ribbon cable	20 pins	97
PH		10 pins	
J	PC wiring	—	
G	(20 pins)	With power supply terminal	
Т	Terminal blo	ock box	115
L1		34 cores	
L2	Lead wire	17 cores	125
L3		9 cores	
M	Circular connector		135
S□	Serial transmission	EX500 Gateway Decentralised System 2 (128 Points)	145
S□		EX500 Gateway Decentralised System (64 Points)	151
<b>S6</b> □		EX600	161
S□		EX250	173
S		EX260	181
<b>S</b> 4□		EX126	189
<b>S</b> 3□		EX120	197
*: Refer to the pages shown in the table above			

\*: Refer to the pages shown in the table above for details.

#### 3

• With I	Lead wire
Lead v	vire length
1	0.6 m
2	1.5 m
3	3 m
• With D-sub connector (IP40/67), Flat	

• With D-sub connector (IP40/67), Fla ribbon cable and PC wiring

## Connector entry direction 1 Upward 2 Lateral

\*: It is not necessary to select the items above for the valve with terminal block box or with circular connector or the serial transmission type.

#### **4** Valve stations

Symbol	Stations	Note	
02	2 stations	Some connectors have a limitation	
:		on the number of stations. Refer to the pages shown in the table	
24	24 stations	"Connector type" for details.	

#### **5** P, E port entry

U	U side (2 to 10 stations)
D	D side (2 to 10 stations)
В	Both sides (2 to 24 stations)

\*: Refer to page 161 for the EX600 and **1** on page 173 for the EX250.

#### Fitting type: One-touch fitting

Symbol	A, B port				
С		Stra	ight		
L	Metric size	Elbow	Upward*2		
В			Downward*2		
N		Straight			
LN	Inch size	Elbow	Upward*2		
BN	1	EIDOW	Downward*2		
<b>CM</b> *1	Mixed sizes Straight		ight		
LM*1	WILLEU SIZES	Elbow (Including upward and downward piping)*2			

\*1: Indicate the sizes on the manifold specification sheet in the case of "CM", "LM".

The direction of P, E port fittings is the same as for A, B port. If selecting "LM", indicate it on the manifold specification sheet for the P, E port fitting direction.

\*2: To avoid interference with the body or piping, select downward elbow port when mounting the optional spacer assembly (pages 250 to 252). Elbow fittings are not available for Type 11 (Bottom ported).

\*: Elbow fittings: Ø 2, Ø 3.2 and Ø 1.8" are not available for the SY3000 series. Ø 2, Ø 3.2, Ø 1.8" and Ø 5/32" are not available for the SY5000 series.

#### **6** SUP/EXH block assembly

—	Internal pilot	
S	Internal pilot, Built-in silencer	
R	External pilot	

\*: 3/5(E) port is plugged for the built-in silencer type.

\*: Refer to page 161 for the EX600 and 7 on page 173 for the EX250.

213

## Plug-in Connector Connecting Base Series SY3000/5000

Plug-in Metal Base

Type 50, 51, 52 Manifold Exploded View

Plug-in Connector Connecting Base

### 8 SY5000: A, B port size

(Metric/One-touch fitting)		(Inch/Or	ne-touch fitting)
Symbol	Port size	Symbol	Port size
4	Ø 4	3	Ø 5/32"
6	Ø 6	7	Ø 1/4"
8	Ø 8	9	Ø 5/16"
	For all stations of SY3000	—	For all stations of SY3000

\*: No symbol needs to be specified when fitting type "CM", "LM" is selected.

## **9** SY3000: A, B port size (Metric/One-touch fitting)


itting)	(Inch/One-touch	fitting)

	J		
Symbol	Port size	Symbol	Port size
2	Ø 2	1	Ø 1/8"
3	Ø 3.2	3	Ø 5/32"
4	Ø 4	7	Ø 1/4"
6	Ø 6	9	Ø 5/16"*1
8	Ø 8*1		

\*1: The valve pitch is the same as the SY5000.

\*: No symbol needs to be specified when fitting type "CM", "LM" is selected.

#### How to Order Manifold Assembly

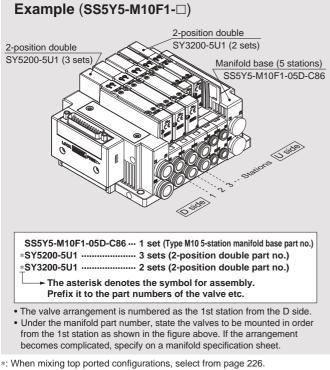

In this case, use caution as there is also output on the A and B port on base side.

Specify on a manifold specification sheet if plugs are required on the A and B port on base side.

#### **1** Mounting

	<u> </u>		
—	Direct mounting		
D	DIN rail mounting (With DIN rail)		
D0	DIN rail mounting (Without DIN rail)		
D3	For 3 stations	Specify a longer rail than the standard length.	
:	:	[The SY5000 valve is now at a mountable length	
D24	For 24 stations		
· Only direct mounting is available for Type 11 (Bottom ported)			


 Sefer to page 220 to determine the L3 using "Calculation formula" for the DIN rail length.

\*: Refer to page 271 for the fixation of DIN rail mounting type manifold.

Type 10, 11, 12 Manifold Exploded View



## Series SY3000/5000

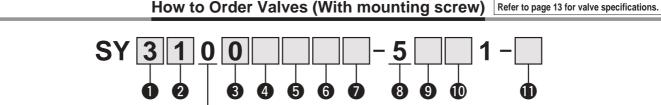

1 Sei	ries
3	SY3000
5	SY5000

#### 2 Type of actuation

1	2 position	Single
2	2-position	Double
3		Closed centre
4	3-position	Exhaust centre
5		Pressure centre
<b>A</b> *1	4-position dual 3-port	N.C./N.C.
<b>B</b> *1		N.O./N.O.
<b>C</b> *1	uuai 3-port	N.C./N.O.

 \*1: Only rubber seal type is available for the 4-position dual 3-port valve.

#### **3** Seal type

0	Rubber seal
1	Metal seal

4 Pilot type				
	Internal pilot			
R	External pilot			

## **5** Back pressure check valve (Built-in valve type)

- None
   None
   Built-in

   Only rubber seal type. Manifold installed type
   is available if back pressure check valve is
   required for the valve with metal seal. Refer
- to page 256 for Ordering Example. However, it is not recommended to use the built-in valve type and the manifold installed type at the same time because it will reduce the flow.
- \*: The built-in valve type back pressure check valve is not available for the 3-position type.

### Base mounted

Pilot valve option			
—	Standard (0.7 MPa)		
В	Quick response type (0.7 MPa)		
<b>K</b> *1	High pressure type (1.0 MPa)		
1: Only metal seal type is available for the			

high pressure type.

#### Coil type

- Standard
   With power saving circuit (Continuous duty type)
- \*: Be sure to select the power saving circuit type when the valve is continuously
- energised for long periods of time.
  \*: Be careful of the energising time when the power saving circuit is selected. Refer to page 268 for details.

#### 8 Rated voltage

5	24 V DC	
6	12 V DC	
*: Only 24 V DC is available for the serial		

transmission type.

## **9** Light/surge voltage suppressor and common specification


Symbol	With light	Surge voltage suppressor	Common specification
	—	_	
R		 	Non-polar
U			
S			Positive
Z			common
NS			Negative
NZ			common
*: "" is not available for the SLLInit manifold			

\*: "-" is not available for the SI Unit manifold.

\*: Only "Z" and "NZ" types are available for with the power saving circuit. Select a valve which is suited to the SI Unit output polarity or SI Unit specification when the SI Unit is selected.

Refer to the pages b	pelow for details.
EX500: P.147, 153	EX600: P.163
EX250: P.175	EX260: P.183
EX126: P.191	EX120: P.199

#### 10 Manual override

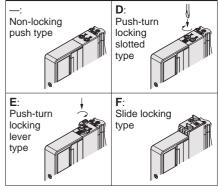

\*: Refer to page 31 for with the safety slide locking manual override.

#### Type of mounting screw

—	<ul> <li>Round head combination screw</li> </ul>	
В	Hexagon socket head cap screw	
K	Round head combination screw (Falling-out-prevention type)	
Н	Hexagon socket head cap screw (Falling-out-prevention type)	

\*: For "K" and "H", the valve body cover has a drop prevention construction to stop the mounting screws from falling out when the valve is removed for maintenance etc.

\*: When ordering a valve individually, the base gasket is not included. Since the base gasket is attached to the manifold, please order the base gasket separately if it is needed for maintenance service.


Refer to page 244 for part numbers of the base gasket and mounting screw.

\*: "B" and "H" cannot be selected for the individual SUP/EXH spacer assembly, interface regulator or double check spacer assembly with residual pressure release valve.





Valve	
Plug-in Sub-plate	
Plug-in Metal Base	
Type 50, 51, 52 Manifold Exploded View	
Plug-in Connector Connecting Base	
Type 10, 11, 12 Manifold Exploded View	
One-touch Fittings/ Plug Assembly Part No.	
Manifold Options	

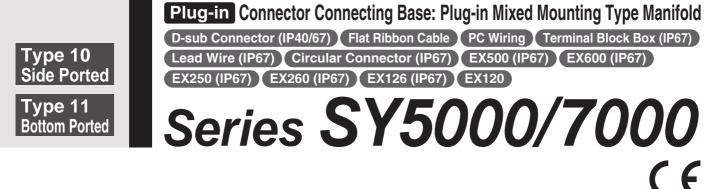

The SY5000 can be mounted onto the SY7000 size manifold.

How to Order Manifold

05

Refer to page 223 for dimensions of Type 11/Bottom ported type.

# SS5Y7-<u>M10</u>F

Mixed Mounting Type It is possible to mount the SY5000 size valves on all stations. In this case, there is no need to fill in part (3) in the order code. However, the manifold block width should be 19 mm.

#### • Туре

10	Side ported
11	Bottom ported

#### **2** Connector type

Symbol	Туре	Page		
F	D-sub connector IP40			
FW	(25 pins)	IP67		
Р		26 pins		
PG	Flat ribbon cable	20 pins	97	
PH		10 pins		
J	PC wiring			
G	(20 pins)	With power supply terminal		
Т	Terminal blo	ock box	115	
L1		34 cores		
L2	Lead wire	17 cores	125	
L3		9 cores		
Μ	Circular connector		135	
S□		EX500 Gateway Decentralised System 2 (128 Points)	145	
S□	Serial transmission	EX500 Gateway Decentralised System (64 Points)	151	
<b>S6</b> □		EX600	161	
S□		EX250	173	
S□		EX260	181	
<b>S</b> 4□		EX126	189	
S3□		EX120	197	
*: Refer to the pages shown in the table above				

\*: Refer to the pages shown in the table above for details.

#### <u>3</u>

With Lead wire			
Lead wire length			
1	0.6 m		
2	1.5 m		
3	3 m		
• With D-sub connector (IP40/67), Flat ribbon cable and PC wiring			

 Connector entry direction

 1
 Upward

 2
 Lateral

\*: It is not necessary to select the items above for the valve with terminal block box or with circular connector or the serial transmission type.

#### **4** Valve stations

Symbol	Stations	Note		
02	2 stations	Some connectors have a limitation		
:		on the number of stations. Refer to the pages shown in the table		
24	24 stations	"Connector type" for details.		

#### **5** P, E port entry

· ·	
U	U side (2 to 10 stations)
D	D side (2 to 10 stations)
В	Both sides (2 to 24 stations)

\*: Refer to page 161 for the EX600 and **1** on page 173 for the EX250.

#### Fitting type: One-touch fitting

Symbol	A, B port				
С	Straight				
L	Metric size		Upward*2		
В		Elbow	Downward*2		
N		Straight			
LN	Inch size	Elbow	Upward*2		
BN	1	EIDOW	Downward*2		
<b>CM</b> *1	Mixed sizes	Straight Elbow (Including upward and downward piping)*2			
LM*1	WIXeu Sizes				

\*1: Indicate the sizes on the manifold specification sheet in the case of "CM", "LM".

The direction of P, E port fittings is the same as for A, B port. If selecting "LM", indicate it on the manifold specification sheet for the P, E port fitting direction.

\*2: To avoid interference with the body or piping, select downward elbow port when mounting the optional spacer assembly (pages 250 to 252). Elbow fittings are not available for Type 11 (Bottom ported).

\*: Elbow fittings: Ø 1/4" and Ø 5/16" are not available.

#### **6** SUP/EXH block assembly

—	Internal pilot		
S	Internal pilot, Built-in silencer		
R	External pilot		

\*: 3/5(E) port is plugged for the built-in silencer type.

\*: Refer to page 161 for the EX600 and **7** on page 173 for the EX250.

217

# Plug-in Connector Connecting Base Series SY5000/7000

Plug-in Metal Base

Type 50, 51, 52 Manifold Exploded View

Plug-in Connector Connecting Base

Type 10, 11, 12 Manifold Exploded View

One-touch Fittings/ Plug Assembly Part No.

Manifold Options

#### 8 SY7000: A, B port size (Metric/One-touch fitting)

(	Inch/One-touch	fittina)
	men one-touch	mung)

	0/		0,
Symbol	Port size	Symbol	Port size
6	Ø 6	7	Ø 1/4"
8	Ø 8	9	Ø 5/16"
10	Ø 10	11	Ø 3/8"
12	Ø 12	_	For all stations of SY5000
_	For all stations of SY5000		

\*: No symbol needs to be specified when fitting type "CM", "LM" is selected.


## 9 SY5000: A, B port size

(Metric/	One-touch fitting)	(Inch/One-touch fitting)		
Symbol	Port size	Symbol	Port size	
6	Ø 6	7	Ø 1/4"	
8	Ø 8	9	Ø 5/16"	
10	Ø 10	11	Ø 3/8"	
12	Ø 12			

\*: The valve pitch is 19 mm, the same as the SY7000.

\*: No symbol needs to be specified when fitting type "CM", "LM" is selected.

# How to Order Manifold Assembly

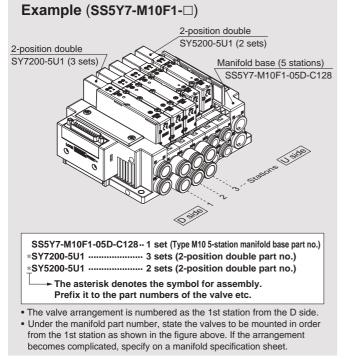

<sup>\*:</sup> When mixing top ported configurations, select from page 226. In this case, use caution as there is also output on the A and B port on base side.

SMC

## **1** Mounting and Option

I Option	
DIN Rail Option	
Direc	
Without DI	
For 3 stations	
:	
For 24 stations	


n I					
ation number	_	Direct mounting			
_	0	Without DIN rail (with bracket)			
•	3	For 3 stations	Specify a longer rail		
_	:	:	than the total length		
_	24	For 24 stations	of specified stations.		

- \*: Enter the number of stations inside 
  when it is larger than the number of valve stations. (Refer to "DIN Rail Option" above.)
- \*: Only direct mounting is available for Type 11 (Bottom ported).
- \*: Refer to page 220 to determine the L3 using "Calculation formula" for
- the DIN rail length. (For the SY3000 and SY5000 mixed mounting type) \*: The manifold block width is 19 mm for both the SY5000 and SY7000 sizes
- \*: Refer to page 271 for the fixation of DIN rail mounting type manifold.

#### Protective class class II (Mark: ())

Specify on a manifold specification sheet if plugs are required on the A and B port on base side.

# Series SY5000/7000

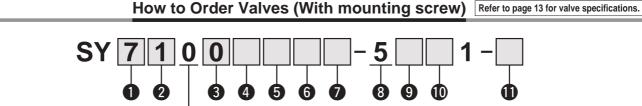

1 Series			
5	SY5000		
7	SY7000		

#### 2 Type of actuation

1	2 position	Single
2	2-position	Double
3		Closed centre
4	3-position	Exhaust centre
5		Pressure centre
<b>A</b> *1	4 nonition	N.C./N.C.
<b>B</b> *1	4-position dual 3-port	N.O./N.O.
<b>C</b> *1	uuai 5-port	N.C./N.O.

 \*1: Only rubber seal type is available for the 4-position dual 3-port valve.

#### **3** Seal type

0	Rubber seal	
1	Metal seal	

4 Pilot type			
—	Internal pilot		
R	External pilot		

# **5** Back pressure check valve (Built-in valve type)

	—	None	
H Built-in		Built-in	
	*: Only rubber seal type. Manifold installed type		
	is available if back pressure check valve is		
	an endered for the cool of order to the sector of Defen		

- required for the valve with metal seal. Refer to page 256 for Ordering Example. However, it is not recommended to use the built-in valve type and the manifold installed type at the same time because it will reduce the flow.
- \*: The built-in valve type back pressure check valve is not available for the 3-position type and the SY7000.

#### •

Base mounted

Pilot valve option			
—	Standard (0.7 MPa)		
В	Quick response type (0.7 MPa)		
<b>K</b> *1	High pressure type (1.0 MPa)		
1. Only metal seal type is available for the			

high pressure type.

#### 7 Coil type

- Standard
   With power saving circuit (Continuous duty type)
- \*: Be sure to select the power saving circuit type when the valve is continuously
- energised for long periods of time.\*: Be careful of the energising time when the power saving circuit is selected. Refer to page 268 for details.

#### 8 Rated voltage

5	24 V DC		
6	12 V DC		
*: Only 24 V DC is available for the serial			

transmission type.

# **9** Light/surge voltage suppressor and common specification


Symbol	With light	Surge voltage suppressor	Common specification
—	—		
R			Non-polar
U			
S			Positive
Z		•	common
NS			Negative
NZ			common
*: "" is not available for the SLL Init manifold			

\*: "-" is not available for the SI Unit manifold.

\*: Only "Z" and "NZ" types are available for with the power saving circuit. Select a valve which is suited to the SI Unit output polarity or SI Unit specification when the SI Unit is selected.

Refer to the	pages b	elow for	details.
EX500: P.14	17, 153	EX600:	P.163
EX250: P.17	75	EX260:	P.183
EX126: P.19	91	EX120:	P.199

#### 10 Manual override

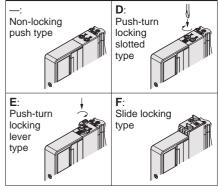

\*: Refer to page 31 for with the safety slide locking manual override.

#### Type of mounting screw


—	<ul> <li>Round head combination screw</li> </ul>	
В	Hexagon socket head cap screw	
K	K Round head combination screw (Falling-out-prevention type	
Н	H Hexagon socket head cap screw (Falling-out-prevention typ	

\*: For "K" and "H", the valve body cover has a drop prevention construction to stop the mounting screws from falling out when the valve is removed for maintenance etc.

\*: When ordering a valve individually, the base gasket is not included. Since the base gasket is attached to the manifold, please order the base gasket separately if it is needed for maintenance service.


Refer to page 244 for part numbers of the base gasket and mounting screw.

\*: "B" and "H" cannot be selected for the individual SUP/EXH spacer assembly, interface regulator or double check spacer assembly with residual pressure release valve.

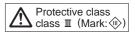



# Plug-in Connector Connecting Base Series SY3000/5000/7000

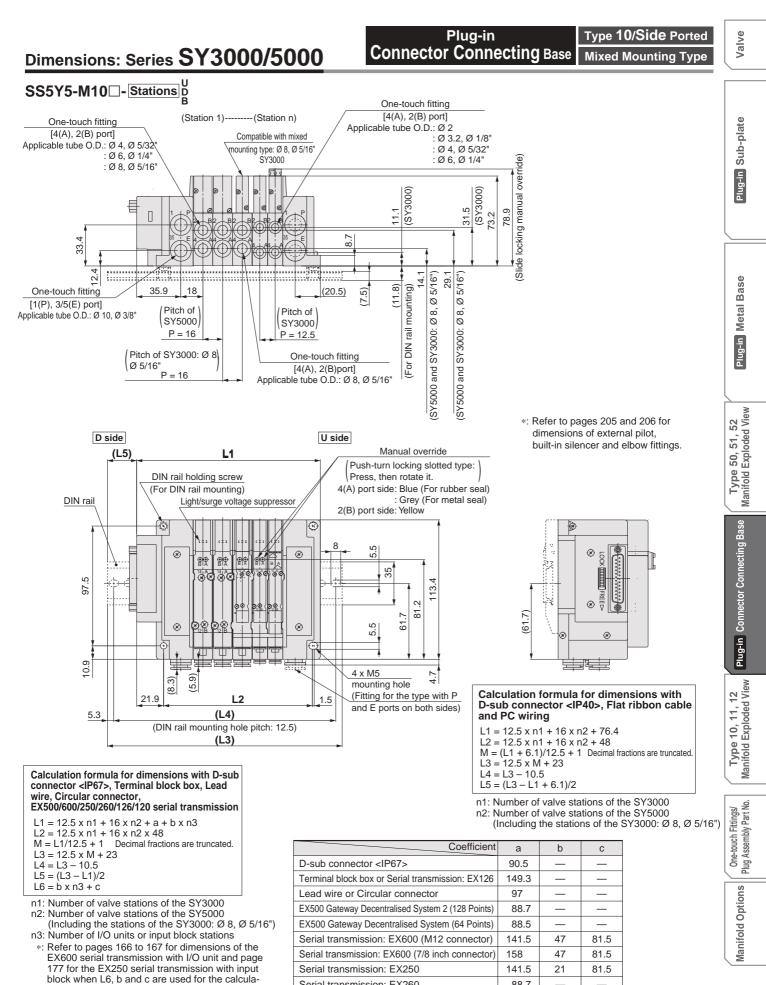

Serial transmission: EX260


Serial transmission: EX120

**SMC** 

tion formula.

88.7

84.7

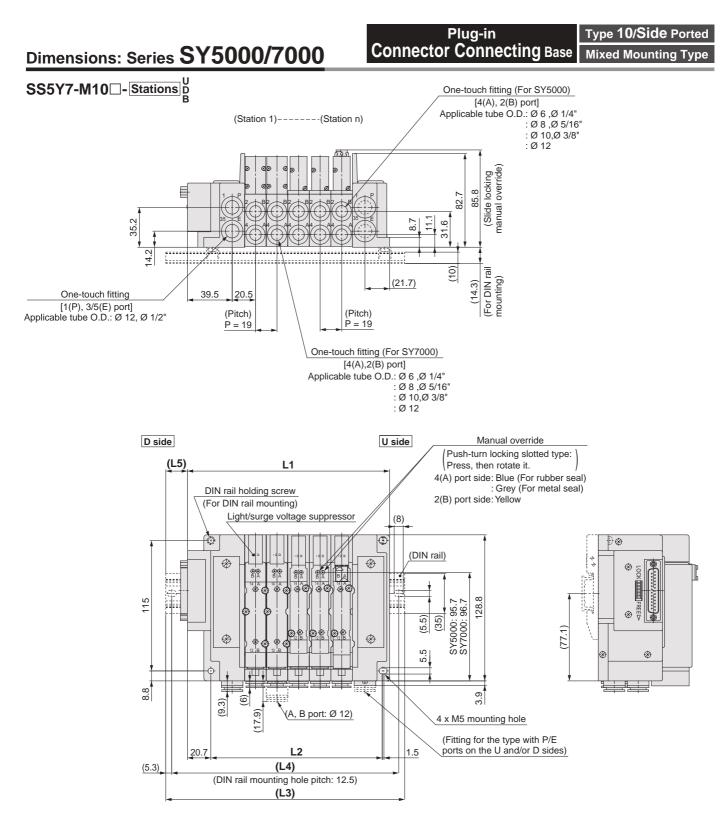


\*: Refer to page 207 for dimensions of external pilots and built-in silencers.


\*: Refer to the below pages for L1, L2, L3, L4 dimensions and other dimensions that are not specified in each wiring specification.

D-sub connector <ip40< th=""><th>&gt;: P. 102</th></ip40<>	>: P. 102
D-sub connector <ip67< td=""><td>&gt;: P. 105</td></ip67<>	>: P. 105
Flat ribbon cable	: P. 108
Terminal block box	: P. 120
Lead wire	: P. 130
Circular connector	: P. 140
EX500 (128 points)	: P. 150
EX500 (64 points)	: P. 156
EX600	: P. 168, 169
EX250	: P. 178
EX260	: P. 186
EX126	: P. 194
EX120	: P. 202

**SMC** 

# Elligen Connector Connecting Base Series SY3000/5000/7000

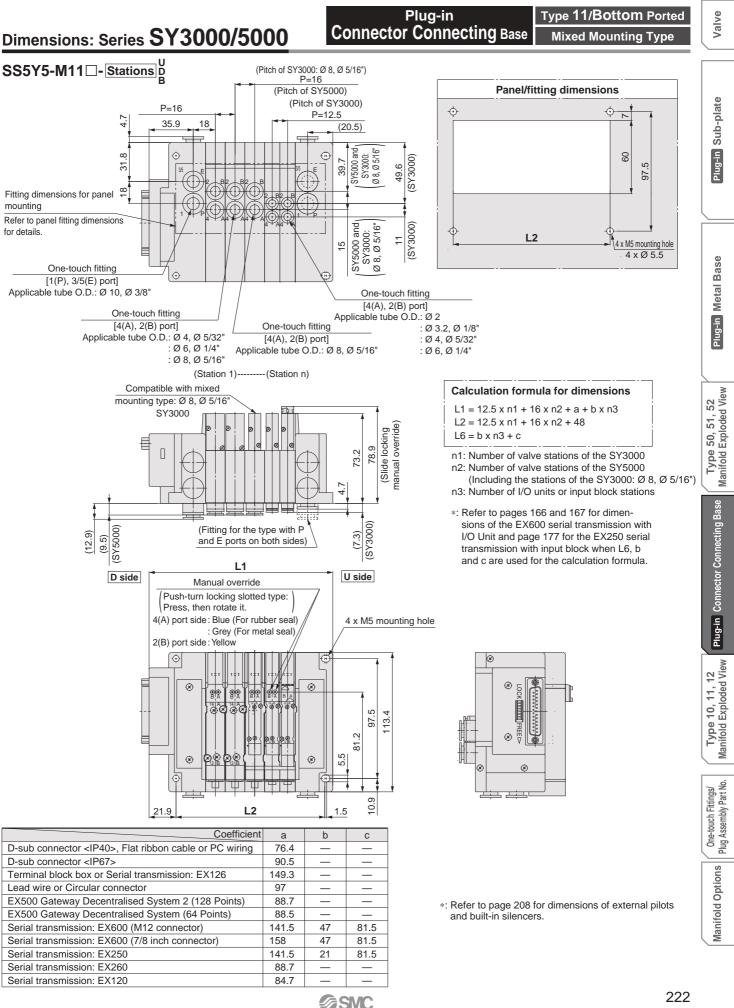

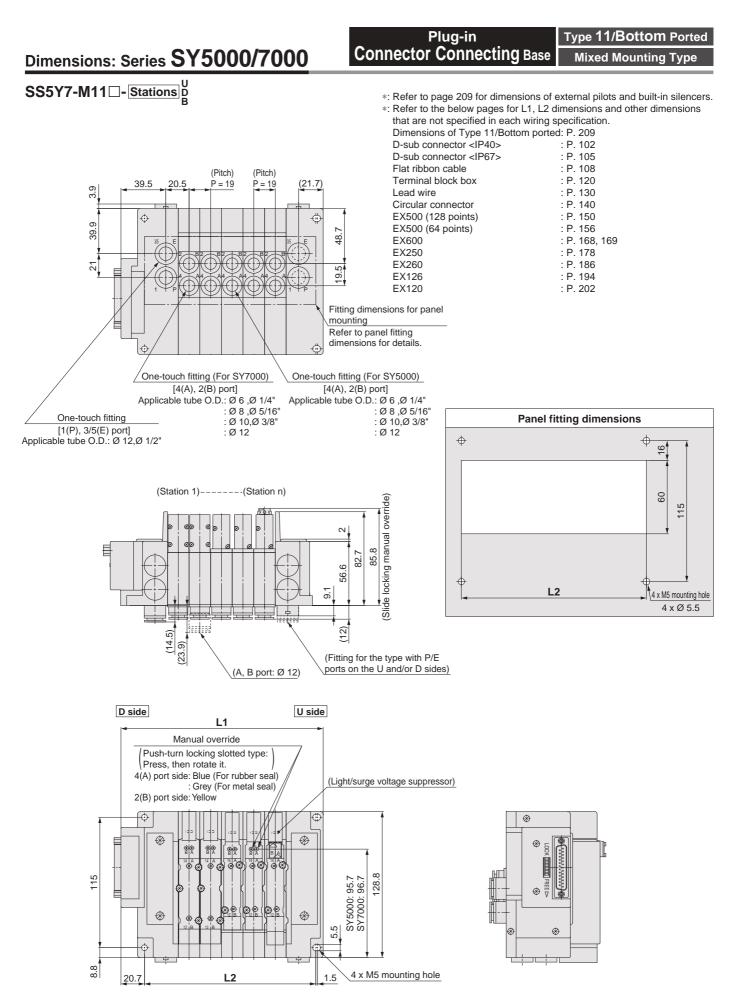



Valve	
Plug-in Sub-plate	
Plug-in Metal Base	
Type 50, 51, 52 Manifold Exploded View	
Plug-in Connector Connecting Base	
Type 10, 11, 12 Manifold Exploded View	
One-touch Fittings/ Plug Assembly Part No.	
Manifold Options	

#### Plug-in Connector Connecting Base: Plug-in Mixed Mounting Type Manifold D-sub Connector (IP40/67) Flat Ribbon Cable PC Wiring Terminal Block Box (IP67) Lead Wire (IP67) Circular Connector (IP67) EX500 (IP67) EX600 (IP67) EX250 (IP67) EX260 (IP67) EX126 (IP67) EX120 Type 12 Top Ported Series SY3000/5000/7000 $\subset \in$ For the SY5000 series, the SY5000 and the SY3000 can be mounted on the same manifold. For the SY7000 series, the SY7000 and the SY5000 can be mounted on the same manifold. How to Order Manifold Refer to pages 211 and SS5Y 5 - M12 1 05 212 for dimensions of Type 12/Top ported type. Mixed Mounting Type For the SY5000 series, it is possible to mount the SY3000 size valves on all stations. However, the SY3000 manifold block width should be 12.5 mm. (16 mm for Ø 8 or Ø 5/16" One-touch fitting) **5** P, E port entry Also, for the SY7000 series, it is possible to mount the SY5000 size valves on all stations. However, the SY3000 cannot be mounted onto the SY7000 series. **U**\*1 U side (2 to 10 stations) **D**\*1 D side (2 to 10 stations) B Both sides (2 to 24 stations) 2 Connector type Series \*1: For type "S", supply/exhaust block Page SY5000 Symbol Туре assembly with built-in silencer, choose U or F IP40 SY7000 D-sub connector D for P port entry. FW (25 pins) IP67 \*: Refer to page 171 for the EX600 and 6 on 3 Ρ 26 pins PG Flat ribbon cable 20 pins 109 · With Lead wire 6 SUP/EXH block assembly PH 10 pins Internal pilot Lead wire length J PC wiring (20 pins) S Internal pilot, Built-in silencer G With power supply terminal 1 0.6 m Terminal block box 121 R External pilot 2 Т 1.5 m \*: For built-in silencer type, P and E ports are 3 3 m L1 34 cores available on U and D sides. 3/5(E) port is L2 Lead wire 17 cores 131 plugged. The silencer exhaust port is located L3 9 cores • With D-sub connector (IP40/67), Flat on the opposite side of P, E port entry. Circular connector ribbon cable and PC wiring 141 Μ (Example: When the P, E port entry is D FX500 Gateway side, the silencer exhaust port is U side.) **Connector entry direction** Decentralised \*: Refer to page 171 for the EX600 and 6 on 1 Upward S□ 157 System 2 page 179 for the EX250. 2 Lateral (128 Points) 8 Mounting \*: It is not necessary to select the items above for EX500 Gateway the valve with terminal block box or with circular Decentralised S□ Serial 159 connector or the serial transmission type. System transmission (64 Points) 4 Valve stations **S6**□ EX600 171 Symbol Stations Note S□ EX250 179 02 2 stations Some connectors have a limitation S□ EX260 187 on the number of stations. Refer ÷ **S**4□ EX126 195 to the pages shown in the table

24	24 s	stations "Connector type" for details.			
P, E port size (One-touch fittings)					
			5000	SY7000	Note
_	-	Ø	10 ا	Ø 12	Metric size

rt size (One-touch fittings)			for details.
5000	SY7000	Note	
10	Ø 12	Metric size	

Inch size

S3 🗆

# : Refer to the pages shown in the table above

EX120


203

—		Direct mounting		
D	DIN	ail mounting (With DIN rail)		
D0	DIN rail mounting (Without DIN rail)			
D3	stations	Specify a longer rail than the standard length.		
	:	[For the SS5Y5-M12, the SY500 valve is now at a mountable		
D24	For 24 stations	length (manifold block length of 16 mm).]		

\*: Refer to page 227 to determine the L3 using "Calculation formula" for the DIN rail length. (For the SY3000 and SY5000 mixed mounting type)

\*: Refer to page 271 for the fixation of DIN rail mounting type manifold.

## Ø 1/2" How to Order Manifold Assembly

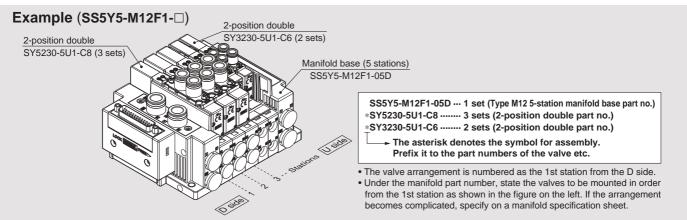


N


Ø 3/8'



# Elucein Connector Connecting Base Series SY3000/5000/7000

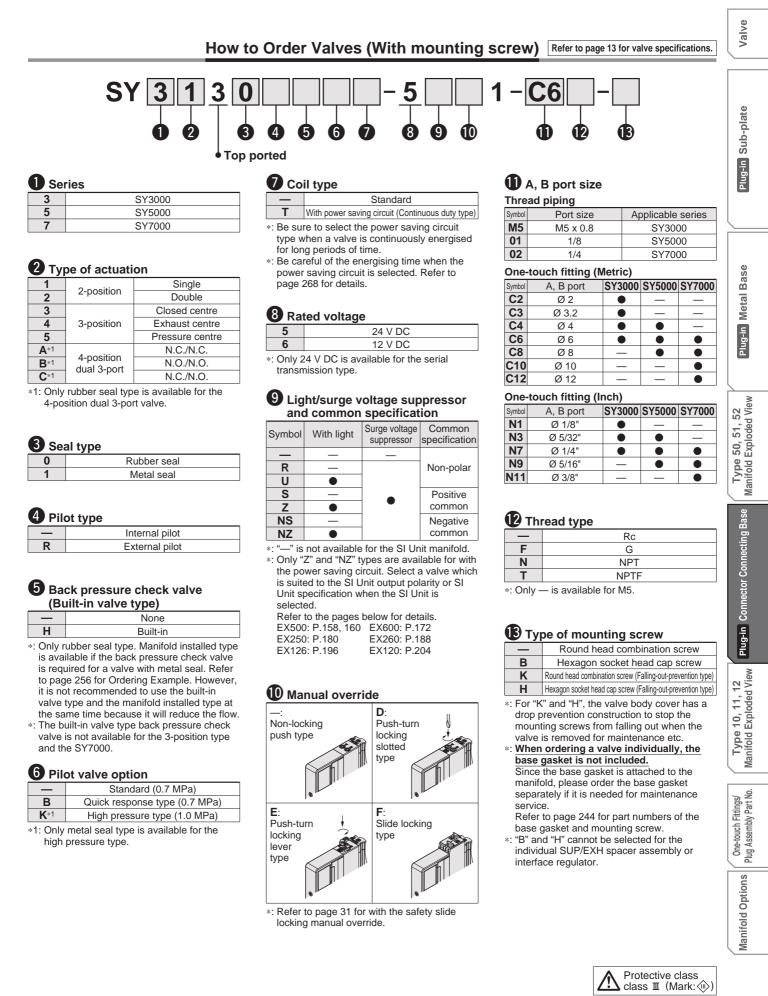

**SMC** 

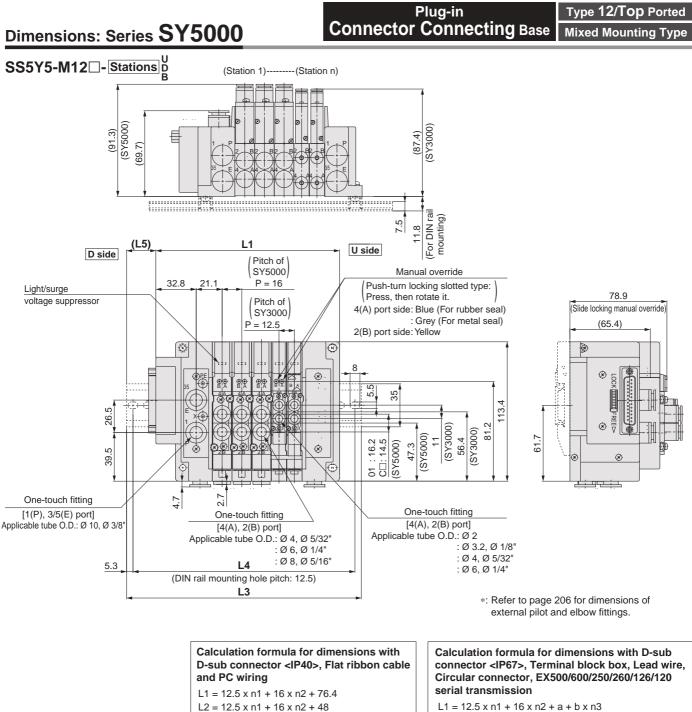

- M = (L1 + 6.1)/12.5 + 1 Decimal fractions are truncated.  $L2 = 12.5 \times n1 + 16 \times n2 \times 48$ 
  - M = L1/12.5 + 1 Decimal fractions are truncated.
  - L3 = 12.5 x M + 23
  - L4 = L3 10.5
  - L5 = (L3 L1)/2
  - $L6 = b \times n3 + c$

n1: Number of valve stations of the SY3000 n2: Number of valve stations of the SY5000 n3: Number of I/O Units or input block stations

\*: Refer to pages 166 and 167 for dimensions of the EX600 serial transmission with I/O Unit and page 177 for the EX250 serial transmission with input block when L6, b and c are used for the calculation formula.


L4 = L3 - 10.5
L4 = L3 – 10.5 L5 = (L3 – L1 + 6.1)/2
n1: Number of valve stations of the SY3000
n2: Number of valve stations of the SY5000

L3 = 12.5 x M + 23

Coefficient	а	b	С
D-sub connector <ip67></ip67>	90.5	—	—
Terminal block box or Serial transmission: EX126	149.3	—	—
Lead wire or Circular connector	97	—	—
EX500 Gateway Decentralized System 2 (128 Points)	88.7	—	—
EX500 Gateway Decentralised System (64 Points)	88.5	—	_
Serial transmission: EX600 (M12 connector)	141.5	47	81.5
Serial transmission: EX600 (7/8 inch connector)	158	47	81.5
Serial transmission: EX250	141.5	21	81.5
Serial transmission: EX260	88.7	—	_
Serial transmission: EX120	84.7	—	—


**SMC** 

# Elucia Connector Connecting Base Series SY3000/5000/7000

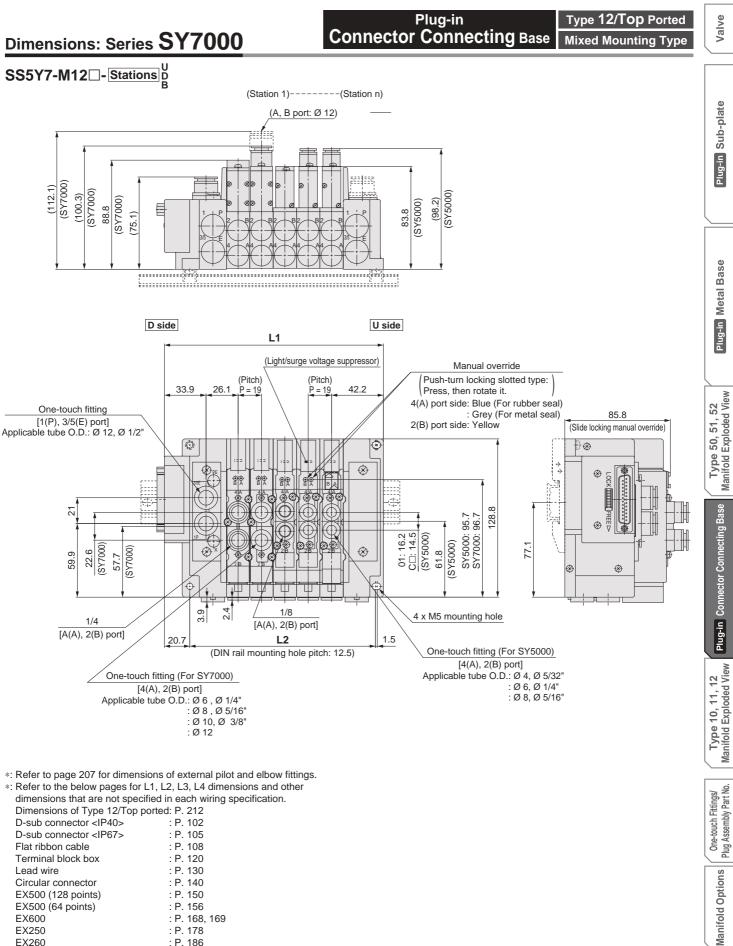


dimensions that are not specified	
Dimensions of Type 12/Top porter	d: P. 212
D-sub connector <ip40></ip40>	: P. 102
D-sub connector <ip67></ip67>	: P. 105
Flat ribbon cable	: P. 108
Terminal block box	: P. 120
Lead wire	: P. 130
Circular connector	: P. 140
EX500 (128 points)	: P. 150
EX500 (64 points)	: P. 156
EX600	: P. 168, 169
EX250	: P. 178
EX260	: P. 186
EX126	: P. 194
EX120	: P. 202


# Series SY3000/5000/7000 Type 10, 11, 12 Connector Connecting Base Manifold Exploded View

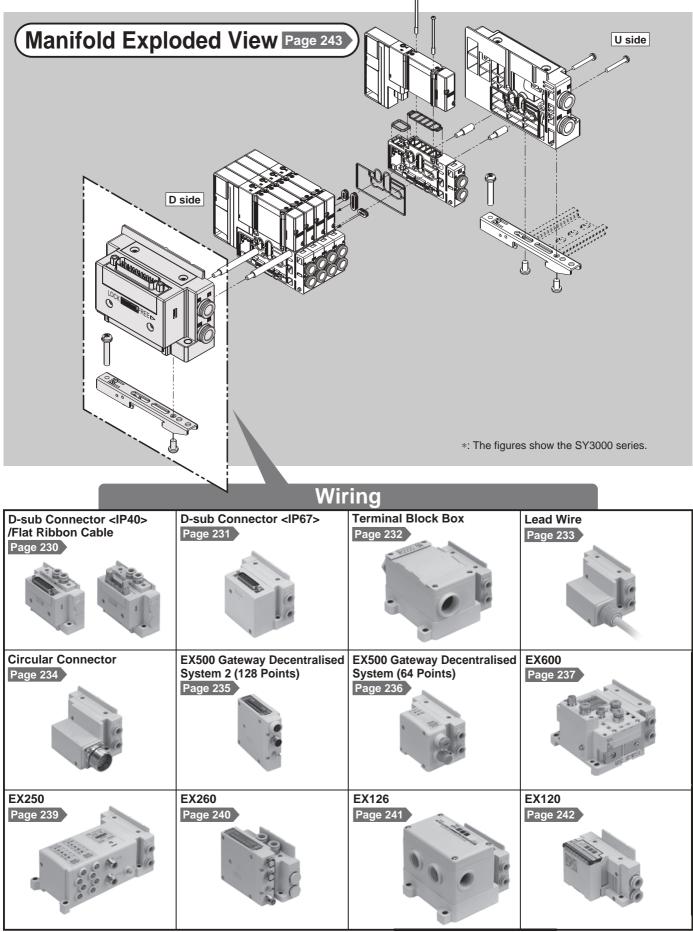

## Туре 10, 11, 12 Connector Connecting Base Manifold Exploded View Series SY3000/5000/7000

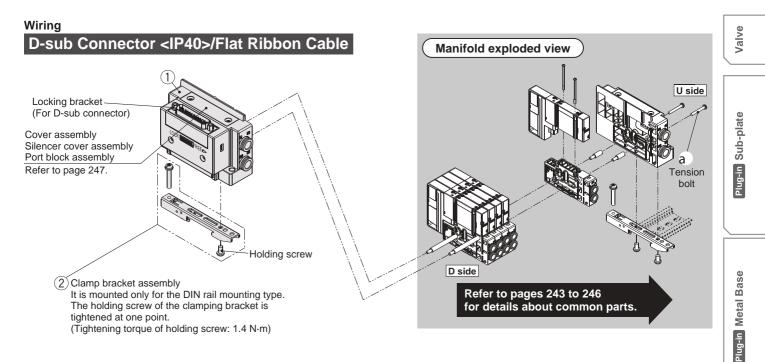

#### Manifold Parts No.

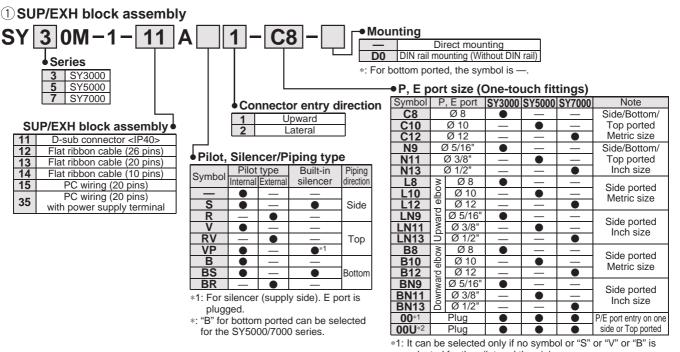

#### SUP/EXH block assembly (D side)

accessories and the number of accessories		
Accessories	SY3000	SY5000 SY7000
a Tension bolt	None*1	3 pcs.

\*1: Since the nuts are embedded in the SUP/EXH block.

#### (2) Clamp bracket assembly

Series	Part no.
SY3000	SY30M-15-1A
SY5000/7000	SY50M-15-1A

\*: Part number is for one assembly.

selected for the pilot and the piping.

"00U" is available only for the D-sub connector type and it has an inch size locking bracket.


# One-touch Fittings/ Plug Assembly Part No.

Type 10, 11, 12 ifold Exploded View


Type 50, 51, 52 Manifold Exploded View

Plug-in Connector Connecting Base



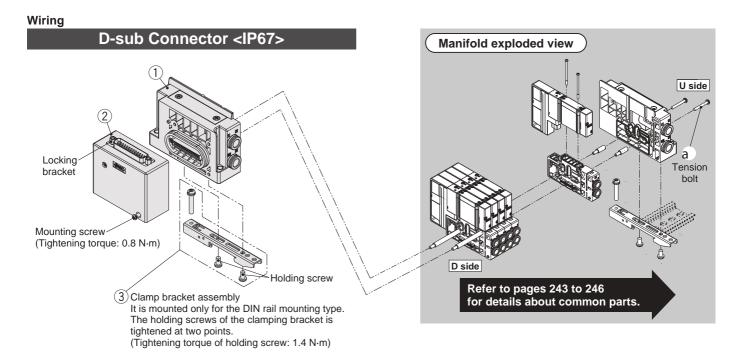

## Manifold Parts No.

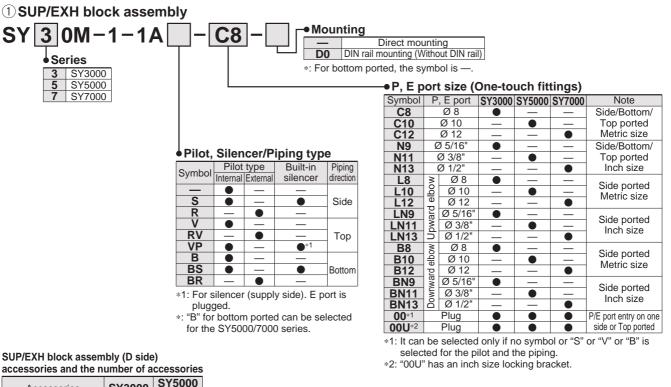

Accessories	SY3000	SY5000 SY7000
a Tension bolt	None*1	3 pcs.

\*1: Since the nuts are embedded in the SUP/EXH block.

#### 2 D-sub connector block assembly < IP67>


Part no.	Connector direction	Locking bracket
SY30M-14-9A1	Тор	Matria airea
SY30M-14-9A2	Side	Metric size
SY30M-14-9A1U	Тор	la chi cino
SY30M-14-9A2U	Side	Inch size

#### **3 Clamp bracket assembly**


Series	Part no.	
SY3000	SY30M-15-1A	
SY5000/7000	SY50M-15-1A	

\*: Part number is for one assembly.

## Туре 10, 11, 12 Connector Connecting Base Manifold Exploded View Series SY3000/5000/7000

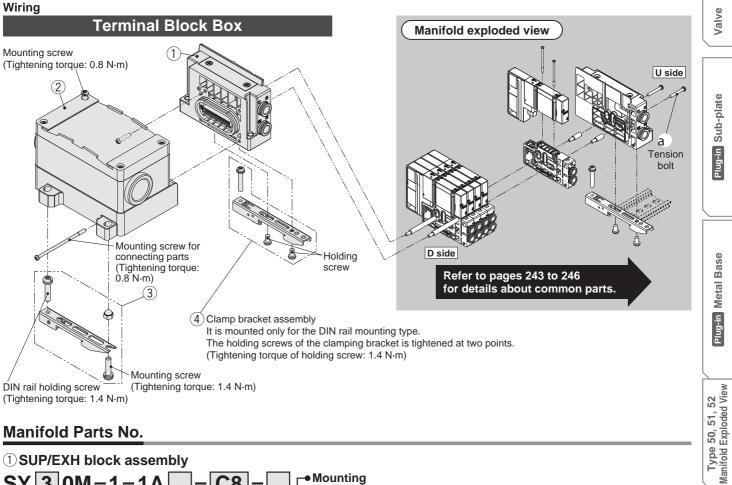

## Manifold Parts No.

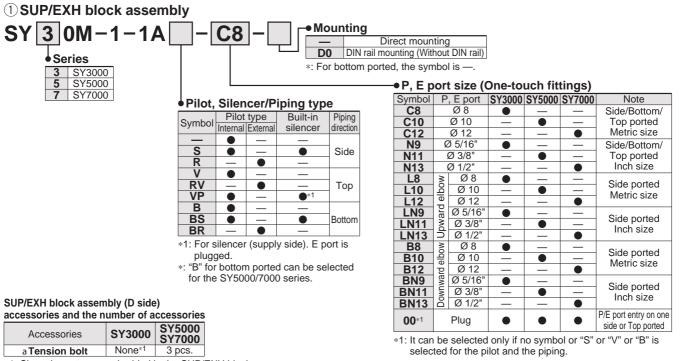

**GSMC** 

\*1: Since the nuts are embedded in the SUP/EXH block.

## 2 Terminal block box housing assembly VVQC1000-T0-1

## **3** Clamp bracket assembly for terminal block box

## SY30M-15-4A

\*: Part number is for one assembly.

#### **4 Clamp bracket assembly**

Series	Part no.
SY3000	SY30M-15-1A
SY5000/7000	SY50M-15-1A

\*: Part number is for one assembly.

One-touch Fittings/ Plug Assembly Part No.


Plug-in Connector Connecting Base

loded View


fold

12

10, Expl

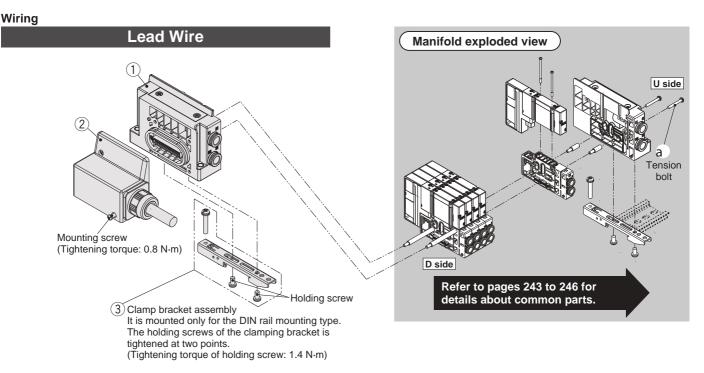

## Manifold Parts No.

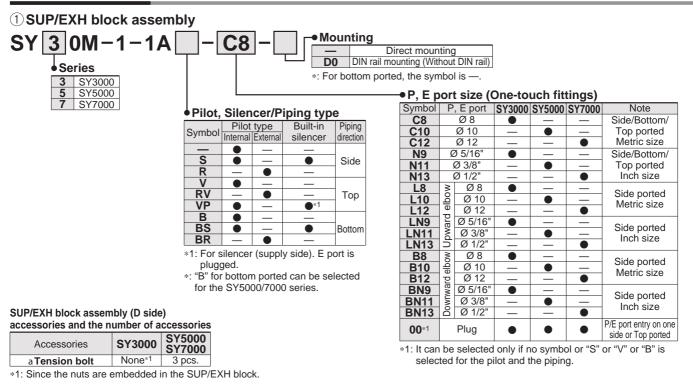


#### 2 Lead wire connector block assembly SY30M-14-4A-Number of cores 1 34 1 0.62 1.5

#### **3 Clamp bracket assembly**


Series	Part no.
SY3000	SY30M-15-1A
SY5000/7000	SY50M-15-1A

\*: Part number is for one assembly.

## Type 10, 11, 12 Connector Connecting Base Manifold Exploded View Series SY3000/5000/7000

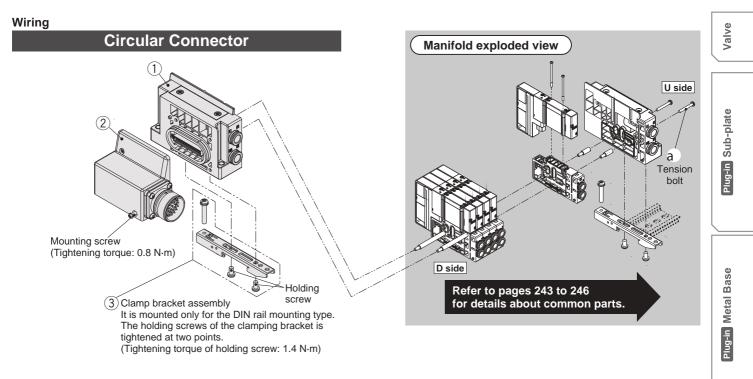

## Manifold Parts No.

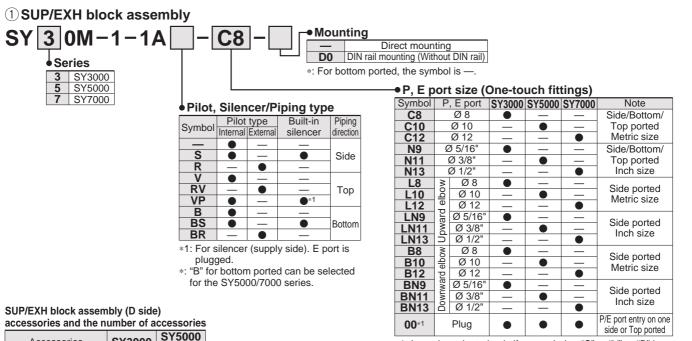

\*1: It can be selected only if no symbol or "S" or "V" or "B" is selected for the pilot and the piping.

Accessories SY3000 SY7000

 a Tension bolt
 None\*1
 3 pcs.

 \*1: Since the nuts are embedded in the SUP/EXH block.

# O Circular connector block assembly

SY30M-14-5A

#### \*: 26 pins

#### **③ Clamp bracket assembly**

Series	Part no.		
SY3000	SY30M-15-1A		
SY5000/7000 SY50M-15-1A			
Destaurshault for an a second blue			

\*: Part number is for one assembly.

Type 50, 51, 52 Manifold Exploded View

Plug-in Connector Connecting Base


Type 10, 11, 12 ifold Exploded View

One-touch Fittings/ Plug Assembly Part No.


Manifold Options

## Wiring

EX500: Gateway Decentralised System 2 (128 Points)

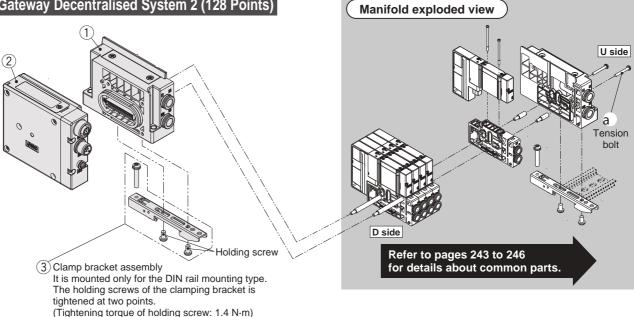

#### Manifold Parts No.

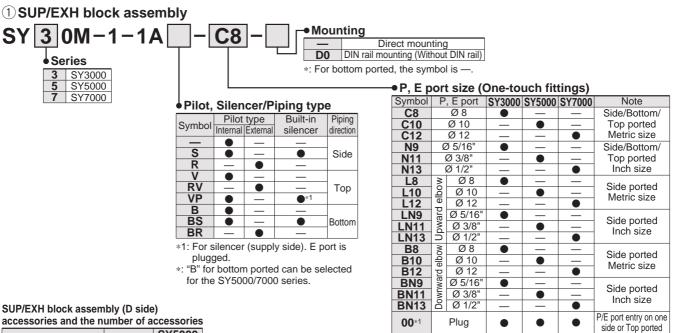

\*1: It can be selected only if no symbol or "S" or "V" or "B" is

selected for the pilot and the piping.

Accessories	SY3000	SY5000 SY7000
a Tension bolt	None*1	3 pcs.

\*1: Since the nuts are embedded in the SUP/EXH block.


## **(2) EX500 SI Unit** EX500-S103

#### **3 Clamp bracket assembly**


Series	Part no.
SY3000	SY30M-15-1A
SY5000/7000	SY50M-15-1A

\*: Part number is for one assembly.

## Туре 10, 11, 12 Connector Connecting Base Manifold Exploded View Series SY3000/5000/7000

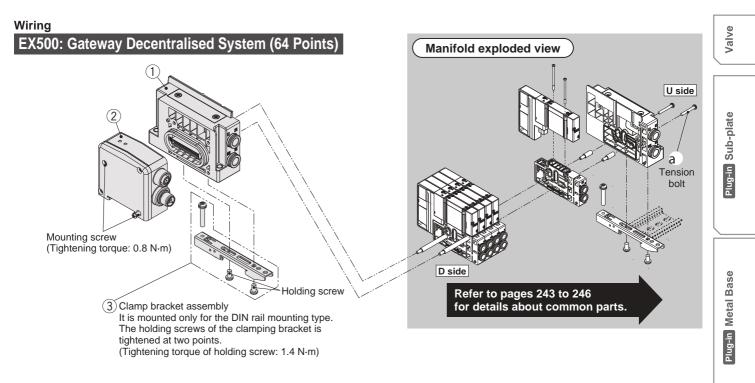


## Manifold Parts No.

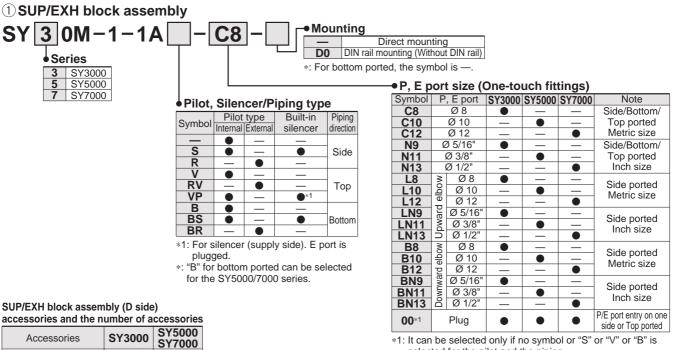

\*1: It can be selected only if no symbol or "S" or "V" or "B" is selected for the pilot and the piping.

None\*1 a Tension bolt 3 pcs.

\*1: Since the nuts are embedded in the SUP/EXH block.

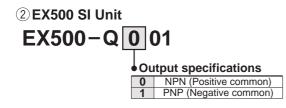

#### **3 Clamp bracket assembly**

Series	Part no.			
SY3000	SY30M-15-1A			
SY5000/7000 SY50M-15-1A				
* Part number is for one assembly				

\*: Part number is for one assembly.


Type 50, 51, 52 Manifold Exploded View

Plug-in Connector Connecting Base

Type 10, 11, 12 ifold Exploded View

One-touch Fittings/ Plug Assembly Part No.

Manifold Options

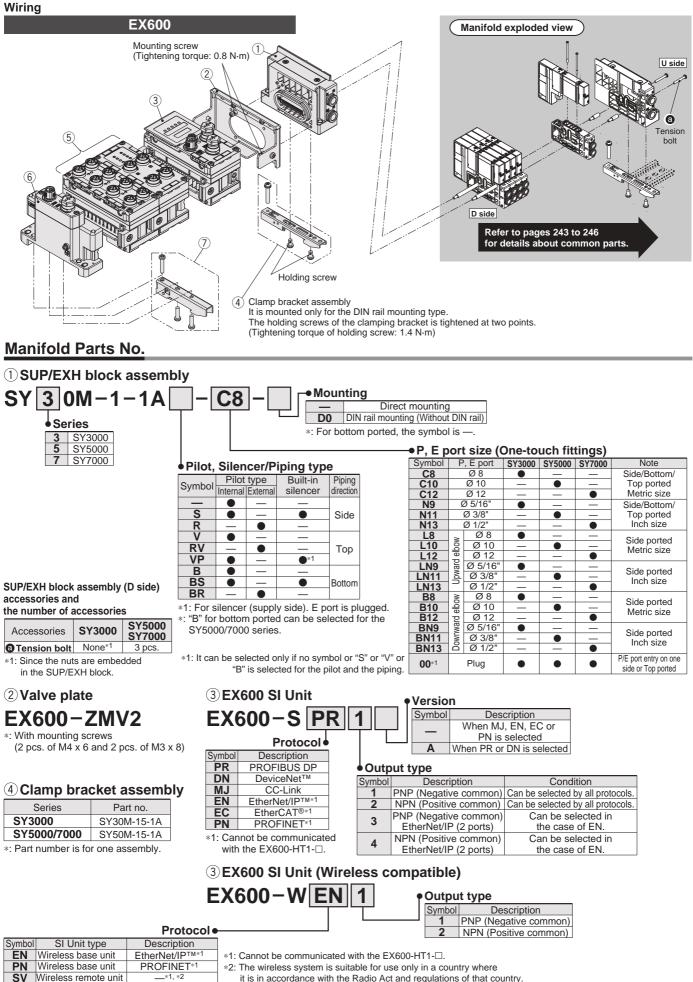


it is in accordance with the Radio Act and regulations of that country.

SMC

## Type 10, 11, 12 Connector Connecting Base Manifold Exploded View Series SY3000/5000/7000

#### Manifold Parts No.

## **5 EX600 Digital Input Unit**

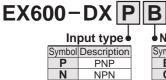

	Number of inputs, open circuit detection, and connector					
Symbol Number of inputs Open circuit detection		Open circuit detection	Connector			
В	<b>B</b> 8 No		M12 connector (5 pins) 4 pcs.			
С	C 8 No		M8 connector (3 pins) 8 pcs.			
C1	C1 8 Yes		M8 connector (3 pins) 8 pcs.			
D	16 No		M12 connector (5 pins) 8 pcs.			
E	16	No	D-sub connector (25 pins)*1*2			
F	16	No	Spring type terminal block (32 pins)*1*2			

#### **(5) EX600 Digital Output Unit**

# EX600-DY PB

0

Out	put type	• • Number of outputs and connector			
Symbol	Description	S	ymbol	Number of outputs	Connector
Ρ	PNP		В	8	M12 connector (5 pins) 4 pcs.
Ν	NPN		E	16	D-sub connector (25 pins)*1*2
			F	16	Spring type terminal block (32 pins)*1*2


## (5) EX600 Digital Input/Output Unit

#### 

nput/Output type				
Symbol Description				
	Ρ	PNP		
	Ν	NPN		

	•Number of inputs/outputs and connector					
	Symbol	Number of inputs	Number of outputs	Connector		
]	E	8	8	D-sub connector (25 pins)*1*2		
]	F	8	8	Spring type terminal block (32 pins)*1*2		

#### **5 EX600 Analog Input/Output Unit**

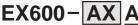

Analog input/output Symbol Description AX Analog input AY Analog output

Number of input channels and connector				
Symbol	Number of input channels			
A 2 channels M12 connector (5 pins) 2 pcs.*3				
*3: Refer to *1 and *2 below for AY.				

# **5 EX600 Analog Input/Output Unit**

# EX600-<u>AM</u>B


Analog input/output

•Number of input/output channels and connector					
Symbo	Symbol Number of input channels Number of output channels Connector				
В	2 channels	2 channels	M12 connector (5 pins) 4 pcs.*1*2		

#### 6 EX600 end plate

	00-ED 2	
Symbol	Connector	
2	M12 (5 pins)	
3	7/8 inch (5 pins)	
4	M12 (4 pins/5 pins)	


Moun	ting
Symbol	Description
_	Without DIN rail mounting bracket
3	With DIN rail mounting bracket

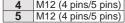



\*: The pin layout for "4" and "5" pin connector is different.





Enclosed parts Round head screw with washer (M4 x 20) 1 pc. P-tight screw (4 x 14) 2 pcs.

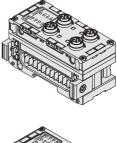


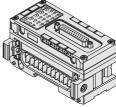

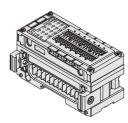

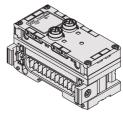

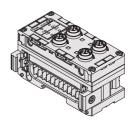

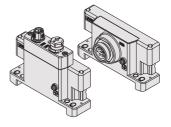


Valve

\*1: Cannot be communicated with the EX600-HT1-□ (Old version of the Handheld Terminal).
 \*2: Cannot be connected with the EX600-SPR1, EX600-SPR2, EX600-SDN1, or EX600-SDN2.



238

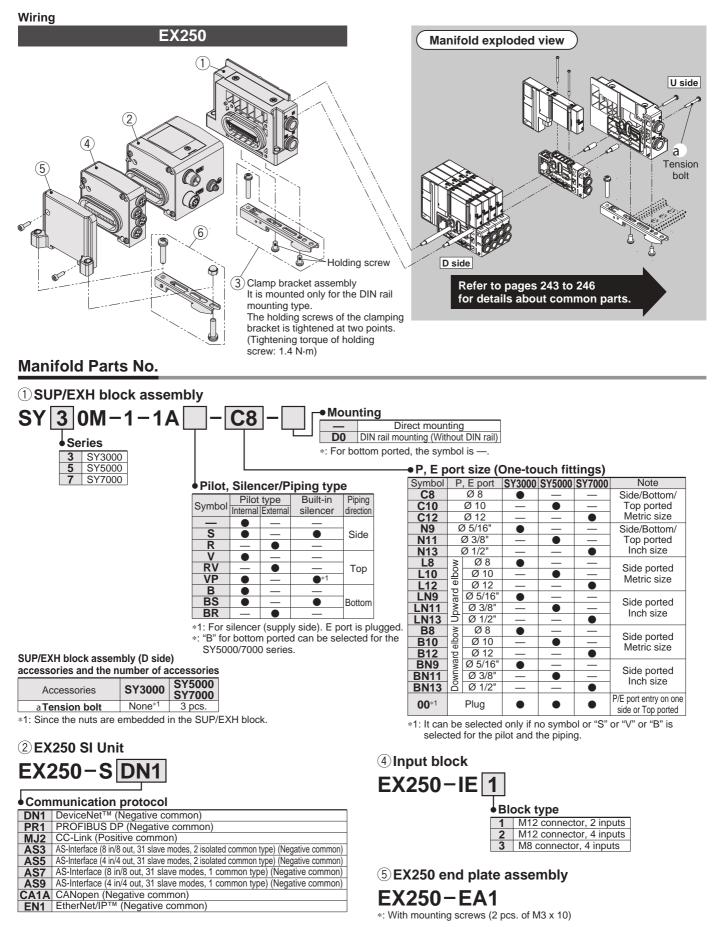

#### **③ Clamp bracket assembly**


Series	Part no.
SY3000	SY30M-15-1A
SY5000/7000	SY50M-15-1A

**SMC** 

6 Clamp bracket assembly for EX250 SI Unit

SY30M-15-3A \*: Part number is for one assembly.

## Type 10, 11, 12 Connector Connecting Base Manifold Exploded View Series SY3000/5000/7000

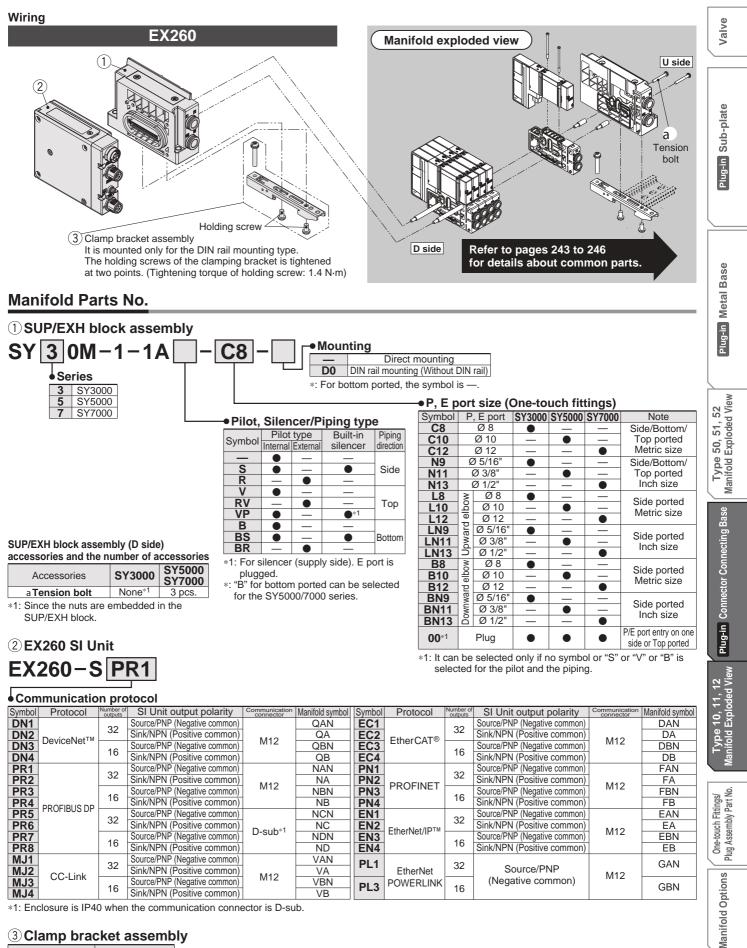


 Series
 Part no.


 SY3000
 SY30M-15-1A

 SY5000/7000
 SY50M-15-1A

\*: Part number is for one assembly.

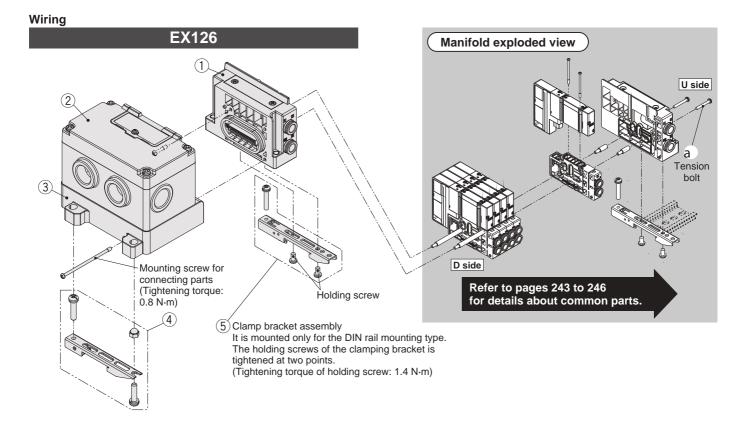

## Manifold Parts No.

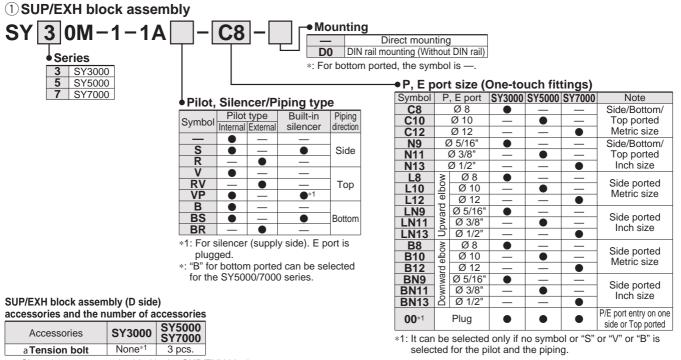

**SMC** 

\*1: Since the nuts are embedded in the SUP/EXH block.

2 EX126 SI Unit

EX126D-SMJ1 \*: CC-Link (Positive common)

# **③ Terminal block plate assembly** VVQC1000-74A-2

#### (4) Clamp bracket assembly for EX126 SI Unit SY30M-15-4A

\*: Part number is for one assembly.


#### 5 Clamp bracket assembly

Series Part no. SY3000 SY30M-15-1A SY5000/7000 SY50M-15-1A


\*: Part number is for one assembly.

## Туре 10, 11, 12 Connector Connecting Base Manifold Exploded View Series SY3000/5000/7000



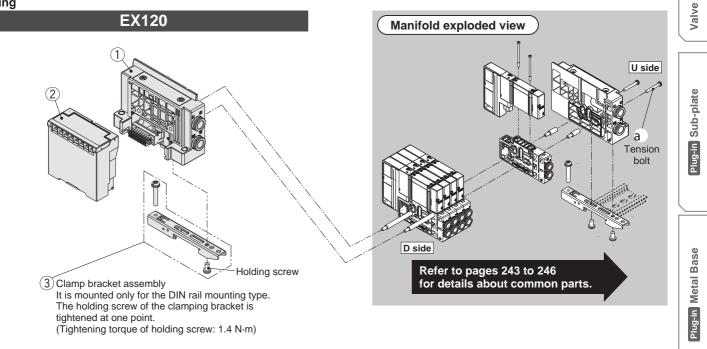

## Manifold Parts No.

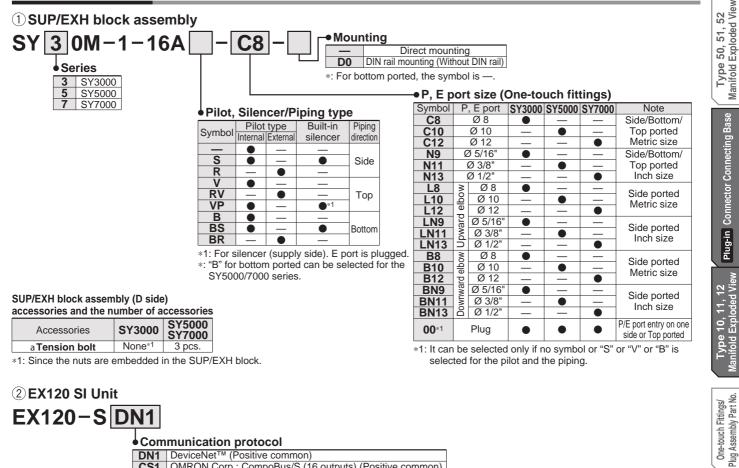

**SMC** 

#### Communication protocol

DN1	DeviceNet <sup>™</sup> (Positive common)
CS1	OMRON Corp.: CompoBus/S (16 outputs) (Positive common)
CS2	OMRON Corp.: CompoBus/S (8 outputs) (Positive common)
MJ1	CC-Link (Positive common)
CM1	CompoNet <sup>™</sup> NPN (Positive common)
CM3	CompoNet <sup>™</sup> PNP (Negative common)


#### 3 Clamp bracket assembly

Series	Part no.
SY3000	SY30M-15-1A
SY5000/7000	SY50M-15-1A
Deut much au la fair an a	a a a secola la s


\*: Part number is for one assembly.

Manifold Options

# Manifold Exploded View (Common Parts)

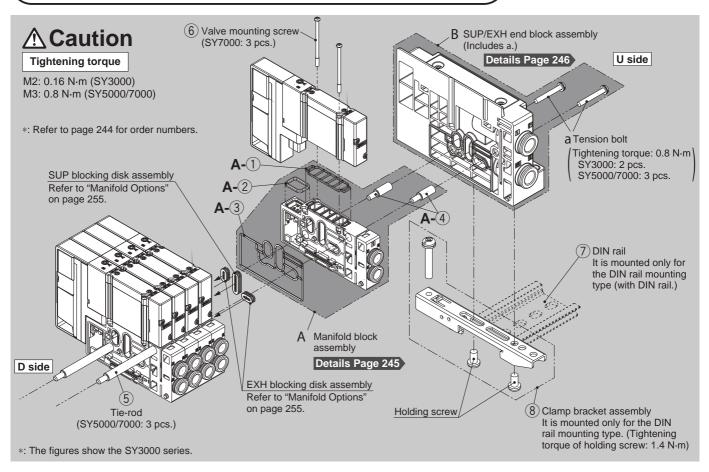

## Type 10, 11, 12: How to Increase Connector Type Manifold

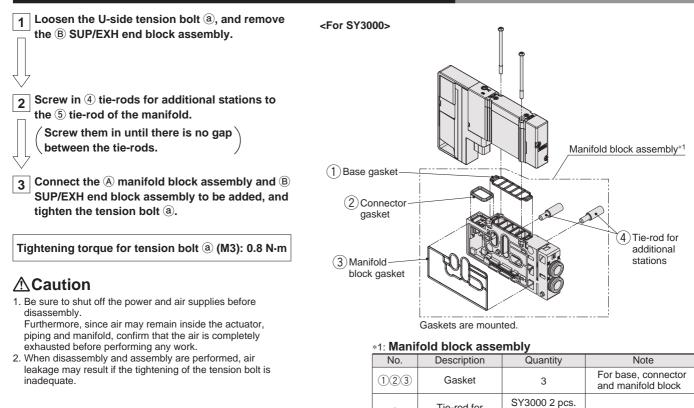

additional stations Refer to page 244 for ordering single unit.

Tie-rod for

SY5000 3 pcs.

SY7000 3 pcs.

(4)

## Туре 10, 11, 12 Connector Connecting Base Manifold Exploded View Series SY3000/5000/7000

## For SS5Y3-10/11/12, SS5Y5-(M)10/11/12, SS5Y7-(M)10/11/12

No.			Description		SY3000	SY5000	SY7000	Note			
<b>A-</b> ①		Base g (for co	asket nnector connect	ing base)	Part numbers shown on the left are for 10 valves. (10 pcs.)						
<b>A-</b> 2	ssembly	Conne	ctor gasket			SX3000-146-2		Supplied individually.			
<b>A-</b> ③	ass	Manifo	old block gasket		SY30M-9-2	SY50M-9-2	SY70M-9-2	Supplied individually.			
	Manifold block Tie-rod for additional stations*1		SY3000/5000/70	00	<b>SY30M-49-2-A</b> (10.5 mm pitch)	SV2000-55-2A-A (16 mm pitch)	<b>SY70M-49-2-A</b> *2 (19 mm pitch)	2 pcs. supplied (SY3000), 3 pcs. supplied (SY5000/7000)			
<b>\-</b> ④			For mixed mountin SY3000 A, B port s		<b>SV2000-</b> (16 mn		_	3 pcs. supplied.			
			For mixed mounting SY3000 except A, B			<b>-49-2-A</b> m pitch)	_	3 pcs. supplied.			
			SY3000/5000/70	00	<b>VVQC1000-TR-</b> (10.5 mm pitch)	SV2000-55-1-⊡-A (16 mm pitch)	*2 SY70M-49-1-□-A (19 mm pitch)	□: Manifold stations (2 stations to 2 <sup>4</sup> stations) 2 pcs. supplied (SY3000), 3 pcs. supplied (SY5000/7000)			
5	Tie-	-rod			<b>SY50M-49</b> (12.5 m	<b>)-1-⊡-A</b> * <sup>3∗4</sup> m pitch)	_				
			Mixed mounting type manifold	SS5Y5-M**		5 <b>-1-⊡-A</b> * <sup>5</sup> n pitch)	_	Hanifold stations     (2 stations to 24 stations)     3 pcs. supplied.			
				SS5Y7-M**				2 o pos. supplied.			
(6)	Valv		Round head con	nbination screw	<b>SY3000-23-24A</b> (M2 x 32)	<b>SY5000-221-1A</b> (M3 x 32.5)	<b>SY7000-221-1A</b> (M3 x 36.5)	Part numbers shown on the left are as follow SY3000/5000: for 10 valves (20 pcs. included)			
U	scre	unting ew	Hexagon socket	Hexagon socket head cap screw (M2 x 32) (M3 x 32.5)			<b>SY7000-222-1A</b> (M3 x 36.5)	SY7000: for 10 valves (30 pcs. included)			
7	DIN	l rail			VZ1000	-11-1-□	VZ1000-11-4-□	Refer to page 249.			
8	Clam	np bracket	assembly (for connec	tor connecting base)	SY30M-15-1A	SY50N	I-15-1A	Supplied individually.			

\*1: The manifold of the SY3000 (SS5Y3-10/11/12) can be assembled by connecting the tie-rods for additional stations for the number of manifold stations. However, the manifold of the SY5000 or SY7000 (SSSY5/7-10/11/12 including mixed mounting) cannot be assembled by connecting the tie-rods for additional stations for the number of manifold stations.

**SMC** 

\*2: When mounting with the SY5000.


\*3: When mounting only the SY3000 (12.5 mm pitch except A, B port size Ø 8, Ø 5/16").
 \*4: The port sizes except A, B port size Ø 8, Ø 5/16" are the following: Ø 2, Ø 3.2, Ø 4, Ø 6, Ø 1/8", Ø 5/32", Ø 1/4".

\*5: When mounting only the SY3000 (16 mm pitch A, B port size Ø 8, Ø 5/16").

Plug-in Sub-plate

Valve

## Manifold Parts No.

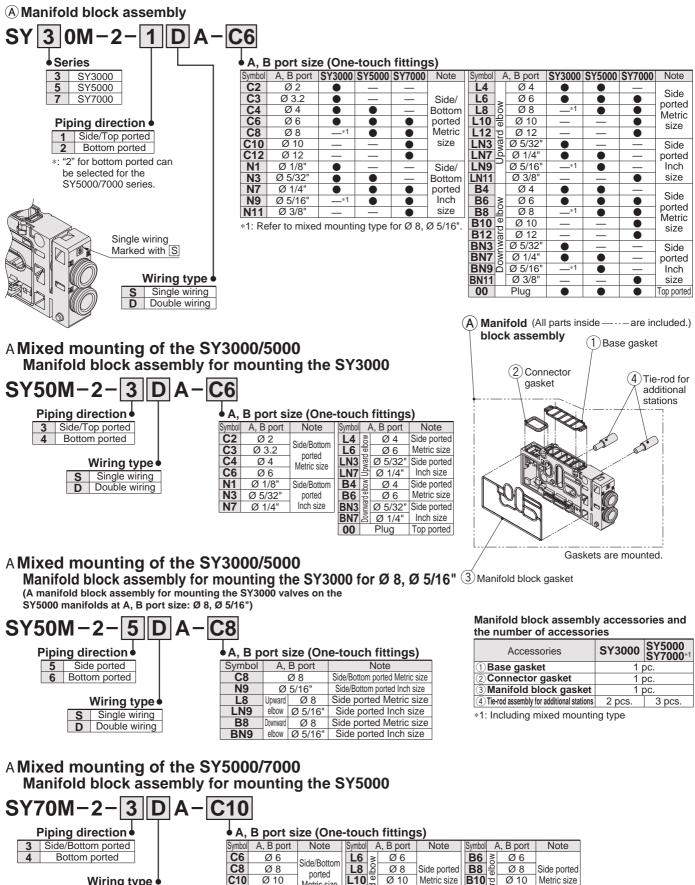


Wiring typeSSingle wiringDDouble wiring

	Ø6
	~ ~
C8 Ø8 ported L8 Ø8 Side ported B8	Ø 8 Side ported
C10 Ø 10 Metric size L10 Ø Ø 10 Metric size B10 0 0	Ø 10 Metric size
C12 Ø 12 L12 ຫຼື Ø 12 B12 ຮູ້ Ø	Ø 12
N7 Ø 1/4" Side/Bottom LN11 & Ø 3/8" Side ported BN11 & Ø	3/8" Side ported
<b>N9</b> Ø 5/16" ported <b>LN</b> 11 ⊃ Ø 5/8 Inch size <b>DN</b> 11 △ Ø	Inch size
N11 Ø 3/8" Inch size 00 P	lug Top ported



## Type 10, 11, 12 Connector Connecting Base Manifold Exploded View Series SY3000/5000/7000


#### Manifold Parts No.

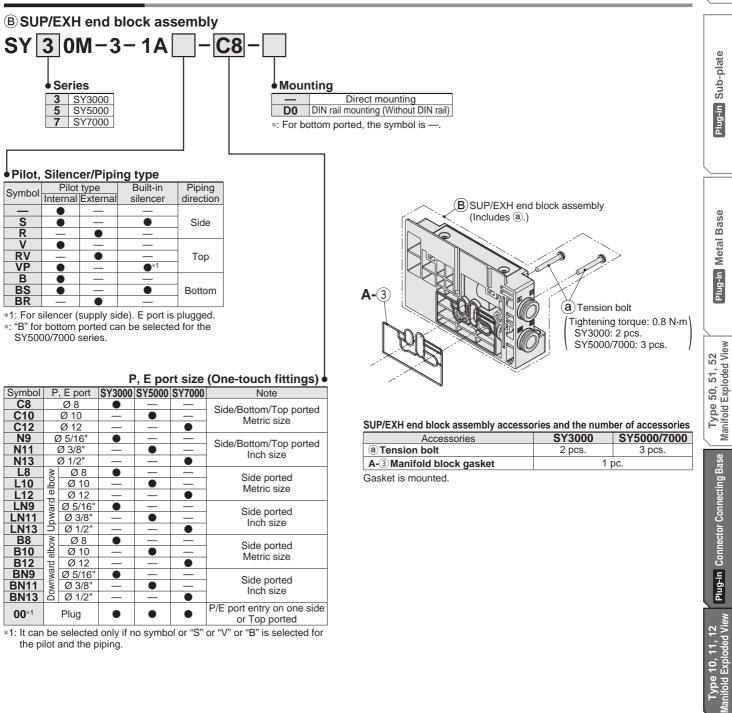

Valve

#### Manifold Parts No.

Cover assembly/Silencer cover assembly/Port block assembly for SUP/EXH (end) block assembly

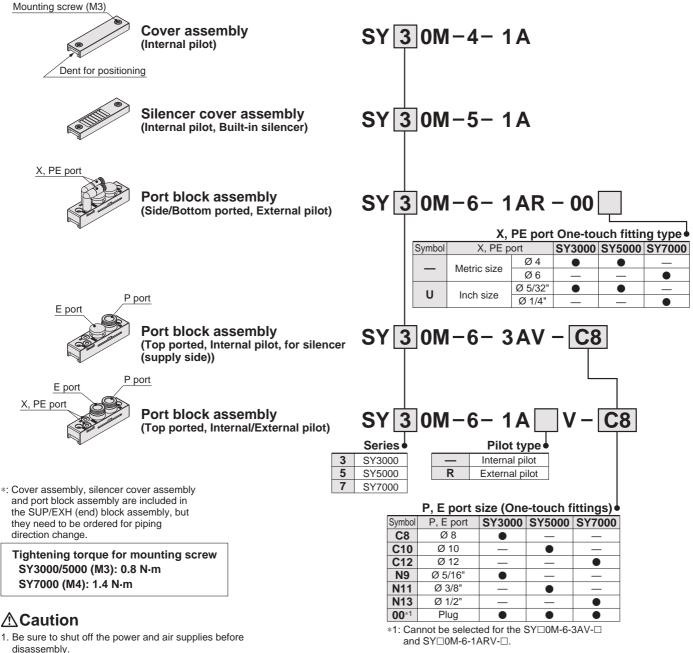

Furthermore, since air may remain inside the actuator, piping and manifold, confirm that the air is completely exhausted before performing any work.When disassembly and assembly are performed, air

 When disassembly and assembly are performed, air leakage may result if the tightening of the cover and port block assemblies are inadequate. Series SY3000/5000/7000 **One-touch Fittings and Plug Assembly/Part No.** 

Refer to "Changing One-touch Fittings" on page 272 for replacement method.

#### One-touch fittings

		Port siz	e	SY3000	SY5000	SY7000				
		Ø2		VVQ1000-50A-C2	_					
	-	Ø 3.2	1	VVQ1000-50A-C3	_					
	-	Ø 4	1	VVQ1000-50A-C4	VVQ1000-51A-C4					
	-	Ø6	Straight type	VVQ1000-50A-C6	VVQ1000-51A-C6					
	-	Ø8		_	VVQ1000-51A-C8	VVQ2000-51A-C8				
	-	Ø 10	-	_	_	VVQ2000-51A-C10				
		Ø 12	-	_	_	KQ2H12-17-X224				
	Metric size	Ø 4		SZ3000-73-1A-L4	SZ3000-74-1A-L4					
	ics	Ø 6	-	SZ3000-73-1A-L6	SZ3000-74-1A-L6	SZ3000-83-1A-L6				
	etr	Ø 8	Elbow type		SZ3000-74-1A-L8	SZ3000-83-1A-L8				
	Σ	Ø 10		_		SZ3000-83-1A-L10				
	-	Ø 12			_	KQ2L12-17N-X224				
	-	Ø 4		SZ3000-73-2A-L4	SZ3000-74-2A-L4					
	-	Ø 6		SZ3000-73-2A-L6	SZ3000-74-2A-L6	SZ3000-83-2A-L6				
- 100	-	Ø 8	Long elbow type		SZ3000-74-2A-L8	SZ3000-83-2A-L8				
ב	-	Ø 10				SZ3000-83-2A-L10				
		Ø 10				KQ2W12-17N-X224				
-		Ø 1/8"								
		Ø 5/32"		VVQ1000-50A-N1						
_	Ø 1/4"	Straight type	VVQ1000-50A-N3	VVQ1000-51A-N7						
		Ø 1/4 Ø 5/16"		VVQ1000-50A-N7	VVQ1000-51A-N7 VVQ1000-51A-N9	VVQ2000-51A-N7				
	-	Ø 3/8"		—	VVQ1000-51A-N9	VVQ2000-51A-N9 VVQ2000-51A-N11				
	e.					VVQ2000-5TA-NTT				
	Inch size	Ø 5/32"		KJL03-95-X224						
	с,	Ø 1/4"	Elbow type	KJL07-95-X224	KQ2L07-14-X224					
	<u> </u>	Ø 5/16"		—	KQ2L09-14-X224	—				
	-	Ø 3/8"				KQ2L11-14-X224				
	-	Ø 5/32"		KJL03-95-X225	_					
	-	Ø 1/4"	Long elbow type	KJL07-95-X225	KQ2L07-14-X225					
	-	Ø 5/16"		—	KQ2L09-14-X225	—				
		Ø 3/8"		—		KQ2L11-14-X225				
	-	Ø8		VVQ1000-51A-C8						
	-	Ø 10	Straight type	_	VVQ2000-51A-C10	—				
	e	Ø 12				VVQ4000-50B-C12				
	Siz	Ø 8	4 4	SZ3000-74-1A-L8	-	—				
	Metric size	Ø 10	Elbow type	—	SZ3000-83-1A-L10	—				
	Me	Ø 12		—		KQ2L12-19N-X224				
	_	Ø 8		SZ3000-74-2A-L8		—				
		Ø 10	Long elbow type	_	SZ3000-83-2A-L10					
		Ø 12		—	_	KQ2W12-19N-X224				
		Ø 5/16"		VVQ1000-51A-N9	-					
-		Ø 3/8"	Straight type		VVQ2000-51A-N11					
		Ø 1/2"		—	—	VVQ4000-50B-N13				
	Inch size	Ø 5/16"		KQ2L09-14-X224	_					
	h s	Ø 3/8"	Elbow type		KQ2L11-14-X224					
	luc	Ø 1/2"		_	_	KQ2L13-19N-X224				
		Ø 5/16"		KQ2L09-14-X225	_	_				
	-	Ø 3/8"	Long elbow type	_	KQ2L11-14-X225	_				
		Ø 1/2"	1 1 1			KQ2W13-19N-X224				

\*: Purchasing order is available in units of 10 pieces. Additionally, when performing the piping in the same orientation using the elbow type, please order "elbow type" or "long elbow type" appropriately.

#### Plug assembly

	SY3000	SY5000	SY7000
A, B port	VVQ0000-58A	VVQ1000-58A	VVQ2000-58A
P, E port	VVQ1000-58A	VVQ2000-58A	SY9000-62-1A

\*: Purchasing order is available in units of 10 pieces.

Manifold Options


Valve

# Series SY3000/5000/7000 Manifold Options

#### DIN rail dimensions/weight for the SY3000 Plug-in metal base and the SY3000/5000 Plug-in connector connecting base

# VZ1000-11-1-□

\*: After confirming the L3 dimension in the dimensions table of each series, refer to the DIN rail dimensions table below and specify the number in the box  $\Box$ .

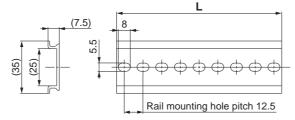


No.	0	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18
L dimension	98	110.5	123	135.5	148	160.5	173	185.5	198	210.5	223	235.5	248	260.5	273	285.5	298	310.5	323
Weight [g]	17.6	19.9	22.1	24.4	26.6	28.9	31.1	33.4	35.6	37.9	40.1	42.4	44.6	46.9	49.1	51.4	53.6	55.9	58.1
No.	19	20	21	22	23	24	25	26	27	28	29	30	31	32	33	34	35	36	37
L dimension	335.5	348	360.5	373	385.5	398	410.5	423	435.5	448	460.5	473	485.5	498	510.5	523	535.5	548	560.5
Weight [g]	60.4	62.5	64.9	67.1	69.4	71.6	73.9	76.1	78.4	80.6	82.9	85.1	87.4	89.6	91.9	94.1	96.4	98.6	100.9
No.	38	39	40	41	42	43	44	45	46	47	48	49	50	51	52	53	54	55	56
No. L dimension		39 585.5	40 598	41 610.5	42 623	43 635.5	44 648	45 660.5	46 673	47 685.5	48 698	49 710.5	50 723	51 735.5	52 748	53 760.5	54 773	55 785.5	56 798
-	573													-			- ·		
L dimension	573	585.5	598	610.5	623	635.5	648	660.5	673	685.5	698	710.5	723	735.5	748	760.5	773	785.5	798
L dimension Weight [g]	573 103.1 57	585.5 105.4	598 107.6	610.5 109.9	623 112.1	635.5 114.4	648 116.6	660.5 118.9	673 121.1	685.5 123.4	698 125.6	710.5 127.9	723 130.1	735.5 132.4	748 134.6	760.5	773	785.5	798

#### DIN rail dimensions/weight for the SY5000/7000 Plug-in metal base and the SY7000 Plug-in connector connecting base

## VZ1000-11-4-□

\*: After confirming the L3 dimension in the dimensions table of each series, refer to the DIN rail dimensions table below and specify the number in the box  $\Box$ .

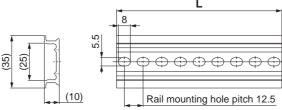

No.	0	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18
L dimension	98	110.5	123	135.5	148	160.5	173	185.5	198	210.5	223	235.5	248	260.5	273	285.5	298	310.5	323
Weight [g]	24.8	28	31.1	34.3	37.4	40.6	43.8	46.9	50.1	53.3	56.4	59.6	62.7	65.9	69.1	72.2	75.4	78.6	81.7
No.	19	20	21	22	23	24	25	26	27	28	29	30	31	32	33	34	35	36	37
L dimension	335.5	348	360.5	373	385.5	398	410.5	423	435.5	448	460.5	473	485.5	498	510.5	523	535.5	548	560.5
Weight [g]	84.9	88	91.2	94.4	97.5	100.7	103.9	107	110.2	113.3	116.5	119.7	122.8	126	129.2	132.3	135.5	138.6	141.8
No.	38	39	40	41	42	43	44	45	46	47	48	49	50	51	52	53	54	55	56
L dimension	573	585.5	598	610.5	623	635.5	648	660.5	673	685.5	698	710.5	723	735.5	748	760.5	773	785.5	798
Weight [g]	145	148.1	151.3	154.5	157.6	160.8	163.9	167.1	170.3	173.4	176.6	179.8	182.9	186.1	189.2	192.4	195.6	198.7	201.9
														=0	= 1				
No.	57	58	59	60	61	62	63	64	65	66	67	68	69	70	71				
No. L dimension		58 823	59 835.5	60 848	61 860.5	62 873	63 885.5	64 898	65 910.5	66 923	67 935.5	68 948	69 960.5	70 973	71 985.5				

# Manifold Options Series SY3000/5000/7000


Caution Tightening torque for mounting screw





Blanking plate assembly

[With two mounting screws (3 pcs. for the SY7000)]

M2: 0.16 N·m (SY3000) M3: 0.8 N·m (SY5000/7000) \*: Refer to pages 260, 262, 264 for dimensions.

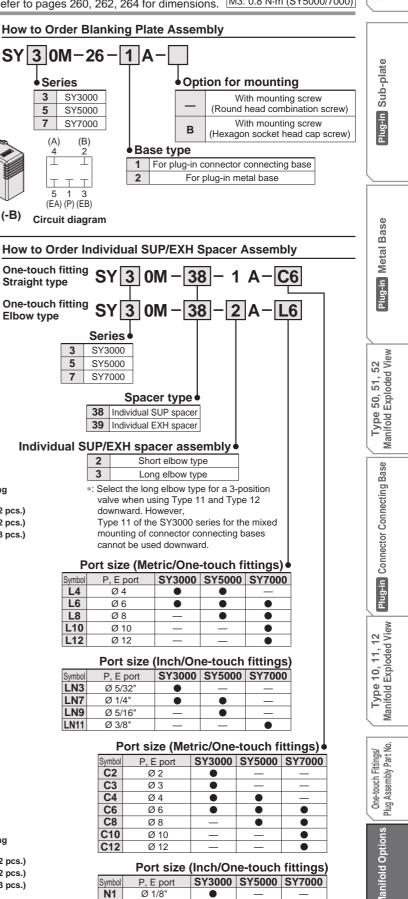

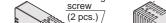

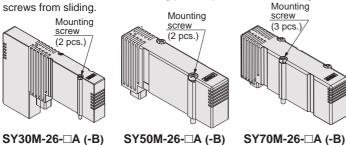

Used when valve additions are expected or for maintenance. A


structure is in place on the blanking plate to prevent the mounting

#### Individual SUP spacer assembly

[With a connector gasket, a base gasket, and two mounting screws (3 pcs. for the SY7000)]

When the same manifold is used for different pressures, an individual SUP spacer assembly is used as a supply port for different pressures.

\*: When selecting a One-touch fitting elbow type for a spacer assembly, use it faced upward, since it interferes with A and B port piping in Type 50 and Type 10 manifolds.

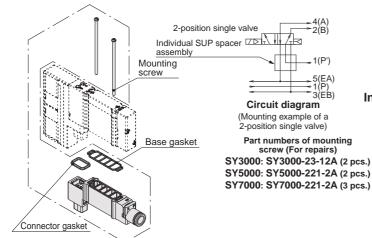


#### Individual EXH spacer assembly

[With a connector gasket, a base gasket, and two mounting screws (3 pcs. for the SY7000)]

When valve exhaust affects other stations due to the circuit

configuration, this spacer assembly is used for individual valve exhaust.

\*: When selecting a One-touch fitting elbow type for a spacer assembly, use it faced upward, since it interferes with A and B port piping in Type 50 and Type 10 manifolds.

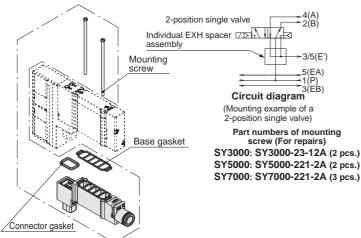

N3

N7

N9

N11

Ø 5/32

Ø 1/4"

Ø 5/16'

Ø 3/8


## **Manifold Options**

#### SUP stop valve spacer assembly with residual pressure release valve

[With a connector gasket, a base gasket, and two mounting screws (3 pcs. for the SY7000)]

It is used to shut off the supply air to valves individually. \*: Cannot be selected when the elbows are facing upward in A

and B ports in Type 10 manifolds, since they will interfere with the piping for the spacer assembly.

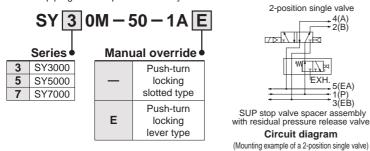

#### [How to mount SUP stop valve spacer assembly with residual pressure release valve] Insert the SUP stop valve mounting screw from the side of the spacer assembly, and mount it to the manifold.

Tighten the SUP stop valve mounting screw to the specified tightening torque. Mount the valve and tighten the valve mounting screws to the specified tightening torque after mounting the SUP stop valve spacer assembly with residual pressure exhaust valve.


- \*: Install the plate type nut to the spacer assembly as shown in the figure if it comes off. The SUP stop valve mounting screws can be tightened with a hexagon wrench without removing the plate type nut.
- \*: When the elbows are facing upward in A and B ports in Type 10 manifolds, they will interfere with the piping for the spacer assembly. Therefore, combine the A and B ports with straight types or elbows facing downward.
- \*: This product is only for internal pilot specifications, as the external pilot air cannot be shut off.

#### Double check spacer assembly with residual pressure release valve (Side/Bottom ported)


[With a connector gasket, a base gasket, and two mounting screws (3 pcs. for the SY7000)] It is used to hold the intermediate position of the cylinder for a long period of time. Use a 3-position exhaust centre valve when the double check spacer assembly with residual exhaust valve is used.

It can also be used for drop prevention at the cylinder stroke end when supply residual pressure is released by using a 2-position single/double valve. Operating pressure range: 0.1 to 1.0 MPa

\*: When the elbows are facing upward in A and B ports in Type 10 manifolds, they will interfere with the piping for the spacer assembly. Therefore, combine the A and B ports with straight types or elbows facing downward.

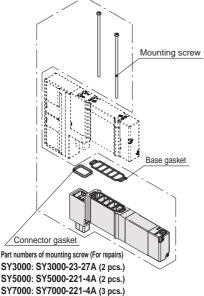

251

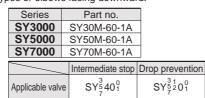

#### Caution

- Air leakage from the pipe between the valve and cylinder or from the fittings will prevent the cylinder from stopping for a long period of time. Check the leakage using neutral household detergent, such as dish washing soap. Also, check the cylinder's tube gasket, piston packing and rod packing for air leakage.
- Combining with 3-position closed centre or pressure centre valve will not work.
- If the exhaust of the double check spacer is restricted too much, the cylinder may not operate properly and may not stop intermediately.
- Set the cylinder load so that the cylinder pressure will be within two times that of the supply pressure.

SMC


M3: 0.8 N·m (SY5000/7000) \*: Refer to pages 260 to 265 for dimensions. \*: For lever type When locking the lever type manual override, push the lever down in the PUSH position with your fingers until it stops, then turn the lever 90° clockwise.  $(PUSH \rightarrow LOCK)$ Turning the lever without pushing it down until it stops can cause damage to the manual override and other problems such as air leakages. To unlock the manual override. ase gasket turn the lever counterclockwise. Mounting screw  $(LOCK \rightarrow PUSH)$ Connector gaske Part numbers of mounting screw (For repairs) SY3000: SY30M-56-1A (2 pcs.) SY5000: SY50M-56-1A (2 pcs.) SY7000: SY70M-56-1A (3 pcs.) Valve mounting screw Tightening torque Series SY3000: 0.16 N·m Series SY5000/7000: 0.8 N·m For Hexagon socket head cap scree Nominal wrench size: Series SY3000: 1.5 Series SY5000/7000: 2.5 Valve SUP stop valve space assembly with residual pressure Plate type nu Hexagon wrench Nominal wrench size: Series SY3000: 1.3 SUP stop valve mounting screw Series SY5000/7000: 2 Tightening torque: 0 Series SY3000: 0.16 N·m Series SY5000/7000: 0.8 N·m

▲Caution

Tightening torque for mounting screw M2: 0.16 N⋅m (SY3000)


#### <Example>

Double check spacer assembly with residual pressure release valve

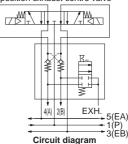

(Intermediate stop: When 3-position exhaust centre valve is mounted)

Double check spacer assembly with residual pressure release valve

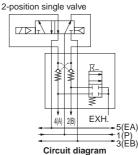

(Drop prevention: When 2-position single valve is mounted)

### ▲Caution

Tightening torque for mounting screw

M2: 0.16 N·m (SY3000)

### Manifold Options


M3: 0.8 N·m (SY5000/7000) \*: Refer to pages 261, 263, 265 for dimensions.


#### Interface regulator

[With a connector gasket, a base gasket, and two mounting screws (3 pcs. for the SY7000)]

Used when the supply pressure for each valve on the same manifold must be individually set (reduced pressure).

#### How to Order

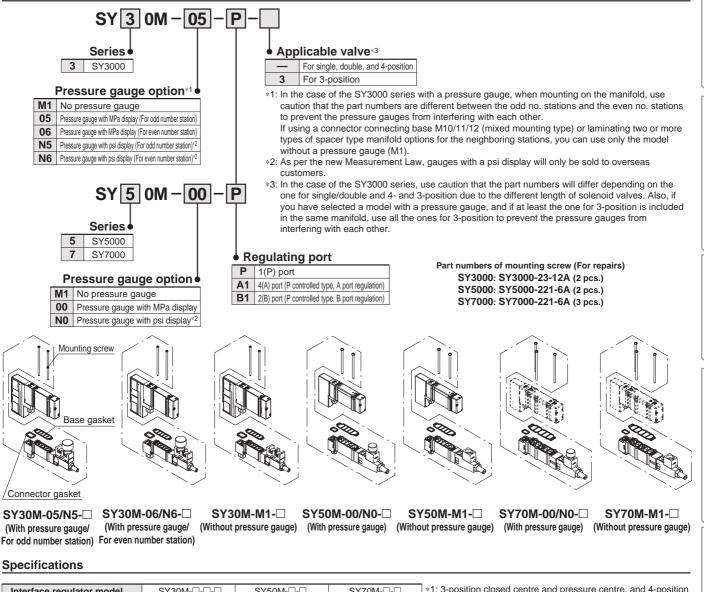

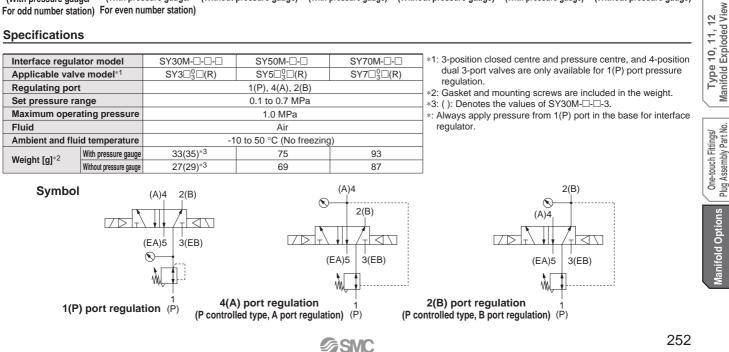

Valve

Plug Assembly Part No.

lanifold Options

Caution

M2: 0.16 N·m (SY3000)

M3: 0.8 N·m (SY5000/7000)

### Spacer Combinations and Screw List ①

			00 (140)		00 (840)	() ()/70	00 (140)
Combination		Round head combination screw	Hexagon socket head cap screw	Round head combination screw	OOO (M3) Hexagon socket head cap screw	3 SY70 Round head combination screw	Hexagon socket head cap screw
<ul> <li></li></ul>	Valve	<b>SY3000-</b> 23-24A [for 10 valves (20 pcs.)]	<b>SY3000-</b> <b>222-1A</b> [for 10 valves (20 pcs.)]	SY5000- 221-1A	<b>SY5000-</b> <b>222-1A</b> [for 10 valves (20 pcs.)]	<b>SY7000-</b> <b>221-1A</b> [for 10 valves (30 pcs.)]	<b>SY7000-</b> <b>222-1A</b> [for 10 valves (30 pcs.)]
1: SY3000-222-1A 2: SY5000-222-1A 3: SY7000-221-1A 1: SY30M-56-2A 2: SY50M-56-2A 3: SY70M-56-2A 3: SY70M-56-2A 3: SY70M-56-2A	SUP stop valve spacer assembly with residual pressure release valve Individual SUP (EXH) spacer assembly	<b>SY30M</b> (2 p	<b>I-56-2A</b> acs.)		<b>I-56-2A</b> ics.)	<b>SY70М</b> (3 р	I <b>-56-2A</b> cs.)
<ul> <li>Round head combination screw-</li> <li>SY3000-23-33A</li> <li>SY5000-221-5A</li> <li>SY7000-221-5A</li> <li>SY7000-221-5A</li> </ul>	Valve Double check spacer assembly with residual pressure release valve Individual SUP (EXH) spacer assembly	<b>SY3000- 23-33A</b> (2 pcs.)		<b>SY5000-</b> 221-5A (2 pcs.)		<b>SY7000-</b> 221-5A (3 pcs.)	
Round head combination screw- 1: SY3000-23-32A 2: SY5000-221-3A 3: SY7000-221-3A B	Valve Individual SUP (EXH) spacer assembly Individual EXH (SUP) spacer assembly	<b>SY3000- 23-32A</b> (2 pcs.)		<b>SY5000-</b> <b>221-3A</b> (2 pcs.)		<b>SY7000-</b> 221-3A (3 pcs.)	
	Valve	<b>SY3000-</b> <b>23-24A</b> [for 10 valves (20 pcs.)]	<b>SY3000-</b> <b>222-1A</b> [for 10 valves (20 pcs.)]	<b>SY5000-</b> <b>221-1A</b> [for 10 valves (20 pcs.)]	<b>SY5000-</b> <b>222-1A</b> [for 10 valves (20 pcs.)]	<b>SY7000-</b> <b>221-1A</b> [for 10 valves (30 pcs.)]	<b>SY7000-</b> <b>222-1A</b> [for 10 valves (30 pcs.)]
3: SY7000-221-1A Hexagon socket head cap screw- D: SY3000-222-1A 2: SY5000-222-1A 3: SY7000-222-1A 3: SY7000-222-1A 0: SY5000-222-1A 2: SY5000-56-4A 2: SY50M-56-4A 3: SY70M-56-4A	SUP stop valve spacer assembly with residual pressure release valve Individual SUP (EXH) spacer assembly Individual EXH (SUP) spacer	<b>SY30M-56-4A</b> (2 pcs.)		<b>SY50M-56-4A</b> (2 pcs.)		<b>SY70M-56-4A</b> (3 pcs.)	

\*: Mounting onto a manifold follows the order explained above.

\*: The fitting for individual SUP/EXH spacers comes in a straight type only, since an elbow type would interfere with each spacer assembly when laminated.



**∆**Caution

Tightening torque for mounting screw M2: 0.16 N·m (SY3000) M3: 0.8 N·m (SY5000/7000)

# Valve

Spacer Combinations and Screw List 2

			000 (M2)	O QVE	000 (M3)	() ev7(	00 (M3)	
Combination		Round head combination screw			Hexagon socket head cap screw		Hexaqon socket head cap screw	
<round combination="" head="" screw="">           1: SY3000-23-24A           2: SY5000-221-1A           3: SY7000-221-1A</round>	A Valve	<b>SY3000-</b> 23-24A [for 10 valves (20 pcs.)]	SY3000- 222-1A	SY5000- 221-1A	<b>SY5000-</b> <b>222-1A</b> [for 10 valves (20 pcs.)]	SY7000- 221-1A	<b>SY7000-</b> <b>222-1A</b> [for 10 valves (30 pcs.)]	-in Sub-plate
<ul> <li>Hexagon socket head cap screws</li> <li>SY3000-222-1A</li> <li>SY5000-222-1A</li> <li>SY7000-222-1A</li> <li>SY7000-222-1A</li> </ul>	B SUP stop valve spacer assembly with residual pressure release valve	SY30N	I-56-3A	SY50N	I-56-3A	SY70M	I-56-3A	Plug-in
C → 1: SY30M-56-3A 2: SY50M-56-3A 3: SY70M-56-3A	C Double check spacer assembly with residual pressure release valve	(2 p	ocs.)	(2 p	ocs.)	(3 p	cs.)	tal Base
(Round head combination screw> 1: SY3000-23-24A 2: SY5000-221-1A	A Valve	<b>SY3000-</b> <b>23-24A</b> [for 10 valves (20 pcs.)]	<b>SY3000-</b> <b>222-1A</b> [for 10 valves (20 pcs.)]	<b>SY5000-</b> <b>221-1A</b> [for 10 valves (20 pcs.)]	<b>SY5000-</b> <b>222-1A</b> [for 10 valves (20 pcs.)]	<b>SY7000-</b> <b>221-1A</b> [for 10 valves (30 pcs.)]	<b>SY7000-</b> <b>222-1A</b> [for 10 valves (30 pcs.)]	Plug-in Metal
3: SY7000-221-1A dexagon socket head cap screw> 1: SY3000-222-1A 2: SY5000-222-1A 3: SY7000-222-1A	B SUP stop valve spacer assembly with residual pressure release valve	SY30M-56-5A		<b>SY50M-56-5A</b> (2 pcs.)		<b>SY70M-56-5A</b> (3 pcs.)		51, 52 oded View
C → (1: SY30M-56-5A (2: SY50M-56-5A (3: SY70M-56-5A) (3: SY70M-56-5A)	C Double check spacer assembly with residual pressure release valve							Type 50, 51, 52 Manifold Exploded View
	Individual EXH (SUP) spacer assembly							Connector Connecting Base
Round head combination screw> ①: SY3000-23-32A	A Valve	-						in Connector Co
A       ◆       2: SY5000-221-7A         3: SY7000-221-7A       3: SY7000-221-7A	B Interface regulator	SY3000- 23-32A (2 pcs.)	_	<b>SY5000-</b> 221-7A (2 pcs.)	_	<b>SY7000-</b> 221-7A (3 pcs.)	_	, 12 ed View
*: Mounting onto a manifold follows the order explained a	C Individual SUP (EXH) spacer assembly							Type 10, 11, 12 Manifold Exploded View

\*: The fitting for individual SUP/EXH spacers comes in a straight type only, since an elbow type would interfere with each spacer assembly when laminated. \*: When laminating an interface regulator with other options, only the combinations in the table above are possible.

One-touch Fittings/	Plug Assembly Part No.

### ▲Caution Tightening torque for mounting screw

M2: 0.16 N·m (SY3000) M3: 0.8 N·m (SY5000/7000)

### Manifold Options

Individual SUP block assembly

On the circuit of the plug-in connector connection base, an individual SUP block assembly can be used to supply air to a series of valves if a separate air supply is required, or if addition air is required for additional air flow.

Individual SUP block assembly occupies 1 station.

Blocking disks also supplied (2 pieces). Can be used to block both sides of the number of stations being isolated for individual air supply (as shown in example).

- \*: Specify the mounting position of the block as well as the position where the SUP passage is to be blocked on the manifold specification sheet. Blocking is required for 1 or 2 positions for 1 set. (2 SUP blocking disks to block SUP is attached to individual SUP block.)
- \*: Electrical wiring is connected to a number of stations in the individual SUP block manifold.
- \*: When used in M10/11/12 (mixed mounting type), select the SY50M type for SS5Y5 and the SY70M type for SS5Y7.
- \*: A structure to prevent screws falling out is in place on the individual SUP block, making it much harder for the mounting screws to fall out.


#### Individual EXH block assembly

On the circuit of the plua-in connector connection base, individual EXH block assembly can be used to individually exhaust series of valves when the exhaust from the valves would affect a number of other stations.


Individual EXH block assembly occupies 1 station.

Blocking disks also supplied (4 pieces). Can be used to block both sides of the number of stations being isolated for individual exhaust. (as shown in example).


- \*: Specify the mounting position of the block as well as the position where the EXH passage is to be blocked on the manifold specification sheet. Blocking is required for 1 or 2 positions for 1 set. (2 sets of EXH blocking disks (4 pcs.) to block EXH is attached to individual EXH block.)
- \*: Electrical wiring is connected to a number of stations in the individual EXH block manifold.
- \*: When used in M10/11/12 (mixed mounting type), select the SY50M type for SS5Y5 and the SY70M type for SS5Y7.
- \*: A structure to prevent screws falling out is in place on the individual EXH block, making it much harder for the mounting screws to fall out.

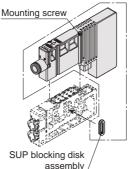



3(EB)

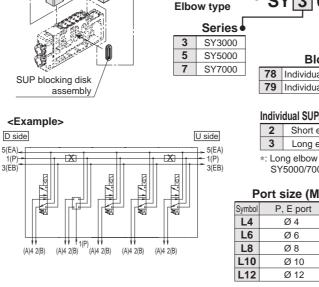

\*: Refer to pages 261, 263, 265 for dimensions.

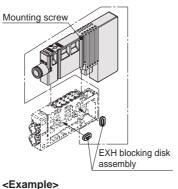

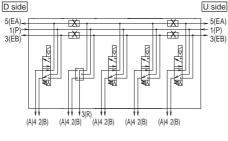

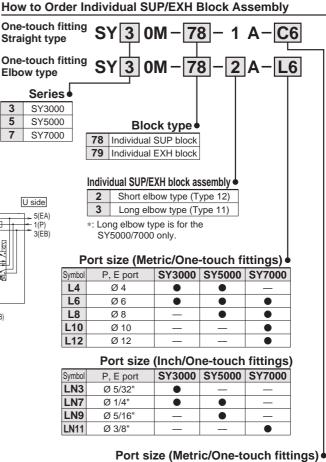

Symbol	P, E port	SY3000	SY5000	SY7000
C2	Ø 2		_	—
C3	Ø3		_	_
C4	Ø 4		•	_
C6	Ø 6		•	
C8	Ø8	_	•	
C10	Ø 10	_	—	٠
C12	Ø 12	—	_	

#### Port size (Inch/One-touch fittings)

Symbol	P, E port	SY3000	SY5000	SY7000
N1	Ø 1/8"		—	—
N3	Ø 5/32"			—
N7	Ø 1/4"		•	•
N9	Ø 5/16"	_	•	•
N11	Ø 3/8"	_	_	•

255

### Manifold Options

### SUP/EXH blocking disk assembly (for connector type manifold, Type 10, 11, 12)

#### [SUP blocking disk]

By inserting the SUP blocking disk in the pressure supply passage of the manifold valve, can provide two different high and low pressure in one manifold.


#### [EXH blocking disk]

By inserting the EXH blocking disk in the exhaust passage of the manifold valve, can separate the exhaust from the valve so it does not affect the other valves. It can also be used for the manifold for the positive pressure and vacuum mixed manifold. (2 pcs. are required to block FA/EB both sides of the EXH.)

Series	SUP blocking disk assembly	EXH blocking disk assembly
SY3000	SY30M-40-1A	SY30M-40-2A
SY5000	SY50M-40-1A	SY50M-40-1A
SY7000	SY70M-40-1A	SY70M-40-1A

#### Label for blocking disk

Label to indicate and confirm on the manifold where the SUP/EXH blocking disk assemblies were inserted. (3 sheets each)

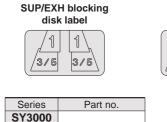


SJ3000-155-1A






**多SMC** 

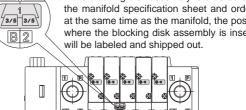

\*: If the blocking disk assembly is ordered using the manifold specification sheet and ordered at the same time as the manifold, the position where the blocking disk assembly is inserted

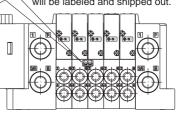

Plug-in Metal Base

Valve

Sub-plate

Plug-in

For SY3000

Type 10, 11, 12 Manifold Exploded View

One-touch Fittings/ Plug Assembly Part No.

#### Back pressure check valve assembly (Retrofit or pre-installed type)

It prevents cylinder malfunction caused by other valve exhaust entry. Insert it into EA/EB port (valve mounting side) on the manifold side of a valve which is affected. It is effective when a single-acting cylinder is used.

- \*: When ordering assemblies incorporated with a manifold, refer to the Ordering Example below (when installed in all stations.)
- \*: When a check valve for back pressure prevention is desired and is to be installed only in certain manifold stations, clearly indicate the part number and specify the mounting position on the manifold specification sheet.
- <Precautions>


SY5000

SY7000

- 1. The manifold installed type back pressure check valve assembly is assembly parts with a check valve structure. However, since slight air leakage against the back pressure is allowed due to its structure, adverse effects of the back pressure due to increase in exhaust resistance cannot be prevented if the manifold exhaust port and other exhaust ports are put together for piping or if the piping diameter is narrowed. As a result, this may cause the actuator and air operated equipment to malfunction. So, be careful not to restrict the exhaust air. If the exhaust resistance becomes large, select a built-in valve type with rubber seal.
- 2. When the back pressure check valve assembly is mounted, please contact SMC for valve flow rate characteristics.

#### **Ordering Example**

SS5Y3-10F1-05B-C61 set (Type 10 5-station manifold base part no.)	
*SY3201-5U15 sets (2-position double part no.)	
*SY30M-24-1A5 sets (Back pressure check valve assembly part no.)	
—The asterisk denotes the symbol for assembly.	

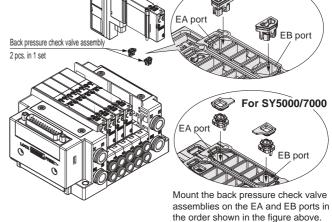

Part no.
SY30M-24-1A
SY50M-24-1A
SY70M-24-1A


### **Manifold Options**

### Dual flow fitting (for connector connecting base, Type 10, side ported)

This is a fitting for cylinder ports which enables simultaneous actuation and increase in flow rate of valves for 2 stations.

\*: When ordering assemblies incorporated into a manifold, refer to the Ordering Example below and specify on the manifold specification sheet.

### How to Order Dual Flow Fitting

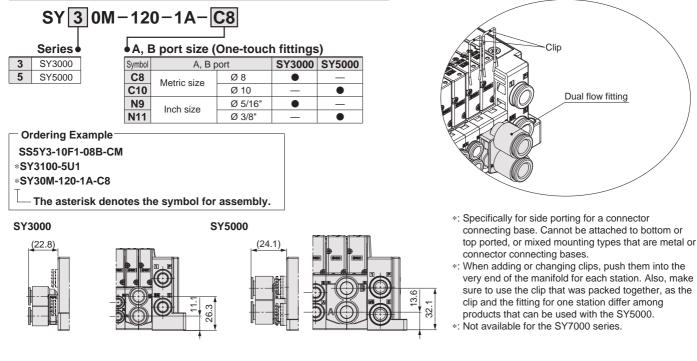

#### Silencer


#### (One-touch fitting connection type) This silencer can be mounted to the 3/5

(E: EXH) port of the manifold in one step.

\*: Shipped together with the product.

#### Plug (White)

These are inserted in unused cylinder ports and P, E ports.

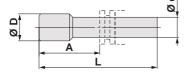

\*: Shipped together with the product.

#### Dimensions

Body

(Resin)

70

Ø

Α

С

Sound absorbing material

(Resin sintered body)

Series

For SY3000 (Ø 8)

For SY5000 (Ø 10)

For SY7000 (Ø 12)

Applicable fitting size <b>Ø d</b> (Metric size)	Model	Α	L	ØD	Ap S
2	KJP-02	8.2	17	3	
3.2	KQ2P-23	16	31.5	5	
4	KQ2P-04	16	32	6	
6	KQ2P-06	18	35	8	
8	KQ2P-08	20.5	39	10	
10	KQ2P-10	22	43	12	
12	KQ2P-12	24	45.5	14	

മ

Ø

ðD	Applicable fitting size Ø d (Inch size)	Model	Α	L	ØD
3	1/8"	KQ2P-01	16	31.5	5
5	5/32"	KQ2P-03	16	32	6
6	1/4"	KQ2P-07	18	35	8.5
8	5/16"	KQ2P-09	20.5	39	10
0	3/8"	KQ2P-11	22	43	11.5

KQ2P-13 24

Effective area

20 mm<sup>2</sup>

30 mm<sup>2</sup>

41 mm<sup>2</sup>

В

13

16.5

46 15

Α

57.5

71.5 20

45

С

30.5

43.5

20

Model

AN15-C08

AN20-C10

AN30-C12

1/2'

### **Manifold Options**

A transparent plastic plate to put a label with the name of the function of the solenoid valve.

SS5Y3-10

SS5Y5-10


SS5Y7-(M)10


Name plate (For connector connecting base)

SY3000: For SS5Y3-10 (Side ported) SY5000: For SS5Y5-10/11 (Side/Bottom ported) SY7000: For SS5Y7-(M)10/11 (Side/Bottom ported)

Name plate bracket assembly and name plate mounting instructions Insert it into the groove on the name plate bracket onto which a SUP/EXH (end) block is mounted, as shown in Figure 2.

\*: When ordering assemblies incorporated with a manifold, refer to the Ordering Example below.

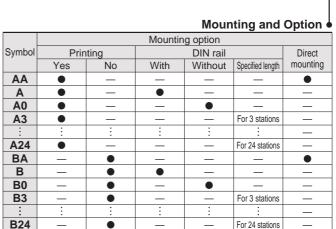


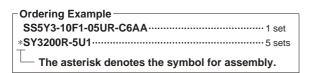

#### \*: Name plates cannot be mounted onto Type 12 (Top ported) and Type 10 (Side ported) mixed mounting types with top ported valves, nor onto manifolds with optional laminated spacers.


No name plate settings are available for the SY3000/SY5000 mixed mounting types. However, they are available for the SY5000/SY7000 mixed mounting types.



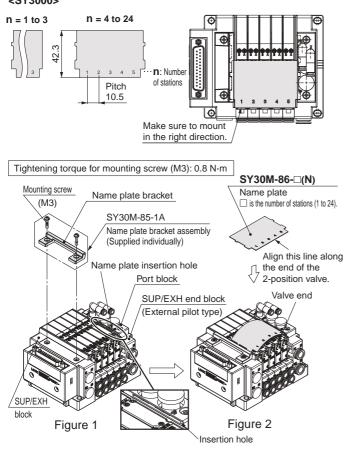

#### <SY5000/7000>

SMC

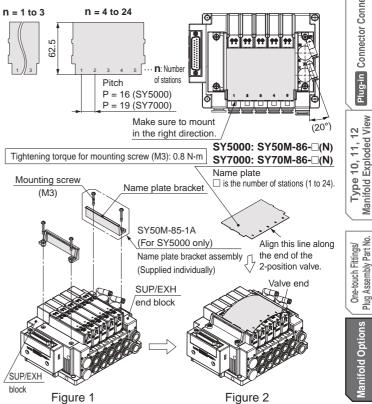

# Valve

### **Manifold Options**

#### A transparent plastic plate to put a label with the name of the function of the solenoid valve.

#### If adding a name plate

If adding a name plate to a manifold in use, order a name plate bracket assembly, in addition to ordering a name plate. Refer to the table below for the part number and the amount.

#### Name plate part number

Mc	odel	SS5Y3-10	SS5Y5-10/11	SS5Y7-(M)10/11	Note
Name	Printed	SY30M-86-⊡N	SY50M-86-⊟N	SY70M-86-⊡N	:Number of stations
plate	No printing	SY30M-86-□	SY50M-86-□	SY70M-86-□	(1 to 24)

#### Name plate bracket assembly part number and number of items ordered

Model		SS5Y3-10	SS5Y5-10/11	
Name plate assemb	Name plate assembly part number		SY50M-85-1A	
Manifold SUP/EXH	Internal pilot U/D piping	2 pcs.		
block assembly	Internal pilot double sided piping	2 pcs.	0	
Pilot type and	External pilot U/D piping	1 pc.*1	2 pcs.	
P, E port entry	External pilot double sided piping	Not required*1		


\*1: If the manifold is an external pilot, an insertion slot for name plates is on the port block of the SUP/EXH block assembly. Thus, a bracket assembly is no longer required on the port piping side.

\*: Name plate bracket assembly is not required for the SY7000.


### **≜**Caution


\_\_\_\_


- Be sure to shut off the power and air supplies before mounting the name plate bracket assembly. Furthermore, since air may remain inside the actuator, piping and manifold, confirm that the air is completely exhausted before performing any work.
- 2. When disassembly and assembly are performed, air leakage may result if the tightening of the bracket mounting screws is inadequate.

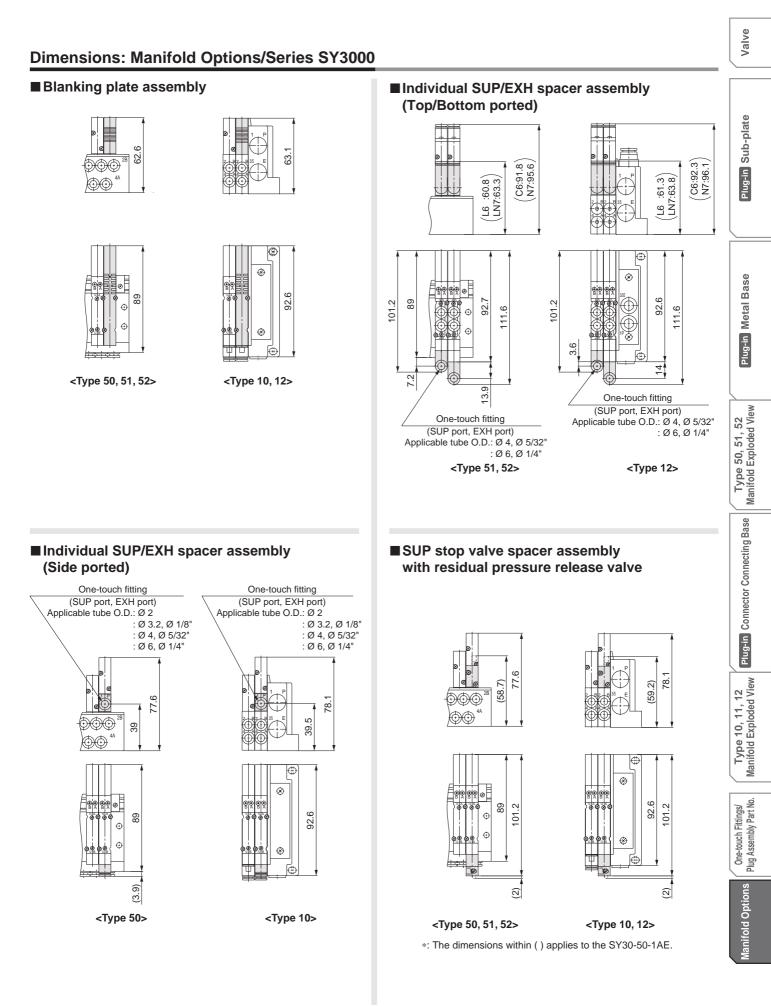



### Dimensions: Manifold Options/Series SY3000

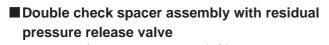

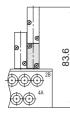

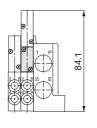

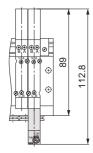


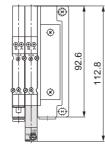


<Type 50, 51>


<Type 10>


### Individual SUP/EXH block assembly (Top ported)

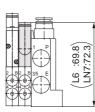

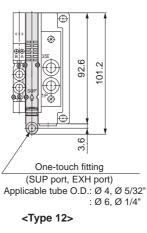


### Individual SUP/EXH block assembly (Side ported)

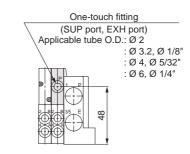

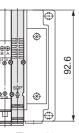


<Type 10>


### Interface regulator

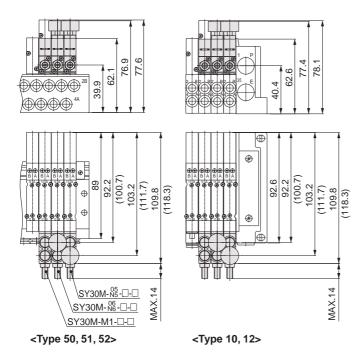


\*The dimensions within ( ) applies to the  $\ensuremath{\text{SY30M-}\square-\square-3}.$ 

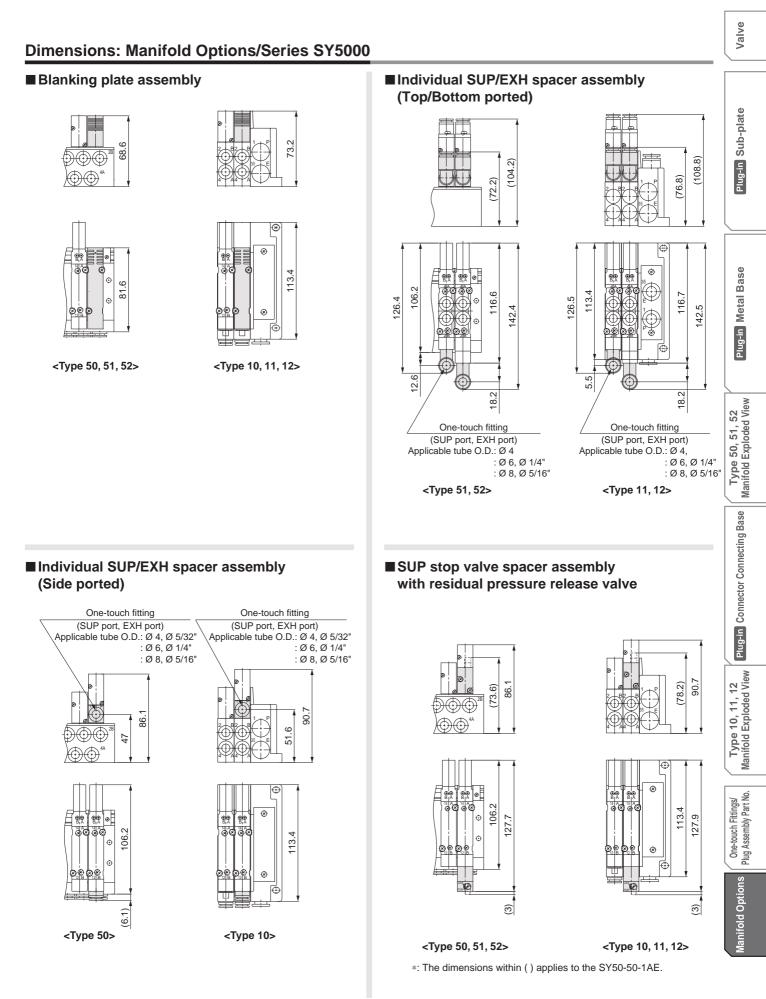



### **Dimensions: Manifold Options/Series SY5000**

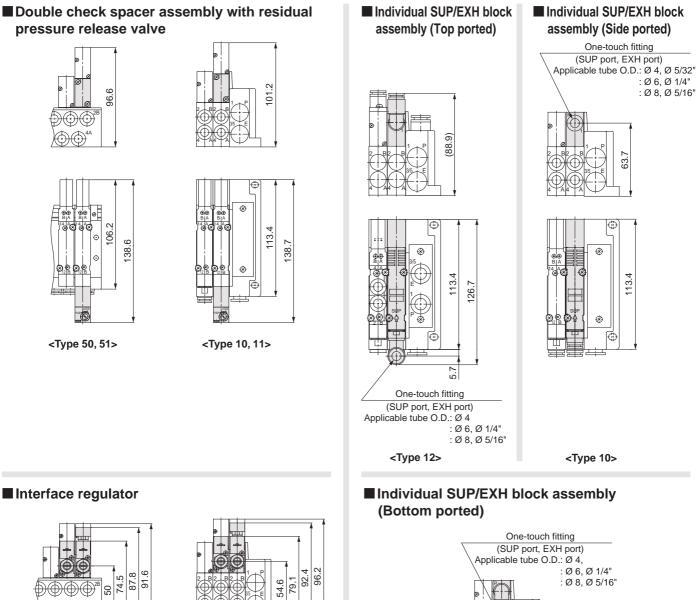

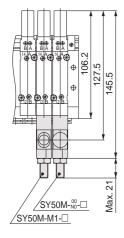



<Type 50, 51, 52>

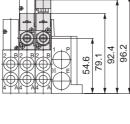

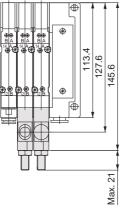


<Type 10, 11, 12>

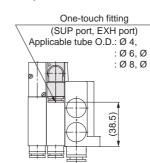

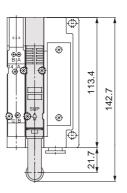


<Type 11>

**SMC** 

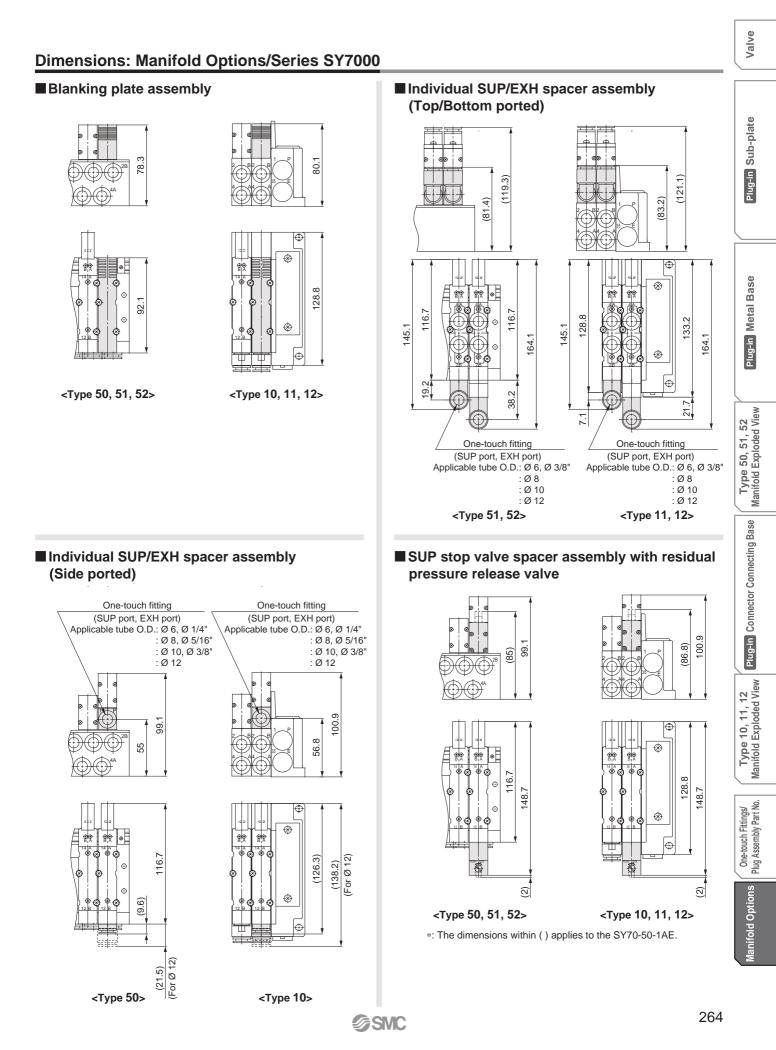

### Dimensions: Manifold Options/Series SY7000

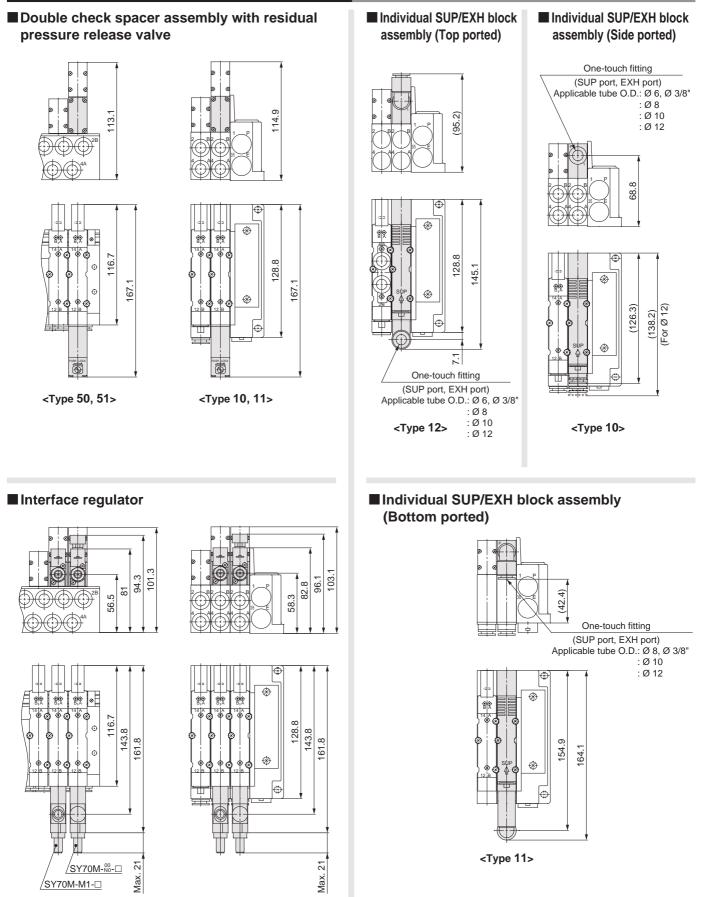

<Type 50, 51, 52>

**SMC** 



Be sure to read this before handling. Refer to the back cover for Safety Instructions. For 3/4/5 Port Solenoid Valve Precautions, refer to "Handling Precautions for SMC Products" and the Operation Manual on the SMC website, http://www.smc.eu

#### Environment

### **Marning**

- 1. Do not use valves in atmospheres of corrosive gases, chemicals, sea water, water, water vapor, or where there is direct contact with any of these.
- 2. Products compliant with IP67 enclosures (based on IEC60529) are protected against dust and water, however, these products cannot be used in water. If using in an environment that is exposed to water and dust splashes, take measures such as using a protective cover.
- 3. When using built-in silencer type manifold with an IP67 enclosure, keep the exhaust port of the silencer from coming in direct contact with water or other liquids.
- 4. The metal seal valve is provided with a hole to discharge the pilot EXH. When using in atmospheres containing water and dust, mount it horizontally.

#### Valve Mounting

### 

Mount it so that there is no slippage or deformation in gaskets, and tighten with the tightening torque as shown below.

Series	Thread size	Tightening torque
SY3000	M2	0.16 N·m
SY5000/7000	M3	0.8 N•m


### **Manual Override**

### **Marning**

Regardless of an electric signal for the valve, the manual override is used for switching the main valve. Connected actuator is started by manual operation. Use the manual override after confirming that there is no danger.

#### Non-locking push type


Push down on the manual override button until it stops.

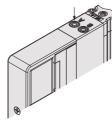

### ■ Push-turn locking slotted type [Type D]

Push down on the manual override with a small flat head screwdriver until it stops, and then turn it  $90^{\circ}$  clockwise. The manual override is then locked. To release it, turn it counterclockwise.

If it is not turned, it can be operated the same way as the non-locking type.

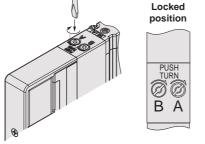




### **≜** Warning

### ■ Push-turn locking lever type [Type E]

Push down on the manual override by finger until it stops, and then turn it 60° clockwise. The manual override is then locked. To release it, turn it counterclockwise. If it is not turned, it can be operated the same way as the non-locking type.

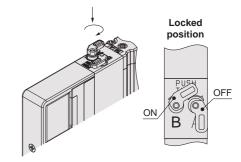

Carefully check the manual override projection amount. Max. (at OFF): 3.7 mm




### 

Do not apply excessive torque when turning the manual override. [0.1  $N{\cdot}m]$ 

When locking the manual override, be sure to push it down before turning. Turning without first pushing it down can cause damage to the manual override and other trouble such as air leakage etc.

### Slide locking type (Manual)

It is locked by sliding the manual override all the way in the direction indicated by the arrow (ON side) with a small flat head screwdriver or with your fingers. Slide it in the direction indicated by the arrow (OFF side) to release it.

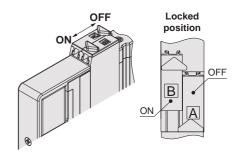



Be sure to read this before handling. Refer to the back cover for Safety Instructions. For 3/4/5 Port Solenoid Valve Precautions, refer to "Handling Precautions for SMC Products" and the Operation Manual on the SMC website, http://www.smc.eu

### **Back Pressure Check Valve**

### 

- There are two types of back pressure check valves; the one which is built into a valve (with rubber seal type only) and the one which is built in on the manifold side with connector connection. Both of them have a check valve built-in to prevent back pressure. For this reason, use caution that the valves with external pilot specification cannot be pressurised from exhaust port [3/5(E)]. As compared with the types which do not integrate the back pressure check valve, C value of the flow rate characteristics goes down. Please contact SMC for details.
- The manifold installed type back pressure check valve assembly is assembly parts with a check valve structure. However, since slight air leakage against the back pressure is allowed due to its structure, adverse effects of the back pressure due to increase in exhaust resistance cannot be prevented if the manifold exhaust port and other exhaust ports are put together for piping or if the piping diameter is narrowed. As a result, this may cause the actuator and air operated equipment to malfunction. So, be careful not to restrict the exhaust air. If the exhaust resistance becomes large, select a built-in valve type with rubber seal.
- Do not switch valves when A or B port is open to the atmosphere, or while the actuators and air operated equipment are in operation. For built-in valve type with rubber seal, the back pressure prevention seal may be peeled off, which may cause air leakage or malfunctions. Use caution especially when performing a trial operation or maintenance work.

### **Exhaust Throttle**

### **A**Caution

The SY series pilot valve and main valve share a common exhaust inside the valve. Therefore, do not block the exhaust port when arranging the piping.

#### Used as a 3-Port Valve

### 

### ■ In case of using a 5-port valve as a 3-port valve

The SY3000/5000/7000 series can be used as normally closed (N.C.) or normally open (N.O.) 3-port port valves by closing one of the cylinder ports 4(A) or 2(B) with a plug. However, they should be used with the exhaust ports kept open. They are convenient at times when a double solenoid type 3-port valve is required.


Plu	g position	B port	A port
Туре	of actuation	N.C.	N.O.
solenoids	Single	(A)4 2(B) (EA)5 1 3(EB) (P)	(A)4 2(B) (EA)5 1 3(EB) (P)
Number of solenoids	Double	(A)4 2(B)	(A)4 2(B) (EA)5 1 3(EB) (P)

#### Valve and Manifold Combination

The SY series plug-in valve has the common configuration of the valve mounting surface between base mounted type  $(SY_{\frac{3}{7}}^{\frac{3}{7}}\Box\Box)$  and top ported type  $(SY_{\frac{3}{7}}^{\frac{3}{7}}\Box\Box)$ , therefore, it can be mounted to all manifolds of the side ported type (Type 50 and Type 10), the bottom ported type (Type 51 and Type 11) and the top ported type (Type 52 and Type 12). For example, air output can be obtained from both sides of the A and B ports of the manifold and the valve by mounting a top ported valve to a side ported or bottom ported manifold, and a pressure switch can be connected to the output port on one side. However, when selecting valves and manifolds, note that when a base mounted valve is mounted to a top ported manifold, there will be no output from the A and B port.



Be sure to read this before handling. Refer to the back cover for Safety Instructions. For 3/4/5 Port Solenoid Valve Precautions, refer to "Handling Precautions for SMC Products" and the Operation Manual on the SMC website, http://www.smc.eu

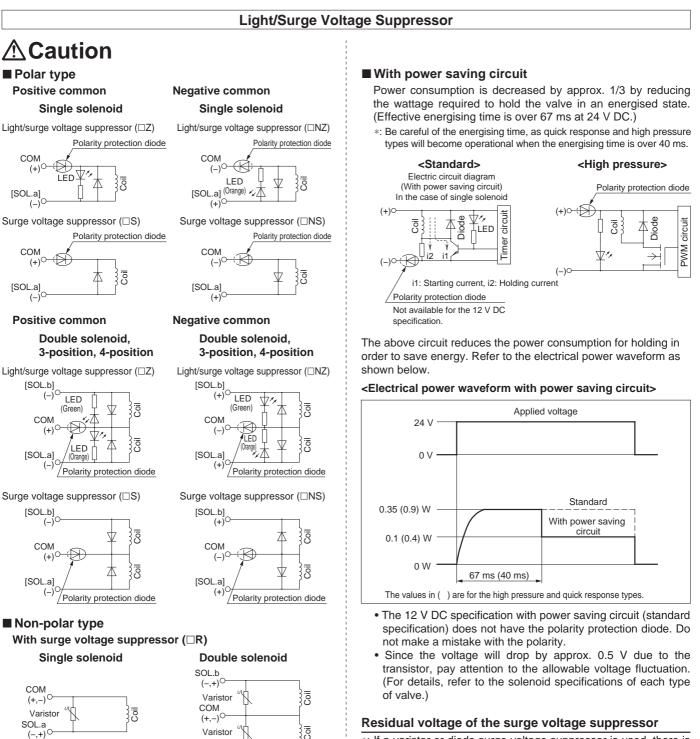

\*: If a varistor or diode surge voltage suppressor is used, there is some residual voltage to the protection element and rated voltage. Therefore, refer to the below table and pay attention to the surge voltage protection on the controller side. Also, since the response time does change, refer to the valve specifications on page 14.

#### **Residual Voltage**

Surge voltage	DC					
suppressor	24 V	12 V				
S, Z	Approx. 1 V					
R, U	Approx. 47 V	Approx. 32 V				

SOL.a (-,+)<sup>C</sup>

SOL.b

(-,+)

Varistor

(+,-)<sup>C</sup>

Varistor

SOL.a (-,+)

COM

**Double solenoid** 

LED

×Δ

\\
\$\/
\$

 $\mathbf{A}$ 

LED

Coil

C O

With light/surge voltage suppressor (□U)

 $\mathbf{1}$ 

LED

Single solenoid

COM

(+, -)

SOL.a

(-,+)

Varisto



Be sure to read this before handling. Refer to the back cover for Safety Instructions. For 3/4/5 Port Solenoid Valve Precautions, refer to "Handling Precautions for SMC Products" and the Operation Manual on the SMC website, http://www.smc.eu

#### **Continuous Duty**


### 


If a valve is energised continuously for a long period of time, the rise in temperature due to heat-up of the coil assembly may cause a decline in solenoid valve performance, reduce service life, or have adverse effects on peripheral equipment. If the valve is energised continuously for a long period of time, be sure to use a valve with power saving circuit. In particular, if three or more adjacent stations on the manifold are energised simultaneously for extended periods of time or if the valves on A side and B side are energised simultaneously for a long period of time, take special care as the temperature rise will be greater.

#### **Countermeasure for Surge Voltage Intrusion**

#### Sneak-in of surge voltage

With non-polar type valves, at times of sudden interruption of the loading power supply, such as emergency shutdown, surge voltage intrusion may be generated from loading equipment with a large capacity (power consumption), and the valve in a de-energised state may switch over (see Figure 1). When installing a breaker circuit for the loading power supply, consider using a valve with polarity (with polarity protection diode), or install a surge absorption diode between the loading equipment COM line and the output equipment COM line (see Figure 2).

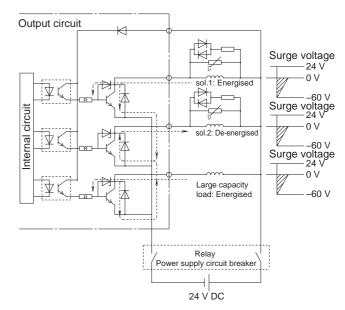

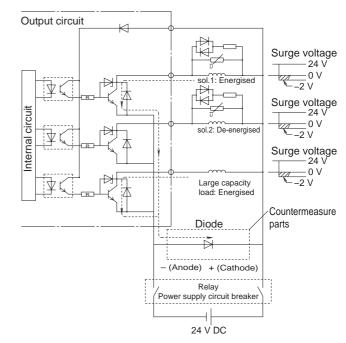

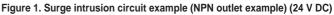



Figure 2. Surge intrusion circuit example (NPN outlet example) (24 V DC)



Be sure to read this before handling. Refer to the back cover for Safety Instructions. For 3/4/5 Port Solenoid Valve Precautions, refer to "Handling Precautions for SMC Products" and the Operation Manual on the SMC website, http://www.smc.eu

#### **Light Indication**


When equipped with indicator light and surge voltage suppressor, the light window turns orange when solenoid a is energised, and it turns green when solenoid b is energised.

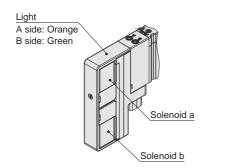

Type 5□ (Metal Base) Changing Connector Entry Direction

### **A**Caution

Connector direction for electrical entry of D-sub connector, flat ribbon cable and PC wiring can be changed. If the directional change is required, push the lever on both sides to remove the connector and change the connector direction for electrical entry as shown in the figure. Since lead wire assemblies are attached to the connector, excessive pulling or twisting can cause broken wires or other trouble. Also, take precautions so that lead wires are not caught and pinched when installing the connector.

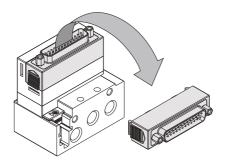


Type 1□ (Connector Connecting Base) Changing Connector Entry Direction

### **A**Caution

Connector direction for electrical entry of D-sub connector <IP40>, flat ribbon cable and PC wiring can be changed. If the directional change is required, slide the lever on the side of the connector block to the FREE position, and then change the direction as shown in the figure. Also, before connecting the connector, be sure to return the lever to the LOCK position. (If the lever is difficult to slide, move the connector a little bit to make it easier to slide the lever.)

If an excessive force is applied on the connector in the LOCK position, the connector block may be damaged. Also, using in such a way that the connector floats in the FREE position, it may cause the lead wire etc., to break. Thus, refrain from using in these ways.

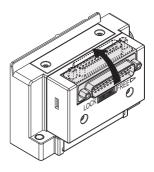


### How to Order Manifold

### Caution

The letter "f" is indicated on manifold blocks for the SY series Type 1 (connector connecting base) as shown below. This indication refers to the type of substrate assembly (single wiring) inside the manifold blocks. When there is no symbol, double wiring is used.

When the manifold specification sheet does not include a wiring specification, all stations will be double wiring specification. In this case, single and double solenoid valves can be mounted in any position, but when a single valve is used, there will be an unused control signal. To avoid this, indicate positions of manifold blocks for single wiring specification and double wiring specification on a manifold specification sheet. (Note that double, 3-or 4-position valves cannot be used for manifolds blocks with single wiring specification f.)

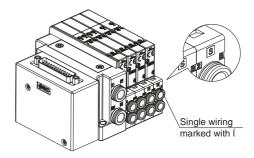



Be sure to read this before handling. Refer to the back cover for Safety Instructions. For 3/4/5 Port Solenoid Valve Precautions, refer to "Handling Precautions for SMC Products" and the Operation Manual on the SMC website, http://www.smc.eu

Substrate Assemblies inside Manifolds

### **▲**Caution

Substrate assemblies inside of manifolds cannot be taken apart. Attempting to do so may damage parts.

### Fixation of DIN Rail Mounting Type Manifold

### 


- 1. When the manifold is fixed with bolts on a mounting surface etc., it can be operated just by fixing on both ends of the DIN rail if the bottom surface of the DIN rail is entirely in contact with the mounting surface when mounted horizontally. However, if it is used with other mounting or with side or reverse mounting, fix the DIN rail with bolts at regular intervals. As a guide, insert bolts in 2 locations for 2-5 stations, 3 locations for 6-10 stations, 4 locations for 11-15 stations, 5 locations for 16-20 stations and 6 locations for 21-24 stations.
- 2. When using the manifold with DIN rail in an environment where any vibration or impact is applied to it, the DIN rail itself may be broken. In particular, if the installation surface vibrates when mounting the manifold on the wall or if a load is directly applied to the manifold, the DIN rail may be broken, causing the manifold to drop. When any vibration, impact, or load is applied to the manifold, be sure to use the direct mounting manifold.

Port Block Assembly and How to Change Piping Types between Top and Side

### **▲**Caution

For top ported type, the port size of A and B ports can be changed by switching the port block assemblies which are mounted on the body. The piping method can also be changed by switching the top ported type port block assembly with the side ported type cover assembly. Also, it may cause air leakage if the mounting screws are not tightened securely enough when they are switched. Take care to tighten to the correct tightening torque. Refer to page 247 for part numbers of port block assembly and body cover assembly.

When switching them while valves are mounted on a manifold, remove the clip with a flat head screwdriver before switching the port plugs and the One-touch fittings. It may cause air leakage if the mounting screws are not tightened or the clip is not inserted securely enough when they are switched. Take care to tighten to the correct tightening torque.

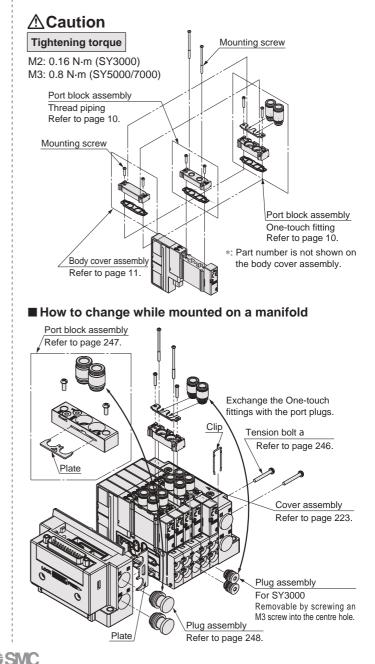



Be sure to read this before handling. Refer to the back cover for Safety Instructions. For 3/4/5 Port Solenoid Valve Precautions, refer to "Handling Precautions for SMC Products" and the Operation Manual on the SMC website, http://www.smc.eu


### **Changing One-touch Fittings**

### Caution

By replacing One-touch fittings of valve or manifold base, it is possible to change the connection diameter of the 4(A), 2(B), 1(P), 3/5(E) ports.

When replacing the One-touch fittings, remove the clip or the plate and the plate mounting screws with a screwdriver before pulling the One-touch fittings off. Mount the One-touch fittings by following the removal procedure in reverse.

It may cause air leakage if the mounting screws are not tightened or the clip and the clip plate are not inserted securely enough when they are switched. Take care to tighten to the correct tightening torque. Refer to page 248 for part numbers of One-touch fittings for valve or manifold.

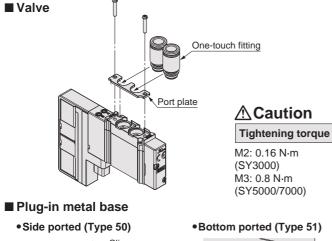

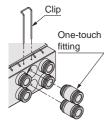


Plate Plate mounting screw

Part no.

SY30M-10-3A

### Clip part no. (10 pcs. included)

S

S

S

p part no. (10 pcs. included)			(10 pcs. i	ncluded)
Series	Part no.		Series	Part
Y3000	SY30M-19-2A		SY3000	SY30M
Y5000	SY50M-19-2A		SY5000	SY50M
Y7000	SY70M-19-2A		SY7000	SY70M


	0.00000.0000
SY5000	SY50M-10-6A
SY7000	SY70M-10-7A

Plate assembly part no.

\*: Including mounting screw

### Plug-in connector connecting base

#### • Side ported (Type 10)

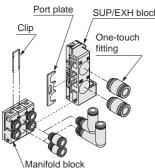

Clip part no. (10 pcs. included)							
Series	Part no.						
SY3000	SY30M-19-1A						
SY5000*1	SY50M-19-6A						
SY3000/5000 Mixed mounting type	SY50M-19-1A						
SY7000	SV3000-70-1A						
*1: A and B ports (Ø 8 and Ø 5/16") of							

the SY3000/5000 mixed mounting type are those for the SY5000.

\*: If the port plate for the SUP/EXH block is required, please contact SMC.

### **Changing One-touch Fittings**

### ▲Caution

#### •Bottom ported (Type 11)

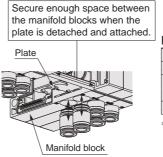


Plate part no. (10 pcs. included)							
Series	Part no.						
SY5000*1	SY50M-10-4A						
SY3000/5000 Mixed mounting type							
SY7000	SY70M-10-4A						
*1: A and B ports (Ø 8 and Ø 5/16") of							

the SY3000/5000 mixed mounting type are those for the SY5000.

### **Other Tube Brands**

### 

- 1. When using other than SMC brand tube, confirm that the following specifications are satisfied with respect to the tube outside diameter tolerance.
  - 1) Nylon tube
  - 2) Soft nylon tube 3) Polyurethane tube

pulling out after connection.

within ±0.1 mm within +0.15 mm

-0.2 mm Do not use tube which do not meet these outside diameter tolerances. It may not be possible to connect them, or they may cause other trouble, such as air leakage or the tube

within ±0.1 mm

### **One-touch Fittings**

### Tube attachment/detachment for One-touch fittings

#### 1) Tube attachment

- 1. Take a tube having no flaws on its periphery and cut it off at a right angle. When cutting the tube, use tube cutters TK-1, 2 or 3. Do not use pinchers, nippers or scissors, etc. If cutting is done with tools other than tube cutters, the tube may be cut diagonally or become flattened, etc., making a secure installation impossible, and causing problems such as the tube pulling out after installation or air leakage. Allow some extra length in the tube.
- 2. Grasp the tube and push it in slowly, inserting it securely all the way into the fitting.
- 3. After inserting the tube, pull on it lightly to confirm that it will not come out. If it is not installed securely all the way into the fitting, this can cause problems such as air leakage or the tube pulling out.

#### 2) Tube detachment

- 1. Push in the release button sufficiently, pushing its collar equally around the circumference.
- 2. Pull out the tube while holding down the release button so that it does not come out. If the release button is not pressed down sufficiently, there will be increased bite on the tube and it will become more difficult to pull it out.
- 3. When the removed tube is to be used again, cut off the portion which has been chewed before reusing it. If the chewed portion of the tube is used as is, this can cause trouble such as air leakage or difficulty in removing the tube.





Be sure to read this before handling. Refer to the back cover for Safety Instructions. For 3/4/5 Port Solenoid Valve Precautions, refer to "Handling Precautions for SMC Products" and the Operation Manual on the SMC website, http://www.smc.eu

### **One-touch Fittings**

### ▲Caution

When fittings are used, they may interfere with one another depending on their types and sizes. Therefore, the dimensions of the fittings to be used should first be confirmed in their respective catalogs.

Fittings whose compliance with the SY series is already confirmed are stated below. If the fitting within the applicable range is selected, there will not be any interference.

### Applicable Fittings: Series KQ2H, KQ2S

Series	Model	Piping port	Port			Applicable tube O.D.						
Selles	IVIOUEI	Fiping port	size	Fillings	Ø 2	Ø 3.2	Ø 4	Ø 6	Ø 8	Ø 10	Ø 12	
	SY3⊡30-□□-M5	4A, 2B	M5	KQ2H								
	313030-00-1013	4A, 2D	IVIO	KQ2S								
			1/0	KQ2H								
		1P, 5EA, 3EB	1/8	KQ2S								
SY3000		X, PE	M5	KQ2H								
313000	SS5Y3-50/51/52 (R)			KQ2S								
	Manifold base		1/8	KQ2H								
		44.00		KQ2S								
		4A, 2B	M5 -	KQ2H								
				KQ2S								

Corioo	Model	Dining port	Port Port		Applicable tube O.D.						
Series	IVIOUEI	Piping port	size	Fittings	Ø 2	Ø 3.2	Ø 4	Ø 6	Ø 8	Ø 10	Ø 12
	SY5⊡30-□□-01	44.00	1/8	KQ2H							
	515_3001	4A, 2B	1/0	KQ2S							
		1D 5EA 2ED	4/4	KQ2H							
		1P, 5EA, 3EB	1/4	KQ2S							
SY5000		X, PE	M5	KQ2H							
	SS5Y5-50/51/52 (R)			KQ2S							
	Manifold base		1/4	KQ2H							
		44.00	1/4	KQ2S							
		4A, 2B –	1/8	KQ2H							
			1/0	KQ2S							

Series	Model	Diping port	Dining port Port		Piping port Port Fittings		Applicable tube O.D.				e O.D.		
Selles	IVIOUEI	Piping port	size	Fittings	Ø 2	Ø 3.2	Ø 4	Ø 6	Ø 8	Ø 10	Ø 12		
		44.00	4/4	KQ2H									
	SY7⊡30-□□-02	4A, 2B	1/4	KQ2S									
		1P, 5EA, 3EB	3/8	KQ2H									
SY7000				KQ2S									
317000	SS5Y7-50/51/52 (R)	V DE	M5	KQ2H									
Manifold	Manifold base	X, PE		KQ2S									
		4A, 2B	1/4	KQ2H									
			1/4	KQ2S									

#### Trademark

DeviceNet<sup>™</sup> is a trademark of ODVA.

EtherNet/IP<sup>™</sup> is a trademark of ODVA.

CompoNet<sup>™</sup> is a trademark of ODVA.

EtherCAT® is registered trademark and patented technology, licensed by Beckhoff Automation GmbH, Germany.

### ▲ Safety Instructions

These safety instructions are intended to prevent hazardous situations and/or equipment damage. These instructions indicate the level of potential hazard with the labels of "Caution," "Warning" or "Danger." They are all important notes for safety and must be followed in addition to International Standards (ISO/IEC)\*1), and other safety regulations.

\_\_\_\_

Caution indicates a hazard with a low level of risk ▲ Caution: **Marning**: ▲ Danger :

which, if not avoided, could result in minor or moderate . iniury. I Warning indicates a hazard with a medium level of risk II. which, if not avoided, could result in death or serious injury.

\_ \_ \_ \_ \_ \_ \_ \_ \_ \_ \_ \_ \_

Danger indicates a hazard with a high level of risk which, if not avoided, will result in death or serious injury.

### A Warning

- 1. The compatibility of the product is the responsibility of the person who designs the equipment or decides its specifications.
- Since the product specified here is used under various operating conditions, its compatibility with specific equipment must be decided by the person who designs the equipment or decides its specifications based on necessary analysis and test results. The expected performance and safety assurance of the equipment will be the responsibility of the person who has determined its compatibility with the product. This person should also continuously review all specifications of the product referring to its latest catalogue information, with a view to giving due consideration to any possibility of equipment failure when configuring the equipment.
- 2. Only personnel with appropriate training should operate machinery and equipment.

The product specified here may become unsafe if handled incorrectly. The assembly, operation and maintenance of machines or equipment including our products must be performed by an operator who is appropriately trained and experienced.

- 3. Do not service or attempt to remove product and machinery/equipment until safety is confirmed.
  - 1. The inspection and maintenance of machinery/equipment should only be performed after measures to prevent falling or runaway of the driven objects have been confirmed
  - 2. When the product is to be removed, confirm that the safety measures as mentioned above are implemented and the power from any appropriate source is cut, and read and understand the specific product precautions of all relevant products carefully
  - 3. Before machinery/equipment is restarted, take measures to prevent unexpected operation and malfunction.
- 4. Contact SMC beforehand and take special consideration of safety measures if the product is to be used in any of the following conditions.
  - 1. Conditions and environments outside of the given specifications, or use outdoors or in a place exposed to direct sunlight.
  - 2. Installation on equipment in conjunction with atomic energy, railways, air navigation, space, shipping, vehicles, military, medical treatment, combustion and recreation, or equipment in contact with food and beverages, emergency stop circuits, clutch and brake circuits in press applications, safety equipment or other applications unsuitable for the standard specifications described in the product catalogue.
  - 3. An application which could have negative effects on people, property, or animals requiring special safety analysis.
  - 4. Use in an interlock circuit, which requires the provision of double interlock for possible failure by using a mechanical protective function, and periodical checks to confirm proper operation.

### A Caution

1. The product is provided for use in manufacturing industries. The product herein described is basically provided for peaceful use in manufacturing industries

If considering using the product in other industries, consult SMC beforehand and exchange specifications or a contract if necessary.

If anything is unclear, contact your nearest sales branch.

#### \*1) ISO 4414: Pneumatic fluid power - General rules relating to systems. ISO 4413: Hydraulic fluid power - General rules relating to systems. IEC 60204-1: Safety of machinery - Electrical equipment of machines. (Part 1: General requirements) ISO 10218-1: Manipulating industrial robots - Safety.

etc.

### Limited warranty and Disclaimer/ **Compliance Requirements**

The product used is subject to the following "Limited warranty and Disclaimer" and "Compliance Requirements". Read and accept them before using the product.

### Limited warranty and Disclaimer

- 1. The warranty period of the product is 1 year in service or 1.5 years after the product is delivered, wichever is first.\*2) Also, the product may have specified durability, running distance or replacement parts. Please consult your nearest sales branch.
- 2. For any failure or damage reported within the warranty period which is clearly our responsibility, a replacement product or necessary parts will be provided. This limited warranty applies only to our product independently, and not to any other damage incurred due to the failure of the product.
- 3. Prior to using SMC products, please read and understand the warranty terms and disclaimers noted in the specified catalogue for the particular products
  - \*2) Vacuum pads are excluded from this 1 year warranty. A vacuum pad is a consumable part, so it is warranted for a year after it is delivered. Also, even within the warranty period, the wear of a product due to the use of the vacuum pad or failure due to the deterioration of rubber material are not covered by the limited warranty.

### **Compliance Requirements**

- 1. The use of SMC products with production equipment for the manufacture of weapons of mass destruction (WMD) or any other weapon is strictly prohibited.
- 2. The exports of SMC products or technology from one country to another are governed by the relevant security laws and regulations of the countries involved in the transaction. Prior to the shipment of a SMC product to another country, assure that all local rules governing that export are known and followed

### A Caution

SMC products are not intended for use as instruments for legal metrology.

Measurement instruments that SMC manufactures or sells have not been qualified by type approval tests relevant to the metrology (measurement) laws of each country. Therefore, SMC products cannot be used for business or certification ordained by the metrology (measurement) laws of each country.

#### ✓ Safety Instructions Be sure to read "Handling Precautions for SMC Products" (M-E03-3) before using.

### SMC Corporation (Europe)

				1			
Austria	<b>2 +43 (0)2262622800</b>	www.smc.at	office@smc.at	Lithuania	🕿 +370 5 2308118	www.smclt.lt	info@smclt.lt
Belgium	🕿 +32 (0)33551464	www.smc.be	info@smc.be	Netherlands	🕿 +31 (0)205318888	www.smc.nl	info@smc.nl
Bulgaria	<b>2 +359 (0)2807670</b>	www.smc.bg	office@smc.bg	Norway	<b>2 +47 67129020</b>	www.smc-norge.no	post@smc-norge.no
Croatia	<b>2 +385 (0)13707288</b>	www.smc.hr	office@smc.hr	Poland	<b>222119600 222119600</b>	www.smc.pl	office@smc.pl
Czech Republic	<b>2 +420 541424611</b>	www.smc.cz	office@smc.cz	Portugal	<b>2 +351 226166570</b>	www.smc.eu	postpt@smc.smces.es
Denmark	<b>2 +45</b> 70252900	www.smcdk.com	smc@smcdk.com	Romania	<b>2</b> +40 213205111	www.smcromania.ro	smcromania@smcromania.ro
Estonia	🕿 +372 6510370	www.smcpneumatics.ee	smc@smcpneumatics.ee	Russia	🕿 +7 8127185445	www.smc-pneumatik.ru	info@smc-pneumatik.ru
Finland	🕿 +358 207513513	www.smc.fi	smcfi@smc.fi	Slovakia	🕿 +421 (0)413213212	www.smc.sk	office@smc.sk
France	🕿 +33 (0)164761000	www.smc-france.fr	info@smc-france.fr	Slovenia	<b>2 +386 (0)73885412</b>	www.smc.si	office@smc.si
Germany	<b>2 +49 (0)61034020</b>	www.smc.de	info@smc.de	Spain	<b>2 +34 902184100</b>	www.smc.eu	post@smc.smces.es
Greece	🕿 +30 210 2717265	www.smchellas.gr	sales@smchellas.gr	Sweden	<b>2 +46 (0)86031200</b>	www.smc.nu	post@smc.nu
Hungary	🕿 +36 23513000	www.smc.hu	office@smc.hu	Switzerland	🕿 +41 (0)523963131	www.smc.ch	info@smc.ch
Ireland	🕿 +353 (0)14039000	www.smcpneumatics.ie	sales@smcpneumatics.ie	Turkey	🕿 +90 212 489 0 440	www.smcpnomatik.com.tr	info@smcpnomatik.com.tr
Italy	<b>2</b> +39 0292711	www.smcitalia.it	mailbox@smcitalia.it	UK	🕿 +44 (0)845 121 5122	www.smc.uk	sales@smc.uk
Latvia	🕿 +371 67817700	www.smclv.lv	info@smclv.lv				

SMC CORPORATION Akihabara UDX 15F, 4-14-1, Sotokanda, Chiyoda-ku, Tokyo 101-0021, JAPAN Phone: 03-5207-8249 FAX: 03-5298-5362 1st printing WY printing WY 00 Printed in Spain Specifications are subject to change without prior notice and any obligation on the part of the manufacturer.