




707HVO

Material **Nitrile** LENGTH 12 in. / 305mm

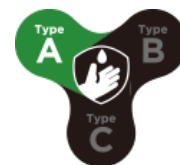

CHEMICAL PERMEATION

CHEMICAL NAME	CAS NUMBER	BDT
		TTL EN374
Formaldehyde 37%	50-00-0	>480
2-Hydroxypropionic acid 85%	50-21-5	>480
Carbon Tet	56-23-5	>480
Urea (s) 99%	57-13-6	>480
1,2-Propanediol	57-55-6	>480
Diethyl Ether	60-29-7	6-10
Aminobenzene	62-53-3	>10
Ethanol	64-17-5	>120
Acetic Acid 5%	64-19-7	>480
Acetic Acid 10%	64-19-7	>480
Acetic Acid 84%	64-19-7	>60
Acetic Acid 50%	64-19-7	>480
Acetic Acid 25%	64-19-7	>480
Acetic Acid 99%	64-19-7	>60
Benzoic Acid (s) 99%	65-85-0	>480
Methanol	67-56-1	>10
2-Propanol	67-63-0	>480
2-Propanone	67-64-1	1-5
Chloroform	67-66-3	1-5
Dimethylsulfoxide (DMSO)	67-68-5	>10
Dimethyl Formamide	68-12-2	1-5
Salicylic acid (s) 99%	69-72-7	>480
n-Propanol	71-23-8	>120
Butanol	71-36-3	>480
Alcohol, Amyl	71-41-0	>60
Benzene	71-43-2	6-10

1,1,1-Trichloroethane	71-55-6	>10
Iodide, Methyl	74-88-4	1-5
ETHYLAMINE	75-04-7	1-5
ETHYLAMINE 70%	75-04-7	1-5
Acetonitrile	75-05-8	1-5
Acetaldehyde	75-07-0	1-5
Chloride, Methylene	75-09-2	1-5
Carbon Disulfide	75-15-0	1-5
Bromoform	75-25-2	1-5
1,1-Dichloroethene	75-35-4	1-5
Acetyl Chloride	75-36-5	1-5
Nitromethane	75-52-5	1-5
1,1,2-Trichloro-1,2,2-trifluoroethane	76-13-1	>480
Dimethyl Sulfate	77-78-1	>10
Citric Acid 99%	77-92-9	>480
Citric Acid 30%	77-92-9	>480
Citric Acid 50%	77-92-9	>480
Citric Acid 75%	77-92-9	>480
2-Butanol	78-83-1	>480
Dichloropropane, 1,2-	78-87-5	6-10
2-Butanone	78-93-3	1-5
Ethylene, Trichloride	79-01-6	1-5
2-Propeneamide 50%	79-06-1	>480
2-Propeneamide 98%	79-06-1	>480
Chloroacetic Acid 70%	79-11-8	>480
Chloroacetic Acid 80%	79-11-8	>480
Acetate, Methyl	79-20-9	1-5
Methacrylic Acid 99%	79-41-4	>30
Methacrylate, Methyl	80-62-6	6-10
Vinyl Pyrrolidinone	88-12-0	>10
Dichlorobenzene O-	95-50-1	>10
2-Aminotoluene	95-53-4	>60
Pseudocumene	95-63-6	>60
Butanone Oxime	96-29-7	>120
2-Ethylbutyl alcohol	97-95-0	>480
2-Furaldehyde	98-01-1	6-10
Butyl Toluene, p-Tert	98-51-1	>480

(1-Methylethyl)benzene	98-82-8	>10
Nitrobenzene	98-95-3	1-5
Benzene, Ethyl	100-41-4	>10
Benzene, Vinyl	100-42-5	>10
Alcohol, Benzyl	100-51-6	>10
Benzaldehyde	100-52-7	1-5
2,2',2''-Nitrilotriethanol	102-71-6	>60
±)-2-(Chloromethyl)oxiran	106-89-8	1-5
1,2-Dichloroethane	107-06-2	1-5
Acrylonitrile	107-13-1	1-5
1,2-Diaminoethane 99%	107-15-3	>10
2-Propen-1-ol	107-18-6	>10
Methyl Propyl Ketone	107-87-9	1-5
1-methoxy-2-propanol	107-98-2	>60
Acetate, Vinyl	108-05-4	1-5
2-Pentanone, Methyl-	108-10-1	>10
Acetate, Isopropyl	108-21-4	6-10
PROPYLENE GLYCOL MONOMETHYL ETHER ACETATE	108-65-6	>60
2,6-Dimethyl-4-Heptanone	108-83-8	>60
Benzene, Methyl	108-88-3	>10
Benzene Chloride	108-90-7	1-5
Cyclohexanol	108-93-0	>480
Cyclohexanone	108-94-1	>30
Carbolic Acid 89%	108-95-2	>30
Carbolic Acid(s) 100%	108-95-2	>60
Carbolic Acid 10%	108-95-2	>10
Dimethyl Propaneamide, N,N'-	109-55-7	6-10
Pentane	109-66-0	>480
1-Aminobutane	109-73-9	6-10
DEA	109-89-7	6-10
Diethylene Oxide	109-99-9	1-5
Hexane	110-54-3	>480
Cyclohexane	110-82-7	>480
PYRIDINE	110-86-1	1-5
Diethylene oximide	110-91-8	1-5
1,5-Pentanedial 50%	111-30-8	>60
2,2-iminodiethanol	111-42-2	>60

n-Octane	111-65-9	>480
2-Butoxyethanol	111-76-2	>240
n-Octanol	111-87-5	>480
Oleic Acid	112-80-1	>480
1,2,4-Trichlorobenzene	120-82-1	1-5
TRIETHYLAMINE	121-44-8	>60
4-Hydroxy-4-methyl-2-pentanone	123-42-2	>30
3-Methyl-1-butanol	123-51-3	>480
Butyl Acetate	123-86-4	1-5
1,4-Dioxane	123-91-1	6-10
3-Methylbutyl Ethanoate	123-92-2	6-10
Dimethylamine 40%	124-40-3	>480
PERC	127-18-4	>480
Dimethylacetamide N,N-	127-19-5	>10
Butyl Acrylate	141-32-2	>10
2-Aminoethanol	141-43-5	>60
Ethyl Acetate	141-78-6	1-5
Heptane	142-82-5	>480
Butoxytriglycol	143-22-6	>30
OXALIC ACID (s) 99%	144-62-7	480
OXALIC ACID (s)	144-62-7	>480
Calcium Carbonate (s) 99%	471-34-1	>480
Trimethyl Phosphate	512-56-1	>10
2,2,4-Trimethyl Pentane	540-84-1	>480
3-Methyl-2-Butanone	563-80-4	1-5
Amyl Acetate	628-63-7	>10
Methyl Pyrrolidone, N-	872-50-4	6-10
2-Bromoethyl Acetate	927-68-4	1-5
Hexamethyldisilazane	999-97-3	>480
3,8-Diamino-5-ethyl-6-phenylphenanthridinium bromide 5%	1239-45-8	>480
3,8-Diamino-5-ethyl-6-phenylphenanthridinium bromide 1%	1239-45-8	>480
3,8-Diamino-5-ethyl-6-phenylphenanthridinium bromide 10%	1239-45-8	>480
3,8-Diamino-5-ethyl-6-phenylphenanthridinium bromide 95%	1239-45-8	>480
Calcium Hydroxide (s) 95%	1305-62-0	>480
Iron Oxide (s) 99%	1309-37-1	>480
Caustic Potash 30%	1310-58-3	>480
Caustic Potash 45%	1310-58-3	>480

Caustic Potash 99%	1310-58-3	>480
Caustic Potash 20%	1310-58-3	>480
Caustic Potash 10%	1310-58-3	>480
Caustic Soda 10%	1310-73-2	>480
Caustic Soda 30%	1310-73-2	>480
Caustic Soda 98%	1310-73-2	>480
Caustic Soda 20%	1310-73-2	>480
Caustic Soda 40%	1310-73-2	>480
Caustic Soda 50%	1310-73-2	>480
Cresols	1319-77-3	>30
Divinyl Benzene	1321-74-0	1-5
dimethyl benzene	1330-20-7	>30
Ammonia Solution 29%	1336-21-6	>30
Gallotannin 95%	1401-55-4	>480
Methyl-Tert-Butyl Ether	1634-04-4	>480
Butoxypropanol	5131-66-8	>480
D-Limonene	5989-27-5	>30
Aluminum Chloride (s) 98%	7446-70-0	>480
Potassium Chloride (s) 99%	7447-40-7	>480
Hydrochloric Acid 10%	7647-01-0	>480
Muriatic Acid 32%	7647-01-0	>480
Muriatic Acid 20%	7647-01-0	>480
Hydrochloric Acid 37%	7647-01-0	>480
Sodium Chloride (s) 99%	7647-14-5	>480
Phosphoric Acid 10%	7664-38-2	>480
Phosphoric Acid 50%	7664-38-2	>480
Phosphoric Acid 85%	7664-38-2	>480
Hydrofluoric Acid 40%	7664-39-3	>30
Hydrofluoric Acid 48%	7664-39-3	>30
Hydrofluoric Acid 30%	7664-39-3	>120
Battery Acid 93%	7664-93-9	>30
Battery Acid 25%	7664-93-9	>480
Battery Acid 10%	7664-93-9	>480
Battery Acid 96%	7664-93-9	>30
Battery Acid 47%	7664-93-9	>480
Battery Acid 70%	7664-93-9	>240
Battery Acid 50%	7664-93-9	>480

Nitric Acid 70%	7697-37-2	>10
Nitric Acid 35%	7697-37-2	>480
Nitric Acid 10%	7697-37-2	>480
Nitric Acid 23%	7697-37-2	>480
Nitric Acid 65%	7697-37-2	>10
Nitric Acid 50%	7697-37-2	>60
Hydrogen Peroxide 30%	7722-84-1	>240
Iron Chloride Solution 98%	7758-94-3	>480
Iron Chloride Solution 45%	7758-94-3	>480
Iron Sulfate (s) 99%	7782-63-0	>480
Hydroxylamine 50%	7803-49-8	>480
Fir Oil	8006-64-2	>480
Kerosene	8008-20-6	>480
Ligroin	8032-32-4	>30
Dry Cleaning Mineral Spirits	8052-41-3	>480
Hydrobromic Acid 48%	10035-10-6	>480
Boric acid (s) 99%	10043-35-3	>480
Calcium Chloride (s) 96%	10043-52-4	>480
Tetrachloropropene	10436-39-2	>120
Ammonium Fluoride 40%	12125-01-8	>480
2-Chloro-2-Oxoethyl Acetate	13831-31-7	6-10
Talc (s) 99%	14807-96-6	>480
Pentachloropropane	23153-23-3	>60
Antimony Tributylate 95%	53856-17-0	>480
Dry cleaning safety solvent	64475-85-0	>480
Distillates (petroleum), hydrotreated light	64742-47-8	>480
Mineral Spirits (White Spirits Type 3)	64742-48-9	>480
Kerosene (hydrosulfurized)	64742-81-0	>480
Mineral Spirits (White Spirits Type 0)	64742-88-7	>480
Naphtha, light aromatic	64742-95-6	>120
Diesel Oil	68334-30-5	>480
Kerosene (Fuel Oil # 2)	68476-30-2	>480
Diesel Fuel #2	68476-34-6	>480
Mineral Spirits (odorless)	68551-17-7	>480

BDT=BREAKTHROUGH DETECTION TIME

THE LEVEL (0 TO 6) INDICATES THE TIME REQUIRED FOR DIFFERENT CHEMICALS TO PERMEATE THROUGH THE GLOVE.

TTL : TOTAL IMMERSION CHEMICAL PERMEATION BREAKTHROUGH TIME.

INT : INTERMITTENT CONTACT CHEMICAL PERMEATION BREAKTHROUGH TIME, ONE MINUTE IMMERSION OUT OF EVERY TEN, REPEATEDLY.

Warranty Limitations and Disclaimer Use

This information is provided solely as a convenience to help you evaluate our gloves in the end-user's particular application. It is the responsibility of the purchaser and/or user to determine the level of toxicity of the materials to be handled and to select the proper glove suitable for a particular application. The information provided reflects laboratory performance of gloves under carefully controlled conditions. SHOWA makes no guarantee of results and assumes no obligation or liability in connection with this information.



COPYRIGHT © 2009-2021 SHOWA, INC. ALL RIGHTS RESERVED