

Rotary Actuator

Vane Type 10, 15, 20, 30, 40

New

RoHS

Standard Type

Free Mount Type


Many combinations available!

New

- Added the D-M9□ type compact auto switch.

Standard type/Series CRB2

- Piping ports are located on the flat surface.
Fittings can be secured firmly, piping is also improved.
- Many variations of shaft-end shape (6 types)

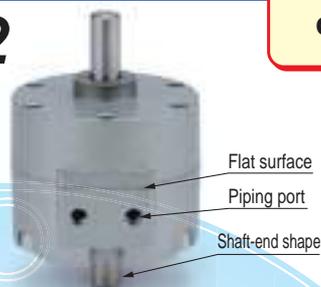

With auto switch unit



Auto switch unit

With angle adjuster unit



Angle adjuster unit

Possible to adjust the angle as desired

Rotating angle	Rotating angle adjustment range
270°	0 to 240° (Size 30)
180°	0 to 175°
90°	0 to 85°

With angle adjuster unit


+

With auto switch unit




Free mount type/Series CRBU2


- 12 % weight reduction
- Possible to move the plate mounting position as desired
- Many mounting variations

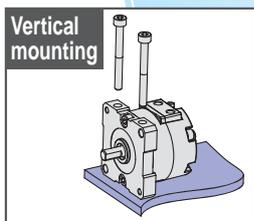

Vertical mounting

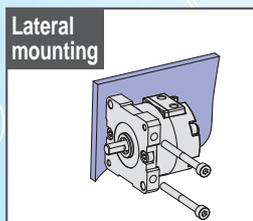

Lateral mounting

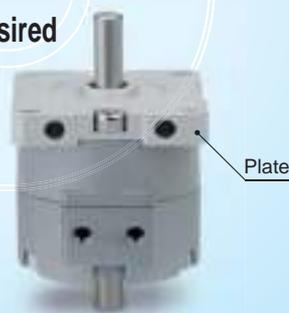

Plate

With auto switch unit



With angle adjuster unit



With angle adjuster unit

+

With auto switch unit




Rotating angle: 90°, 180°, 270°
All series can rotate up to 270°.

The use of specially designed seals and stoppers now enables our compact vane type rotary actuators to rotate up to 270°. (Single vane type)

Interchangeable mounting pitch with the current model

Mounting pitches A to C shown on the right and mounting hole diameters are interchangeable with the current model.

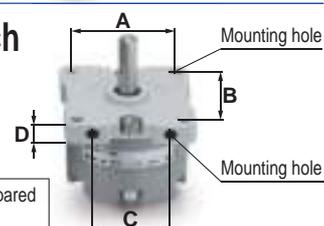

D: Height is reduced compared to the current model.

Series CRB□2




CAT.EUS20-230C-UK




Shaft type variations

Six shaft options available
 (* The figures below show size 30 actuators.)

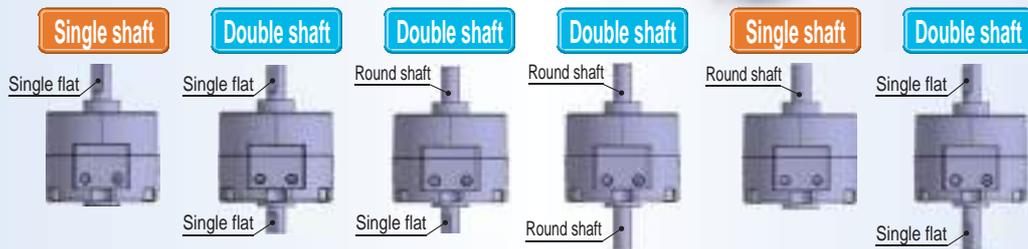


Direct mounting

The rotary actuator body can be mounted directly.
 * Not possible for size 10 to 40 with unit(s)

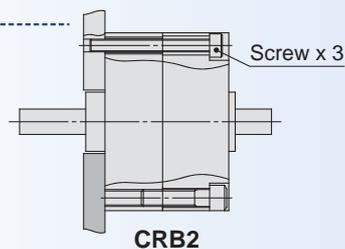


The mounting position of the auto switch can be set freely.

The switch can be fixed in the desired position in the circumferential direction.

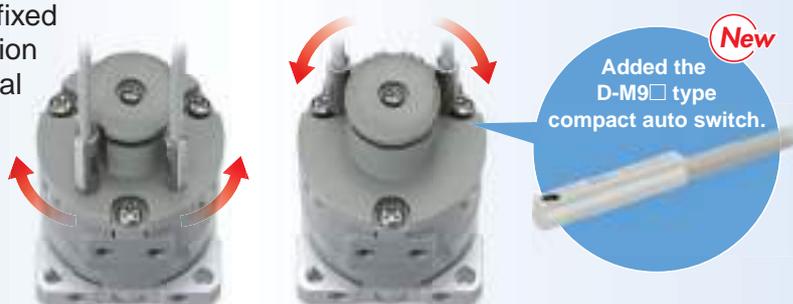

Connecting port location: Side ported or Axial ported

The port location can be selected according to the application.
 (Size 10 to 40 with unit(s) are side ported only.)

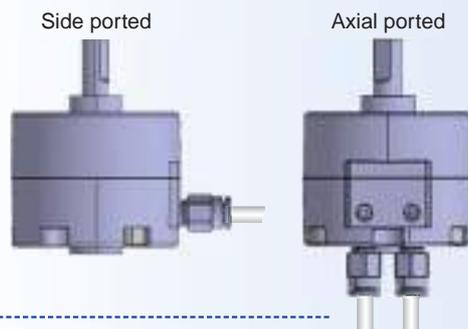

Double vane type is standardised for 90° and 100°.

The outside dimensions of the double vane type are equivalent to those of the single vane type (except size 10). Double vane construction can get twice the torque of the single vane type.


Series	Rotating angle	Single vane	Double vane
Standard type Series CRB2	90°	●	●
	100°	●	●
	180°	●	●
	270°	●	●
Free mount type Series CRBU2	90°	●	●
	100°	●	●
	180°	●	●
	270°	●	●

Free Mount Type/Series CRBU2

Size: 10, 15, 20, 30, 40

- Possible to change the starting position as desired to suit the installation conditions.

Conventional: 4 directions → **8 directions**

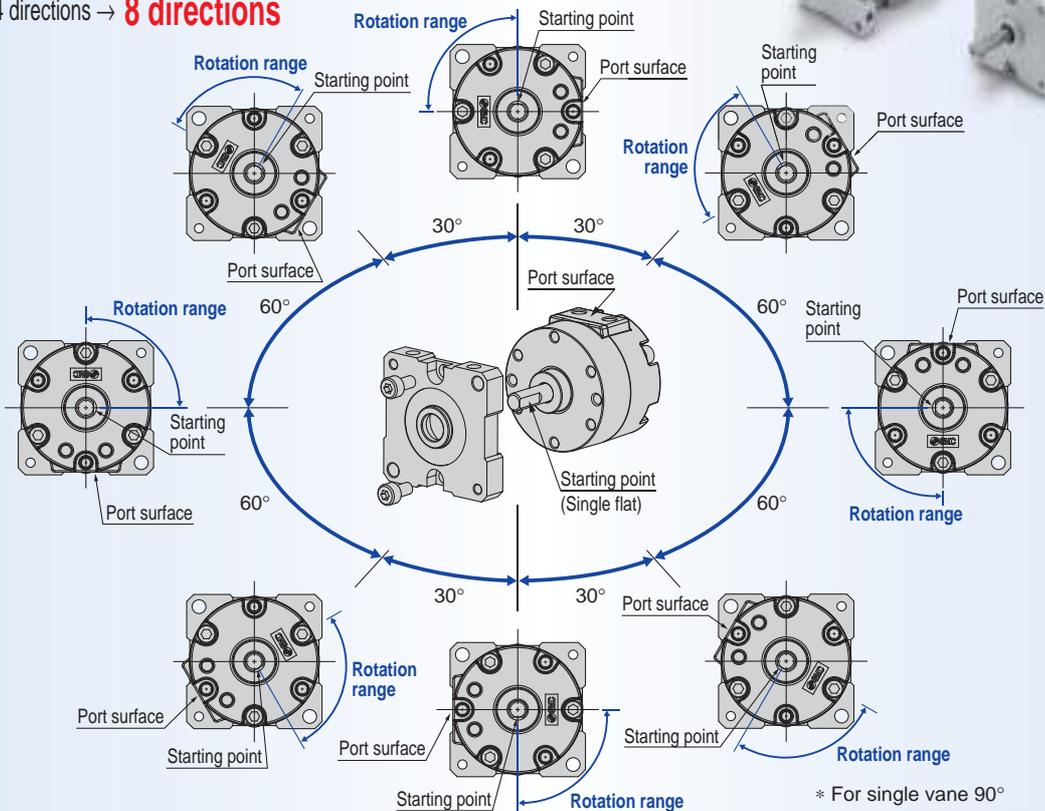

- **12 % weight reduction**


Lighter installation can be achieved.

Size	CRBU2 [g]	Reduction rate [%]	Current model [g]
10	42	12	47.5
15	64	12	73
20	130	10	143
30	248	5	263
40	465	5	491

* Compared with single vane at 90°

- **Interchangeable mounting with the current model**

- **Six types of direct mounting are possible.**

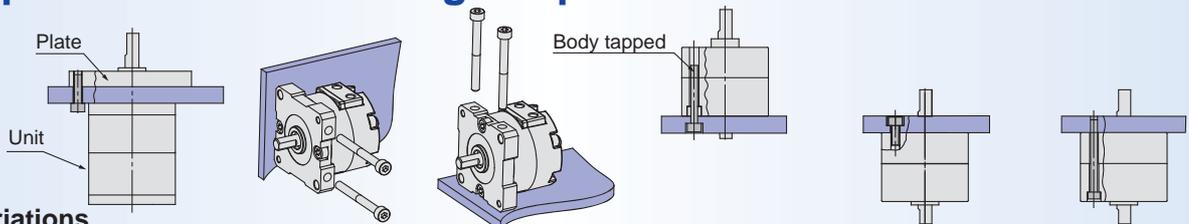

Mounting Variations

Applicable series	Free mount type	Free mount type	Free mount type	Standard type Free mount type	Standard type	Standard type
Mounting	Plate	Plate	Plate	Body tapped	Body tapped	Body through-hole (Fixed with the customer's plate.)
Mounting of each unit	Available	Available	Available	Not available	Available	Not available
Number of starting points	8 points	8 points	8 points	3 points	3 points	3 points
Workpiece removal during maintenance	No	No	No	No	Yes	Yes

Rotary Actuator/Vane Type Series CRB□2

Standard type

Series CRB2



With auto switch

With angle adjuster

Series CRB2□WU



With auto switch

Free mount type

Series CRBU2



With auto switch

With angle adjuster

Series CRBU2WU



With auto switch

Series Variations

		Fluid	Air															
		Size	10				15				20, 30				40			
		Vane type	S: Single vane D: Double vane		S	D	S	D	S	D	S	D	S	D				
Port location		Side ported (Nil) Axial ported (E)		Side ported	Axial ported													
Standard/Free mount type	Rotating angle	90°		●	●	●	●	●	●	●	●	●	●	●	●	●		
		100°				●	●			●	●			●	●			
		180°		●	●			●	●			●	●			●	●	
		270°		●	●			●	●			●	●			●	●	
	Shaft type	Single shaft	S	●	●	●	●	●	●	●	●	●	●	●	●	●	●	
		Double shaft	W	●	●	●	●	●	●	●	●	●	●	●	●	●	●	
		Long shaft with round shaft & Short shaft with single flat	J	●	●	●	●	●	●	●	●	●	●	●	●	●	●	
		Same length double long shaft with single flat on both shafts	Y	●	●	●	●	●	●	●	●	●	●	●	●	●	●	
		Double shaft key		●	●			●	●			●	●			●	●	
		Double round shaft	K	●	●	●	●	●	●	●	●	●	●	●	●	●	●	
		Single round shaft	T	●	●	●	●	●	●	●	●	●	●	●	●	●	●	
	Cushion	Rubber bumper					●	●	●	●	●	●	●	●	●	●	●	
	Variations	With auto switch (WJ shaft)		●	●			●	●			●	●			●	●	
		With angle adjuster (WJ shaft)		●	●			●	●			●	●			●	●	
		With auto switch and angle adjuster (WJ shaft)		●	●			●	●			●	●			●	●	
	Option	Mounting	With flange*	F	●	●	●	●	●	●	●	●	●	●	●	●	●	
Made to Order	Pattern	Shaft pattern		●	●	●	●	●	●	●	●	●	●	●	●	●		
		Rotating angle pattern		●	●			●	●			●	●			●	●	

* The CRB series only

CONTENTS

Rotary Actuator/Vane Type Series **CRB□2**



● Rotary Actuator/Vane Type

Series **CRB2**

How to Order	Page 5
Specifications	Page 6
Construction	Page 8
Dimensions	Page 10



● Rotary Actuator with Angle Adjuster/Vane Type

Series **CRB2□WU**

How to Order	Page 16
Construction	Page 17
Dimensions	Page 18



● Free Mount Type Rotary Actuator/Vane Type

Series **CRBU2**

How to Order	Page 21
Specifications	Page 22
Construction	Page 24
Dimensions	Page 26



● Free Mount Type Rotary Actuator with Angle Adjuster/Vane Type

Series **CRBU2WU**

How to Order	Page 31
Construction	Page 32
Dimensions	Page 33

● Simple Specials

Shaft Pattern Sequencing I -XA1 to -XA24	Page 37
Shaft Pattern Sequencing II -XA31 to -XA58	Page 43

● Made to Order	Page 49
-----------------------	---------

● Component Unit	Page 52
------------------------	---------

● Angle Adjustment Setting	Page 53
----------------------------------	---------

● Auto Switch Mounting	Page 55
------------------------------	---------

CRB2

CRB2□WU

CRBU2

CRBU2WU

Simple Specials

Made to Order

Component Unit

Angle Adjustment Setting


Auto Switch Mounting

Rotary Actuator Vane Type


RoHS

Series **CRB2**

Size: 10, 15, 20, 30, 40

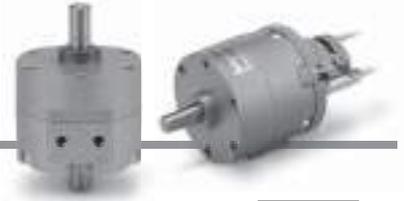

How to Order

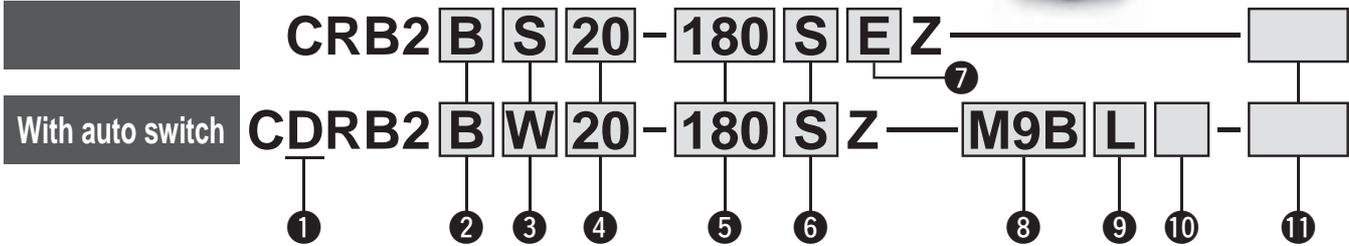

① With auto switch
(With auto switch unit and built-in magnet)
* Refer to page 52 when the auto switch unit is needed separately.

② Mounting

Symbol	Mounting
B	Basic type
F*	Flange type

* F: Except size 40

③ Shaft type

Symbol	Shaft type	Shaft-end shape	
		Long shaft	Short shaft
S	Single shaft	Single flat*	—
W	Double shaft	Single flat*	Single flat
J**	Double shaft	Round shaft	Single flat
K**	Double shaft	Round shaft	Round shaft
T**	Single shaft	Round shaft	—
Y**	Double shaft	Single flat*	Long shaft with single flat ³

* A key is used for size 40. ** J, K, T and Y are made to order.
*** When an auto switch is mounted to the rotary actuator, only shaft types W and J are available.

④ Size

10
15
20
30
40

⑨ Electrical entry/Lead wire length

—	Grommet/Lead wire: 0.5 m
M	Grommet/Lead wire: 1 m
L	Grommet/Lead wire: 3 m
CN	Connector/Without lead wire
C	Connector/Lead wire: 0.5 m
CL	Connector/Lead wire: 3 m

* Connectors are available only for the R73, R80, T79.

** Lead wire with connector part nos.
D-LC05: Lead wire 0.5 m
D-LC30: Lead wire 3 m
D-LC50: Lead wire 5 m

⑤ Rotating angle

Single vane	90	90°
	180	180°
	270	270°
Double vane	90	90°
	100	100°

⑥ Vane type

S	Single vane
D	Double vane

⑦ Connecting port location

—	Side ported
E	Axial ported

⑧ Auto switch

—	Without auto switch (Built-in magnet)
M	Without M9 type auto switch (Built-in magnet)

* For applicable auto switch model, refer to the table below.
** The operating range and hysteresis of the D-M9□ are different from those of the other auto switches. For details, refer to page 55.

⑩ Number of auto switches

S	1 pc.*
—	2 pcs.**

* S: A right-hand auto switch is shipped.
** —: A right-hand switch and a left-hand switch are shipped.

⑪ Made to Order
For details, refer to the next page.

Applicable Auto Switches/Refer to the Best Pneumatics No. 4 for further information on auto switches.


Applicable size	Type	Special function	Electrical entry	Indicator light	Wiring (Output)	Load voltage		Auto switch model		Lead wire type	Lead wire length [m]					Pre-wired connector	Applicable load		
						DC	AC	Perpendicular	In-line		0.5 (—)	1 (M)	3 (L)	5 (Z)	(None) N				
For 10, 15	Solid state auto switch	—	Grommet	Yes	3-wire (NPN)	24 V	5 V, 12 V	—	M9NV	M9N	Oilproof heavy-duty cord	●	●	●	○	—	○	IC circuit	
					3-wire (PNP)				M9PV	M9P		●	●	●	○	—	○		
					2-wire				M9BV	M9B		●	●	●	○	—	○		
	3-wire (NPN)				S99V				S99	●		—	●	○	—	○	IC circuit		
	3-wire (PNP)				S9PV				S9P	●		—	●	○	—	○			
	2-wire				T99V				T99	●		—	●	○	—	○			
Reed auto switch	—	No	—	No	2-wire	5 V, 12 V	5 V, 12 V, 24 V	—	90	Vinyl parallel cord	●	—	●	●	—	—	IC circuit		
					2-wire	5 V, 12 V, 100 V	5 V, 12 V, 24 V, 100 V	—	90A	Oilproof heavy-duty cord	●	—	●	●	—	—			
					2-wire	—	—	—	97	Vinyl parallel cord	●	—	●	●	—				
For 20, 30, 40	Solid state auto switch	—	Grommet	Yes	3-wire (NPN)	24 V	5 V, 12 V	—	M9NV	M9N	Oilproof heavy-duty cord	●	●	●	○	—	○	IC circuit	
					3-wire (PNP)				M9PV	M9P		●	●	●	○	—	○		
					2-wire				M9BV	M9B		●	●	●	○	—	○		
					3-wire (NPN)				—	S79		●	—	●	○	—	○		IC circuit
					3-wire (PNP)				—	S7P		●	—	●	○	—	○		
					2-wire				—	T79		●	—	●	○	—	○		
	Reed auto switch		—	Yes	Connector	No	2-wire	—	100 V	—	T79C	Oilproof heavy-duty cord	●	—	●	●	—	—	—
							2-wire	—	—	—	R73	—	●	—	●	○	—		
							2-wire	—	—	—	R73C	—	●	—	●	●	—		
							2-wire	48 V, 100 V	100 V	—	R80	—	●	—	●	○	—	IC circuit	
							2-wire	—	24 V or loss	—	R80C	—	●	—	●	●	—		
							2-wire	—	—	—	—	—	●	—	●	●	—		

* Lead wire length symbols: 0.5 m.....— (Example) R73C
3 m..... L (Example) R73CL
5 m..... Z (Example) R73CZ
None..... N (Example) R73CN

* Auto switches are shipped together, (but not assembled).
* Solid state auto switches marked with "○" are produced upon receipt of order.



Symbol



Flange Assembly Part No.

(For details about dimensions, refer to page 15.)

Model	Assembly part no.
CRB2F□10	P211070-2
CRB2F□15	P211090-2
CRB2F□20	P211060-2
CRB2F□30	P211080-2



Made to Order

(For details, refer to pages 37 to 51.)

Symbol	Description	Applicable shaft type
XA1 to XA24	Shaft type pattern I	W
XA31 to XA58	Shaft type pattern II	S, J, K, T, Y
XC1	Add connecting ports	W, S, J, K, T, Y
XC2	Change threaded hole to through-hole	W, S, J, K, T, Y
XC3	Change the screw position	W, S, J, K, T, Y
XC4	Change the rotation range	W, S, J, K, T, Y
XC5	Change rotation range between 0 to 200°	W, S, J, K, T, Y
XC6	Change rotation range between 0 to 110°	W, S, J, K, T, Y
XC7	Reversed shaft	W, J
XC30	Fluorine grease	W, S, J, K, T, Y
X5	For M5 port (90°/180°)	W, S, J, K, T, Y

The above may not be selected when the product comes with an auto switch or angle adjustment unit. For details, refer to pages 37, 38, 43, 44, 49.

Refer to pages 55 to 59 for actuators with auto switches.

- Operating range and hysteresis
- How to change the auto switch detecting position
- Auto switch mounting
- Auto switch adjustment

Single Vane Specifications

Size	10	15	20	30	40	
Rotating angle	90°, 180°, 270°					
Fluid	Air (Non-lube)					
Proof pressure [MPa]	1.05			1.5		
Ambient and fluid temperature	5 to 60 °C					
Max. operating pressure [MPa]	0.7			1.0		
Min. operating pressure [MPa]	0.2	0.15				
Rotation time adjustment range s/90° ^{Note 1)}	0.03 to 0.3			0.04 to 0.3	0.07 to 0.5	
Allowable kinetic energy [J] ^{Note 2)}	0.00015	0.001	0.003	0.02	0.04	
		0.00025	0.0004	0.015	0.03	
Shaft load [N]	Allowable radial load	15	15	25	30	60
	Allowable thrust load	10	10	20	25	40
Port location	Side ported or Axial ported					
Port size (Side ported, Axial ported)	M3 x 0.5			M5 x 0.8		
Angle adjustable range ^{Note 3)}	0 to 230°	0 to 240°			0 to 230°	

Note 1) Make sure to operate within the speed regulation range. Speeds slower than the adjustment range can cause the unit to stick or not operate.

Note 2) The upper numbers in this section in the table indicate the energy factor when the rubber bumper is used (at the end of the rotation), and the lower numbers indicate the energy factor when the rubber bumper is not used.

Note 3) Adjustment range in the table is for 270°. For 90° and 180°, refer to page 17.

Double Vane Specifications

Size	10	15	20	30	40	
Rotating angle	90°, 100°					
Fluid	Air (Non-lube)					
Proof pressure [MPa]	1.05			1.5		
Ambient and fluid temperature	5 to 60 °C					
Max. operating pressure [MPa]	0.7			1.0		
Min. operating pressure [MPa]	0.2	0.15				
Rotation time adjustment range s/90° ^{Note 1)}	0.03 to 0.3			0.04 to 0.3	0.07 to 0.5	
Allowable kinetic energy [J]	0.0003	0.0012	0.0033	0.02	0.04	
Shaft load [N]	Allowable radial load	15	15	25	30	60
	Allowable thrust load	10	10	20	25	40
Port location	Side ported or Axial ported					
Port size (Side ported, Axial ported)	M3 x 0.5			M5 x 0.8		
Angle adjustable range ^{Note 2)}	0 to 90°					

Note 1) Make sure to operate within the speed regulation range. Speeds slower than the adjustment range can cause the unit to stick or not operate.

Note 2) Adjustment range in the table is for 100°. For 90°, refer to page 17.

CRB2

CRB2□WU

CRBU2

CRBU2WU

Simple Specials

Made to Order

Component Unit

Angle Adjustment Setting

Auto Switch Mounting

Series CRB2

Volume

[cm³]

Vane type	Single vane												Double vane												
	10			15			20			30			40			10		15		20		30		40	
Rotating angle	90°	180°	270°	90°	180°	270°	90°	180°	270°	90°	180°	270°	90°	180°	270°	90°	100°	90°	100°	90°	100°	90°	100°	90°	100°
Volume	1 (0.6)	1.2	1.5	1.5 (1.0)	2.9	3.7	4.8 (3.6)	6.1	7.9	11.3 (8.5)	15	20.2	25 (18.7)	31.5	41	1.0	1.1	2.6	2.7	5.6	5.7	14.4	14.5	33	34

* Values inside () are volume of the supply side when A port is pressurised.


Weight

[g]


Vane type	Single vane												Double vane												
	10			15			20			30			40			10		15		20		30		40	
Rotating angle	90°	180°	270°	90°	180°	270°	90°	180°	270°	90°	180°	270°	90°	180°	270°	90°	100°	90°	100°	90°	100°	90°	100°	90°	100°
Rotary actuator body	27	26	26	48	47	46	104	103	101	199	194	189	385	374	363	42	43	55	58	119	142	219	239	398	444
Flange assembly	9			10			19			25			—			9		10		19		25		—	
Auto switch unit	15			20			28			38			43			15		20		28		38		43	
Angle adjuster unit	30			47			90			150			203			30		47		90		150		203	

Effective Output


Size 10

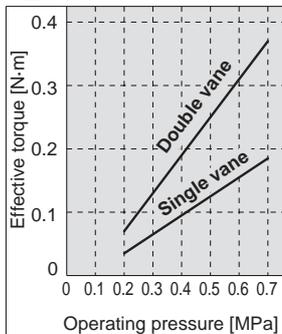


Size 15

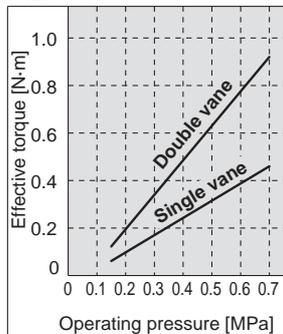


Size 20

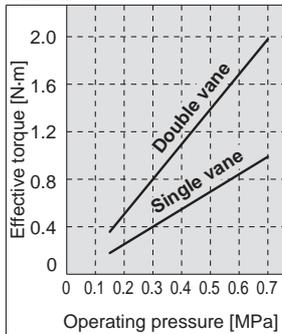


Size 30

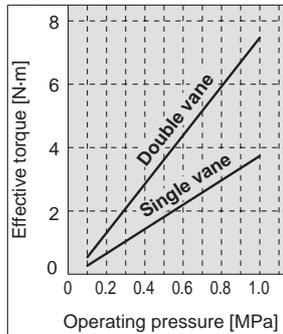

Size 40

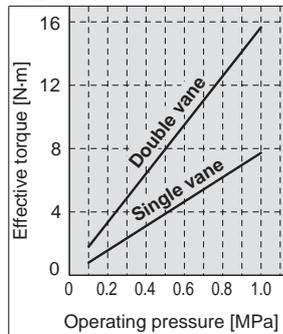

Direct Mounting of Body

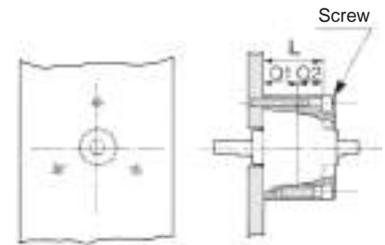

Dimension "L" of the actuators is provided in the table below for JIS standard hexagon socket head cap screws. If these types of screw are used, their heads will fit in the mounting hole.

Reference Screw Size


Size	L	Screw
10	11.5*	M2.5
15	16	M2.5
20	24.5	M3
30	34.5	M4
40	39.5	M4

* Only the size 10 actuators have different L dimensions for single and double vane.
Double vane: L = 20.5
* Refer to page 10 for Q1 and Q2 dimensions.


Chamfered Position and Rotation Range: Top View from Long Shaft Side

Chamfered positions shown below illustrate the conditions of actuators when B port is pressurised.


Single vane

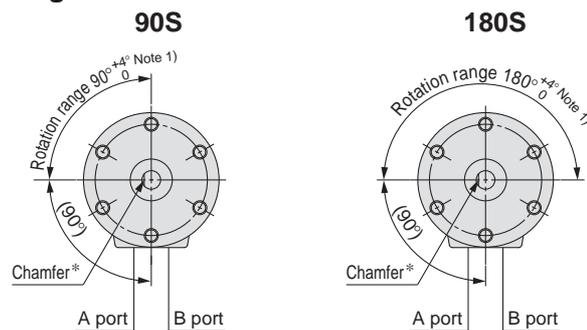

270S

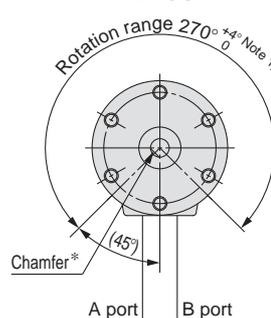

Double vane

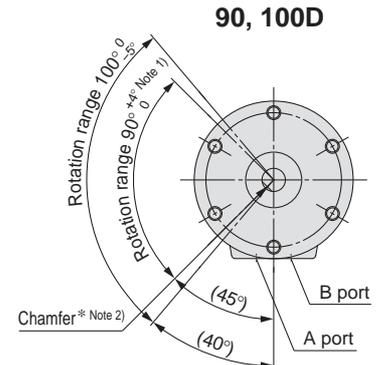

* For size 40 actuators, a parallel key will be used instead of chamfer.

Note 1) For single vane type, the tolerance of rotating angle of 90°, 180°, 270° will be +5° for size 10 only.

For double vane type, the tolerance of rotating angle of 90° will be +5° for size 10 only.


Note 2) The chamfered position of the double vane type shows the 90° specification position.

Construction


Single vane • Figures for 90° and 180° show the condition of the actuators when B port is pressurised, and the figure for 270° shows the position of the ports during rotation.

Size: 10, 15, 20, 30, 40


For 90°
(Viewed from the output shaft side)

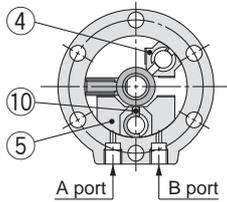

For 180°
(Viewed from the output shaft side)

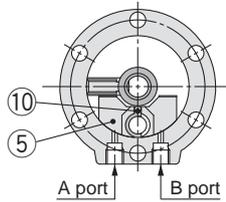


For 270°
(Viewed from the output shaft side)

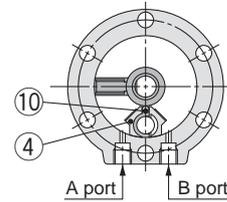

12 Parallel key for size 40


(Output shaft)

(Long shaft side)

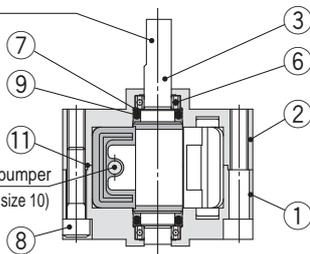

Internal rubber bumper
(Not applicable to size 10)

Single shaft type

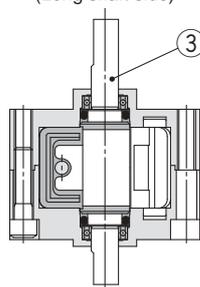

(Short shaft side)

Double shaft type

Component Parts

No.	Description	Material	Note
1	Body (A)	Aluminium alloy	Painted
2	Body (B)	Aluminium alloy	Painted
3	Vane shaft	Stainless steel*	
4	Stopper	Resin	For 270°
5	Stopper	Resin	For 180°
6	Bearing	Bearing steel	
7	Back-up ring	Stainless steel	
8	Hexagon socket head cap screw	Chrome molybdenum steel	Special screw
9	O-ring	NBR	
10	Stopper seal	NBR	Special seal
11	O-ring	NBR	Size 40 only
12	Parallel key	Carbon steel	Size 40 only


* The material is chrome molybdenum steel for size 30 and 40.

Double vane • Figures below show the intermediate rotation position when A or B port is pressurised.

Size: 10


For 90°

(Viewed from the output shaft side)

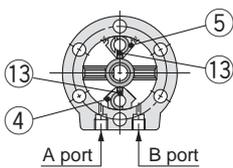

For 100°


(Viewed from the output shaft side)

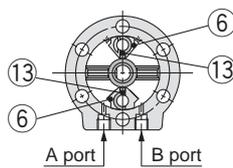

Size: 15, 20, 30, 40



For 90°

(Viewed from the output shaft side)

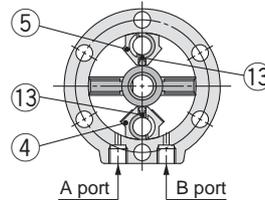


For 100°


(Viewed from the output shaft side)

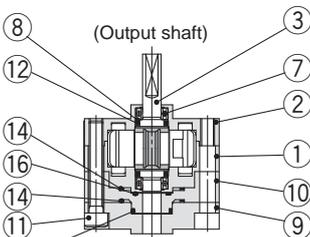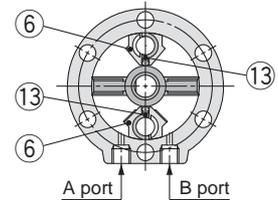


Single shaft type

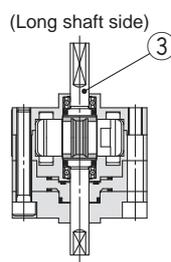

(Short shaft side)
Double shaft type

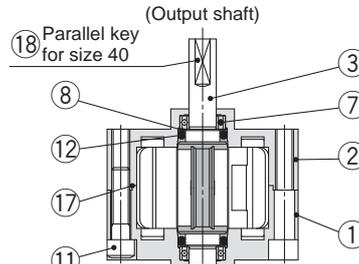

Single shaft type

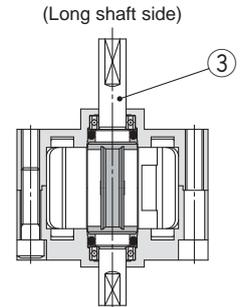

(Short shaft side)
Double shaft type

Component Parts

No.	Description	Material	Note
1	Body (A)	Aluminium alloy	Painted
2	Body (B)	Aluminium alloy	Painted
3	Vane shaft	Chrome molybdenum steel	
4	Stopper	Stainless steel*	
5	Stopper	Resin	
6	Stopper	Stainless steel*	
7	Bearing	Bearing steel	
8	Back-up ring	Stainless steel	
9	Cover	Aluminium alloy	

* For size 40, material for ④, ⑥ is aluminum alloy.

No.	Description	Material	Note
10	Plate	Resin	
11	Hexagon socket head cap screw	Chrome molybdenum steel	Special screw
12	O-ring	NBR	
13	Stopper seal	NBR	Special seal
14	Gasket	NBR	Special seal
15	O-ring	NBR	
16	O-ring	NBR	
17	O-ring	NBR	Size 40 only
18	Parallel key	Carbon steel	Size 40 only

CRB2

CRB2□WU

CRBU2

CRBU2WU

Simple Specials

Made to Order

Component Unit

Angle Adjustment Setting

Auto Switch Mounting

Series CRB2

Construction (With Auto Switch)

Single vane








- Following figures show actuators for 90° and 180° when B port is pressurised.

(The unit is common for single vane type and double vane type.)


Double vane

- Following figures show the intermediate rotation position when A or B port is pressurised.


D-M9□

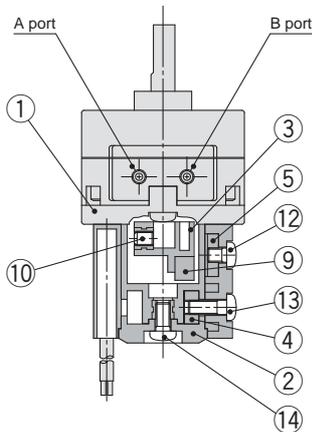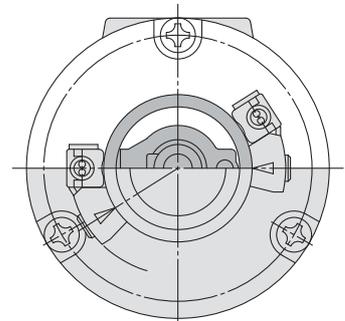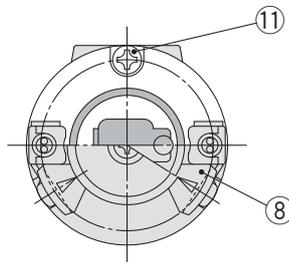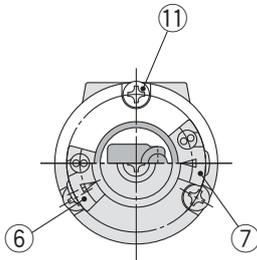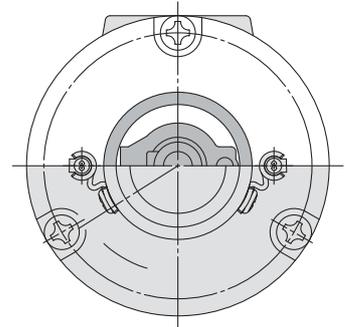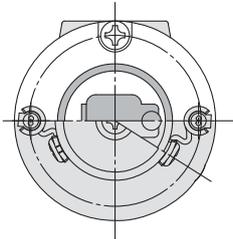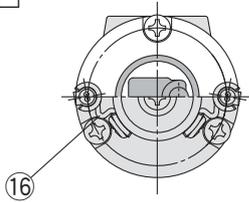

Size: 10, 15

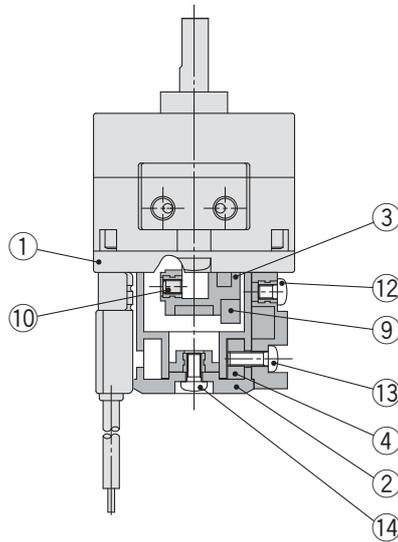

Size: 20, 30

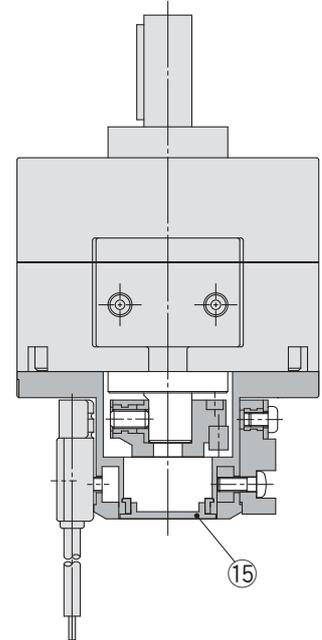

Size: 40

Component Parts

No.	Description	Material
1	Cover (A)	Resin
2	Cover (B)	Resin
3	Magnet lever	Resin
4	Holding block	Stainless steel
5	Holding block (B)	Aluminium alloy
6	Switch block (A)	Resin
7	Switch block (B)	Resin
8	Switch block	Resin
9	Magnet	

No.	Description	Material
10	Hexagon socket head set screw	Stainless steel
11	Cross recessed round head screw	Stainless steel
12	Cross recessed round head screw	Stainless steel
13	Cross recessed round head screw	Stainless steel
14	Cross recessed round head screw	Stainless steel
15	Rubber cap	NBR
16	Switch holder	Stainless steel

* For size 10, 2 cross recessed round head screws ⑪ are required.

Dimensions: Standard Type 10, 15, 20, 30, 40


- For single vane type, the figures below show actuators for 90° and 180° when B port is pressurised.
For double vane type, the figures below show the intermediate rotation position when the A or B port is pressurised.

Single shaft/Port location: Side ported

(The size 10 double vane type is indicated on page 11.)

Size: 10, 15, 20, 30, 40


<Port location: Axial ported>

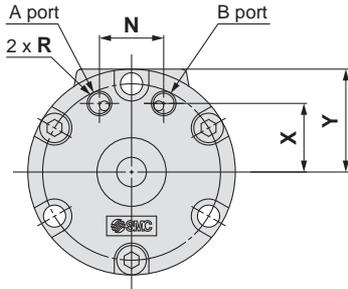


2 x M3 x 0.5 depth 4
Size 10 only
(For unit mounting)

Size: 10


<Port location: Side ported>

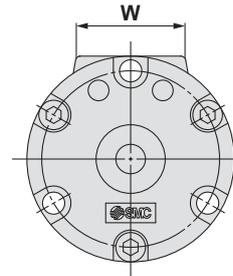


Double shaft/Port location: Side ported

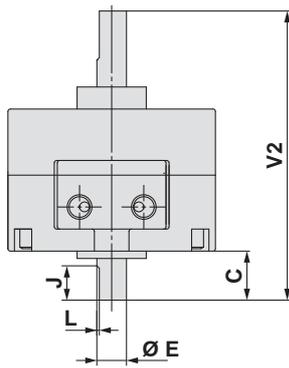



A parallel key is used instead of single flat for size 40.

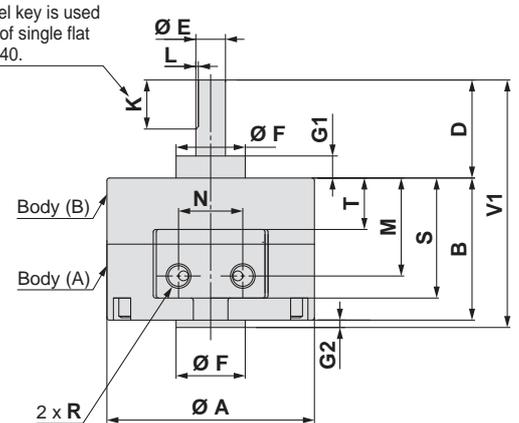

Shaft-end shape of size 40

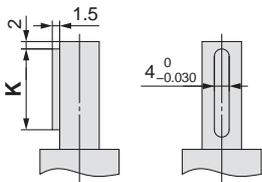

Parallel key dimensions

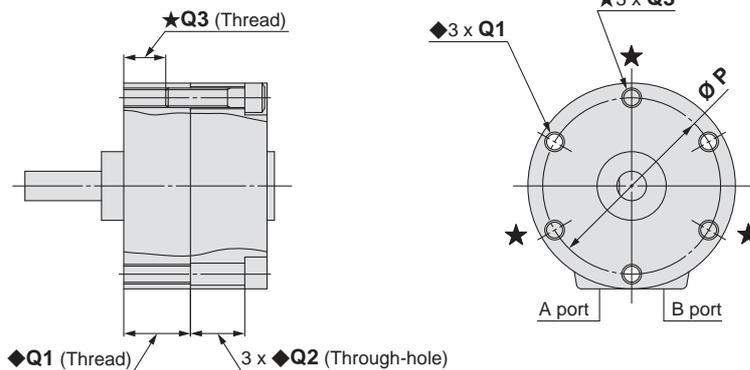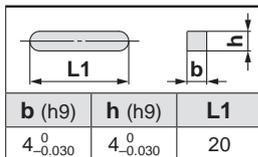

Refer to page 14 for details of shaft types J, K, T and Y.

Size	A	B	C	D	E (g7)	F (h9)	G1	G2	J	K	L	M	N	P	Q			R	S	T	V1	V2	W	X	Y
															◆ Q1	◆ Q2	★ Q3								
10	29	15	8	14	4 ^{-0.004} _{-0.016}	9 ⁰ _{-0.036}	3	1	5	9	0.5	9.5	9.5	24	M3 x 0.5 depth 6	6	—	M3 x 0.5	14	3.6	30	37	19.8	8.5	14.5
15	34	20	9	18	5 ^{-0.004} _{-0.016}	12 ⁰ _{-0.043}	4	1.5	6	10	0.5	14	10	29	M3 x 0.5 depth 10	6	M3 x 0.5 depth 5	M3 x 0.5	19	7.6	39.5	47	21	11	17
20	42	29	10	20	6 ^{-0.004} _{-0.016}	14 ⁰ _{-0.043}	4.5	1.5	7	10	0.5	20	13	36	M4 x 0.7 depth 13.5	11	M4 x 0.7 depth 7.5	M5 x 0.8	24.5	10.5	50.5	59	22	14	21
30	50	40	13	22	8 ^{-0.005} _{-0.020}	16 ⁰ _{-0.043}	5	2	8	12	1.0	26	14	43	M5 x 0.8 depth 18	16.5	M5 x 0.8 depth 10	M5 x 0.8	34.5	14	64	75	24	15.5	25
40	63	45	15	30	10 ^{-0.005} _{-0.020}	25 ⁰ _{-0.052}	6.5	4.5	9	20	1.0	31	20	56	M5 x 0.8 depth 16	17.5	M5 x 0.8 depth 10	M5 x 0.8	39.8	17	79.5	90	30	21	31.6


Dimensions: Standard Type (With Auto Switch) 10, 15, 20, 30, 40

- For single vane type, the figures below show actuators for 90° and 180° when B port is pressurised.
For double vane type, the figures below show the intermediate rotation position when the A or B port is pressurised.


Size: 10, 15

(The size 10 double vane type is indicated on page 13.)

Size: 20, 30, 40

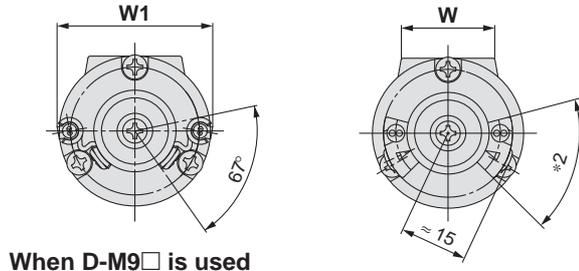



When D-M9□ is used

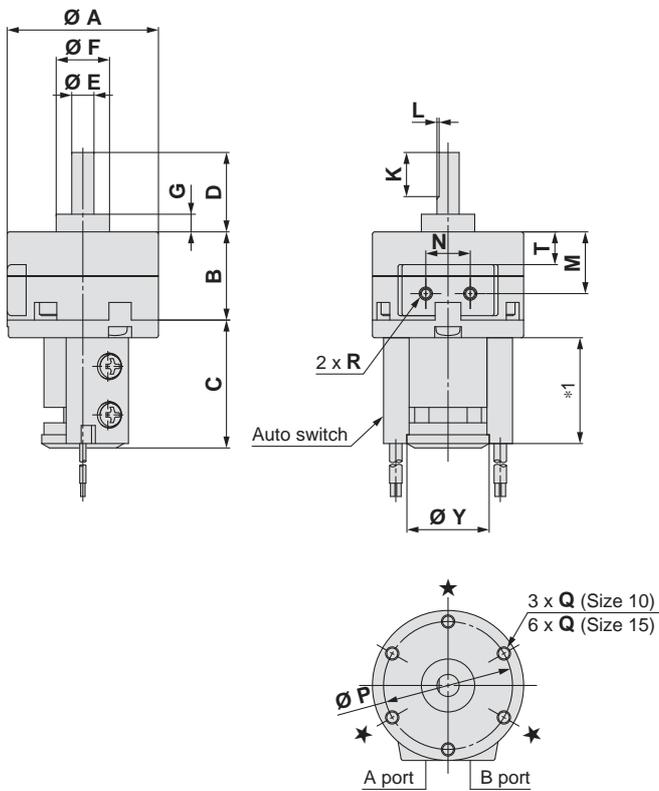


(3 mounting holes with the ★ marks are for tightening the actuator and not to be used for external mounting.)

- *1. The length is 24 when any of the following are used:
D-90/90A/S99(V)/T99(V)/S9P(V)
The length is 30 when any of the following are used: D-97/93A
The length is 25.5 when the D-M9 is used.
- *2. The angle is 60° when any of the following are used: D-90/90A/97/93A
The angle is 69° when any of the following are used: D-S99(V)/T99(V)/S9P(V)

Refer to page 14 for details of shaft types J, K, T and Y.

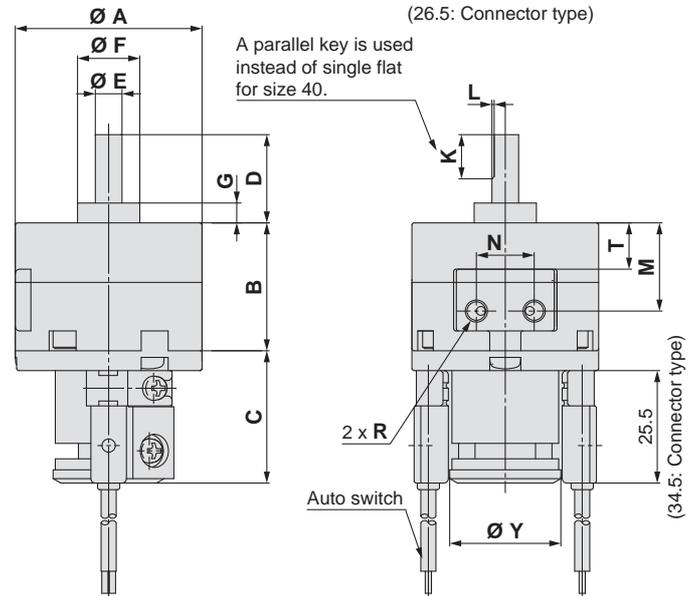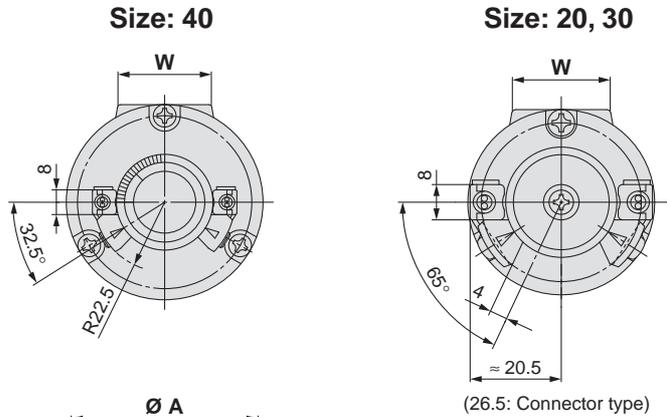

Shaft-end shape of size 40

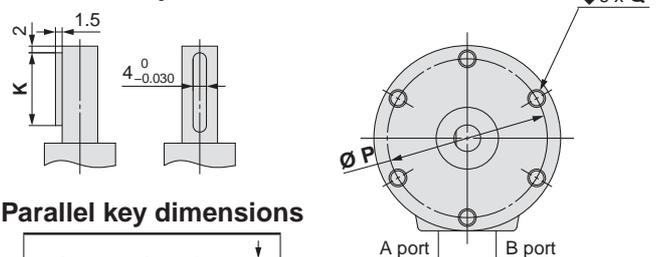

Parallel key dimensions

b (h9)	h (h9)	L1
4 ⁰ _{-0.030}	4 ⁰ _{-0.030}	20





Size	A	B	C	D	E (g7)	F (h9)	G	K	L	M	N	P	Q	R	T	W	W1	Y
10	29	15	29	14	4 ^{-0.004} _{-0.016}	9 ⁰ _{-0.036}	3	9	0.5	9.5	9.5	24	M3 x 0.5 depth 6	M3 x 0.5	3.6	19.8	35	18.5
15	34	20	29	18	5 ^{-0.004} _{-0.016}	12 ⁰ _{-0.043}	4	10	0.5	14	10	29	M3 x 0.5 depth 5	M3 x 0.5	7.6	21	35	18.5
20	42	29	30	20	6 ^{-0.004} _{-0.016}	14 ⁰ _{-0.043}	4.5	10	0.5	20	13	36	M4 x 0.7 depth 7	M5 x 0.8	10.5	22	—	25
30	50	40	31	22	8 ^{-0.005} _{-0.020}	16 ⁰ _{-0.043}	5	12	1.0	26	14	43	M5 x 0.8 depth 10	M5 x 0.8	14	24	—	25
40	63	45	31	30	10 ^{-0.005} _{-0.020}	25 ⁰ _{-0.052}	6.5	20	1.0	31	20	56	M5 x 0.8 depth 10	M5 x 0.8	17	30	—	31

Series CDRB2

Dimensions: Standard Type (With Auto Switch) 10

Double vane • Following figures show the intermediate rotation position when A or B port is pressurised.

Size: 10

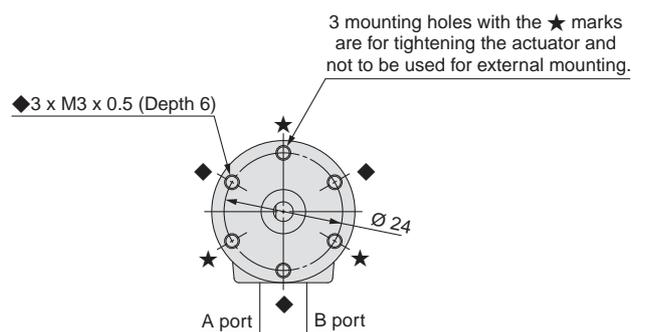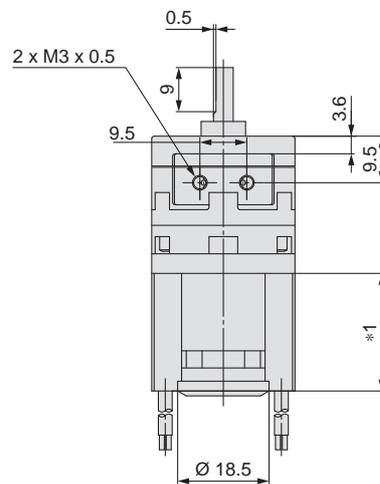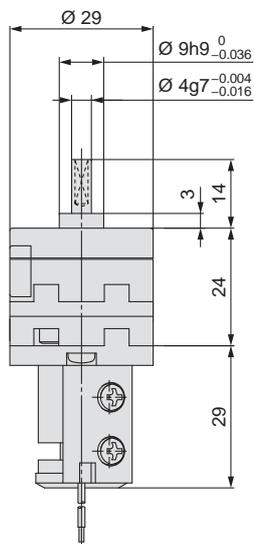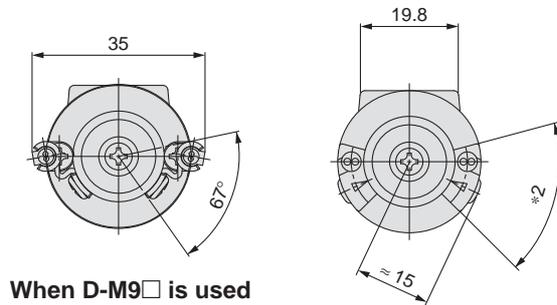

*1. The length is 24 when any of the following are used: D-90/90A/S99(V)/T99(V)/S9P(V)
 The length is 30 when any of the following are used: D-97/93A
 The length is 25.5 when the D-M9 is used.


*2. The angle is 60° when any of the following are used: D-90/90A/97/93A
 The angle is 69° when any of the following are used: D-S99(V)/T99(V)/S9P(V)

Refer to page 14 for details of shaft types J, K, T and Y.


Shaft Type Dimensions (Dimensions other than specified below are the same as the standard type.)

Size: 10, 15, 20, 30, 40


Double shaft/CRB2□J

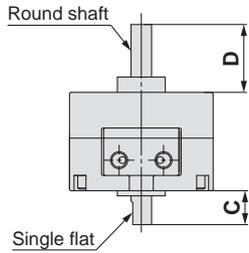

Double shaft/CRB2□K

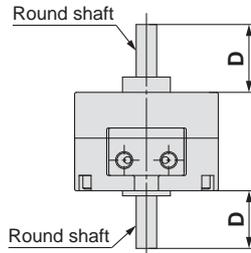


Single shaft/CRB2□T

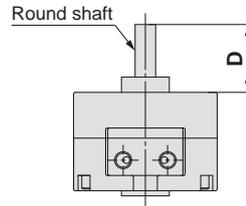


Single shaft/CRB2□Y

A parallel key is used instead of single flat for size 40.

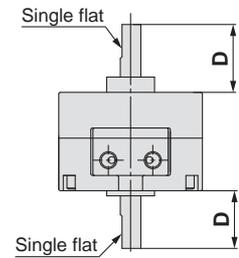


Double shaft/CDRB2□J

With auto switch

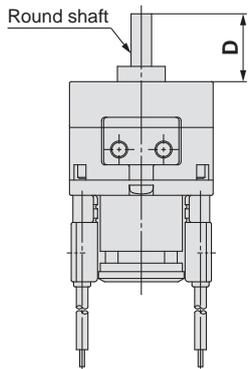


Double shaft/CRB2□JU

With angle adjuster unit

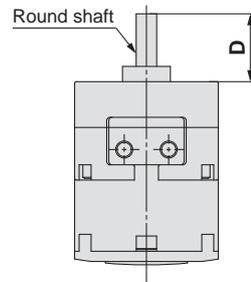

Double shaft/CDRB2□JU

With auto switch and angle adjuster unit

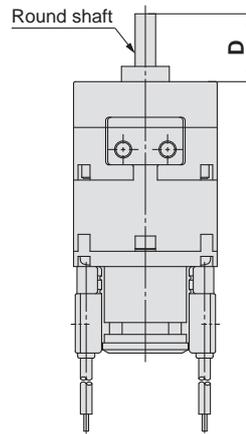

[mm]

Size	10	15	20	30	40
C	8	9	10	13	15
D	14	18	20	22	30

Note 1) Dimensions and tolerance of the shaft and single flat (a parallel key for size 40) are the same as the standard.

Note 2) For rotary actuators with auto switch and angle adjuster unit, connection ports are side ports.

CRB2

CRB2□WU

CRBU2

CRBU2WU

Simple Specials

Made to Order

Component Unit

Angle Adjustment Setting


Auto Switch Mounting

Series CRB2




Optional Specifications: Flange (Size: 10, 15, 20, 30)


Flange assembly for C□RB2F□□10
Part no.: P211070-2

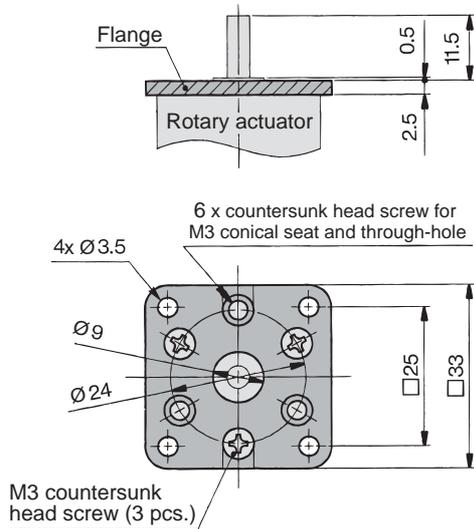


Flange assembly for C□RB2F□□15
Part no.: P211090-2

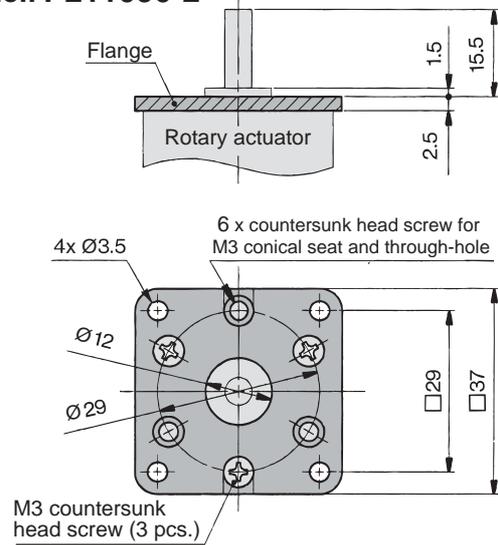

Flange assembly for C□RB2F□□20
Part no.: P211060-2

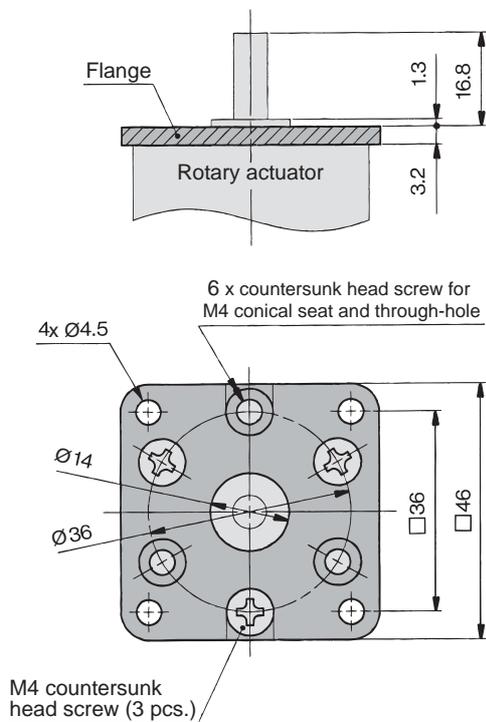

Flange assembly for C□RB2F□□30
Part no.: P211080-2

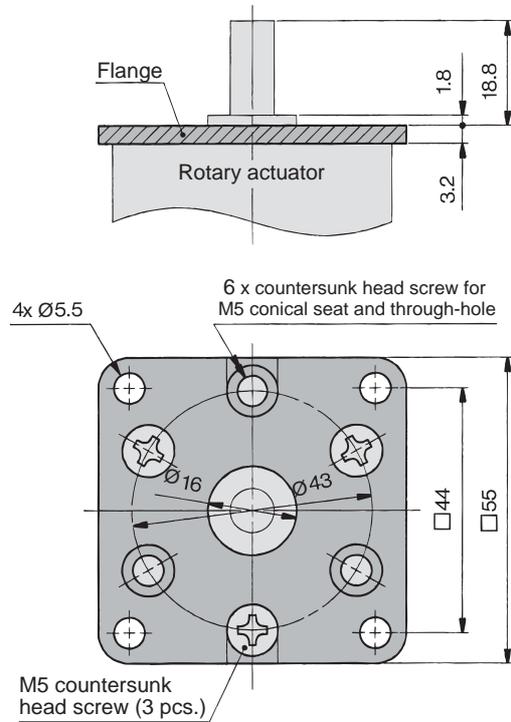

Rotary Actuator With Angle Adjuster/Vane Type


RoHS

Series CRB2□WU

Size: 10, 15, 20, 30, 40



How to Order

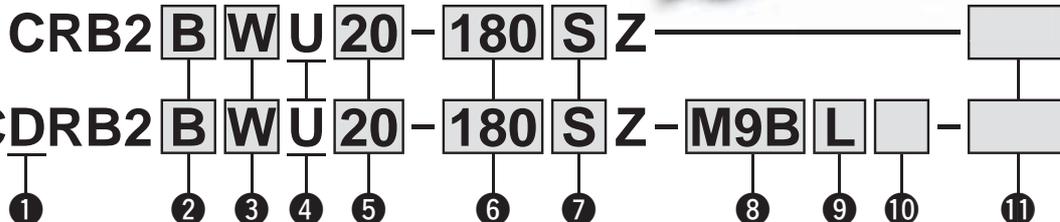

1 With auto switch
(With auto switch unit and built-in magnet)
* Refer to page 52 when the auto switch unit is needed separately.

2 Mounting

Symbol	Mounting
B	Basic type
F*	Flange type

* F: Except size 40

3 Shaft type

Symbol	Shaft-end shape
W	Single flat*
J**	Round shaft

* A key is used for size 40.
** J is made to order.

4 With angle adjuster unit
* Refer to page 52 when the angle adjuster unit is needed separately.

5 Size

10
15
20
30
40

6 Rotating angle

	90	180	270
Single vane	90°	180°	270°
Double vane	90°	90°	100°

7 Vane type

S	Single vane
D	Double vane

8 Auto switch

—	Without auto switch (Built-in magnet)
M	Without M9 type auto switch (Built-in magnet)

* For applicable auto switch model, refer to the table below.
** The operating range and hysteresis of the D-M9□ are different from those of the other auto switches. For details, refer to page 55.

9 Electrical entry/Lead wire length

—	Grommet/Lead wire: 0.5 m
M	Grommet/Lead wire: 1 m
L	Grommet/Lead wire: 3 m
CN	Connector/Without lead wire
C	Connector/Lead wire: 0.5 m
CL	Connector/Lead wire: 3 m

* Connectors are available only for the R73, R80, T79.
** Lead wire with connector part nos. D-LC05: Lead wire 0.5 m D-LC30: Lead wire 3 m D-LC50: Lead wire 5 m

Refer to pages 55 to 59 for actuators with auto switches.

- Operating range and hysteresis
- How to change the auto switch detecting position
- Auto switch mounting
- Auto switch adjustment

10 Number of auto switches

S	1 pc.*
—	2 pcs.**

* S: A right-hand auto switch is shipped.
** —: A right-hand switch and a left-hand switch are shipped.

11 Made to Order
For details, refer to the table below.

Made to Order
(For details, refer to pages 37 to 51.)

Applicable Auto Switches/Refer to the Best Pneumatics No. 4 for further information on auto switches.

Applicable size	Type	Special function	Electrical entry	Indicator/light	Wiring (Output)	Load voltage		Auto switch model		Lead wire type	Lead wire length [m]					Pre-wired connector	Applicable load
						DC	AC	Perpendicular	In-line		0.5 (—)	1 (M)	3 (L)	5 (Z)	None (—)		
For 10, 15	Solid state auto switch	—	Grommet	Yes	3-wire (NPN)	5 V, 12 V	—	M9NV	M9N	Oilproof heavy-duty cord	●	●	●	○	—	○	IC circuit
					3-wire (PNP)			M9PV	M9P		●	●	●	○	—	○	
					2-wire			M9BV	M9B		●	●	●	○	—	○	
	Reed auto switch	—	Grommet	No	3-wire (NPN)	5 V, 12 V	—	S99V	S99	Vinyl parallel cord	●	—	●	○	—	○	IC circuit
					3-wire (PNP)			S9PV	S9P		●	—	●	○	—	○	
					2-wire			T99V	T99		●	—	●	○	—	○	
For 20, 30, 40	Solid state auto switch	—	Grommet	Yes	3-wire (NPN)	5 V, 12 V	—	M9NV	M9N	Oilproof heavy-duty cord	●	●	●	○	—	○	IC circuit
					3-wire (PNP)			M9PV	M9P		●	●	●	○	—	○	
					2-wire			M9BV	M9B		●	●	●	○	—	○	
					3-wire (NPN)			—	S79		●	—	●	○	—	○	
					3-wire (PNP)			—	S7P		●	—	●	○	—	○	
					2-wire			—	T79		●	—	●	○	—	○	
	Reed auto switch	—	Connector	Yes	—	—	100 V	—	R73C	Vinyl parallel cord	●	—	●	○	—	—	—
					—			—	R73		●	—	●	○	—	—	
					—			—	R73C		●	—	●	○	—	—	
					—			—	R80		●	—	●	○	—	—	
					—			—	R80C		●	—	●	○	—	—	
					—			—	R80C		●	—	●	○	—	—	

* Lead wire length symbols: 0.5 m — (Example) R73C
3 m L (Example) R73CL
5 m Z (Example) R73CZ
None N (Example) R73CN

* Auto switches are shipped together, (but not assembled).
* Solid state auto switches marked with "○" are produced upon receipt of order.

Symbol	Description	Applicable shaft type
XA1 to XA24	Shaft type pattern I	W
XA31 to XA58	Shaft type pattern II	J
XC1	Add connecting ports	W, J
XC2	Change threaded hole to through-hole	W, J
XC3	Change the screw position	W, J
XC4	Change the rotation range	W, J
XC5	Change rotation range between 0 and 200°	W, J
XC6	Change rotation range between 0 and 110°	W, J
XC7	Reversed shaft	W, J
XC30	Fluorine grease	W, J
X5	For M5 port (90°/180°)	W, J

The above may not be selected when the product comes with an auto switch or angle adjuster unit. For details, refer to pages 37, 38, 43, 44, 49.


Series CRB2□WU

Construction: 10, 15, 20, 30, 40

- The unit is common for single vane type and double vane type.


With angle adjuster

Size: 10, 15, 20, 30, 40

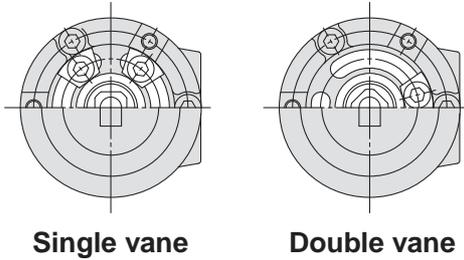

Single vane


Double vane

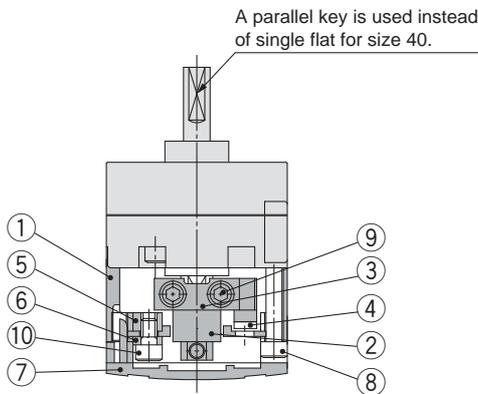


With auto switch and angle adjuster

Size: 10, 15


Size: 20, 30, 40

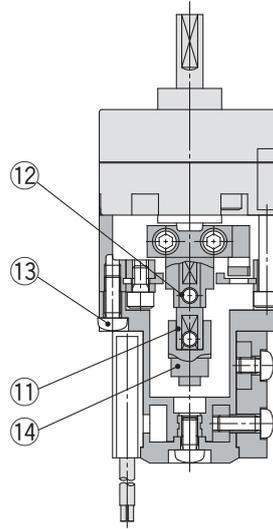

Size: 10

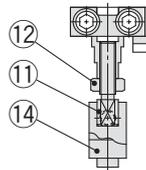

A parallel key is used instead of single flat for size 40.

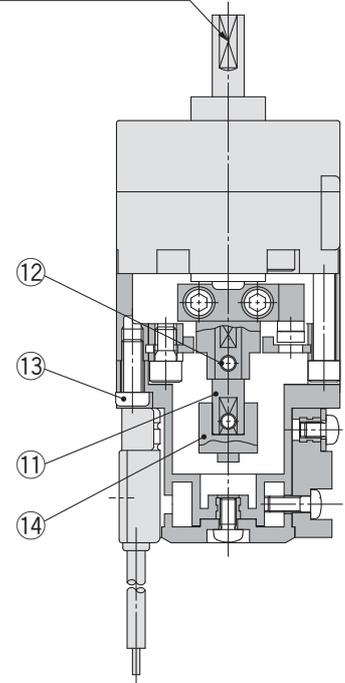

Component Parts

No.	Description	Material	Note
1	Stopper ring	Aluminium alloy	
2	Stopper lever	Chrome molybdenum steel	
3	Lever retainer	Rolled steel	Zinc chromated
4	Rubber bumper	NBR	
5	Stopper block	Chrome molybdenum steel	Zinc chromated
6	Block retainer	Rolled steel	Zinc chromated
7	Cap	Resin	
8	Hexagon socket head cap screw	Stainless steel	Special screw
9	Hexagon socket head cap screw	Stainless steel	Special screw
10	Hexagon socket head cap screw	Stainless steel	Special screw
11	Joint		
12	Hexagon socket head set screw	Stainless steel	Hexagon nut will be used for size 10 only.
	Hexagon nut	Stainless steel	
13	Cross recessed round head screw	Stainless steel	
14	Magnet lever	—	

⚠ Specific Product Precautions

Be sure to read this before handling. Refer to the back cover for Safety Instructions. For Rotary Actuator Precautions and Auto Switch Precautions, refer to “Handling Precautions for SMC Products” and the Operation Manual on SMC website, <http://www.smc.eu>

Angle Adjuster Unit

⚠ Caution

1. Since the maximum angle of the rotating angle adjustment range will be limited by the rotation of the rotary actuator, make sure to take this into consideration when ordering.

Rotating angle of rotary actuator	Rotating angle adjustment range
270 ⁺⁴ ₀	0° to 230° (Size: 10, 40) *
	0° to 240° (Size: 15, 20, 30)
180 ⁺⁴ ₀	0° to 175°
90 ⁺⁴ ₀	0° to 85°

* The maximum adjustment angle of the angle adjuster unit for size 10 and 40 is 230°


2. Connecting ports are side ported only.
3. The allowable kinetic energy is the same as the specifications of the rotary actuator.
4. Use a 100° rotary actuator when you desire to adjust the angle to 90° using a double vane type.

Dimensions: Standard Type (With Angle Adjuster) 10, 15, 20, 30, 40


- For single vane type, the figures below show actuators for 90° (without unit) when the B port is pressurised.
For double vane type, the figures below show the intermediate rotation position when the A or B port is pressurised.

Size: 10, 15, 20, 30, 40


Size: 10 (Double vane)

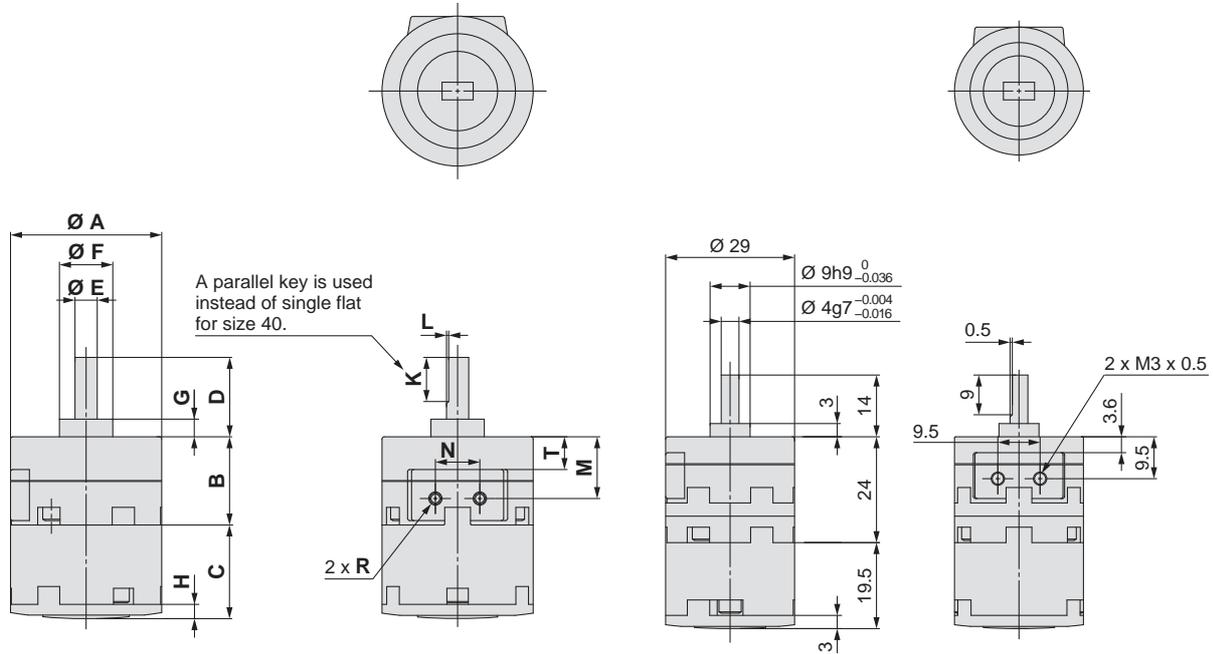


(3 mounting holes with the ★ marks are for tightening the actuator and not to be used for external mounting.)

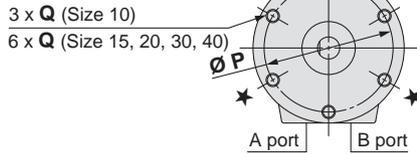

◆ 3 x M3 x 0.5 depth 6
Goes through Ø 3.4 on Body A

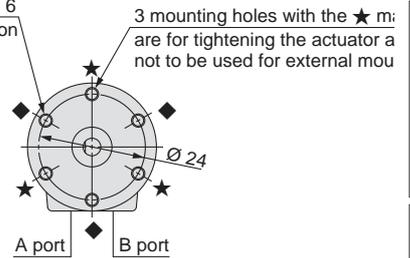

Shaft-end shape of size 40

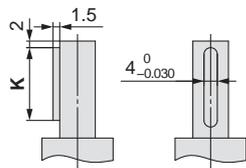

Parallel key dimensions

b (h9)	h (h9)	L1
4 ⁰ _{-0.030}	4 ⁰ _{-0.030}	20

Refer to page 14 for details of shaft type J.

Size	A	B	C	D	E (g7)	F (h9)	G	H	K	L	M	N	P	Q	R	T
10	29	15	19.5	14	4 ^{-0.004} _{-0.016}	9 ⁰ _{-0.036}	3	3	9	0.5	9.5	9.5	24	M3 x 0.5 depth 6	M3 x 0.5	3.6
15	34	20	21.2	18	5 ^{-0.004} _{-0.016}	12 ⁰ _{-0.043}	4	3.2	10	0.5	14	10	29	M3 x 0.5 depth 5	M3 x 0.5	7.6
20	42	29	25	20	6 ^{-0.004} _{-0.016}	14 ⁰ _{-0.043}	4.5	4	10	0.5	20	13	36	M4 x 0.7 depth 7	M5 x 0.8	10.5
30	50	40	29	22	8 ^{-0.005} _{-0.020}	16 ⁰ _{-0.043}	5	4.5	12	1.0	26	14	43	M5 x 0.8 depth 10	M5 x 0.8	14
40	63	45	36.3	30	10 ^{-0.005} _{-0.020}	25 ⁰ _{-0.052}	6.5	5	20	—	31	20	56	M5 x 0.8 depth 10	M5 x 0.8	17

Series CDRB2□WU

Dimensions: Standard Type (With Auto Switch and Angle Adjuster) 10, 15, 20, 30, 40


- For single vane type, the figures below show actuators for 90° (without unit) when the B port is pressurised.
For double vane type, the figures below show the intermediate rotation position when the A or B port is pressurised.

Size: 10, 15


Size: 20, 30, 40

(The size 10 double vane type is indicated on page 20.)

When D-M9□ is used

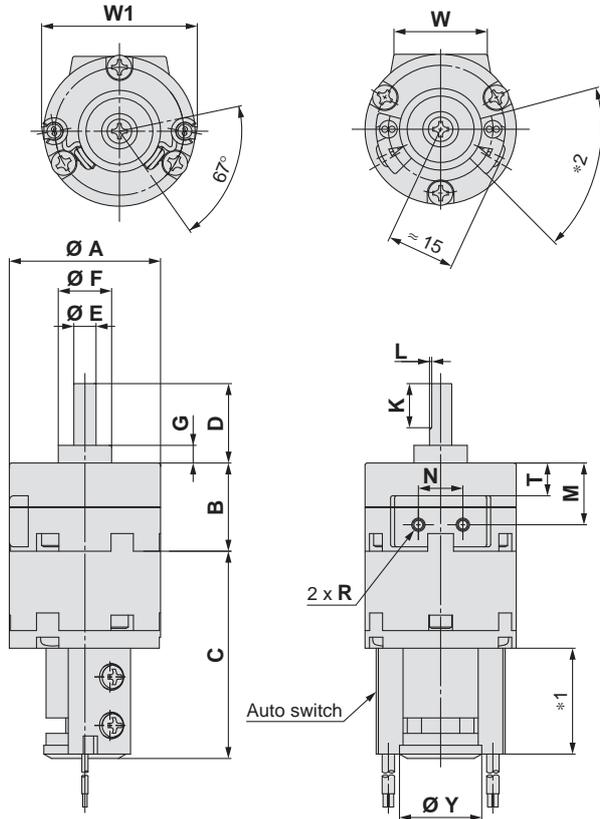

3 x Q (Size 10)
6 x Q (Size 15)

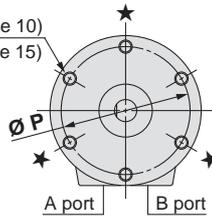


(3 mounting holes with the ★ marks are for tightening the actuator and not to be used for external mounting.)

Refer to page 14 for details of shaft type J.


- *1. The length is 24 when any of the following are used:
D-90/90A/S99(V)/T99(V)/S9P(V)
The length is 30 when any of the following are used: D-97/93A
The length is 25.5 when the D-M9 is used.
- *2. The angle is 60° when any of the following are used: D-90/90A/97/93A
The angle is 69° when any of the following are used: D-S99(V)/T99(V)/S9P(V)

Size: 40

Size: 20, 30

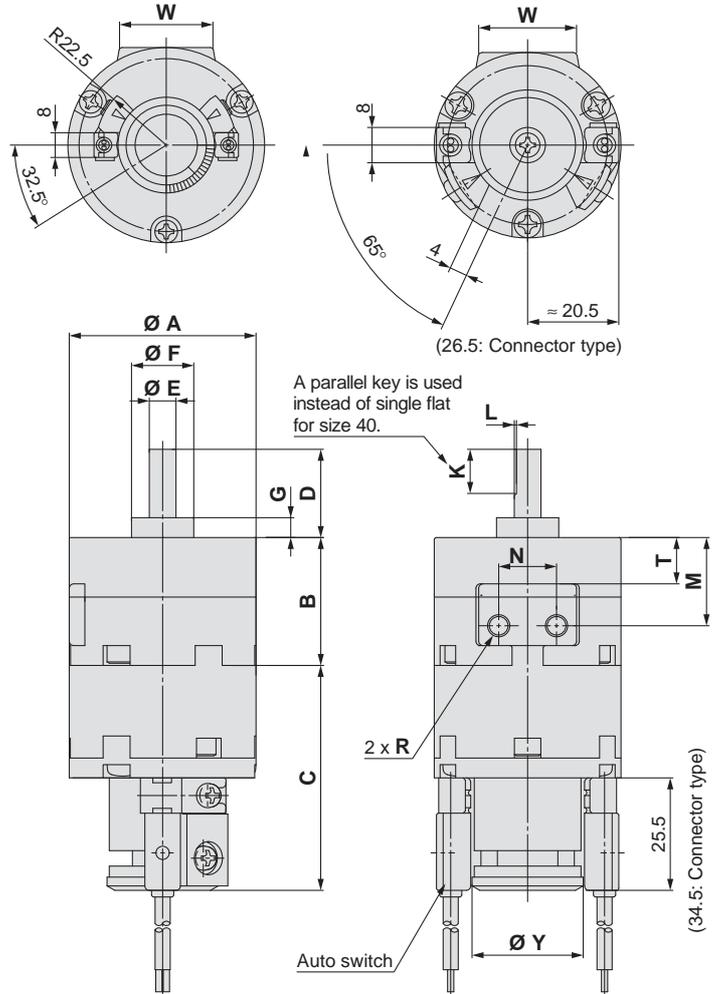


Shaft-end shape of size 40

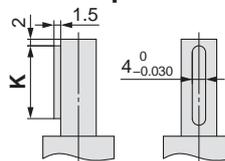

Parallel key dimensions

L1		b	h
b (h9)		h (h9)	L1
4_{-0.030}^0	4_{-0.030}^0	20	

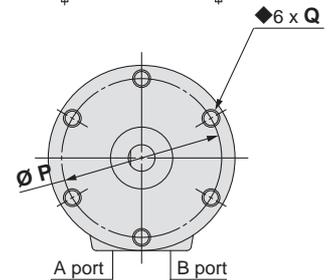


Size	A	B	C	D	E (g7)	F (h9)	G	K	L	M	N	P	Q	R	T	W	W1	Y
10	29	15	45.5	14	4 ^{-0.004} _{-0.016}	9 ⁰ _{-0.036}	3	9	0.5	9.5	9.5	24	M3 x 0.5 depth 6	M3 x 0.5	3.6	19.8	35	18.5
15	34	20	47	18	5 ^{-0.004} _{-0.016}	12 ⁰ _{-0.043}	4	10	0.5	14	10	29	M3 x 0.5 depth 5	M3 x 0.5	7.6	21	35	18.5
20	42	29	51	20	6 ^{-0.004} _{-0.016}	14 ⁰ _{-0.043}	4.5	10	0.5	20	13	36	M4 x 0.7 depth 7	M5 x 0.8	10.5	22	—	25
30	50	40	55.5	22	8 ^{-0.005} _{-0.020}	16 ⁰ _{-0.043}	5	12	1.0	26	14	43	M5 x 0.8 depth 10	M5 x 0.8	14	24	—	25
40	63	45	62.2	30	10 ^{-0.005} _{-0.020}	25 ⁰ _{-0.052}	6.5	20	—	31	20	56	M5 x 0.8 depth 10	M5 x 0.8	17	30	—	31



Dimensions: Standard Type (With Auto Switch and Angle Adjuster) 10

Double vane • Following figures show the intermediate rotation position when A or B port is pressurised.

Size: 10

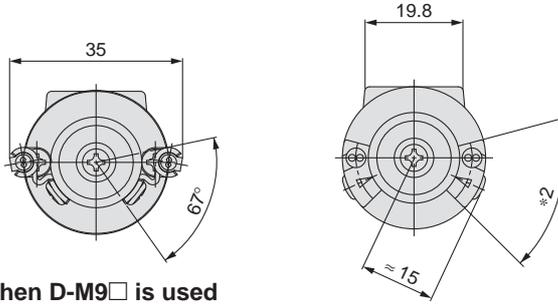

When D-M9□ is used

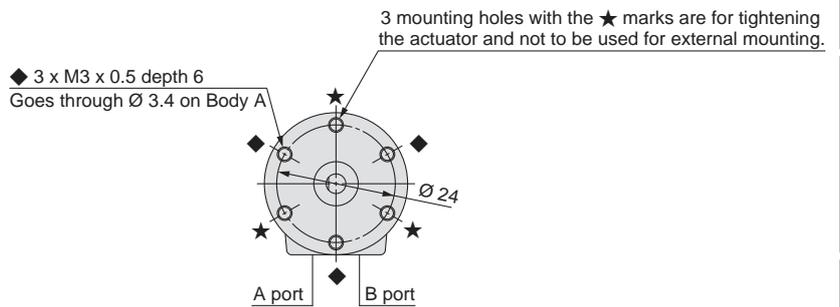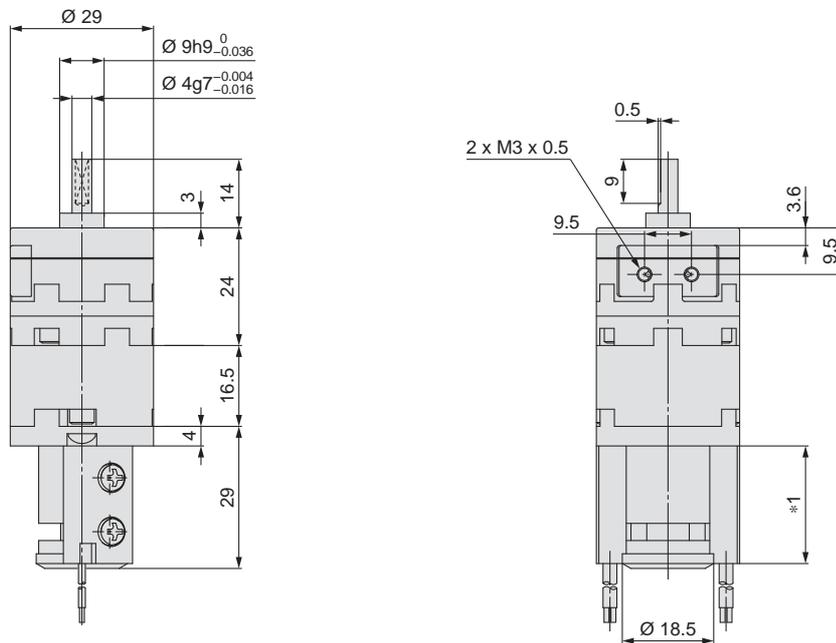

Refer to page 14 for details of shaft type J.

- *1. The length is 24 when any of the following are used: D-90/90A/S99(V)/T99(V)/S9P(V)
The length is 30 when any of the following are used: D-97/93A
The length is 25.5 when the D-M9 is used.
- *2. The angle is 60° when any of the following are used: D-90/90A/97/93A
The angle is 69° when any of the following are used: D-S99(V)/T99(V)/S9P(V)

Free Mount Type Rotary Actuator Vane Type


RoHS

Series CRBU2

Size: 10, 15, 20, 30, 40



How to Order

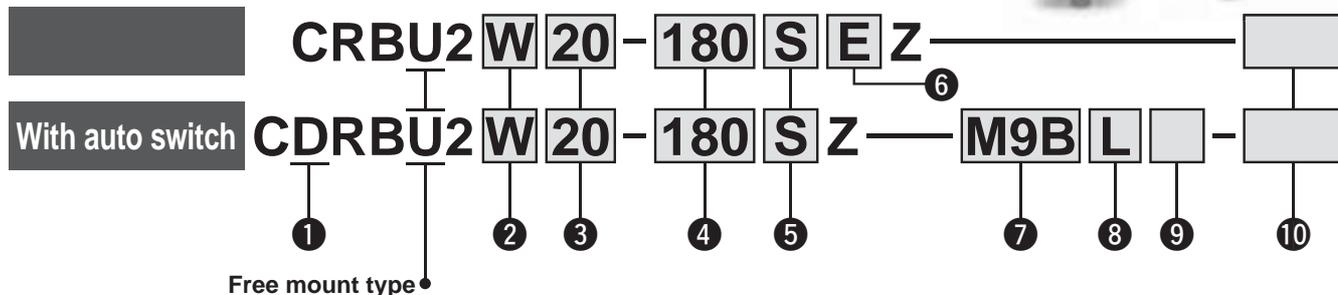

1 With auto switch

(With auto switch unit and built-in magnet)
* Refer to page 52 when the auto switch unit is needed separately.

2 Shaft type

Symbol	Shaft type	Shaft-end shape	
		Long shaft	Short shaft
S	Single shaft	Single flat*	—
W	Double shaft	Single flat*	Single flat
J**	Double shaft	Round shaft	Single flat
K**	Double shaft	Round shaft	Round shaft
T**	Single shaft	Round shaft	—
Y**	Double shaft	Single flat*	Long shaft with single flat*

* A key is used for size 40.
** J, K, T and Y are made to order.
*** When an auto switch is mounted to the rotary actuator, only shaft types W and J are available.

3 Size

10
15
20
30
40

4 Rotating angle

Single vane	90	90°
	180	180°
	270	270°
Double vane	90	90°
	100	100°

5 Vane type

S	Single vane
D	Double vane

7 Auto switch

—	Without auto switch (Built-in magnet)
M	Without M9 type auto switch (Built-in magnet)

* For applicable auto switch model, refer to the table below.

6 Connecting port location

—	Side ported
E	Axial ported

9 Number of auto switches

S	1 pc.*
—	2 pcs.**

* S: A right-hand auto switch is shipped.
** —: A right-hand switch and a left-hand switch are shipped.
*** The operating range and hysteresis of the D-M9□ are different from those of the other auto switches. For details, refer to page 55.

10 Made to Order

For details, refer to the next page.

Applicable Auto Switches/Refer to the Best Pneumatics No. 4 for further information on auto switches.


Applicable size	Type	Special function	Electrical entry	Indicator light	Wiring (Output)	Load voltage		Auto switch model		Lead wire type	Lead wire length [m]					Pre-wired connector	Applicable load			
						DC	AC	Perpendicular	In-line		0.5 (—)	1 (M)	3 (L)	5 (Z)	None (N)		IC circuit	Relay, PLC		
																			5 V, 12 V	5 V, 12 V, 24 V
For 10, 15	Solid state auto switch	—	Grommet	Yes	3-wire (NPN)	24 V	5 V, 12 V	—	M9NV	M9N	Oilproof heavy-duty cord	●	●	●	○	—	○	IC circuit	Relay, PLC	
					3-wire (PNP)				M9PV	M9P		●	●	●	○	—	○			
					2-wire				M9BV	M9B		●	●	●	○	—	○			
	Reed auto switch	—	—	Grommet	No	3-wire (NPN)	5 V, 12 V	5 V, 12 V, 24 V	—	90	Vinyl parallel cord	●	—	●	●	—	—	IC circuit	Relay, PLC	
						3-wire (PNP)	5 V, 12 V, 100 V	5 V, 12 V, 24 V, 100 V	—	90A	Oilproof heavy-duty cord	●	—	●	●	—	—	IC circuit		
						2-wire	—	—	—	97	Vinyl parallel cord	●	—	●	●	—	—	—		
For 20, 30, 40	Solid state auto switch	—	Grommet	Yes	3-wire (NPN)	24 V	5 V, 12 V	—	M9NV	M9N	Oilproof heavy-duty cord	●	●	●	○	—	○	IC circuit	Relay, PLC	
					3-wire (PNP)				M9PV	M9P		●	●	●	○	—	○			
					2-wire				M9BV	M9B		●	●	●	○	—	○			
	Reed auto switch	—	—	Connector	Yes	3-wire (NPN)	24 V	5 V, 12 V	—	—	S79	Oilproof heavy-duty cord	●	—	●	○	—	○	IC circuit	Relay, PLC
						3-wire (PNP)				—	S7P		●	—	●	○	—	○		
						2-wire				—	T79		●	—	●	○	—	○		
Reed auto switch	—	—	Grommet	Yes	2-wire	—	100 V	—	—	R73	Oilproof heavy-duty cord	●	—	●	○	—	—	—	Relay, PLC	
									Connector	—		R73C	●	—	●	●	—			—
									Grommet	48 V, 100 V		100 V	—	R80	●	—	●			○
Reed auto switch	—	—	Connector	No	2-wire	—	24 V or less	—	—	R80C	Oilproof heavy-duty cord	●	—	●	●	—	—	—	Relay, PLC	
									Connector	—		R80C	●	—	●	●	—			—

* Lead wire length symbols: 0.5 m..... (Example) R73C
3 m..... L (Example) R73CL
5 m..... Z (Example) R73CZ
None..... N (Example) R73CN

* Auto switches are shipped together, (but not assembled).
* Solid state auto switches marked with "○" are produced upon receipt of order.



Symbol



Made to Order

(For details, refer to pages 37 to 51.)

Symbol	Description	Applicable shaft type
XA1 to XA24	Shaft type pattern I	W
XA31 to XA58	Shaft type pattern II	S, J, K, T, Y
XC1	Add connecting ports	W, S, J, K, T, Y
XC2	Change threaded hole to through-hole	W, S, J, K, T, Y
XC3	Change the screw position	W, S, J, K, T, Y
XC4	Change the rotation range	W, S, J, K, T, Y
XC5	Change rotation range between 0 to 200°	W, S, J, K, T, Y
XC6	Change rotation range between 0 to 110°	W, S, J, K, T, Y
XC7	Reversed shaft	W, J
XC30	Fluorine grease	W, S, J, K, T, Y
X5	For M5 port (90°/180°)	W, S, J, K, T, Y

The above may not be selected when the product comes with an auto switch or angle adjustment unit. For details, refer to pages 37, 38, 43, 44, 49.

Refer to pages 55 to 59 for actuators with auto switches.

- Operating range and hysteresis
- How to change the auto switch detecting position
- Auto switch mounting
- Auto switch adjustment

Single Vane Specifications

Size		10	15	20	30	40
Rotating angle		90°, 180°, 270°				
Fluid		Air (Non-lube)				
Proof pressure [MPa]		1.05			1.5	
Ambient and fluid temperature		5 to 60 °C				
Max. operating pressure [MPa]		0.7			1.0	
Min. operating pressure [MPa]		0.2		0.15		
Rotation time adjustment range s/90° ^{Note 1)}		0.03 to 0.3			0.04 to 0.3	0.07 to 0.5
Allowable kinetic energy [J] ^{Note 2)}		0.00015	0.001	0.003	0.02	0.04
			0.00025	0.0004	0.015	0.03
Shaft load [N]	Allowable radial load	15	15	25	30	60
	Allowable thrust load	10	10	20	25	40
Port location		Side ported or Axial ported				
Port size (Side ported, Axial ported)		M3 x 0.5			M5 x 0.8	
Angle adjustable range ^{Note 3)}		0 to 230°	0 to 240°			0 to 230°

Note 1) Make sure to operate within the speed regulation range. Speeds slower than the adjustment range can cause the unit to stick or not operate

Note 2) The upper numbers in this section in the table indicate the energy factor when the rubber bumper is used (at the end of the rotation), and the lower numbers indicate the energy factor when the rubber bumper is not used.

Note 3) Adjustment range in the table is for 270°. For 90° and 180°, refer to page 32.

Double Vane Specifications

Size		10	15	20	30	40
Rotating angle		90°, 100°				
Fluid		Air (Non-lube)				
Proof pressure [MPa]		1.05			1.5	
Ambient and fluid temperature		5 to 60 °C				
Max. operating pressure [MPa]		0.7			1.0	
Min. operating pressure [MPa]		0.2		0.15		
Rotation time adjustment range s/90° ^{Note 1)}		0.03 to 0.3			0.04 to 0.3	0.07 to 0.5
Allowable kinetic energy [J]		0.0003	0.0012	0.0033	0.02	0.04
Shaft load [N]	Allowable radial load	15	15	25	30	60
	Allowable thrust load	10	10	20	25	40
Port location		Side ported or Axial ported				
Port size (Side ported, Axial ported)		M3 x 0.5			M5 x 0.8	
Angle adjustable range ^{Note 2)}		0 to 90°				

Note 1) Make sure to operate within the speed regulation range. Speeds slower than the adjustment range can cause the unit to stick or not operate.

Note 2) Adjustment range in the table is for 100°. For 90°, refer to page 32.

CRB2

CRB2□WU

CRBU2

CRBU2WU

Simple Specials

Made to Order

Component Unit

Angle Adjustment Setting

Auto Switch Mounting

Series CRBU2

Volume

[cm³]

Vane type Size	Single vane															Double vane									
	10			15			20			30			40			10		15		20		30		40	
Rotating angle	90°	180°	270°	90°	180°	270°	90°	180°	270°	90°	180°	270°	90°	180°	270°	90°	100°	90°	100°	90°	100°	90°	100°	90°	100°
Volume	1 (0.6)	1.2	1.5	1.5 (1.0)	2.9	3.7	4.8 (3.6)	6.1	7.9	11.3 (8.5)	15	20.2	25 (18.7)	31.5	41	1.0	1.1	2.6	2.7	5.6	5.7	14.4	14.5	33	34

* Values inside () are volume of the supply side when A port is pressurised.

Weight


[g]

Vane type Size	Single vane															Double vane									
	10			15			20			30			40			10		15		20		30		40	
Rotating angle	90°	180°	270°	90°	180°	270°	90°	180°	270°	90°	180°	270°	90°	180°	270°	90°	100°	90°	100°	90°	100°	90°	100°	90°	100°
Rotary actuator body	42	42	42	64	63	62	130	129	127	248	243	238	465	454	443	58	59	71	74	145	168	268	288	478	524
Auto switch unit	15			20			28			38			43			15		20		28		38		43	
Angle adjuster unit	30			47			90			150			203			30		47		90		150		203	


* The weight includes a plate and two hexagon socket head cap screws (shipped together). It does not include hexagon socket head cap screws (M3 x 12) for mounting size 10.

Effective Output


Size 10

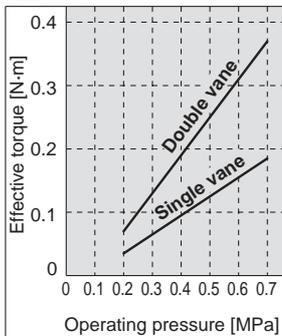


Size 15

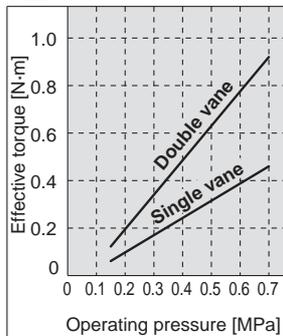


Size 20

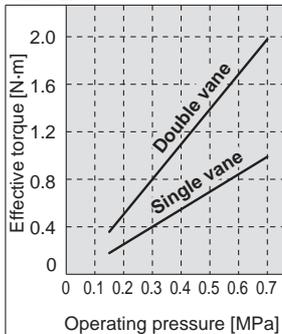

Size 30

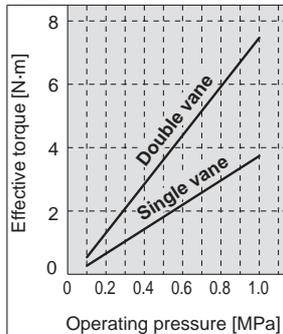




Size 40

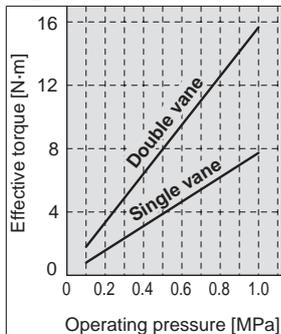


Chamfered Position and Rotation Range: Top View from Long Shaft Side

Chamfered positions shown below illustrate the conditions of actuators when B port is pressurised.

Single vane

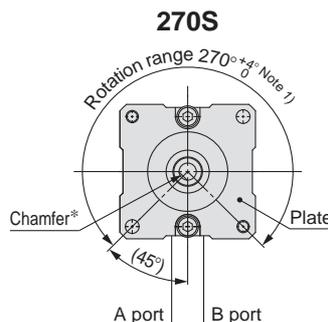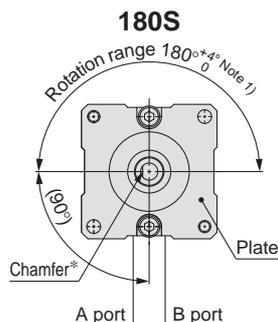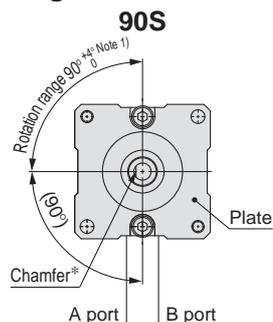

Double vane 90, 100D

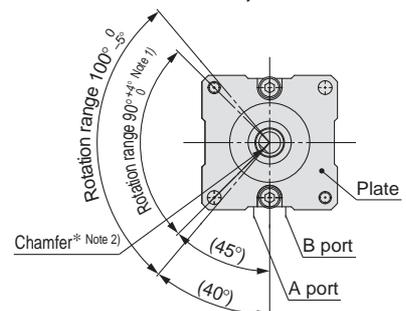

* For size 40 actuators, a parallel key will be used instead of chamfer.

Note 1) For single vane type, the tolerance of rotating angle of 90°, 180°, 270° will be $^{+5}_{0}$ for size 10 only.


For double vane type, the tolerance of rotating angle of 90° will be $^{+5}_{0}$ for size 10 only.

Note 2) The chamfered position of the double vane type shows the 90° specification position.

Note 3) Only size 10 has a different plate shape.


Construction

Single vane • Figures for 90° and 180° show the condition of the actuators when B port is pressurised, and the figure for 270° shows the position of the ports during rotation.
Size: 10, 15, 20, 30, 40

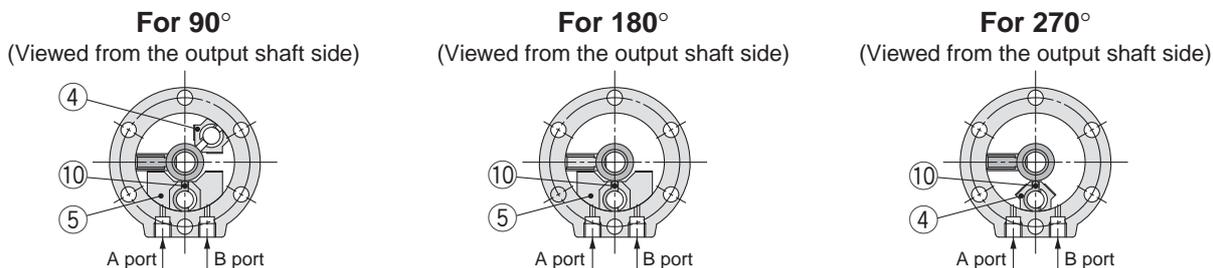

Component Parts



No.	Description	Material	Note
1	Body (A)	Aluminium alloy	Painted
2	Body (B)	Aluminium alloy	Painted
3	Vane shaft	Stainless steel*1	
4	Stopper	Resin	For 270°
5	Stopper	Resin	For 180°
6	Bearing	Bearing steel	
7	Back-up ring	Stainless steel	
8	Hexagon socket head cap screw	Chrome molybdenum steel	Special screw
9	O-ring	NBR	
10	Stopper seal	NBR	Special seal
11	O-ring	NBR	Size 40 only
12	Parallel key	Carbon steel	Size 40 only
13	Plate	Aluminium alloy	Anodised
14	Hexagon socket head cap screw*2	Chrome molybdenum steel	Special screw for size 40

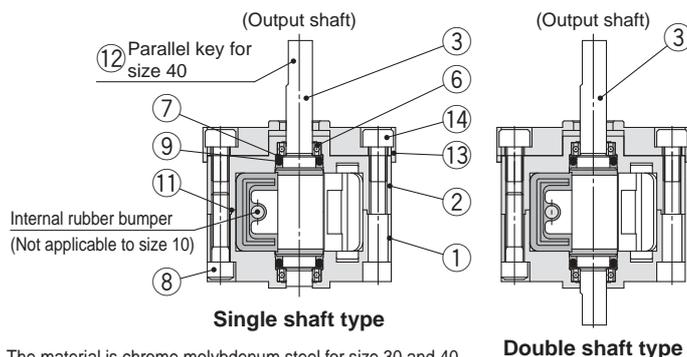

*1. The material is chrome molybdenum steel for size 30 and 40.
 *2. Hexagon socket flat countersunk head cap screw is used for size 10.
 13 and 14 are shipped with the product for all sizes, and special mounting screws (M3 x 12) are attached for size 10.

Double vane • Figures below show the intermediate rotation position when A or B port is pressurised.

Size: 10

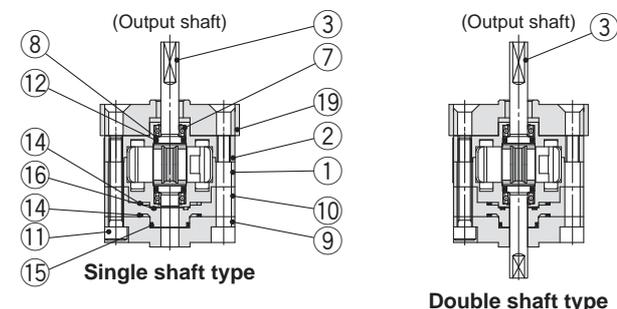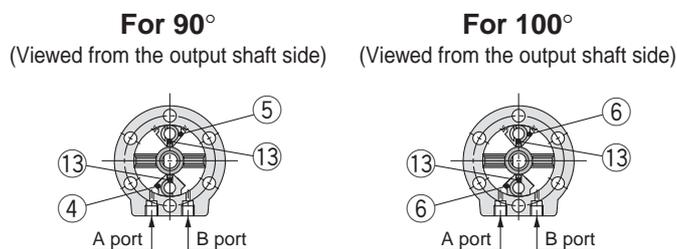



Component Parts

No.	Description	Material	Note
1	Body (A)	Aluminium alloy	Painted
2	Body (B)	Aluminium alloy	Painted
3	Vane shaft	Chrome molybdenum steel	
4	Stopper	Stainless steel*1	
5	Stopper	Resin	
6	Stopper	Stainless steel*1	
7	Bearing	Bearing steel	
8	Back-up ring	Stainless steel	
9	Cover	Aluminium alloy	
10	Plate	Resin	

*1. For size 40, material for 4, 6 is aluminum alloy.

*2. Hexagon socket flat countersunk head cap screw is used for size 10. 19 and 20 are shipped with the product for all sizes, and special mounting screws (M3 x 12) are attached for size 10.

Size: 15, 20, 30, 40

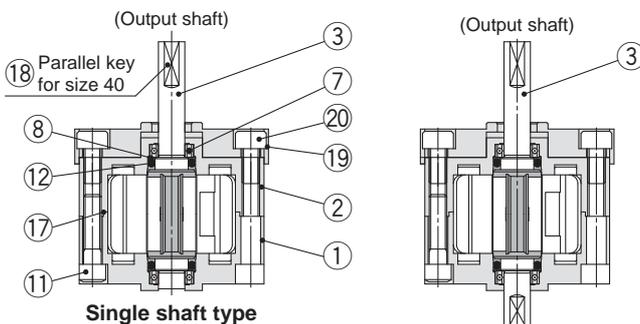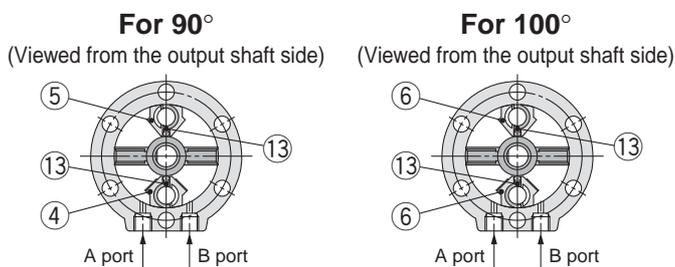

No.	Description	Material	Note
11	Hexagon socket head cap screw	Chrome molybdenum steel	Special screw
12	O-ring	NBR	
13	Stopper seal	NBR	Special seal
14	Gasket	NBR	Special seal
15	O-ring	NBR	
16	O-ring	NBR	
17	O-ring	NBR	Size 40 only
18	Parallel key	Carbon steel	Size 40 only
19	Plate	Aluminium alloy	Anodised
20	Hexagon socket head cap screw*2	Chrome molybdenum steel	Special screw for size 40

CRB2
 CRB2□WU
 CRBU2
 CRBU2WU
 Simple Specials
 Made to Order
 Component Unit
 Angle Adjustment Setting
 Auto Switch Mounting

Series CRBU2

Construction (With Auto Switch)

Single vane


- Following figures show actuators for 90° and 180° when B port is pressurised.

(The unit is common for single vane type and double vane type.)

Double vane

- Following figures show the intermediate rotation position when A or B port is pressurised.

D-M9□

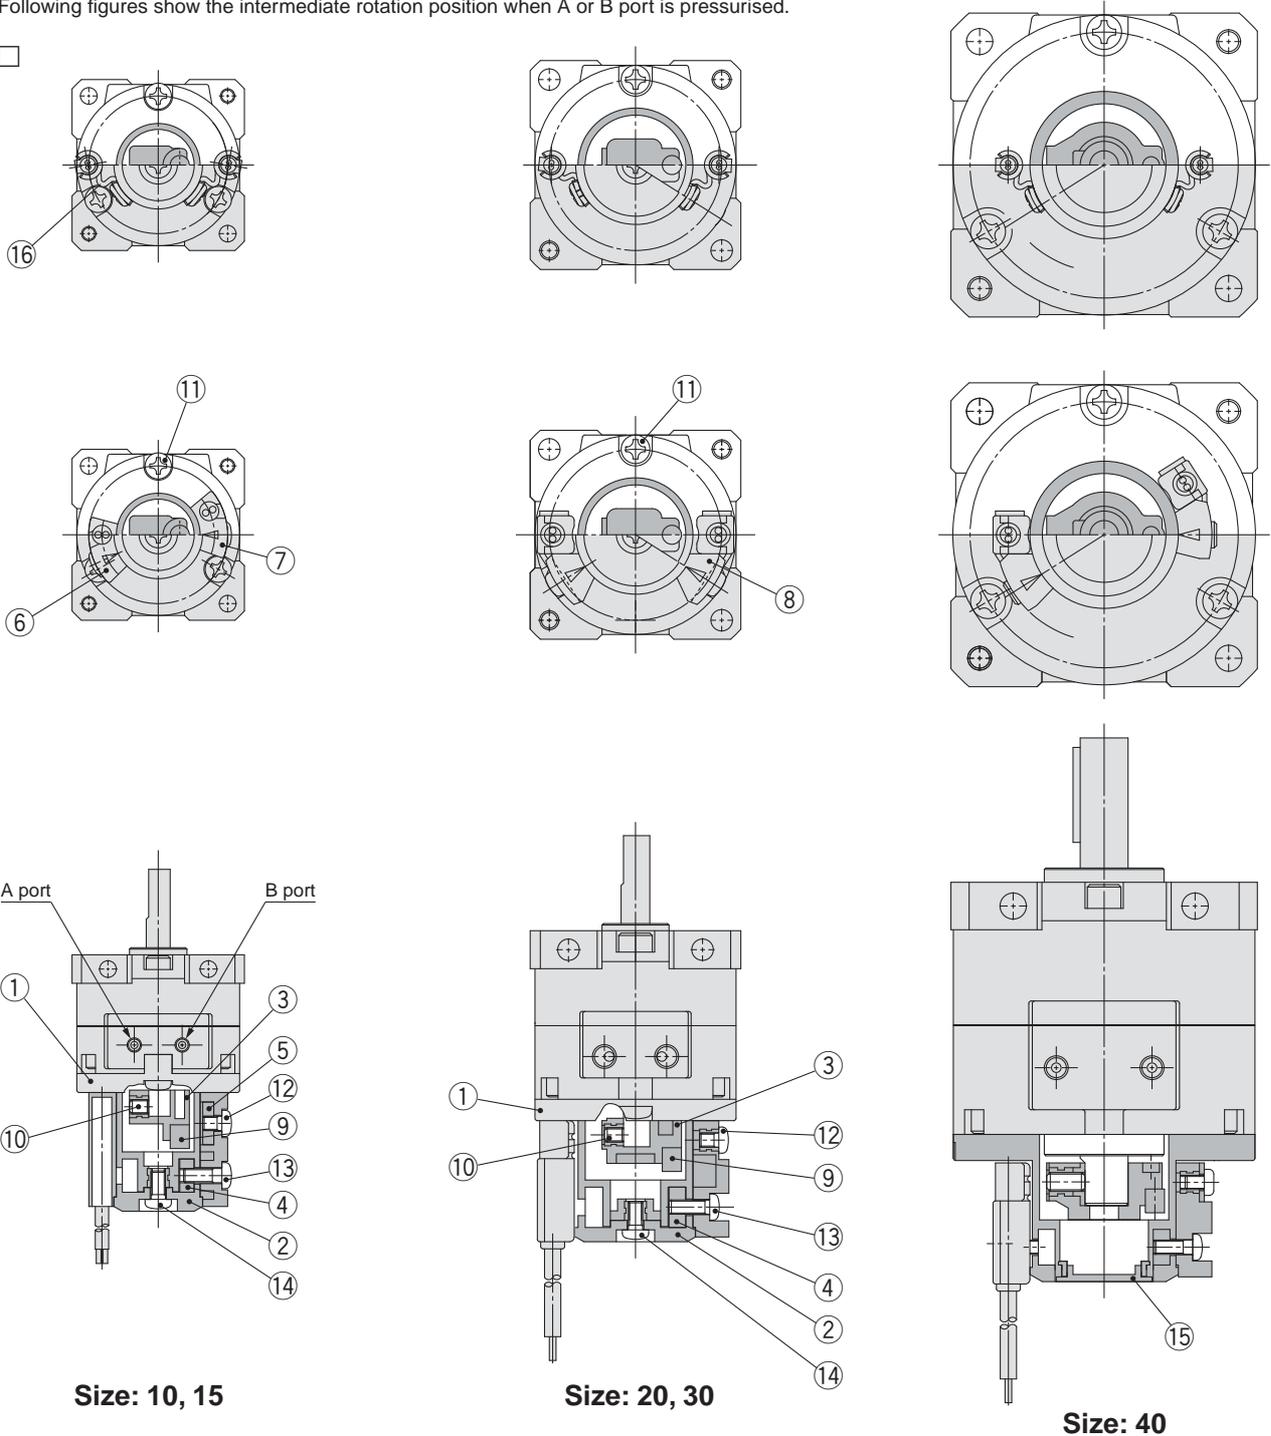

Component Parts

No.	Description	Material
1	Cover (A)	Resin
2	Cover (B)	Resin
3	Magnet lever	Resin
4	Holding block	Stainless steel
5	Holding block (B)	Aluminium alloy
6	Switch block (A)	Resin
7	Switch block (B)	Resin
8	Switch block	Resin

No.	Description	Material
9	Magnet	
10	Hexagon socket head set screw	Stainless steel
11	Cross recessed round head screw	Stainless steel
12	Cross recessed round head screw	Stainless steel
13	Cross recessed round head screw	Stainless steel
14	Cross recessed round head screw	Stainless steel
15	Rubber cap	NBR
16	Switch holder	Stainless steel





* For size 10, 2 cross recessed round head screws ⑪ are required.

Dimensions: Free Mount Type 10, 15, 20, 30, 40


- For single vane type, the figures below show actuators for 90° and 180° when B port is pressurised.
For double vane type, the figures below show the intermediate rotation position when the A or B port is pressurised.
Only size 10 has a different plate shape. (Refer to page 27.)

Single shaft/Port location: Side ported

(The size 10 double vane type is indicated on page 27.)

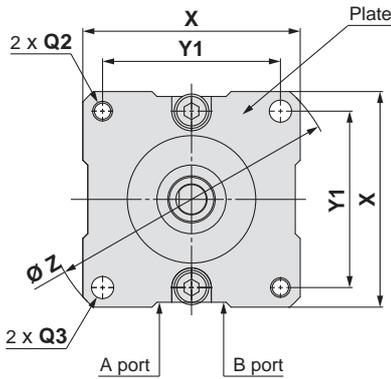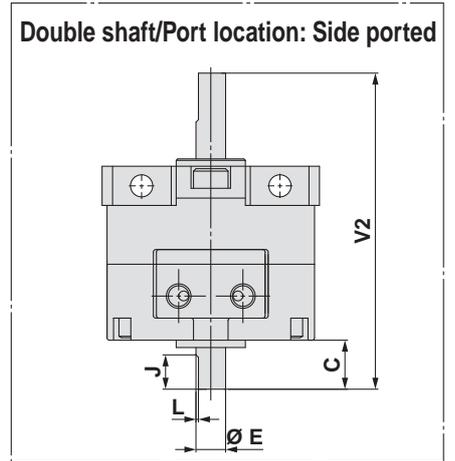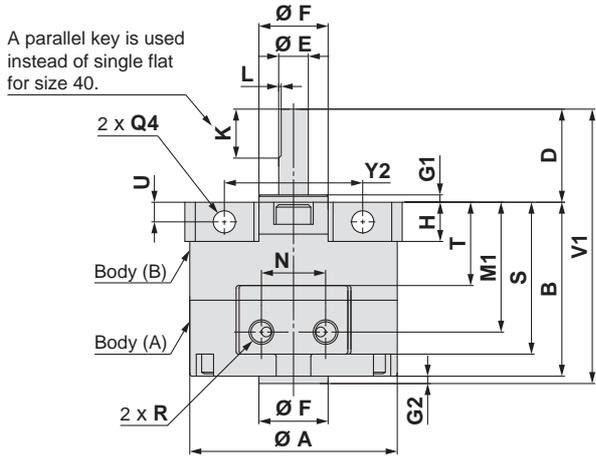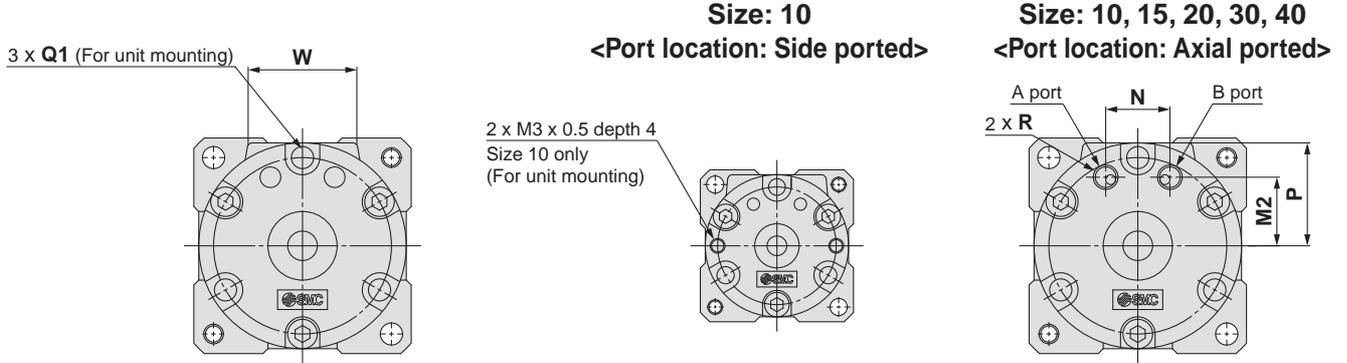

Shaft-end shape of size 40

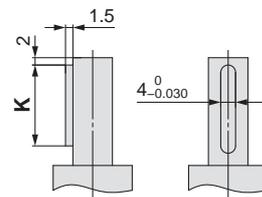

Parallel key dimensions

b (h9)	h (h9)	L1
4 ⁰ _{-0.030}	4 ⁰ _{-0.030}	20

Refer to page 30 for details of shaft types J, K, T and Y.

Size	A	B	C	D	E (g7)	F (h9)	G1	G2	H	J	K	L	M1	M2	N	P	Q				R	S	T	U	V1	V2	W	X	Y1	Y2	Z
																	Q1	Q2	Q3	Q4											
10	29	22	8	14	4 ^{-0.004} _{-0.016}	9 ⁰ _{-0.036}	1	1	7	5	9	0.5	16.5	8.5	9.5	14.5	—	M3 x 0.5	3.5	3.5	M3 x 0.5	21	10.6	3	37	44	19.8	31	25	17	41
15	34	25	9	18	5 ^{-0.004} _{-0.016}	12 ⁰ _{-0.043}	1.5	1.5	6	6	10	0.5	19	11	10	17	M3 x 0.5	M3 x 0.5	3.5	3.5	M3 x 0.5	24	12.6	3	44.5	52	21	36	29	21	48
20	42	34.5	10	20	6 ^{-0.004} _{-0.016}	14 ⁰ _{-0.043}	1.5	1.5	8	7	10	0.5	25.5	14	13	21	M4 x 0.7	M4 x 0.7	4.5	4.5	M5 x 0.8	30	16	4	56	64.5	22	44	36	26	59
30	50	47.5	13	22	8 ^{-0.005} _{-0.020}	16 ⁰ _{-0.043}	2	2	9	8	12	1.0	33.5	15.5	14	25	M5 x 0.8	M5 x 0.8	5.5	5.5	M5 x 0.8	42	21.5	4.5	71.5	82.5	24	52	42	29	69
40	63	53	15	30	10 ^{-0.005} _{-0.020}	25 ⁰ _{-0.052}	3	4.5	10	9	20	1.0	39	21	20	31.6	M5 x 0.8	M5 x 0.8	5.5	5.5	M5 x 0.8	47.8	25	5	87.5	98	30	64	52	38	85


CRB2
CRB2□WU
CRBU2
CRBU2WU
Simple Specials
Made to Order
Component Unit
Angle Adjustment Setting
Auto Switch Mounting

Series CRBU2



Dimensions: Free Mount Type 10

Double vane • Following figures show the intermediate rotation position when A or B port is pressurised.



Single shaft/Port location: Side ported

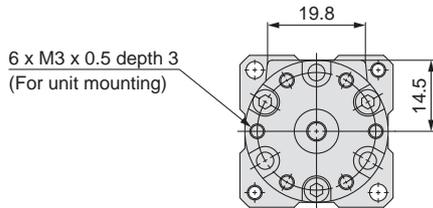

Size: 10 <Port location: Axial ported>

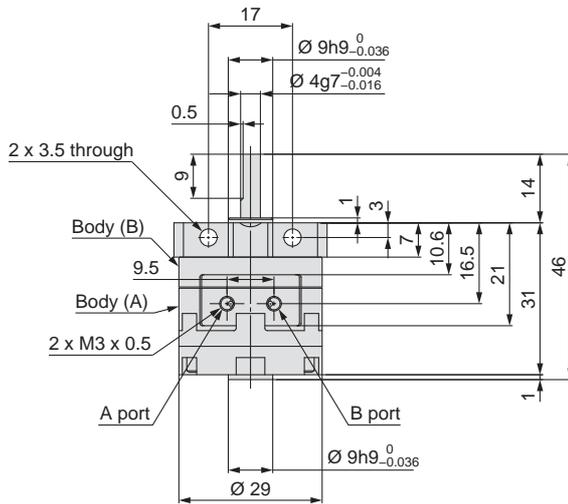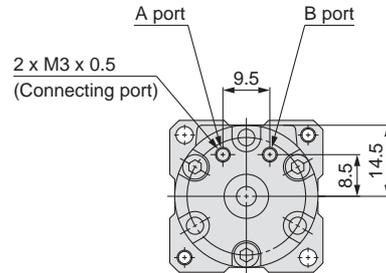

Double shaft/Port location: Side ported

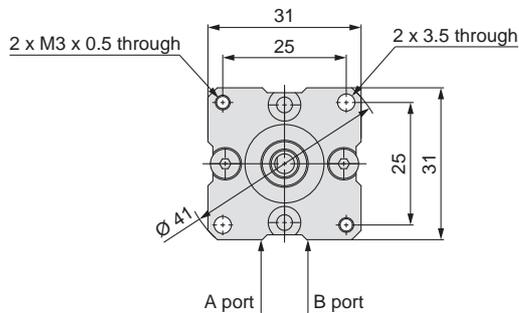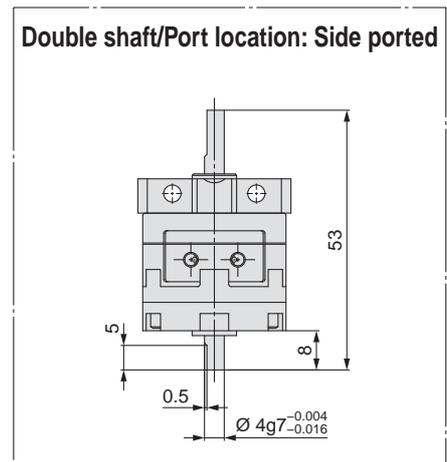


Refer to page 30 for details of shaft types J, K, T and Y.

Dimensions: Free Mount Type (With Auto Switch) 10, 15, 20, 30, 40


- For single vane type, the figures below show actuators for 90° and 180° when B port is pressurised.
For double vane type, the figures below show the intermediate rotation position when the A or B port is pressurised.
Only size 10 has a different plate shape. (Refer to page 29.)

Size: 10, 15



(The size 10 double vane type is indicated on page 29.)

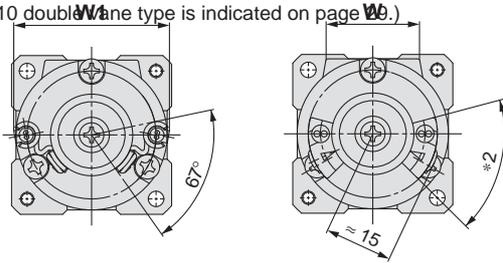


Size: 20, 30, 40

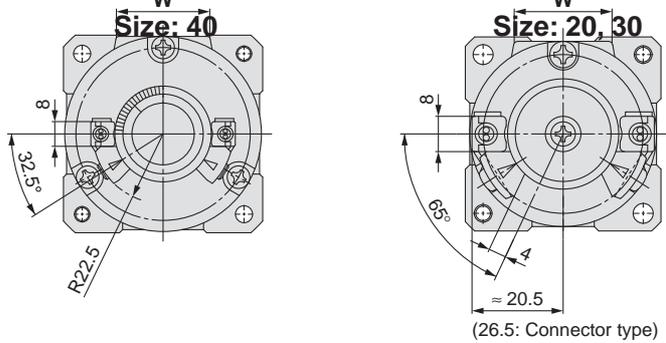

When D-M9□ is used

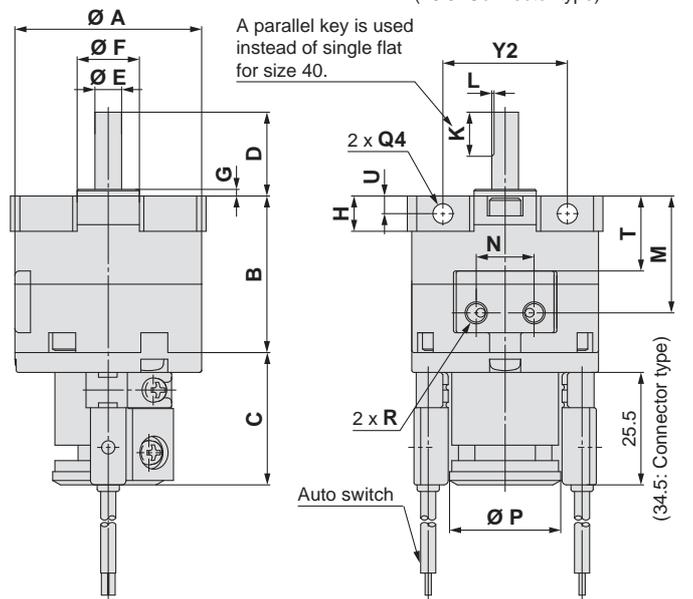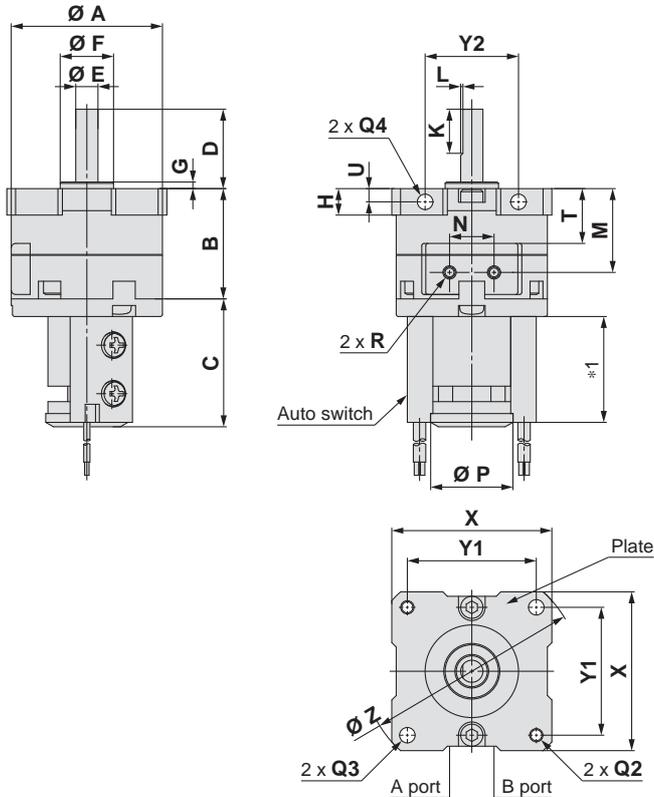

Shaft end shape of size 40

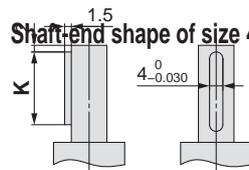

Parallel key dimensions

b (h9)	h (h9)	L1
4 ⁰ _{-0.030}	4 ⁰ _{-0.030}	20

- *1. The length is 24 when any of the following are used:
D-90/90A/S99(V)/T99(V)/S9P(V)
The length is 30 when any of the following are used: D-97/93A
The length is 25.5 when the D-M9 is used.
- *2. The angle is 60° when any of the following are used: D-90/90A/97/93A
The angle is 69° when any of the following are used: D-S99(V)/T99(V)/S9P(V)

Refer to page 30 for details of shaft type J.


Size	A	B	C	D	E (g7)	F (h9)	G	H	K	L	M	N	P	Q			R	T	W	W1	X	Y1	Y2	Z
														Q2	Q3	Q4								
10	29	22	29	14	4 ^{-0.004} _{-0.016}	9 ⁰ _{-0.036}	1	7	9	0.5	16.5	9.5	18.5	M3 x 0.5	3.5	3.5	M3 x 0.5	10.6	19.8	35	31	25	17	41
15	34	25	29	18	5 ^{-0.004} _{-0.016}	12 ⁰ _{-0.043}	1.5	6	10	0.5	19	10	18.5	M3 x 0.5	3.5	3.5	M3 x 0.5	12.6	21	35	36	29	21	48
20	42	34.5	30	20	6 ^{-0.004} _{-0.016}	14 ⁰ _{-0.043}	1.5	8	10	0.5	25.5	13	25	M4 x 0.7	4.5	4.5	M5 x 0.8	16	22	—	44	36	26	59
30	50	47.5	31	22	8 ^{-0.005} _{-0.020}	16 ⁰ _{-0.043}	2	9	12	1.0	33.5	14	25	M5 x 0.8	5.5	5.5	M5 x 0.8	21.5	24	—	52	42	29	69
40	63	53	31	30	10 ^{-0.005} _{-0.020}	25 ⁰ _{-0.052}	3	10	20	—	39	20	31	M5 x 0.8	5.5	5.5	M5 x 0.8	25	30	—	64	52	38	85

CRB2
CRB2□WU
CRBU2
CRBU2WU
Simple Specials
Made to Order
Component Unit
Angle Adjustment Setting
Auto Switch Mounting


Shaft Type Dimensions (Dimensions other than specified below are the same as the standard type.)

Size: 10, 15, 20, 30, 40


Double shaft/CRBU2J

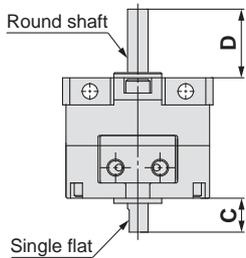

Double shaft/CRBU2K

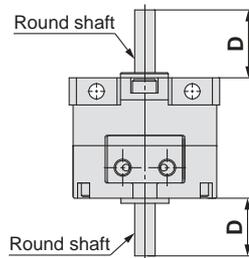


Single shaft/CRBU2T

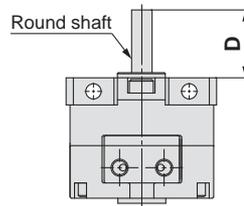


Single shaft/CRBU2Y

A parallel key is used instead of single flat for size 40.

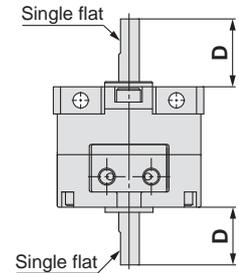


Double shaft/CDRBU2J

With auto switch

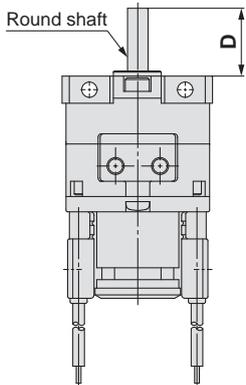


Double shaft/CRBU2JU

With angle adjuster unit

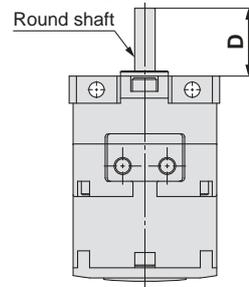

Double shaft/CDRBU2JU

With auto switch and angle adjuster unit

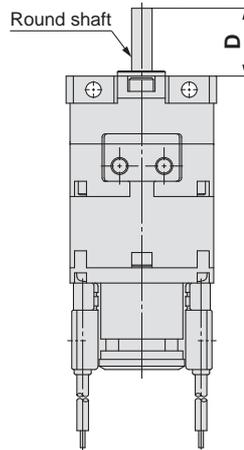

[mm]

Size	10	15	20	30	40
C	8	9	10	13	15
D	14	18	20	22	30

Note 1) Dimensions and tolerance of the shaft and single flat (a parallel key for size 40) are the same as the standard.

Note 2) For rotary actuators with auto switch and angle adjuster unit, connection ports are side ports.

CRB2

CRB2□WU

CRBU2

CRBU2WU

Simple Specials

Made to Order

Component Unit

Angle Adjustment Setting


Auto Switch Mounting

Free Mount Type Rotary Actuator With Angle Adjuster/Vane Type


RoHS

Series CRBU2WU

Size: 10, 15, 20, 30, 40

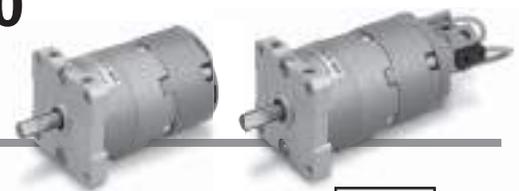

How to Order

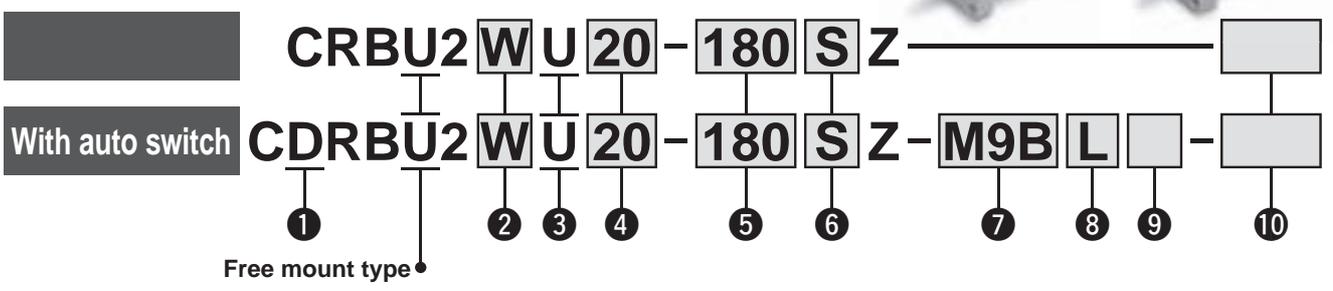

1 With auto switch

(With auto switch unit and built-in magnet)
* Refer to page 52 when the auto switch unit is needed separately.

2 Shaft type

Symbol	Shaft-end shape
W	Single flat*
J**	Round shaft

* A key is used for size 40.
** J is made to order.

3 With angle adjuster unit

* Refer to page 52 when the angle adjuster unit is needed separately.

4 Size

10
15
20
30
40

5 Rotating angle

	90		180	
	90°	180°	270°	270°
Single vane	90	180	270	270
Double vane	90	100	90	100

6 Vane type

S	Single vane
D	Double vane

7 Auto switch

—	Without auto switch (Built-in magnet)
M	Without M9 type auto switch (Built-in magnet)

* For applicable auto switch model, refer to the table below.
** The operating range and hysteresis of the D-M9□ are different from those of the other auto switches. For details, refer to page 55.

8 Electrical entry/Lead wire length

—	Grommet/Lead wire: 0.5 m
M	Grommet/Lead wire: 1 m
L	Grommet/Lead wire: 3 m
CN	Connector/Without lead wire
C	Connector/Lead wire: 0.5 m
CL	Connector/Lead wire: 3 m

* Connectors are available only for the R73, R80, T79.
** Lead wire with connector part nos.
D-LC05: Lead wire 0.5 m
D-LC30: Lead wire 3 m
D-LC50: Lead wire 5 m

Refer to pages 55 to 59 for actuators with auto switches.

- Operating range and hysteresis
- How to change the auto switch detecting position
- Auto switch mounting
- Auto switch adjustment

9 Number of auto switches

S	1 pc.*
—	2 pcs.**

* S: A right-hand auto switch is shipped.
** —: A right-hand switch and a left-hand switch are shipped.

10 Made to Order

For details, refer to the table below.



Made to Order
(For details, refer to pages 37 to 51.)

Applicable Auto Switches/Refer to the Best Pneumatics No. 4 for further information on auto switches.

Applicable size	Type	Special function	Electrical entry	Indicator/light	Wiring (Output)	Load voltage		Auto switch model		Lead wire type	Lead wire length [m]					Pre-wired connector	Applicable load		
						DC	AC	Perpendicular	In-line		0.5 (—)	1 (M)	3 (L)	5 (Z)	None (—)		Relay	PLC	
For 10, 15	Solid state auto switch	—	Grommet	Yes	3-wire (NPN)	5 V, 12 V	—	M9NV	M9N	Oilproof heavy-duty cord	●	●	●	○	—	○	IC circuit	Relay, PLC	
					3-wire (PNP)			M9PV	M9P		●	●	●	○	—	○			
					2-wire			M9BV	M9B		●	●	●	○	—	○			
					3-wire (NPN)			S99V	S99		●	—	●	○	—	○			
	Reed auto switch	—	No	Grommet	Yes	3-wire (PNP)	5 V, 12 V	5 V, 12 V, 24 V	—	90	Vinyl parallel cord	●	—	●	●	—	—	IC circuit	Relay, PLC
						3-wire (PNP)			—	90A		●	—	●	●	—	—		
						2-wire			—	97		●	—	●	●	—	—		
						2-wire			—	93A		●	—	●	●	—	—		
For 20, 30, 40	Solid state auto switch	—	Grommet	Yes	3-wire (NPN)	5 V, 12 V	—	M9NV	M9N	Oilproof heavy-duty cord	●	●	●	○	—	○	IC circuit	Relay, PLC	
					3-wire (PNP)			M9PV	M9P		●	●	●	○	—	○			
					2-wire			M9BV	M9B		●	●	●	○	—	○			
					3-wire (PNP)			—	S79		●	—	●	○	—	○			
	Reed auto switch	—	No	Grommet	Yes	3-wire (PNP)	5 V, 12 V	100 V	—	S7P	Vinyl parallel cord	●	—	●	○	—	—	IC circuit	Relay, PLC
						3-wire (PNP)			—	T79		●	—	●	○	—	—		
						2-wire			—	T79C		●	—	●	○	—	—		
						2-wire			—	R73		●	—	●	○	—	—		
Reed auto switch	—	No	Connector	Yes	—	48 V, 100 V	100 V	—	R73C	Cliproof heavy-duty cord	●	—	●	●	—	—	IC circuit	Relay, PLC	
					—			—	R80		●	—	●	○	—	—			
					—			—	R80C		●	—	●	●	—	—			
					—			24 V or less	—		●	—	●	●	—	—			

* Lead wire length symbols: 0.5 m — (Example) R73C
3 m L (Example) R73CL
5 m Z (Example) R73CZ
None N (Example) R73CN

* Auto switches are shipped together, (but not assembled).
* Solid state auto switches marked with "○" are produced upon receipt of order.

The above may not be selected when the product comes with an auto switch or angle adjuster unit. For details, refer to pages 37, 38, 43, 44, 49.



Construction: 10, 15, 20, 30, 40

• The unit is common for single vane type and double vane type.


With angle adjuster

Size: 10, 15, 20, 30, 40

With auto switch and angle adjuster



Size: 10, 15

Size: 20, 30, 40

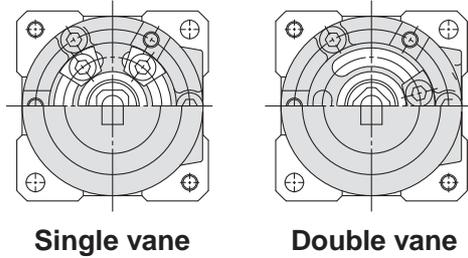


Single vane


Double vane

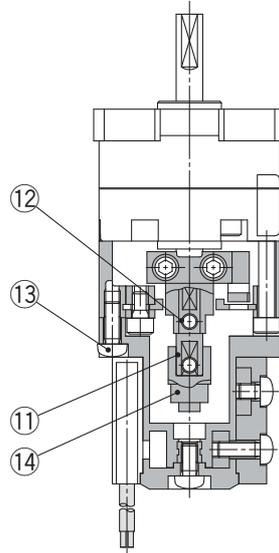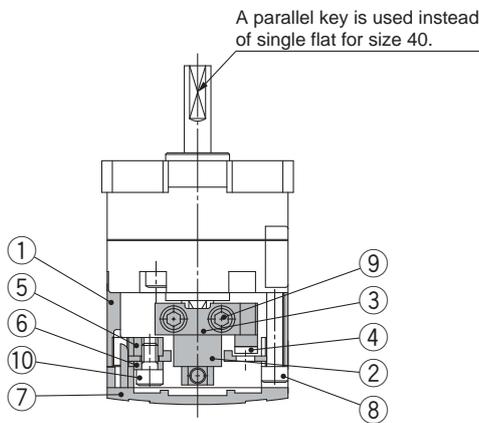

Size: 10

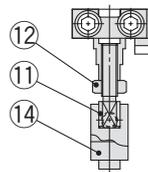

A parallel key is used instead of single flat for size 40.

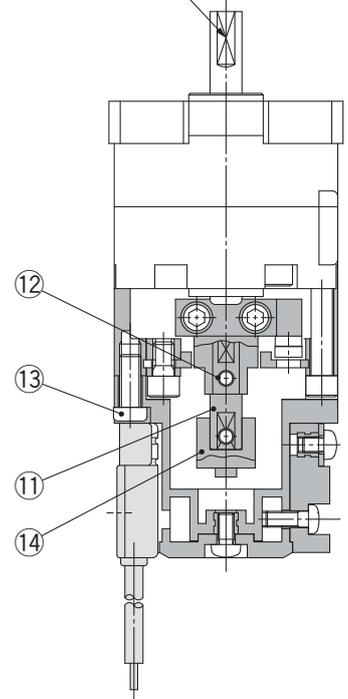

Component Parts

No.	Description	Material	Note
1	Stopper ring	Aluminium alloy	
2	Stopper lever	Chrome molybdenum steel	
3	Lever retainer	Rolled steel	Zinc chromated
4	Rubber bumper	NBR	
5	Stopper block	Chrome molybdenum steel	Zinc chromated
6	Block retainer	Rolled steel	Zinc chromated
7	Cap	Resin	
8	Hexagon socket head cap screw	Stainless steel	Special screw
9	Hexagon socket head cap screw	Stainless steel	Special screw
10	Hexagon socket head cap screw	Stainless steel	Special screw
11	Joint		
12	Hexagon socket head set screw	Stainless steel	Hexagon nut will be used for size 10 only.
	Hexagon nut	Stainless steel	
13	Cross recessed round head screw	Stainless steel	
14	Magnet lever	—	

⚠ Specific Product Precautions

Be sure to read this before handling. Refer to the back cover for Safety Instructions. For Rotary Actuator Precautions and Auto Switch Precautions, refer to “Handling Precautions for SMC Products” and the Operation Manual on SMC website, <http://www.smc.eu>

Angle Adjuster Unit

⚠ Caution

1. Since the maximum angle of the rotating angle adjustment range will be limited by the rotation of the rotary actuator, make sure to take this into consideration when ordering.

Rotating angle of rotary actuator	Rotating angle adjustment range
270° ⁺⁴ / ₀	0° to 230° (Size: 10, 40) *
	0° to 240° (Size: 15, 20, 30)
180° ⁺⁴ / ₀	0° to 175°
90° ⁺⁴ / ₀	0° to 85°

* The maximum adjustment angle of the angle adjuster unit for size 10 and 40 is 230°.

2. Connecting ports are side ported only.
3. The allowable kinetic energy is the same as the specifications of the rotary actuator.
4. Use a 100° rotary actuator when you desire to adjust the angle to 90° using a double vane type.

CRB2
CRB2□WU
CRBU2
CRBU2WU
Simple Specials
Made to Order
Component Unit
Angle Adjustment Setting
Auto Switch Mounting

Series CRBU2WU



Dimensions: Free Mount Type (With Angle Adjuster) 10, 15, 20, 30, 40

- For single vane type, the figures below show actuators for 90° (without unit) when the B port is pressurised.
For double vane type, the figures below show the intermediate rotation position when the A or B port is pressurised.


Size: 10, 15, 20, 30, 40

(Only size 10 has a different plate shape.)

Size: 10 (Double vane)

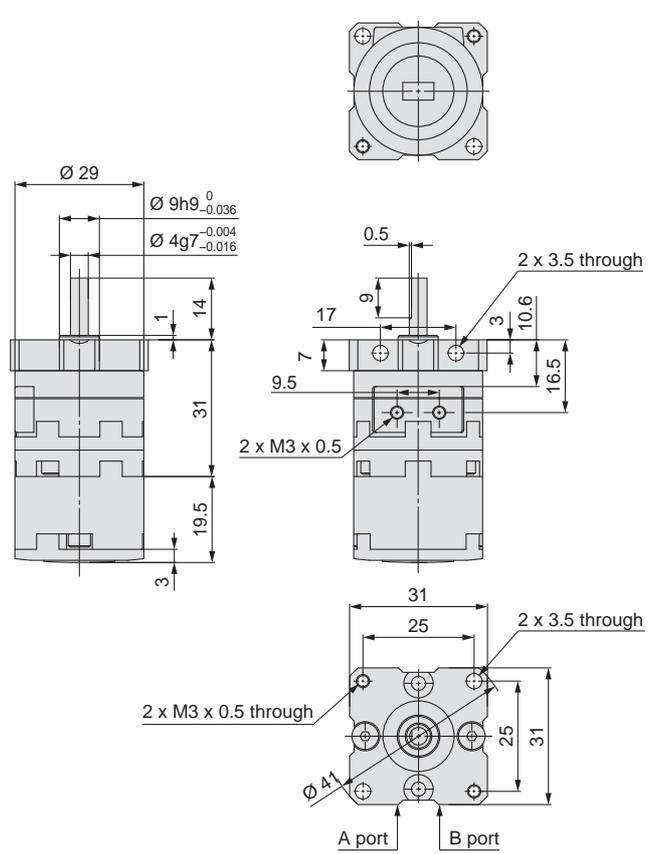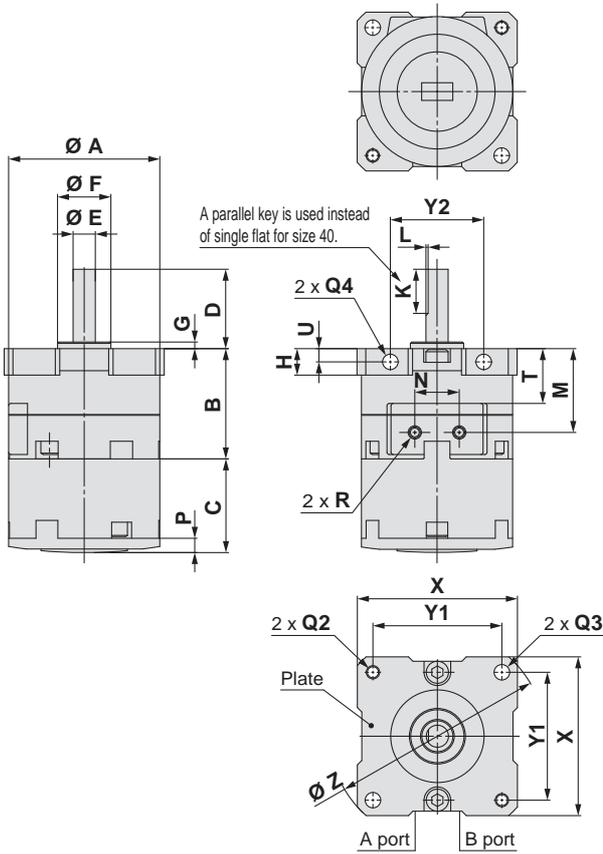

Shaft-end shape of size 40

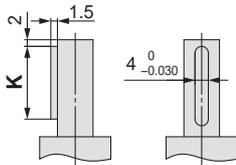

Parallel key dimensions

b (h9)	h (h9)	L1
4 ⁰ _{-0.030}	4 ⁰ _{-0.030}	20

Refer to page 30 for details of shaft type J.

[mm]

Size	A	B	C	D	E (g7)	F (h9)	G	H	K	L	M	N	P	Q			R	T	U	X	Y1	Y2	Z
														Q2	Q3	Q4							
10	29	22	19.5	14	4 ^{-0.004} _{-0.016}	9 ⁰ _{-0.036}	1	7	9	0.5	16.5	9.5	3	M3 x 0.5	3.5	3.5	M3 x 0.5	10.6	3	31	25	17	41
15	34	25	21.2	18	5 ^{-0.004} _{-0.016}	12 ⁰ _{-0.043}	1.5	6	10	0.5	19	10	3.2	M3 x 0.5	3.5	3.5	M3 x 0.5	12.6	3	36	29	21	48
20	42	34.5	25	20	6 ^{-0.004} _{-0.016}	14 ⁰ _{-0.043}	1.5	8	10	0.5	25.5	13	4	M4 x 0.7	4.5	4.5	M5 x 0.8	16	4	44	36	26	59
30	50	47.5	29	22	8 ^{-0.005} _{-0.020}	16 ⁰ _{-0.043}	2	9	12	1.0	33.5	14	4.5	M5 x 0.8	5.5	5.5	M5 x 0.8	21.5	4.5	52	42	29	69
40	63	53	36.3	30	10 ^{-0.005} _{-0.020}	25 ⁰ _{-0.052}	3	10	20	—	39	20	5	M5 x 0.8	5.5	5.5	M5 x 0.8	25	5	64	52	38	85

Free Mount Type Rotary Actuator with Angle Adjuster With Auto Switch **Series CDRBU2WU**



Dimensions: Free Mount Type (With Auto Switch and Angle Adjuster) 10, 15, 20, 30, 40

- For single vane type, the figures below show actuators for 90° (without unit) when the B port is pressurised.
For double vane type, the figures below show the intermediate rotation position when the A or B port is pressurised.
Only size 10 has a different plate shape. (Refer to page 35.)

Size: 10, 15


(The size 10 double vane type is indicated on page 35.)

When D-M9□ is used

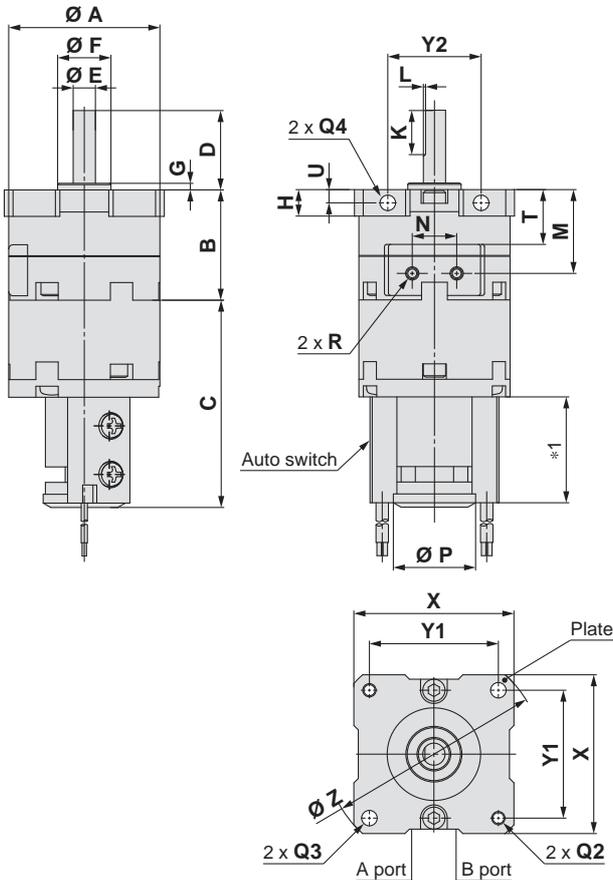
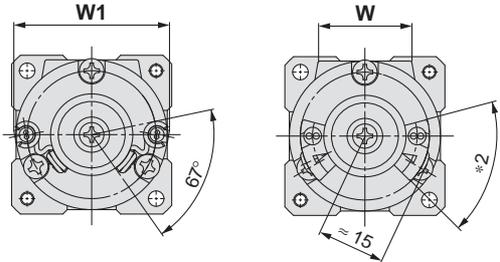


Size: 20, 30, 40


Size: 40

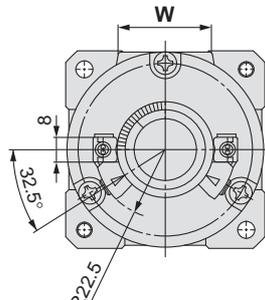

Size: 20, 30

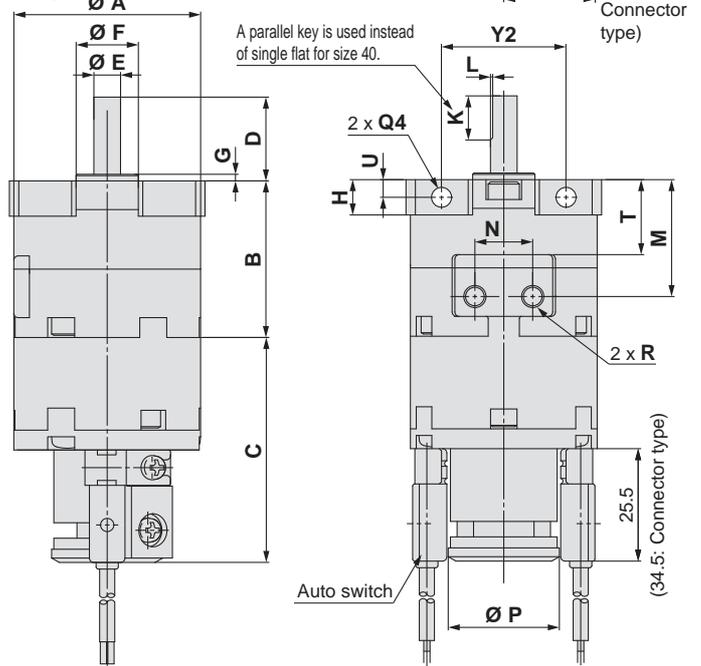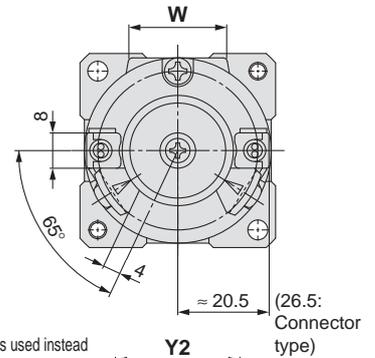

Shaft-end shape of size 40

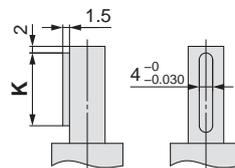

Parallel key dimensions

b (h9)	h (h9)	L1
4 ⁰ _{-0.030}	4 ⁰ _{-0.030}	20

Refer to page 30 for details of shaft type J.

- *1. The length is 24 when any of the following are used:
D-90/90A/S99(V)/T99(V)/S9P(V)
The length is 30 when any of the following are used: D-97/93A
The length is 25.5 when the D-M9 is used.
- *2. The angle is 60° when any of the following are used: D-90/90A/97/93A
The angle is 69° when any of the following are used: D-S99(V)/T99(V)/S9P(V)





Size	A	B	C	D	E (g7)	F (h9)	G	H	K	L	M	N	P	Q			R	T	U	W	W	X	Y1	Y2	Z
														Q2	Q3	Q4									
10	29	22	45.5	14	4 ^{-0.004} _{-0.016}	9 ⁰ _{-0.036}	1	7	9	0.5	16.5	9.5	18.5	M3 x 0.5	3.5	3.5	M3 x 0.5	10.6	3	19.8	35	31	25	17	41
15	34	25	47	18	5 ^{-0.004} _{-0.016}	12 ⁰ _{-0.043}	1.5	6	10	0.5	19	10	18.5	M3 x 0.5	3.5	3.5	M3 x 0.5	12.6	3	21	35	36	29	21	48
20	42	34.5	51	20	6 ^{-0.004} _{-0.016}	14 ⁰ _{-0.043}	1.5	8	10	0.5	25.5	13	25	M4 x 0.7	4.5	4.5	M5 x 0.8	16	4	22	—	44	36	26	59
30	50	47.5	55.5	22	8 ^{-0.005} _{-0.020}	16 ⁰ _{-0.043}	2	9	12	1.0	33.5	14	25	M5 x 0.8	5.5	5.5	M5 x 0.8	21.5	4.5	24	—	52	42	29	69
40	63	53	62.2	30	10 ^{-0.005} _{-0.020}	25 ⁰ _{-0.052}	3	10	20	—	39	20	31	M5 x 0.8	5.5	5.5	M5 x 0.8	25	5	30	—	64	52	38	85

Series CDRBU2WU

Dimensions: Free Mount Type (With Auto Switch and Angle Adjuster) 10

Double vane • Following figures show the intermediate rotation position when A or B port is pressurised.

Size: 10

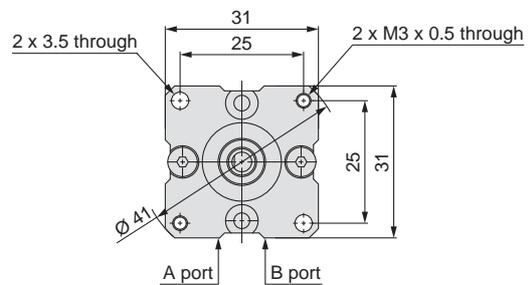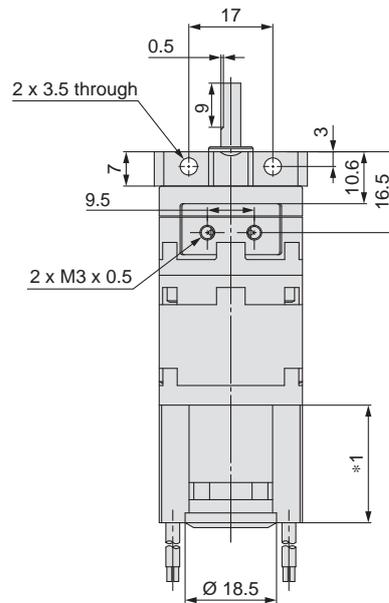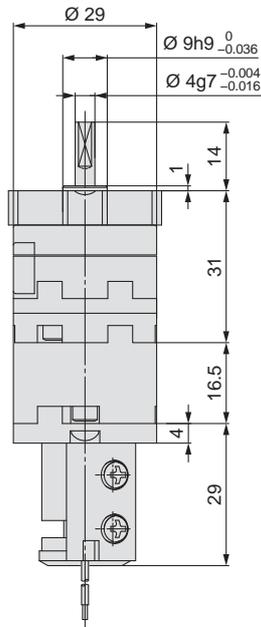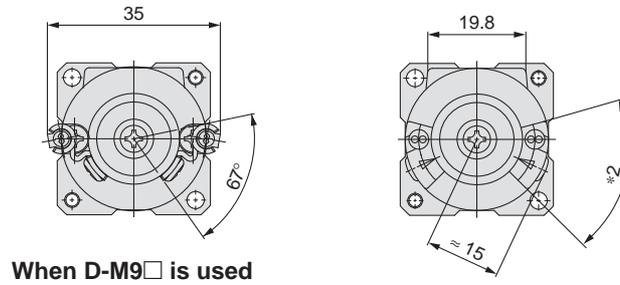

Refer to page 30 for details of shaft type J.

- *1. The length is 24 when any of the following are used: D-90/90A/S99(V)/T99(V)/S9P(V)
The length is 30 when any of the following are used: D-97/93A
The length is 25.5 when the D-M9 is used.
- *2. The angle is 60° when any of the following are used: D-90/90A/97/93A
The angle is 69° when any of the following are used: D-S99(V)/T99(V)/S9P(V)

Auto Switch
Mounting

Angle Adjustment
Setting

Component Unit

Made to Order

Simple Specials

CRBU2WU

CRBU2

CRB2□WU

CRB2

Series **CRB2/CRBU2** (Size: 10, 15, 20, 30, 40)

Simple Specials

-XA1 to -XA24: Shaft Pattern Sequencing I

Shaft shape pattern is dealt with simple made-to-order system.

Please contact SMC for a specification sheet when placing an order.


Symbol

Shaft Pattern Sequencing I


-XA1 to -XA24

Applicable shaft type: **W** (Standard)

Standard type/Series **CRB2**

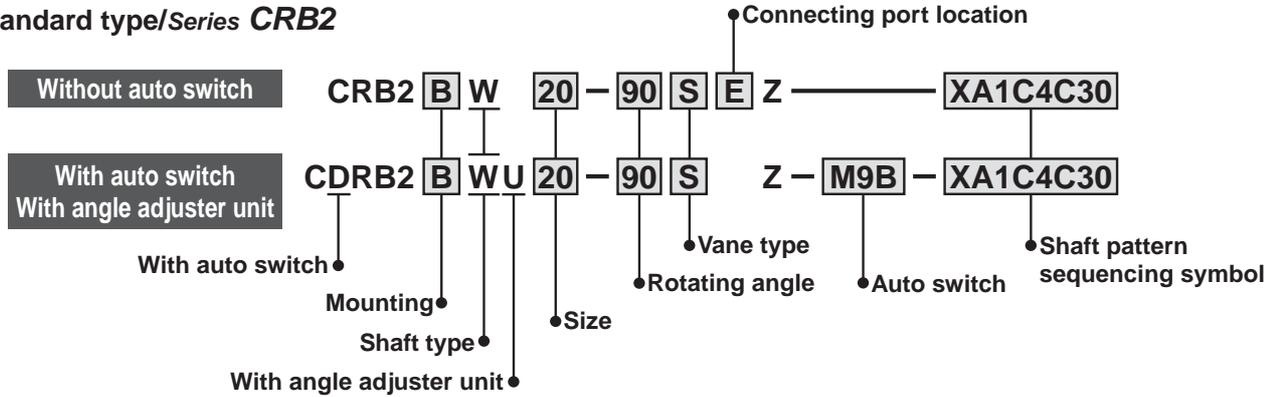

Free mount type/Series **CRBU2**

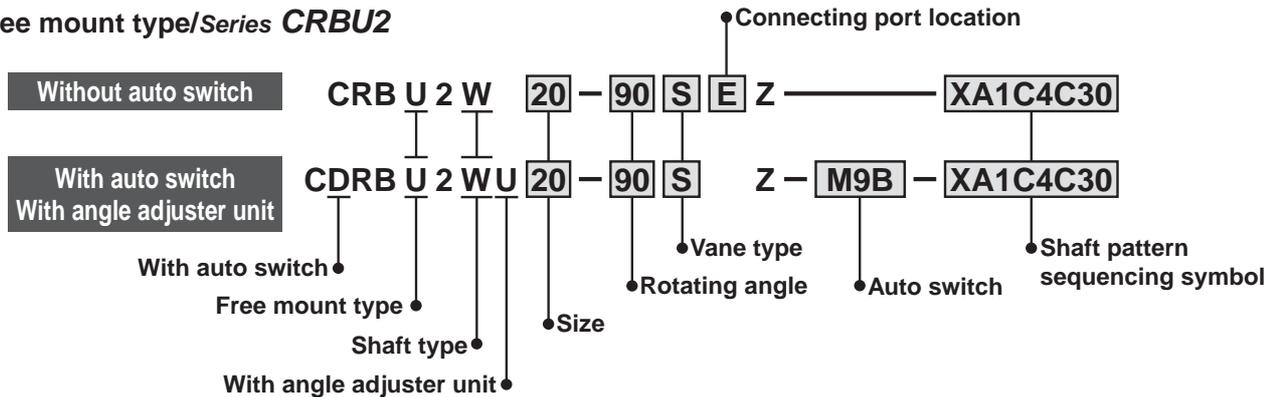

Shaft Pattern Sequencing Symbol

● Axial: Top (Long shaft side)

Symbol	Description	Applicable size				
		10	15	20	30	40
XA1	Shaft-end female thread		●	●	●	
XA3	Shaft-end male thread	●	●	●	●	
XA5	Stepped round shaft	●	●	●	●	
XA7	Stepped round shaft with male thread	●	●	●	●	
XA9	Modified length of standard chamfer	●	●	●	●	
XA11	Double-sided chamfer	●	●	●	●	
XA14*	Shaft through-hole + Shaft-end female thread		●	●	●	●
XA17	Shortened shaft	●	●	●	●	●
XA21	Stepped round shaft with double-sided chamfer	●	●	●	●	
XA23	Right-angle chamfer	●	●	●	●	
XA24	Double key					●

* These specifications are not available for rotary actuators with auto switch and/or with angle adjuster unit.

● Axial: Bottom (Short shaft side)

Symbol	Description	Applicable size				
		10	15	20	30	40
XA2*	Shaft-end female thread		●	●	●	
XA4*	Shaft-end male thread	●	●	●	●	
XA6*	Stepped round shaft	●	●	●	●	
XA8*	Stepped round shaft with male thread	●	●	●	●	
XA10*	Modified length of standard chamfer	●	●	●	●	
XA12*	Double-sided chamfer	●	●	●	●	
XA15*	Shaft through-hole + Shaft-end female thread		●	●	●	●
XA18*	Shortened shaft	●	●	●	●	●
XA22*	Stepped round shaft with double-sided chamfer	●	●	●	●	●

● Double Shaft

Symbol	Description	Applicable size				
		10	15	20	30	40
XA13*	Shaft through-hole		●	●	●	●
XA16*	Shaft through-hole + Double shaft-end female thread		●	●	●	●
XA19*	Shortened shaft	●	●	●	●	
XA20*	Reversed shaft	●	●	●	●	●

Combination

XA□ Combination

Symbol	Combination																			
XA1	XA1																			
XA2	●	XA2																		
XA3	—	●	XA3																	
XA4	●	—	●	XA4																
XA5	—	●	—	●	XA5															
XA6	●	—	●	—	●	XA6														
XA7	—	●	—	●	—	●	XA7													
XA8	●	—	●	—	●	—	●	XA8												
XA9	—	●	—	●	—	●	—	●	XA9											
XA10	●	—	●	—	●	—	●	—	●	XA10										
XA11	—	●	—	●	—	●	—	●	—	●	XA11									
XA12	●	—	●	—	●	—	●	—	●	—	●	XA12								
XA13	—	—	—	—	—	—	—	—	—	—	—	●	●							
XA14	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	●
XA15	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—
XA16	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—
XA17	—	●	—	●	—	●	—	●	—	●	—	●	—	●	—	●	—	●	—	●
XA18	●	—	●	—	●	—	●	—	●	—	●	—	●	—	●	—	●	—	●	—
XA19	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—
XA20	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—
XA21	—	●	—	●	—	●	—	●	—	●	—	●	—	●	—	●	—	●	—	●
XA22	●	—	●	—	●	—	●	—	●	—	●	—	●	—	●	—	●	—	●	—
XA23	—	●	—	●	—	●	—	●	—	●	—	●	—	●	—	●	—	●	—	●
XA24	—	●	—	●	—	●	—	●	—	●	—	●	—	●	—	●	—	●	—	●

A total of two XA□ and XA□ combinations is available.
Example: -XA2A24

XA□, XC□ Combination

Combination other than -XA□, such as Made to Order (-XC□), is also available.
Refer to pages 49 to 51 for details on the Made-to-Order specifications.

Symbol	Description	Applicable size	Combination
			XA1 to XA24
XC1*	Add connecting ports	10, 15, 20, 30, 40	●
XC2*	Change threaded hole to through-hole	10, 20, 30, 40	●
XC3*	Change the screw position	10, 15, 20, 30, 40	●
XC4	Change the rotation range		●
XC5*	Change rotation range between 0 to 200°		●
XC6*	Change rotation range between 0 to 110°		●
XC7*	Reversed shaft		—
XC30	Fluorine grease		●
X5**	For M5 port	10, 15	●

* These specifications are not available for rotary actuators with auto switch and/or with angle adjuster unit.
** Only the shaft type W or J can select "with auto switch" and/or "with angle adjuster unit".
A total of four XA□ and XC□ combinations is available.
Example: -XA2A24C1C30
-XA2C1C4C30

CRB2

CRB2□WU

CRBU2

CRBU2WU

Simple Specials

Made to Order

Component Unit

Angle Adjustment Setting


Auto Switch Mounting

Axial: Top (Long shaft side)

Symbol: A1

The long shaft can be further shortened by machining female threads into it. (If shortening the shaft is not required, indicate "*" for dimension X.)

- Not available for size 10
- The maximum dimension L1 is, as a rule, twice the thread size. (Example) For M3: L1 = 6 mm
- Applicable shaft type: W

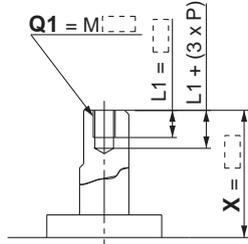


[mm]

Size	CRB2		CRBU2	
	X	Q1	X	Q1
15	4 to 18	M3	1.5 to 18	M3
20	4.5 to 20	M3, M4	1.5 to 20	M3, M4
30	5 to 22	M3, M4, M5	2 to 22	M3, M4, M5

Symbol: A3

The long shaft can be further shortened by machining male threads into it. (If shortening the shaft is not required, indicate "*" for dimension X.)

- Applicable shaft type: W

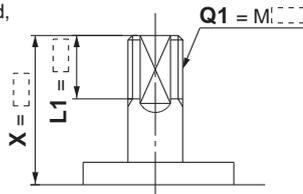


[mm]

Size	CRB2			CRBU2		
	X	L1 max	Q1	X	L1 max	Q1
10	9 to 14	X-5	M4	7 to 14	X-3	M4
15	11 to 18	X-6	M5	8.5 to 18	X-3.5	M5
20	13 to 20	X-7	M6	10 to 20	X-4	M6
30	16 to 22	X-8	M8	13 to 22	X-5	M8

Symbol: A5

The long shaft can be further shortened by machining it into a stepped round shaft. (If shortening the shaft is not required, indicate "*" for dimension X.)

- Applicable shaft type: W
- Equal dimensions are indicated by the same marker. (If not specifying dimension CA, indicate "*" instead.)

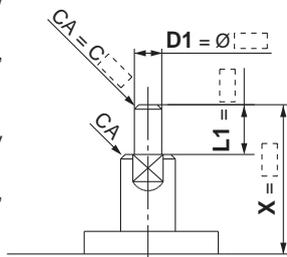

[mm]


Size	CRB2			CRBU2		
	X	L1 max	D1	X	L1 max	D1
10	4 to 14	X-3	Ø 3	2 to 14	X-1	Ø 3
15	5 to 18	X-4	Ø 3 to Ø 4	3 to 18	X-1.5	Ø 3 to Ø 4
20	6 to 20	X-4.5	Ø 3 to Ø 5	3 to 20	X-1.5	Ø 3 to Ø 5
30	6 to 22	X-5	Ø 3 to Ø 6	3 to 22	X-2	Ø 3 to Ø 6

Axial: Bottom (Short shaft side)

Symbol: A2

The short shaft can be further shortened by machining female threads into it. (If shortening the shaft is not required, indicate "*" for dimension Y.)

- Not available for size 10
- The maximum dimension L2 is, as a rule, twice the thread size. (Example) For M3: L2 = 6 mm
- Applicable shaft type: W

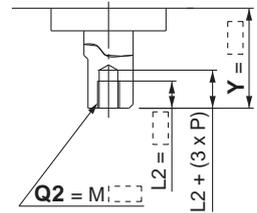


[mm]

Size	CRB2, CRBU2	
	Y	Q2
15	1.5 to 9	M3
20	1.5 to 10	M3, M4
30	2 to 13	M3, M4, M5
40	4.5 to 15	M3, M4, M5

Symbol: A4

The short shaft can be further shortened by machining male threads into it. (If shortening the shaft is not required, indicate "*" for dimension Y.)

- Applicable shaft type: W

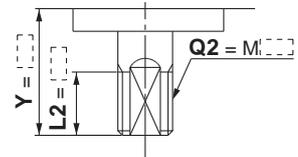


[mm]

Size	CRB2, CRBU2		
	Y	L2 max	Q2
10	7 to 8	Y-3	M4
15	8.5 to 9	Y-3.5	M5
20	10	Y-4	M6
30	13	Y-5	M8
40	15	Y-6	M10

Symbol: A6

The short shaft can be further shortened by machining it into a stepped round shaft. (If shortening the shaft is not required, indicate "*" for dimension Y.)

- Applicable shaft type: W
- Equal dimensions are indicated by the same marker. (If not specifying dimension CB, indicate "*" instead.)

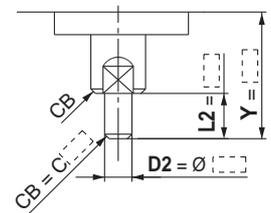

[mm]


Size	CRB2, CRBU2		
	Y	L2 max	D2
10	2 to 8	Y-1	Ø 3
15	3 to 9	Y-1.5	Ø 3 to Ø 4
20	3 to 10	Y-1.5	Ø 3 to Ø 5
30	3 to 13	Y-2	Ø 3 to Ø 6
40	6 to 15	Y-4.5	Ø 3 to Ø 8

Axial: Top (Long shaft side)

Symbol: A7

The long shaft can be further shortened by machining it into a stepped round shaft with male threads. (If shortening the shaft is not required, indicate "*" for dimension X.)

- Applicable shaft type: W
- Equal dimensions are indicated by the same marker. (If not specifying dimension CA, indicate "*" instead.)

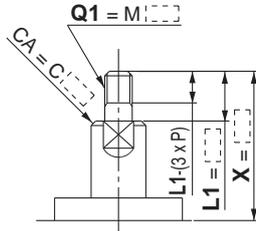


[mm]

Size	CRB2			CRBU2		
	X	L1 max	Q1	X	L1 max	Q1
10	7.5 to 14	X-3	3	5.5 to 14	X-1	3
15	10 to 18	X-4	3, 4	7.5 to 18	X-1.5	3
20	12 to 20	X-4.5	3, 4, 5	9 to 20	X-1.5	3, 4
30	14 to 22	X-5	3, 4, 5, 6	11 to 22	X-2	3, 4, 5, 6

Symbol: A9

The long shaft can be further shortened by changing the length of the standard chamfer on the long shaft side. (If shortening the shaft is not required, indicate "*" for dimension X.)

- Applicable shaft type: W

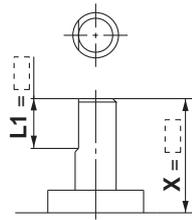


[mm]

Size	CRB2		CRBU2	
	X	L1	X	L1
10	5 to 14	9-(14-X) to (X-3)	3 to 14	9-(14-X) to (X-1)
15	8 to 18	10-(18-X) to (X-4)	5.5 to 18	10-(18-X) to (X-1.5)
20	10 to 20	10-(20-X) to (X-4.5)	7 to 20	10-(20-X) to (X-1.5)
30	10 to 22	12-(22-X) to (X-5)	7 to 22	10-(22-X) to (X-2)

Symbol: A11

The long shaft can be further shortened by machining a double-sided chamfer onto it. (If altering the standard chamfer and shortening the shaft are not required, indicate "*" for both the L1 and X dimensions.)

- Since L1 is a standard chamfer, dimension E1 is 0.5 mm or more, and 1 mm or more with a shaft bore size of $\varnothing 30$.
- Applicable shaft type: W

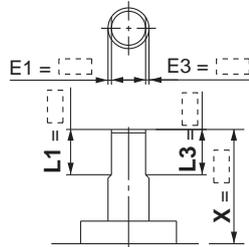

[mm]


Size	CRB2			CRBU2		
	X	L1	L3 max	X	L1	L3 max
10	5 to 14	9-(14-X) to (X-3)	X-3	3 to 14	9-(14-X) to (X-1)	X-1
15	8 to 18	10-(18-X) to (X-4)	X-4	3 to 18	10-(18-X) to (X-1.5)	X-1.5
20	10 to 20	10-(20-X) to (X-4.5)	X-4.5	3 to 20	10-(20-X) to (X-1.5)	X-1.5
30	10 to 22	12-(22-X) to (X-5)	X-5	5 to 22	12-(22-X) to (X-2)	X-2

Axial: Bottom (Short shaft side)

Symbol: A8

The short shaft can be further shortened by machining it into a stepped round shaft with male threads. (If shortening the shaft is not required, indicate "*" for dimension Y.)

- Applicable shaft type: W
- Equal dimensions are indicated by the same marker. (If not specifying dimension CB, indicate "*" instead.)

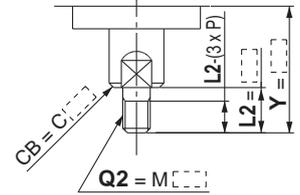


[mm]

Size	CRB2, CRBU2		
	Y	L2 max	Q2
10	5.5 to 8	Y-1	3
15	7.5 to 9	Y-1.5	3, 4
20	9 to 10	Y-1.5	3, 4, 5
30	11 to 13	Y-2	3, 4, 5, 6
40	14 to 15	Y-4.5	3, 4, 5, 6, 8

Symbol: A10

The short shaft can be further shortened by changing the length of the standard chamfer on the short shaft side. (If shortening the shaft is not required, indicate "*" for dimension Y.)

- Applicable shaft type: W

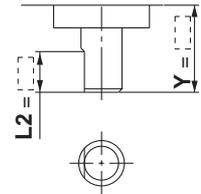

[mm]


Size	CRB2, CRBU2	
	Y	L2
10	3 to 8	5-(8-Y) to (Y-1)
15	3 to 9	6-(9-Y) to (Y-1.5)
20	3 to 10	7-(10-Y) to (Y-1.5)
30	5 to 13	8-(13-Y) to (Y-2)
40	7 to 15	9-(15-Y) to (Y-2) [9-(15-Y) to (Y-4.5)] (Note)

Note) Values inside [] are for the CRBU2.

Symbol: A12

The short shaft can be further shortened by machining a double-sided chamfer onto it. (If altering the standard chamfer and shortening the shaft are not required, indicate "*" for both the L2 and Y dimensions.)

- Since L2 is a standard chamfer, dimension E2 is 0.5 mm or more, and 1 mm or more with shaft bore size of $\varnothing 30$ and $\varnothing 40$.
- Applicable shaft type: W

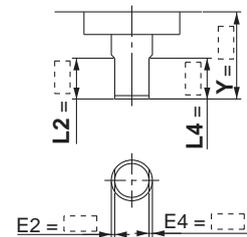

[mm]

Size	CRB2, CRBU2		
	Y	L2	L4 max
10	3 to 8	5-(8-Y) to (Y-1)	Y-1
15	3 to 9	6-(2-Y) to (Y-1.5)	Y-1.5
20	3 to 10	7-(10-Y) to (Y-1.5)	Y-1.5
30	5 to 13	8-(13-Y) to (Y-2)	Y-2
40	7 to 15	9-(15-Y) to (Y-4.5)	Y-4.5

CRB2

CRB2□WU

CRBU2

CRBU2WU

Simple Specials

Made to Order

Component Unit


Angle Adjustment Setting

Auto Switch Mounting

Axial: Top (Long shaft side)

Symbol: A14

Applicable to single vane type only. A special end is machined onto the long shaft, and a through-hole is drilled into it. Female threads are machined into the through-hole, whose diameter is equivalent to the pilot hole diameter.

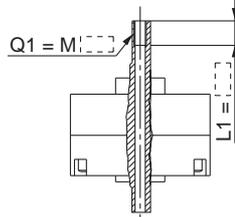

- Not available for size 10
- The maximum dimension L1 is, as a rule, twice the thread size. (Example) For M3: L1 max. = 6 mm
- A parallel key is used on the long shaft for size 40.
- Applicable shaft type: W


The above figure shows the CRB2 series.

Thread	Size CRB2, CRBU2 [mm]			
	15	20	30	40
M3 x 0.5	∅ 2.5	∅ 2.5	∅ 2.5	∅ 2.5
M4 x 0.7	—	∅ 3.3	∅ 3.3	—
M5 x 0.8	—	—	∅ 4.2	—

Symbol: A17

The long shaft is shortened.

- Applicable shaft type: W

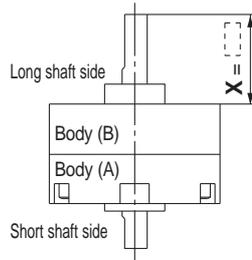

The above figure shows the CRB2 series.


Size	CRB2, CRBU2 [mm]	
	X	X
10	3 to 14	1 to 14
15	4 to 18	1.5 to 18
20	4.5 to 20	1.5 to 20
30	5 to 22	2 to 22
40	18 to 30	18 to 30

Symbol: A21

The long shaft can be further shortened by machining it into a stepped round shaft with a double-sided chamfer.

(If shortening the shaft is not required, indicate "*" for dimension X.)

- Applicable shaft type: W
- Equal dimensions are indicated by the same marker. (If not specifying dimension CA, indicate "*" instead.)

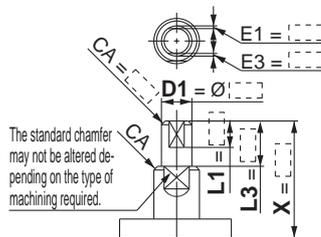


The standard chamfer may not be altered depending on the type of machining required.

Size	CRB2				CRBU2			
	X	L1 max	L3	D1	X	L1 max	L3	D1
10	6 to 14	X-4.5	L1 + 1.5	∅ 3	4 to 14	X-2.5	L1 + 1.5	∅ 3
15	7 to 18	X-5.5	L1 + 1.5	∅ 3 to ∅ 4	4.5 to 18	X-3	L1 + 1.5	∅ 3 to ∅ 4
20	8 to 20	X-6.5	L1 + 2	∅ 3 to ∅ 5	5 to 20	X-3.5	L1 + 2	∅ 3 to ∅ 5
30	10 to 22	X-8	L1 + 3	∅ 3 to ∅ 6	7 to 22	X-5	L1 + 3	∅ 3 to ∅ 6

Axial: Bottom (Short shaft side)

Symbol: A15

Applicable to single vane type only. A special end is machined onto the short shaft, and a through-hole is drilled into it. Female threads are machined into the through-hole, whose diameter is equivalent to the pilot hole diameter.

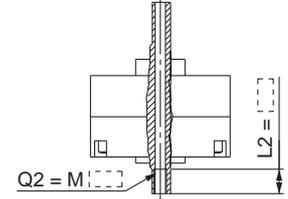

- A parallel key is used on the long shaft for size 40.
- Not available for size 10
- The maximum dimension L2 is, as a rule, twice the thread size. (Example) For M4: L2 max. = 8 mm
- Applicable shaft type: W


The above figure shows the CRB2 series.

Thread	Size CRB2, CRBU2 [mm]			
	15	20	30	40
M3 x 0.5	∅ 2.5	∅ 2.5	∅ 2.5	∅ 2.5
M4 x 0.7	—	∅ 3.3	∅ 3.3	—
M5 x 0.8	—	—	∅ 4.2	—

Symbol: A18

The short shaft is shortened.

- A parallel key is used on the long shaft for size 40.
- Applicable shaft type: W

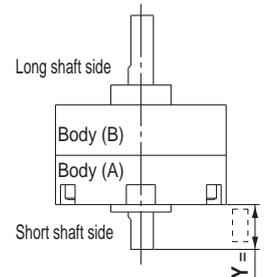

The above figure shows the CRB2 series.


Size	CRB2, CRBU2 [mm]
	Y
10	1 to 8
15	1.5 to 9
20	1.5 to 10
30	2 to 13
40	4.5 to 15

Symbol: A22

The short shaft can be further shortened by machining it into a stepped round shaft with a double-sided chamfer. (If shortening the shaft is not required, indicate "*" for dimension Y.)

The standard chamfer may not be altered depending on the type of machining required.

- Applicable shaft type: W
- Equal dimensions are indicated by the same marker. (If not specifying dimension CB, indicate "*" instead.)

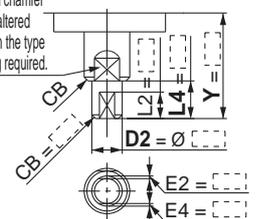

Size	CRB2, CRBU2 [mm]			
	Y	L1 max	L4	D2
10	4 to 8	Y-2.5	L2 + 1.5	∅ 3
15	4.5 to 9	Y-3	L2 + 1.5	∅ 3 to ∅ 4
20	5 to 10	Y-3.5	L2 + 2	∅ 3 to ∅ 5
30	7 to 13	Y-5	L2 + 3	∅ 3 to ∅ 6
40	8 to 15	Y-5.5	L2 + 5 [L2 + 3] (Note)	∅ 3 to ∅ 6


Note) Values inside [] are for the CRBU2.

Double Shaft

Symbol: A13

Applicable to single vane type only.
Shaft with through-hole

- Not available for size 10
- Minimum machining diameter for d1 is 0.1 mm.
- A parallel key is used on the long shaft for size 40.
- Applicable shaft type: W

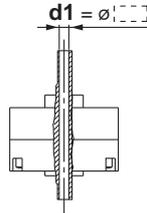


The above figure shows the CRB2 series.

Size	CRB2, CRBU2	
	d1	
15	Ø 2.5	
20	Ø 2.5 to Ø 3.5	
30	Ø 2.5 to Ø 4	
40	Ø 2.5 to Ø 3	

Symbol: A16

Applicable to single vane type only.
A special end is machined onto both the long and short shafts, and a through-hole is drilled into both shafts. Female threads are machined into the through-holes, whose diameter is equivalent to the diameter of the pilot holes.

- Not available for size 10
- The maximum dimension L1 is, as a rule, twice the thread size.
(Example) For M5: L1 max. = 10 mm
- A parallel key is used on the long shaft for size 40.
- Applicable shaft type: W
- Equal dimensions are indicated by the same marker.

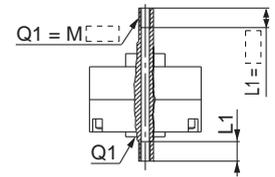


The above figure shows the CRB2 series.

Thread	CRB2, CRBU2			
	15	20	30	40
M3 x 0.5	Ø 2.5	Ø 2.5	Ø 2.5	Ø 2.5
M4 x 0.7	—	Ø 3.3	Ø 3.3	—
M5 x 0.8	—	—	Ø 4.2	—

Symbol: A19

Both the long shaft and short shaft are shortened.

- A parallel key is used on the long shaft for size 40.
- Applicable shaft type: W

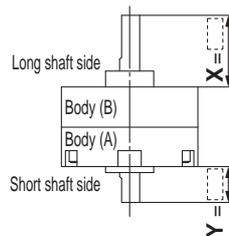


The above figure shows the CRB2 series.

Size	CRB2		CRBU2	
	X	Y	X	Y
10	3 to 14	1 to 8	1 to 14	1 to 8
15	4 to 18	1.5 to 9	1.5 to 18	1.5 to 9
20	4.5 to 20	1.5 to 10	1.5 to 20	1.5 to 10
30	5 to 22	2 to 13	2 to 22	2 to 13
40	18 to 30	4.5 to 15	18 to 30	4.5 to 15

Symbol: A20

The shafts are reversed.
(Both the long shaft and the short shaft are shortened.)

- A parallel key is used on the long shaft for size 40.
- Applicable shaft type: W
- Dimensions inside () are for double vane type of size 10.

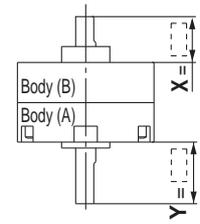

The above figure shows the CRB2 series.


Size	CRB2		CRBU2	
	X	Y	X	Y
10	3 to 10 (19)	1 to 12 (3)	1 to 3 (12)	1 to 19 (10)
15	4 to 11.5	1.5 to 15.5	1.5 to 6.5	1.5 to 20.5
20	4.5 to 13	1.5 to 17	1.5 to 7.5	1.5 to 22.5
30	5 to 16	2 to 19	2 to 8.5	2 to 26.5
40	6.5 to 17	16 to 28	3 to 9	24 to 36

Symbol: A23

The long shaft can be further shortened by machining right-angle double-sided chamfer onto it.

(If altering the standard chamfer and shortening the shaft are not required, indicate "*" for both the L1 and X dimensions.)

- Since L1 is a standard chamfer, dimension E1 is 0.5 mm or more, and 1 mm or more with a shaft bore size of Ø 30 and Ø 40.
- Applicable shaft type: W

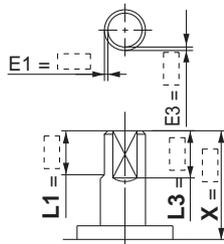


[mm]

Size	CRB2			CRBU2		
	X	L1	L3 max	X	L1	L3 max
10	5 to 14	9-(14-X) to (X-3)	X-3	3 to 14	9-(14-X) to (X-1)	X-1
15	8 to 18	10-(18-X) to (X-4)	X-4	3 to 18	10-(18-X) to (X-1.5)	X-1.5
20	10 to 20	10-(20-X) to (X-4.5)	X-4.5	3 to 20	10-(20-X) to (X-1.5)	X-1.5
30	10 to 22	12-(22-X) to (X-5)	X-5	5 to 22	12-(22-X) to (X-2)	X-2

Symbol: A24

Double key
Keys and keyways are machined additionally at 180° from the standard position.

- Applicable shaft type: W
- Equal dimensions are indicated by the same marker.

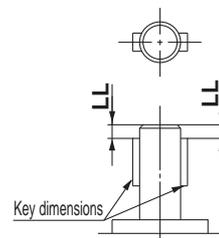

[mm]

Size	CRB2, CRBU2	
	Key dimensions	LL
40	4 x 4 x 20	2

CRB2

CRB2□WU

CRBU2

CRBU2WU

Simple Specials

Made to Order

Component Unit

Angle Adjustment Setting

Auto Switch Mounting

Series **CRB2/CRBU2** (Size: 10, 15, 20, 30, 40)

Simple Specials

-XA31 to -XA58: Shaft Pattern Sequencing II

Shaft shape pattern is dealt with simple made-to-order system.

Please contact SMC for a specification sheet when placing an order.


Symbol

Shaft Pattern Sequencing II


-XA31 to -XA58

Applicable shaft type: S, J, K, T, Y

Standard type/Series **CRB2**

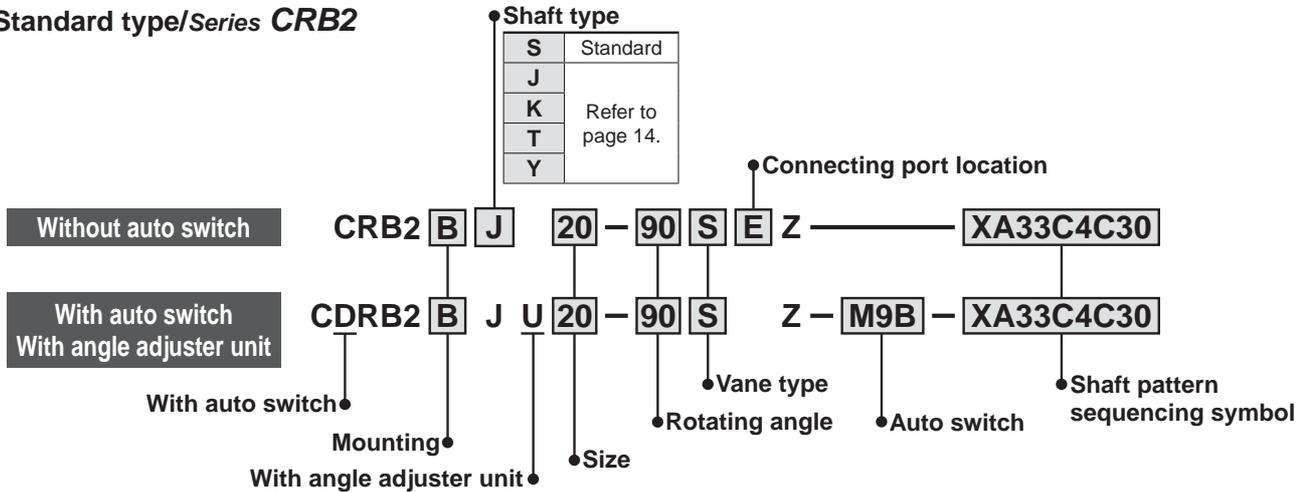

Free mount type/Series **CRBU2**

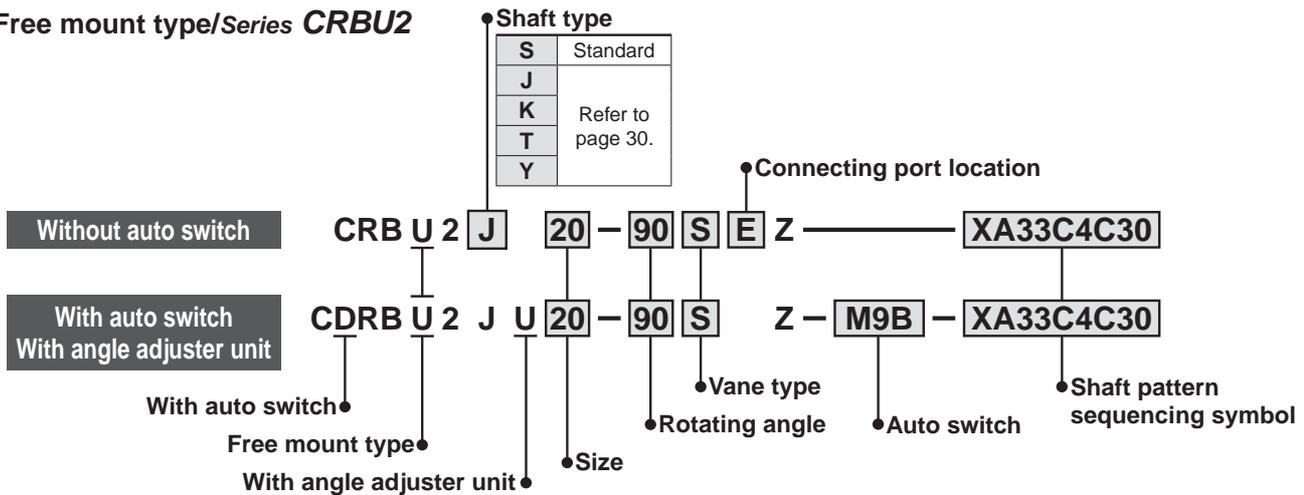

Shaft Pattern Sequencing Symbol

● Axial: Top (Long shaft side)

Symbol	Description	Shaft type	Applicable size				
			10	15	20	30	40
XA31	Shaft-end female thread	S, Y		●	●	●	
XA33	Shaft-end female thread	J, K, T		●	●	●	●
XA37	Stepped round shaft	J, K, T	●	●	●	●	●
XA45	Middle-cut chamfer	J, K, T	●	●	●	●	●
XA47	Machined keyway	J, K, T			●	●	
XA48	Change of long shaft length	S, Y	●	●	●	●	●
XA51	Change of long shaft length	J, K, T	●	●	●	●	●

● Axial: Bottom (Short shaft side)

Symbol	Description	Shaft type	Applicable size				
			10	15	20	30	40
XA32*	Shaft-end female thread	S, Y		●	●	●	
XA34*	Shaft-end female thread	J, K, T		●	●	●	●
XA38*	Stepped round shaft	K	●	●	●	●	●
XA46*	Middle-cut chamfer	K	●	●	●	●	●
XA49*	Change of short shaft length	Y	●	●	●	●	●
XA52*	Change of short shaft length	K	●	●	●	●	●
XA55*	Change of short shaft length	J	●	●	●	●	●

● Double Shaft

Symbol	Description	Shaft type	Applicable size				
			10	15	20	30	40
XA39*	Shaft through-hole	S, Y		●	●	●	●
XA40*	Shaft through-hole	K, T		●	●	●	●
XA41*	Shaft through-hole	J		●	●	●	●
XA42*	Shaft through-hole + Shaft-end female thread	S, Y		●	●	●	●
XA43*	Shaft through-hole + Shaft-end female thread	K, T		●	●	●	●
XA44*	Shaft through-hole + Shaft-end female thread	J		●	●	●	●
XA50*	Change of double shaft length	Y	●	●	●	●	●
XA53*	Change of double shaft length	K	●	●	●	●	●
XA57*	Change of double shaft length	J	●	●	●	●	●
XA58*	Reversed shaft, Change of double shaft length	J	●	●	●	●	●

* These specifications are not available for rotary actuators with auto switch and/or with angle adjuster unit.

Combination

XA□ Combination

Symbol	Description	Axial direction		Applicable shaft type					Combination																			
		Top	Bottom	J	K	S	T	Y																				
XA31	Shaft-end female thread	●				●	●		XA31	* Shaft type available for combination																		
XA32	Shaft-end female thread	●				●	●	●	XA32																			
XA33	Shaft-end female thread	●		●	●				XA33																			
XA34	Shaft-end female thread	●		●	●				●	XA34																		
XA37	Stepped round shaft	●		●	●				●	XA37																		
XA38	Stepped round shaft	●		●	●				K*	K*	XA38																	
XA39	Shaft through-hole	●	●			●	●					XA39																
XA40	Shaft through-hole	●	●			●	●					XA40																
XA41	Shaft through-hole	●	●			●	●					XA41																
XA42	Shaft through-hole + Shaft-end female thread	●	●			●	●					XA42																
XA43	Shaft through-hole + Shaft-end female thread	●	●			●	●					XA43																
XA44	Shaft through-hole + Shaft-end female thread	●	●			●	●					XA44																
XA45	Middle-cut chamfer	●		●	●		●					XA45																
XA46	Middle-cut chamfer	●		●	●		●					XA46																
XA47	Machined keyway	●		●	●		●					XA47																
XA48	Change of long shaft length	●				●	●		●			XA48																
XA49	Change of short shaft length	●					●	Y*			Y*	XA49																
XA50	Change of double shaft length	●	●				●				Y*	●	XA50															
XA51	Change of long shaft length	●		●	●		●		●	K,T*	J*	●	K*	●	XA51													
XA52	Change of short shaft length	●		●	●					K*		K*	K*	K*	K*	XA52												
XA53	Change of double shaft length	●		●	●					K*		K*	K*	K*	K*	●	XA53											
XA55	Change of short shaft length	●	●							J*		J*	J*	J*		J*	XA55											
XA57	Change of double shaft length	●	●							J*		J*	J*	J*		J*	●	XA57										
XA58	Reversed shaft, Change of double shaft length	●	●							J*		J*	J*	J*		J*	J*	J*										

A total of two XA□ and XA□ combinations is available.
 Example: XA31A32

XA□, XC□ Combination

Combination other than XA□, such as Made to Order (XC□), is also available.
 Refer to pages 49 to 51 for details on the Made-to-Order specifications.

Symbol	Description	Applicable size	Combination
			XA31 to XA58
XC1*	Add connecting ports	10, 15, 20, 30, 40	●
XC2*	Change threaded holes to through-holes	15, 20, 30, 40	●
XC3*	Change the screw position	10, 15, 20, 30, 40	●
XC4	Change the rotation range		●
XC5*	Change rotation range between 0 to 200°		●
XC6*	Change rotation range between 0 to 110°		●
XC7*	Reversed shaft		—
XC30	Fluorine grease		●
X5**	For M5 port		10, 15

* These specifications are not available for rotary actuators with auto switch and/or with angle adjuster unit.
 ** Only the shaft type W or J can select "with auto switch" and/or "with angle adjuster unit".
 A total of four XA□ and XC□ combinations is available.
 Example: XA33A34C5C30

CRB2

CRB2□WU

CRBU2

CRBU2WU

Simple Specials

Made to Order

Component Unit

Angle Adjustment Setting


Auto Switch Mounting

Axial: Top (Long shaft side)

Symbol: A31

Machine female threads into the long shaft.

- The maximum dimension L1 is, as a rule, twice the thread size.
(Example) For M3: L1 = 6 mm
- Applicable shaft types: S, Y

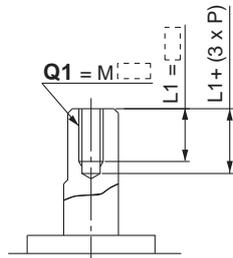


[mm]

Size	CRB2, CRBU2	
	Q1	
	S	Y
10	Not available	
15	M3	
20	M3, M4	
30	M3, M4, M5	

Symbol: A33

Machine female threads into the long shaft.

- The maximum dimension L1 is, as a rule, twice the thread size.
(Example) For M3: L1 = 6 mm
- Applicable shaft types: J, K, T

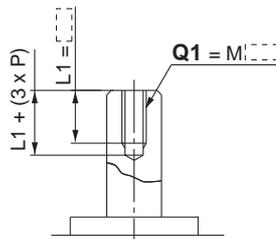

[mm]


Size	CRB2, CRBU2		
	Q1		
	J	K	T
10	Not available		
15	M3		
20	M3, M4		
30	M3, M4, M5		
40	M3, M4, M5		

Symbol: A37

The long shaft can be further shortened by machining it into a stepped round shaft.

(If shortening the shaft is not required, indicate "*" for dimension X.)

- Applicable shaft types: J, K, T
- Equal dimensions are indicated by the same marker.
(If not specifying dimension CA, indicate "*" instead.)

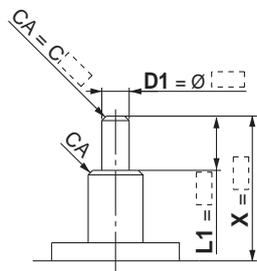

[mm]


Size	CRB2			CRBU2		
	X	L1 max	D1	X	L1 max	D1
10	4 to 14	X-3	∅ 3 to ∅ 3.9	2 to 14	X-1	∅ 3 to ∅ 3.9
15	5 to 18	X-4	∅ 3 to ∅ 4.9	3 to 18	X-1.5	∅ 3 to ∅ 4.9
20	6 to 20	X-4.5	∅ 3 to ∅ 5.9	3 to 20	X-1.5	∅ 3 to ∅ 5.9
30	6 to 22	X-5	∅ 3 to ∅ 7.9	3 to 22	X-2	∅ 3 to ∅ 7.9
40	8 to 30	X-6.5	∅ 3 to ∅ 9.9	4 to 30	X-3	∅ 3 to ∅ 9.9

Axial: Bottom (Short shaft side)

Symbol: A32

Machine female threads into the short shaft.

- The maximum dimension L2 is, as a rule, twice the thread size.
(Example) For M4: L2 = 8 mm
However, for M5 with S shaft, the maximum dimension L2 is 1.5 times the thread size.
- Applicable shaft types: S, Y

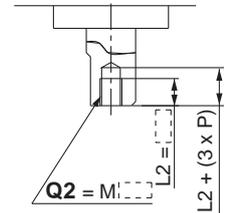


[mm]

Size	CRB2, CRBU2	
	Q2	
	S	Y
10	Not available	
15	M3	
20	M3, M4	
30	M3, M4, M5	

Symbol: A34

Machine female threads into the short shaft.

- The maximum dimension L2 is, as a rule, twice the thread size.
(Example) For M3: L2 = 6 mm
However, for M5 with T shaft, the maximum dimension L2 is 1.5 times the thread size.
- Applicable shaft types: J, K, T

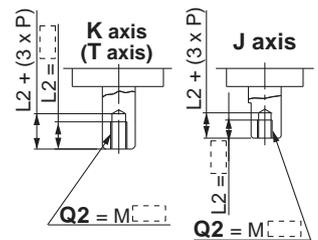

[mm]


Size	CRB2, CRBU2		
	Q2		
	J	K	T
10	Not available		
15	M3		
20	M3, M4		
30	M3, M4, M5		
40	M3, M4, M5		

Symbol: A38

The short shaft can be further shortened by machining it into a stepped round shaft.

(If shortening the shaft is not required, indicate "*" for dimension Y.)

- Applicable shaft type: K
- Equal dimensions are indicated by the same marker.
(If not specifying dimension CB, indicate "*" instead.)

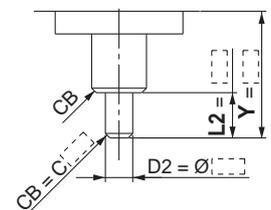

[mm]

Size	CRB2, CRBU2		
	Y	L2 max	D2
10	2 to 14	Y-1	∅ 3 to ∅ 3.9
15	3 to 18	Y-1.5	∅ 3 to ∅ 4.9
20	3 to 20	Y-1.5	∅ 3 to ∅ 5.9
30	3 to 22	Y-2	∅ 3 to ∅ 7.9
40	6 to 30	Y-4.5	∅ 5 to ∅ 9.9

Axial: Top (Long shaft side)


Symbol: A45

The long shaft can be further shortened by machining a middle-cut chamfer into it.

(The position of the chamfer is same as the standard one.)

(If shortening the shaft is not required, indicate "*" for dimension X.)

- Applicable shaft types: J, K, T

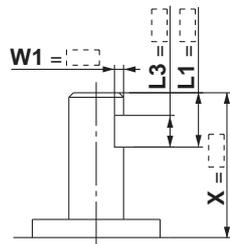

[mm]


Size	CRB2, CRBU2											
	X			W1			L1 max			L3 max		
	J	K	T	J	K	T	J	K	T	J	K	T
10	6.5 to 14			0.5 to 2			X-3			L1-1		
15	8 to 18			0.5 to 2.5			X-4			L1-1		
20	9 to 20			0.5 to 3			X-4.5			L1-1		
30	11.5 to 22			0.5 to 4			X-5			L1-2		
40	15.5 to 30			0.5 to 5			X-5.5			L1-2		

Symbol: A47

Machine a keyway into the long shaft. (The position of the keyway is the same as the standard model.)

The key must be ordered separately.

- Applicable shaft type: J, K, T

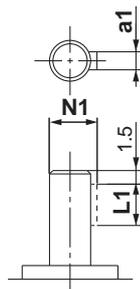


[mm]

Size	CRB2, CRBU2		
	a1	L1	N1
20	2h9 _{-0.025} ⁰	10	6.8
30	3h9 _{-0.025} ⁰	14	9.2

Symbol: A48

The long shaft is shortened.

- Applicable shaft type: S, Y

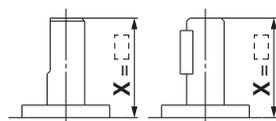

Size: 10 to 30 Size: 40

[mm]

Size	CRB2	CRBU2
	X	X
10	3 to 14	1 to 14
15	4 to 18	1.5 to 18
20	4.5 to 20	1.5 to 20
30	5 to 22	2 to 22
40	18 to 30	18 to 30

Axial: Bottom (Short shaft side)


Symbol: A46

The short shaft can be further shortened by machining a middle-cut chamfer into it.

(The position of the chamfer is same as the standard one.)

(If shortening the shaft is not required, indicate "*" for dimension Y.)

- Applicable shaft type: K

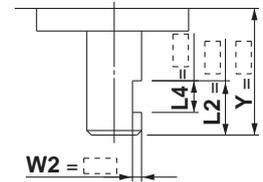


[mm]

Size	CRB2, CRBU2			
	Y	W2	L2 max	L4 max
10	4.5 to 14	0.5 to 2	Y-1	L2-1
15	5.5 to 18	0.5 to 2.5	Y-1.5	L2-1
20	6 to 20	0.5 to 3	Y-1.5	L2-1
30	8.5 to 22	0.5 to 4	Y-2	L2-2
40	13.5 to 30	0.5 to 5	Y-4.5	L2-2

Symbol: A49

The short shaft is shortened.

- Applicable shaft type: Y



Size: 10 to 30 Size: 40


[mm]

Size	CRB2, CRBU2
	Y
10	1 to 14
15	1.5 to 18
20	1.5 to 20
30	2 to 22
40	18 to 30

Symbol: A52

The short shaft is shortened.

- Applicable shaft type: K

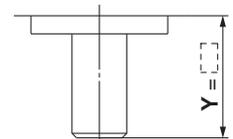

[mm]

Size	CRB2, CRBU2
	Y
10	1 to 14
15	1.5 to 18
20	1.5 to 20
30	2 to 22
40	4.5 to 30

CRB2

CRB2□WU

CRBU2

CRBU2WU

Simple Specials

Made to Order

Component Unit

Angle Adjustment Setting


Auto Switch Mounting

Axial: Top (Long shaft side)

Symbol: A51

The long shaft is shortened.

- Applicable shaft type: J, K, T

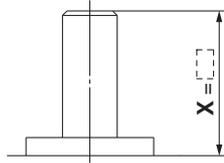

[mm]


Size	CRB2	CRBU2
	X	X
10	3 to 14	1 to 14
15	4 to 18	1.5 to 18
20	4.5 to 20	1.5 to 20
30	5 to 22	2 to 22
40	6.5 to 30	3 to 30

Axial: Bottom (Short shaft side)

Symbol: A55

The short shaft is shortened.

- Applicable shaft type: J



[mm]


Size	CRB2, CRBU2
	Y
10	1 to 8
15	1.5 to 9
20	1.5 to 10
30	2 to 13
40	4.5 to 15

Double Shaft

Symbol: A39

Applicable to single vane type only.
Shaft with through-hole (Additional machining of S, Y shaft)

- Applicable shaft type: S, Y
- Equal dimensions are indicated by the same marker.
- Not available for size 10
- A parallel key is used on the long shaft for size 20.
- Minimum machining diameter for d1 is 0.1 mm. The above figure shows the CRB2 series.

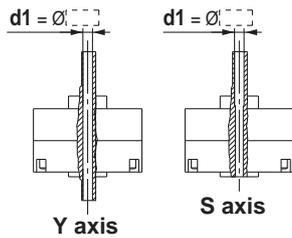


[mm]

Size	CRB2		CRBU2	
	S	Y	S	Y
	d1		d1	
15	Ø 2.5		Ø 2.5	
20	Ø 2.5 to Ø 3.5		Ø 2.5 to Ø 3.5	
30	Ø 2.5 to Ø 4		Ø 2.5 to Ø 4	
40	Ø 2.5 to Ø 3		Ø 2.5 to Ø 5	

Symbol: A40

Applicable to single vane type only.
Shaft with through-hole (Additional machining of K, T shaft)

- Applicable shaft type: K, T
- Equal dimensions are indicated by the same marker.
- Not available for size 10
- d1 = Ø 2.5, L1 = 18 (max.) for size 15; minimum machining diameter for d1 is 0.1 mm.
- d1 = d3 for size 20 to 40

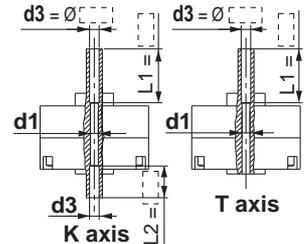

The above figure shows the CRB2 series.


[mm]

Size	CRB2, CRBU2			
	K	T	K	T
	d1		d3	
15	Ø 2.5		Ø 2.5 to Ø 3	
20	—		Ø 2.5 to Ø 4	
30	—		Ø 2.5 to Ø 4.5	
40	—		Ø 2.5 to Ø 5	

Symbol: A41

Applicable to single vane type only.
Shaft with through-hole

- Not available for size 10
- Applicable shaft type: J
- Equal dimensions are indicated by the same marker.

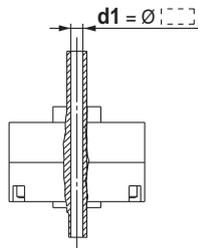

The above figure shows the CRB2 series.


[mm]

Size	CRB2, CRBU2
	d1
15	Ø 2.5
20	Ø 2.5 to Ø 3.5
30	Ø 2.5 to Ø 4
40	Ø 2.5 to Ø 4.5

Symbol: A42

Applicable to single vane type only.
A special end is machined onto both the long and short shafts, and a through-hole is drilled into both shafts. Female threads are machined into the through-holes, whose diameter is equivalent to the diameter of the pilot holes.

- Not available for size 10
- The maximum dimension L1 is, as a rule, twice the thread size. (Example) For M5: L1 max. = 10 mm However, for M5 on the short shaft of S shaft: L1 max. = 7.5 mm
- A parallel key is used on the long shaft for size 40.
- Applicable shaft type: S, Y
- Equal dimensions are indicated by the same marker.

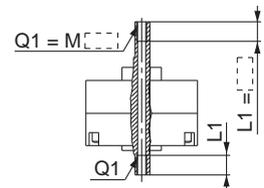

The above figure shows the CRB2 series.

[mm]


Size	CRB2, CRBU2			
	15	20	30	40
Thread	S	Y	S	Y
M3 x 0.5	Ø 2.5	Ø 2.5	Ø 2.5	Ø 2.5
M4 x 0.7	—	Ø 3.3	Ø 3.3	—
M5 x 0.8	—	—	Ø 4.2	—

Double Shaft

Symbol: A43

Applicable to single vane type only. A special end is machined onto both the long and short shafts, and a through-hole is drilled into both shafts. Female threads are machined into the through-holes, whose diameter is equivalent to the diameter of the pilot holes.

- Not available for size 10
- The maximum dimension L1 is, as a rule, twice the thread size. (Example) For M5: L1 max. = 10 mm
However, for M5 on the short shaft of T shaft: L1 max. = 7.5 mm
- Applicable shaft type: K, T
- Equal dimensions are indicated by the same marker.

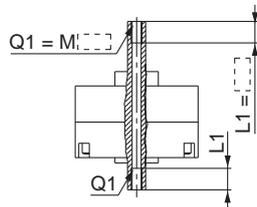


The above figure shows the CRB2 series.

Size Shaft type	CRB2, CRBU2			
	15	20	30	40
Thread	K T	K T	K T	K T
M3 x 0.5	Ø 2.5	Ø 2.5	Ø 2.5	Ø 2.5
M4 x 0.7	—	Ø 3.3	Ø 3.3	Ø 3.3
M5 x 0.8	—	—	Ø 4.2	Ø 4.2

Symbol: A44

Applicable to single vane type only. A special end is machined onto both the long and short shafts, and a through-hole is drilled into both shafts. Female threads are machined into the through-holes, whose diameter is equivalent to the diameter of the pilot holes.

- Not available for size 10
- The maximum dimension L1 is, as a rule, twice the thread size. (Example) For M5: L1 max. = 10 mm
- Applicable shaft type: J
- Equal dimensions are indicated by the same marker.

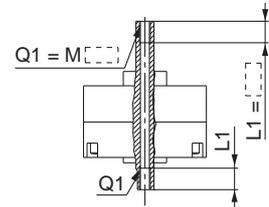


The above figure shows the CRB2 series.

Size	CRB2, CRBU2			
	15	20	30	40
Thread	15	20	30	40
M3 x 0.5	Ø 2.5	Ø 2.5	Ø 2.5	Ø 2.5
M4 x 0.7	—	Ø 3.3	Ø 3.3	Ø 3.3
M5 x 0.8	—	—	Ø 4.2	Ø 4.2

Symbol: A50

Both the long shaft and the short shaft are shortened.

- Applicable shaft type: Y

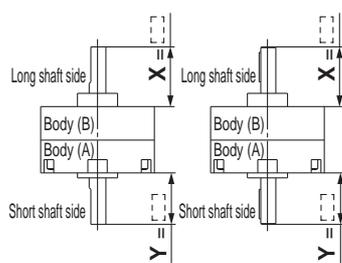

Size: 10 to 30 Size: 40


The above figure shows the CRB2 series. [mm]

Size	CRB2		CRBU2	
	X	Y	X	Y
10	3 to 14	1 to 14	1 to 14	1 to 14
15	4 to 18	1.5 to 18	1.5 to 18	1.5 to 18
20	4.5 to 20	1.5 to 20	1.5 to 20	1.5 to 20
30	5 to 22	2 to 22	2 to 22	2 to 22
40	18 to 30	18 to 30	18 to 30	18 to 30

Symbol: A53

Both the long shaft and the short shaft are shortened.

- Applicable shaft type: K

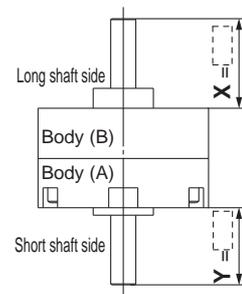


The above figure shows the CRB2 series. [mm]

Size	CRB2		CRBU2	
	X	Y	X	Y
10	3 to 14	1 to 14	1 to 14	1 to 14
15	4 to 18	1.5 to 18	1.5 to 18	1.5 to 18
20	4.5 to 20	1.5 to 20	1.5 to 20	1.5 to 20
30	5 to 22	2 to 22	2 to 22	2 to 22
40	6.5 to 30	4.5 to 30	3 to 30	4.5 to 30

Symbol: A57

Both the long shaft and the short shaft are shortened.

- Applicable shaft type: J

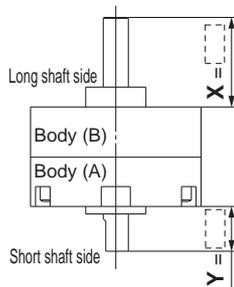

The above figure shows the CRB2 series. [mm]


Size	CRB2		CRBU2	
	X	Y	X	Y
10	3 to 14	1 to 14	1 to 14	1 to 14
15	4 to 18	1.5 to 18	1.5 to 18	1.5 to 18
20	4.5 to 20	1.5 to 20	1.5 to 20	1.5 to 20
30	5 to 22	2 to 22	2 to 22	2 to 22
40	6.5 to 30	4.5 to 30	3 to 30	3 to 30

Symbol: A58

The shafts are reversed. Additionally, both the long shaft and the short shaft are shortened.

(If shortening the shaft is not required, indicate "*" for dimension X, Y.)

- Applicable shaft type: J
- Dimensions inside () are for double vane type of size 10.

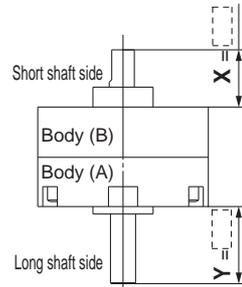

The above figure shows the CRB2 series. [mm]

Size	CRB2		CRBU2	
	X	Y	X	Y
10	3 to 10 (19)	1 to 12 (3)	1 to 3 (12)	1 to 19 (10)
15	4 to 11.5	1.5 to 15.5	1.5 to 6.5	1.5 to 20.5
20	4.5 to 13	1.5 to 17	1.5 to 7.5	1.5 to 22.5
30	5 to 16	2 to 19	2 to 8.5	2 to 26.5
40	6.5 to 17	4.5 to 28	3 to 9	4.5 to 36

CRB2

CRB2□WU

CRBU2

CRBU2WU

Simple Specials

Made to Order

Component Unit

Angle Adjustment Setting

Auto Switch Mounting

Series CRB2/CRBU2 (Size: 10, 15, 20, 30, 40)


Made to Order

-XC1, 2, 3, 4, 5, 6, 7, 30, X5


Symbol

-XC1 to -XC7, -XC30, X5

Standard type/Series CRB2

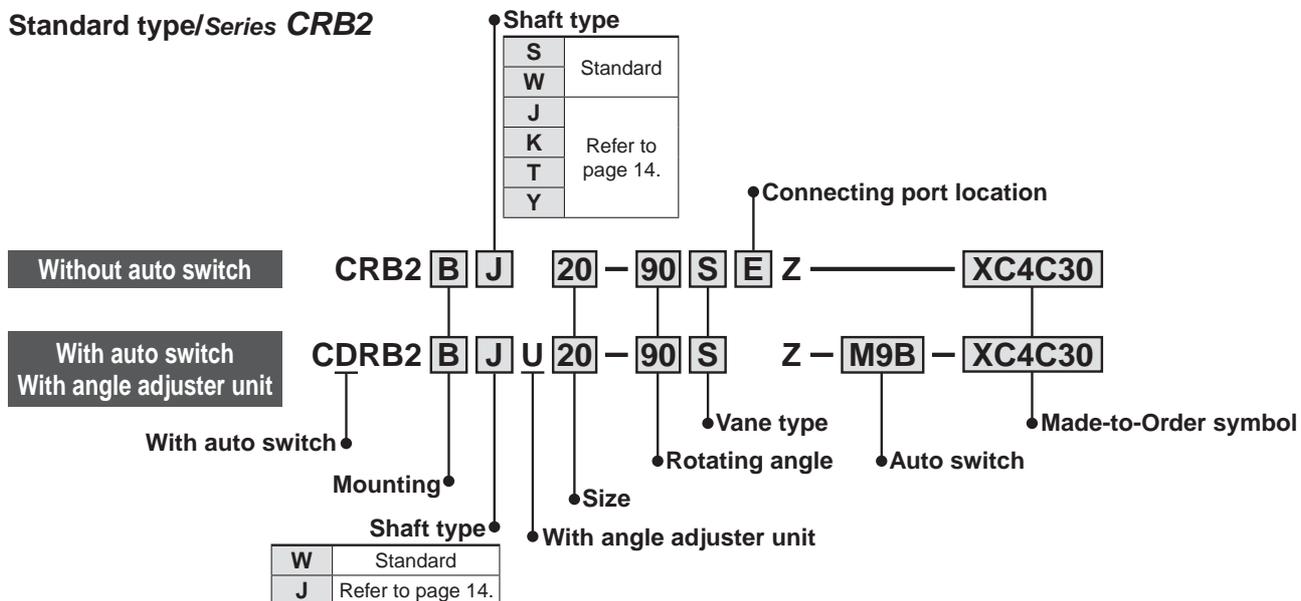

Free mount type/Series CRBU2

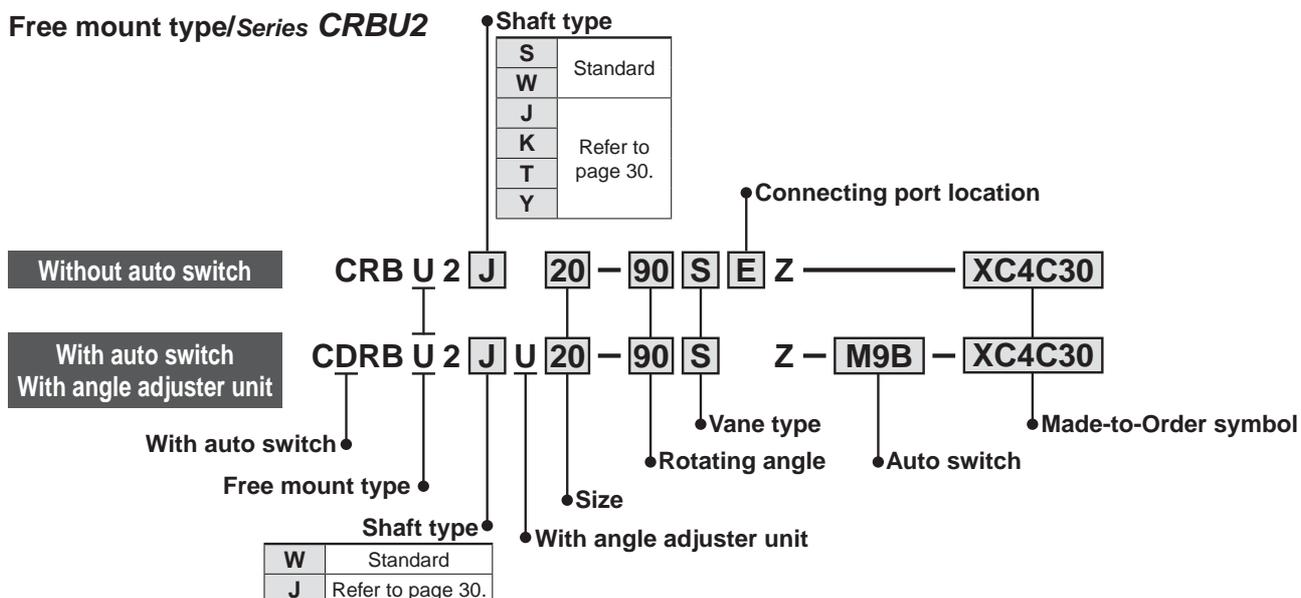

Made to Order Symbol

Symbol	Description	Applicable shaft type W, J, K, S, T, Y	Applicable size
XC1*	Add connecting ports	●	10
XC2*	Change threaded holes to through-holes	●	
XC3*	Change the screw position	●	
XC4	Change the rotation range	●	
XC5*	Change rotation range between 0 to 200°	●	
XC6*	Change rotation range between 0 to 110°	●	
XC7*	Reversed shaft	W, J	
XC30	Fluorine grease	●	40
X5**	For M5 port (90°/180°)	●	

* These specifications are not available for rotary actuators with auto switch and/or angle adjuster unit.

** Only the shaft type W or J can select "with auto switch" and/or "with angle adjuster unit".


Combination

Symbol	Combination						
XC1	XC1						
XC2	●	XC2					
XC3	●	—	XC3				
XC4	●	●	●	XC4			
XC5	●	●	●	—	XC5		
XC6	●	●	●	—	—	XC6	
XC7	●	●	●	●	●	—	XC7
XC30	●	●	●	●	●	●	●
X5	●	●	●	●	●	●	●

Symbol: C1

The connecting ports are added on the Body (A) end surface.
(It will have an aluminium surface since the additional machining will be left unfinished.)

- A parallel key is used instead of chamfer on the long shaft for size 40.
- Not available for the rotary actuator with auto switch

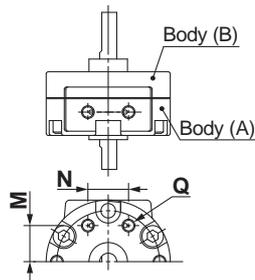


The above figure shows the CRB2 series.

Size	CRB2, CRBU2		
	Q	M	N
10	M3	8.5	9.5
15	M3	11	10
20	M5	14	13
30	M5	15.5	14
40	M5	21	20

Symbol: C3

The position of the screws for tightening the actuator body is changed.

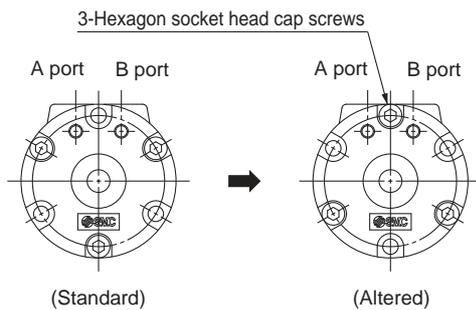


The above figure shows the CRB2 series. (Viewed from the short shaft side)

Symbol: C5

Applicable to single vane type only.
Start of rotation is 45° up from the bottom of the vertical line to the left side.


- Rotation tolerance for CRB2BW10 is $+5^{\circ}_0$
- Port size for CRB2BW10, 15 is M3.
- A parallel key is used instead of chamfer for size 40.

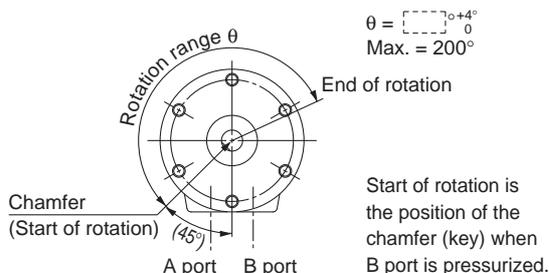

The above figure shows the CRB2 series. (Viewed from the long shaft side)

Symbol: C2


Series **CRB2**

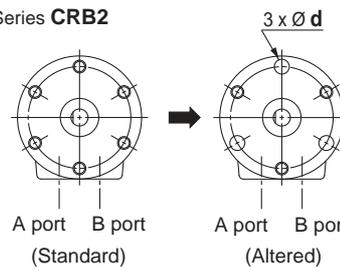

The threaded holes on the Body (B) are changed to through-holes.
(It will have an aluminium surface since the additional machining will be left unfinished.)

- Not available for the rotary actuator with auto switch

Series **CRBU2**

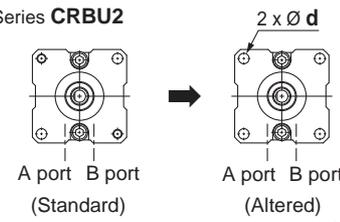


Size	CRB2, CRBU2	
	d	[mm]
15	3.4	
20	4.5	
30	5.5	
40	5.5	

(Viewed from the long shaft side)

Symbol: C4

Applicable to single vane type only.
The rotation range is changed. Rotating angle 90°.
Starts of rotation is the horizontal line (90° down from the top to the right side).

- Rotation tolerance for CRB2BW10 is $+5^{\circ}_0$
- A parallel key is used instead of chamfer on the long shaft for size 40.

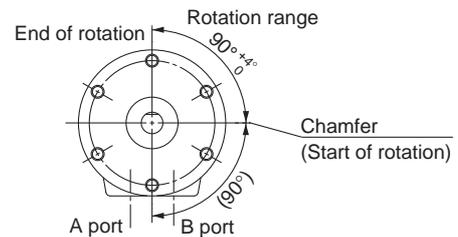


Start of rotation is the position of the chamfer (key) when A port is pressurized.
The above figure shows the CRB2 series. (Viewed from the long shaft side)

Symbol: C6

Applicable to single vane type only.
Start of rotation is horizontal line (90° down from the top to the left side).

- Rotation tolerance for CRB2BW10 is $+5^{\circ}_0$
- A parallel key is used instead of chamfer on the long shaft for size 40.

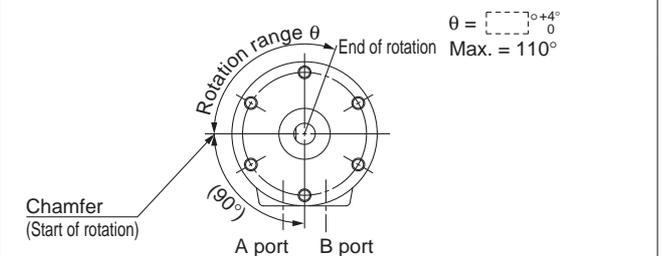

CRB2

CRB2□WU

CRBU2

CRBU2WU

Simple Specials

Made to Order

Component Unit

Angle Adjustment Setting


Auto Switch Mounting

Series CRB□2

Symbol: C7

The shafts are reversed.

- A parallel key is used instead of chamfer on the long shaft for size 40.
- Dimensions inside () are for double vane type of size 10.

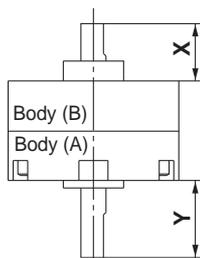

The above figure shows the CRB2 series.


[mm]

Size	CRB2		CRBU2	
	Y	X	Y	X
10	12 (3)	10 (19)	19 (10)	3 (12)
15	15.5	11.5	20.5	6.5
20	17	13	22.5	7.5
30	19	16	26.5	8.5
40	28	17	36	9

Symbol: X5

Specifications with connection port size of sizes 10 and 15 changed to M5

- The rotating angle is only 90° and 180°.
- The vane type is compatible with single vanes only.
- Only the shaft type W or J can select "with auto switch" and/or "with angle adjuster unit".

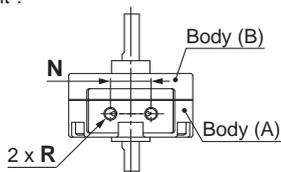

The above figure shows the CRB2 series.

[mm]

Size	CRB2, CRBU2	
	N	R
10	11.7	M5
15	11.7	M5


Symbol: C30

The standard grease is changed to fluorine grease. (Not the low-speed specification)

Series CRB□2 Component Unit

Auto Switch Unit and Angle Adjuster Unit

Series CRB2/CRBU2 Auto switch unit and/or angle adjuster unit can be mounted on the rotary actuator vane type.

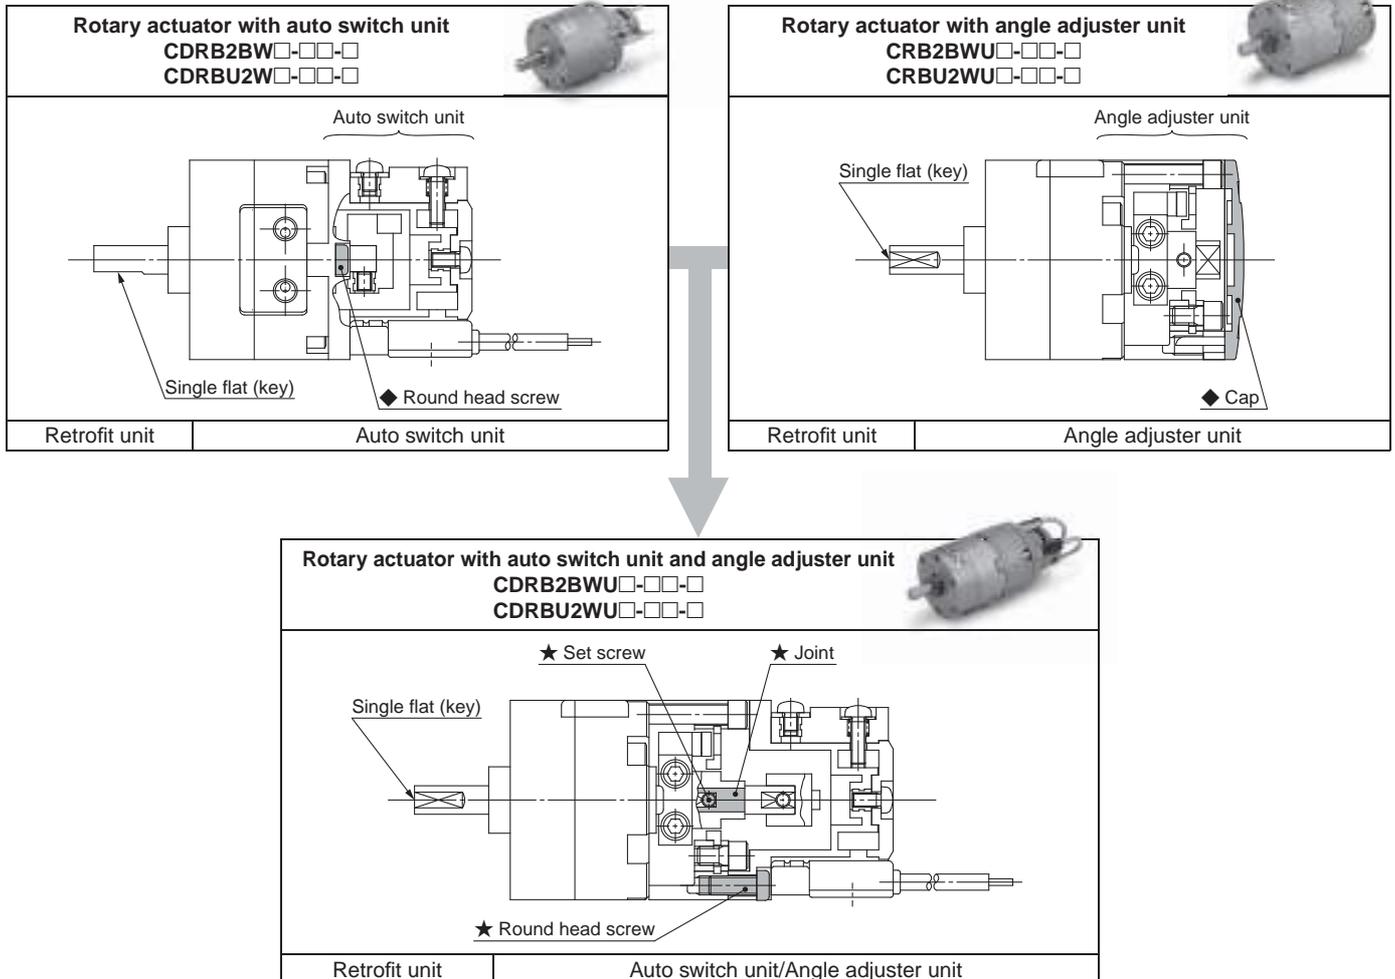

* The rotary actuator with auto switch and angle adjuster is basically a combination of the auto switch unit and angle adjuster unit.
The items marked with ★ are additional parts required for connection (joint unit parts), and the items marked with ◆ are unnecessary.

* Use a unit part number when ordering joint unit separately.

Note) The figures show the CRB2 series.

Unit Part Number for D-M9□

Size	Auto switch unit part number*1	Switch block unit part number Common to right-hand and left-hand	Angle adjuster unit part number	Auto switch angle adjuster unit part number	Joint unit part number*3
10	P611070-1M	P811010-8M	P811010-3	P811010-4M	P211070-10
15	P611090-1M		P811020-3	P811020-4M	P211090-10
20	P611060-1M	P811030-8M	P811030-3	P811030-4M	P211060-10
30	P611080-1M		P811040-3	P811040-4M	P211080-10
40	P611010-1M	P811010-8M	P811050-5	P811050-4M	P211010-10

Unit Part Number Common to Series (Except D-M9□)

Size	Auto switch unit part number*1	Switch block unit part number*2		Angle adjuster unit part number	Auto switch angle adjuster unit part number	Joint unit part number*3
		Right-hand	Left-hand			
10	P611070-1	P611070-8	P611070-9	P811010-3	P811010-4	P211070-10
15	P611090-1			P811020-3	P811020-4	P211090-10
20	P611060-1	P611060-8		P811030-3	P811030-4	P211060-10
30	P611080-1			P811040-3	P811040-4	P211080-10
40	P611010-1	P611010-8	P611010-9	P811050-3	P811050-4	P211010-10

*1. An auto switch will not be included, please order it separately.

*2. Auto switch unit comes with one right-hand and one left-hand switch blocks that are used for addition or when the switch block is damaged.
Since the solid state switch for size 10 and 15 requires no switch block, the unit part number will be the P211070-13.


*3. Joint unit is required to retrofit the angle adjuster unit to a rotary actuator with auto switch or to retrofit the auto switch unit to a rotary actuator with angle adjuster.

Series CRB□2

Angle Adjustment Setting

Rotating Angle Adjustment Method

Remove the resin cap in the illustrations below, slide the stopper block on the long groove and lock it into the appropriate position to adjust the rotating angle and rotating position. Protruding four chamfers for wrench on the output shaft that rotates allows manual operation and convenient positioning. (Refer to the rotating angle setting examples shown in the next page for details.)

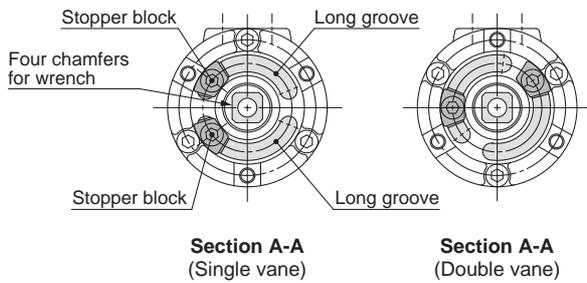


Note) For size 40, each stopper block comes with 2 holding screws.

Other Operating Method

Although one stopper block is mounted on each long groove for standard specifications as shown in the illustrations below, 2 stopper blocks can be mounted on one long groove.

Angle adjustment range when 2 stopper blocks are mounted on one long groove
 Size: 10, 4050°
 Size: 15, 20, 3060°



As shown in <Fig. b>, when mounting 2 stopper blocks on one long groove, by revolving each stopper block (A)(B), the rotation range of the output shaft with single flat (key) is adjustable, as described in <Fig. a>, within either left 50° or 60° against port A and B.
 (Rotation range of single flat (key) when mounting 2 stopper blocks on the other side's groove is the opposite side from <Fig. a> and the setting range is within either right 50° or 60° against port A and B.)

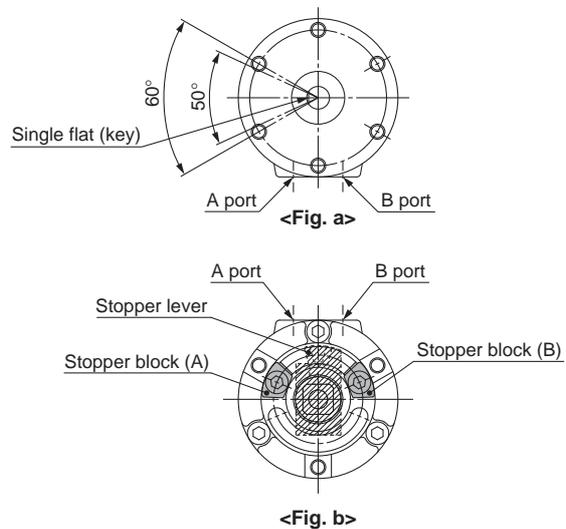

* These figures show the CRB2 series.



Rotating Angle Setting Examples

Example 1 The stopper ring is mounted on the standard position.
(Rotary actuator with a rotating angle of 270° is used.)

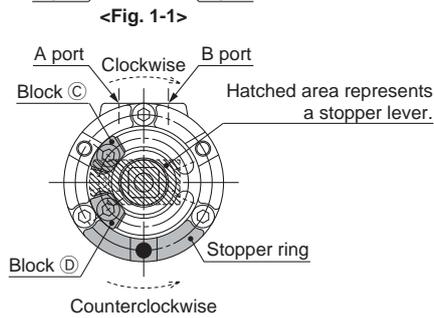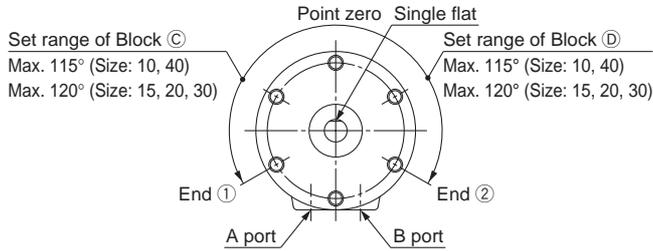



Lock Block ① in Fig. 1-2, and move Block ② clockwise to allow the rotation of the shaft with single flat in Fig. 1-1 from point zero to End ①. When Block ② is locked and Block ① is moved counterclockwise, the shaft with single flat in Fig. 1-1 rotates from point zero to End ②. The maximum rotation range of the shaft with single flat is as follows: Sizes 10, 40: up to 230°; Sizes 15, 20, 30: up to 240° (Fig. 1-2 shows when the rotating angle is 0°.)

Example 2 The stopper ring is mounted on 120° counterclockwise from the standard position shown in Fig. 1-2 of Example 1.

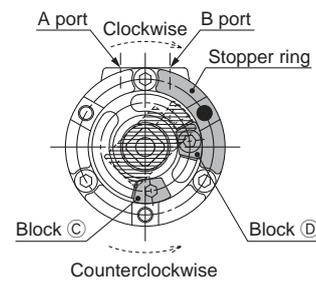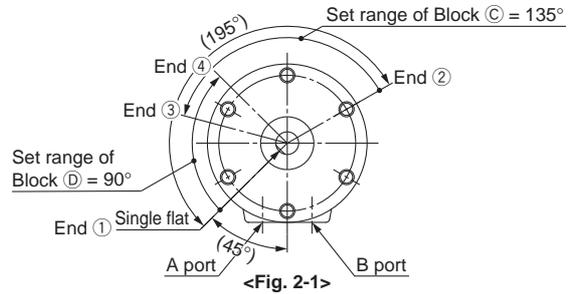



The maximum rotation range of the shaft with single flat in Fig. 2-2 is 195°, from End ① to End ②. The rotation range of the shaft with single flat in Fig. 2-1 decreases to the range between End ② and ③ when moving Block ② in Fig. 2-2 clockwise, and similarly when moving Block ② counterclockwise, the rotation range decreases to the range between End ① and ④. However, since the internal stopper will come into contact with the vane at End ① position of the shaft with single flat in Fig. 2-1, make sure that the stopper lever stops at Block ① when adjusting.

Example 3 The stopper ring is mounted on 120° clockwise from the standard position shown in Fig. 1-2 of Example 1 as in Fig. 4-2 of Example 4.

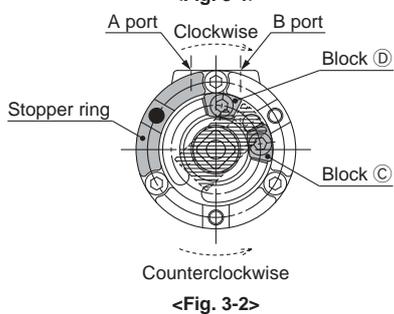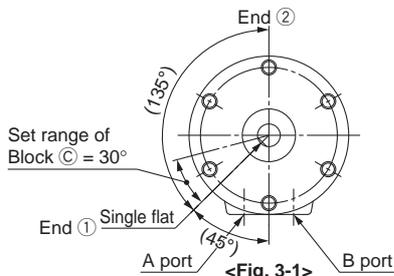

Lock Block ① in Fig. 3-2 and move Block ② counterclockwise to allow the rotation of the shaft with single flat in Fig. 3-1 from End ① to End ②. However, since the internal stopper will come into contact with the vane at End ① position of the shaft with single flat make sure that the stopper lever stops at Block ② when adjusting. End ① side can be adjusted within 30° by moving Block ② counterclockwise.

Example 4 The stopper ring is mounted on 120° clockwise from the standard position shown in Fig. 1-2 of Example 1 as in Fig. 3-2 of Example 3.

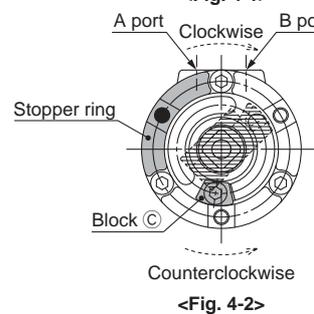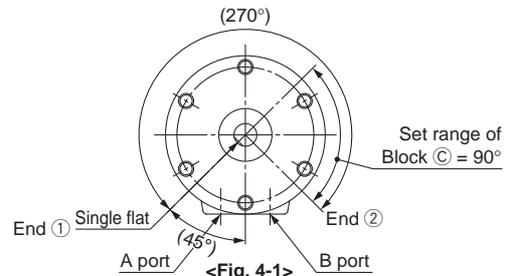

The maximum rotation range of the shaft with single flat is 270°, from End ① to End ②, when using the actuator for 270° and End ① side in Fig. 4-1 is stopped using the internal stopper and End ② side is adjusted using Block ②. The rotation range can be adjusted within 90° in End ② side. Note that Block ① cannot be moved and set 90° or more counterclockwise from its position in Fig. 4-2 since the internal stopper will come into contact with the vane.

Note 1) Mounting of the stopper ring shown in Examples 2, 3, 4 are not applicable for size 10.

Note 2) ● marks in the illustrations above indicate the mounting position of the stopper ring.

Note 3) Select the appropriate rotation of the rotary actuator after careful consideration of the content of "Angle Adjustment Setting."

Note 4) For size 40, each block comes with 2 holding screws.

Note 5) These figures show the CRB2 series.

CRB2

CRB2□WU

CRBU2

CRBU2WU

Simple Specials

Made to Order

Component Unit

Angle Adjustment Setting

Auto Switch Mounting

Series CRB□2 Auto Switch Mounting


Operating Range and Hysteresis

*** Operating range: θm**

The range between the position where the auto switch turns ON as the magnet inside the auto switch unit moves and the position where the auto switch turns OFF as the magnet travels the same direction.

*** Hysteresis range: θd**

The range between the position where the auto switch turns ON as the magnet inside the auto switch unit moves and the position where the auto switch turns OFF as the magnet travels the opposite direction.

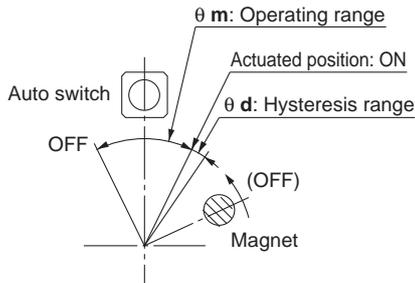

D-M9□

Size	θm : Operating range	θd : Hysteresis range
10, 15	170°	20°
20, 30	100°	15°
40	86°	10°


D-S/T99(V)□, S9P(V), S/T79, S7P, D-97/93A, 90/90A, R73/80□

Size	θm : Operating range	θd : Hysteresis range
10, 15	110°	10°
20, 30	90°	
40	52°	8°

Note) Since the figures in the above table are provided as a guideline only, they cannot be guaranteed. Adjust the auto switch after confirming the operating conditions in the actual setting.


How to Change the Auto Switch Detecting Position

* When setting the detecting position, loosen the cross recessed round head screw a bit and move the auto switch to the preferred position and then tighten again and fix it. At this time, if tightened too much, screw can become damaged and unable to fix position. Proper tightening torque: 0.4 to 0.6 [N·m]
When tightening the cross recessed round head screw, take care that the auto switch does not tilt.

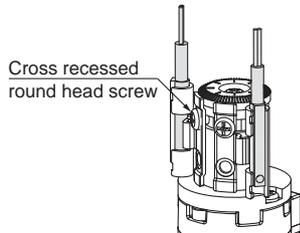


Size: 10 to 40

D-M9□

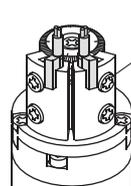

Size: 10, 15


D-S/T99(V)□, S9P(V), S/T79, S7P,
D-97/93A, 90/90A, R73/80□

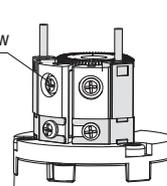

Size: 20 to 40

Auto Switch Mounting: Size 10 to 40 (D-M9□)


External view and descriptions of auto switch unit

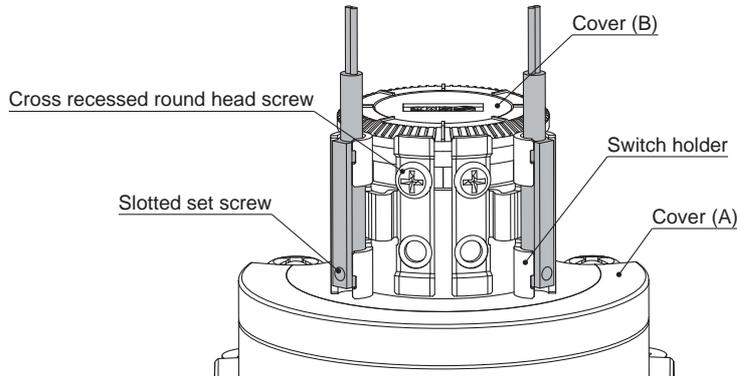

For CRB10, 15

1. Auto switch mounting


Insert the auto switch into the groove of the switch holder.

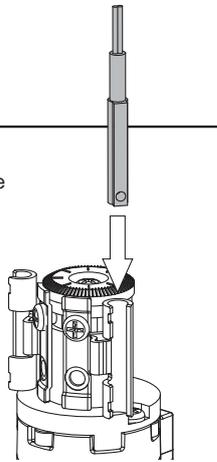

2. Auto switch securing

Align the auto switch with the upper surface of the groove on the side of the switch holder, and secure the slotted set screw. (Refer to the enlarged view.)

* Proper tightening torque: 0.05 to 0.1 [N·m]

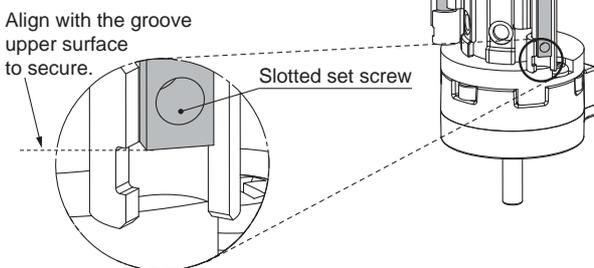

Enlarged view

3. Switch holder securing


After the actuated position has been adjusted with the cross recessed round head screw, use the auto switch.

* When tightening the screw, take care that the auto switch does not tilt.

For CRB20 to 40

1. Auto switch mounting


Insert the auto switch into the groove of the switch holder.

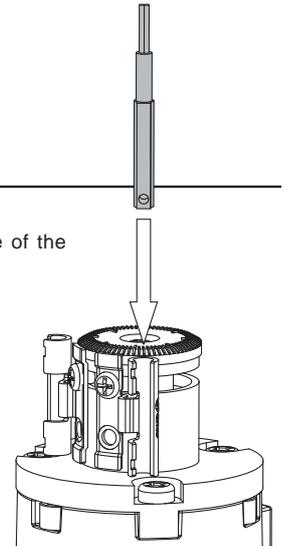

2. Auto switch securing

Align the auto switch with the lower surface of the groove on the side of the switch holder, and secure the slotted set screw. (Refer to the enlarged view.)

* Proper tightening torque: 0.05 to 0.1 [N·m]

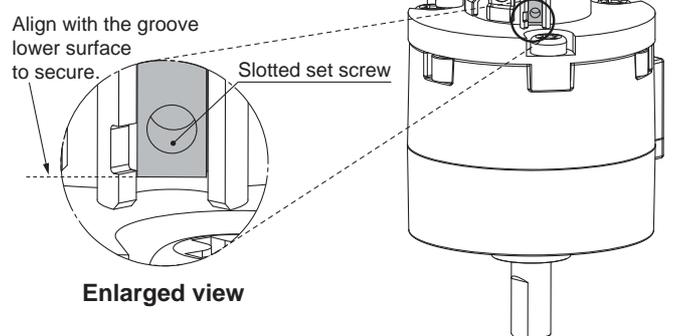

Enlarged view

3. Switch holder securing

After the actuated position has been adjusted with the cross recessed round head screw, use the auto switch.

* When tightening the screw, take care that the auto switch does not tilt.

CRB2

CRB2□WU

CRBU2

CRBU2WU

Simple Specials

Made to Order

Component Unit


Angle Adjustment Setting

Auto Switch Mounting

Auto Switch Mounting: Size 10, 15 (D-S/T99(V)□, S9P(V), 97/93A, 90/90A)

External view and descriptions of auto switch unit

This following shows the external view and typical descriptions of the auto switch unit.

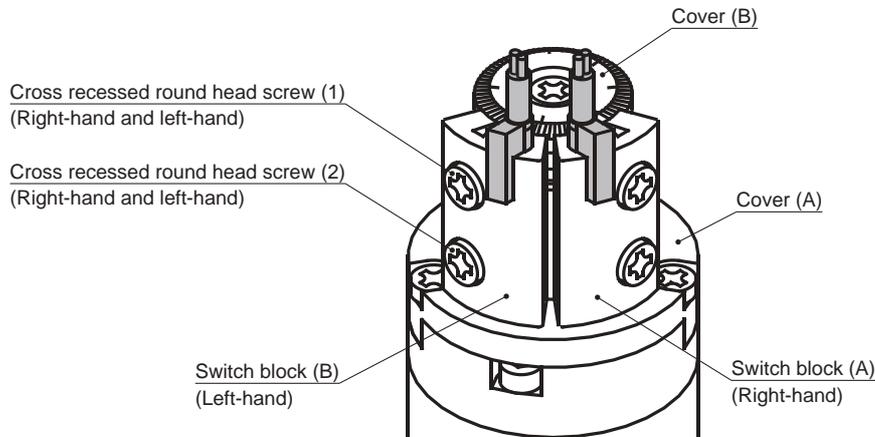

Solid state auto switch


<Applicable auto switch>

3-wire type.....D-S99(V)□, S9P(V)□

2-wire type.....D-T99(V)□

1. Switch block detaching

Remove the cross recessed round head screw (1) and holding block to detach the switch block.

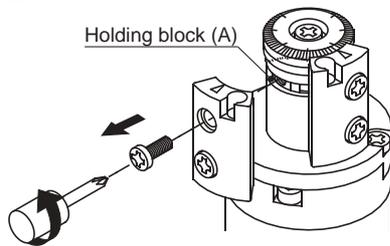


2. Auto switch mounting

Secure the auto switch with the cross recessed round head screw (1) and holding block.

Proper tightening torque: 0.4 to 0.6 [N·m]

- * Since the holding block moves inside the groove, move it to the mounting position beforehand.
- After the actuated position has been adjusted with the cross recessed round head screw (1), use the auto switch.

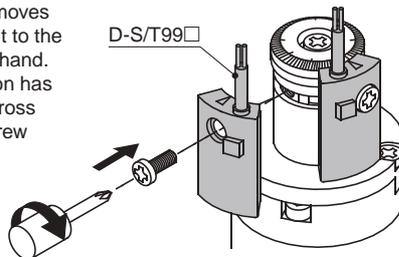

Reed auto switch

<Applicable auto switch>


D-97/93A (With indicator light)

D-90/90A (Without indicator light)

1. Preparations

Loosen the cross recessed round head screw (2) (About 2 to 3 turns).


- * This screw has been secured temporarily at shipment.

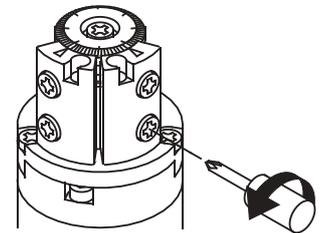

2. Auto switch mounting

Insert the auto switch until it is in contact with the switch block hole.

- * For the D-97/93A model, insert the auto switch in the direction shown in the Fig. on the right.
- * Since the D-90/90A model is a round type, it has no directionality.

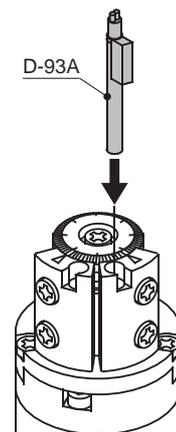


3. Auto switch securing

Tighten the cross recessed round head screw (2) to secure the auto switch.


Proper tightening torque: 0.4 to 0.6 [N·m]

- After the actuated position has been adjusted with the cross recessed round head screw (1), use the auto switch.

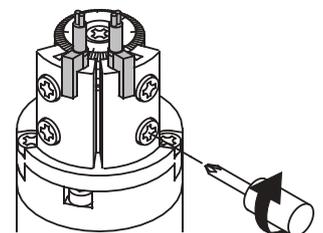

Auto Switch Mounting: Size 20 to 40 (D-S/T79□, S7P, R73/80□)

External view and descriptions of auto switch unit

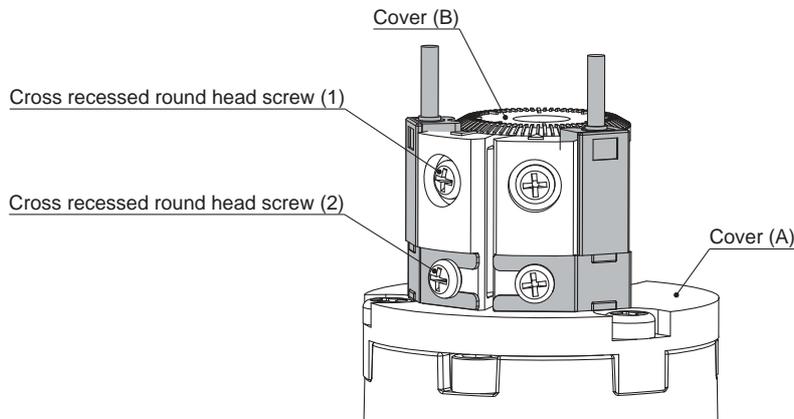

Mounting Procedure

<Applicable auto switch>

Solid state auto switch

D-S79, S7P

D-T79, T79C


Reed auto switch

D-R73, R73C

D-R80, R80C

1. Auto switch mounting


Loosen the cross recessed round head screw (2), and insert the arm of the auto switch.

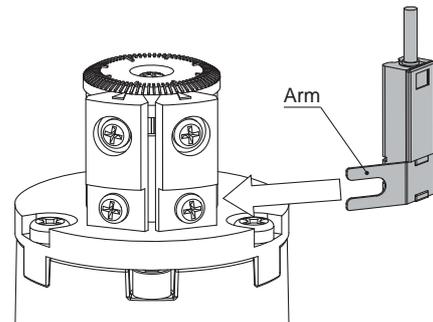

2. Auto switch securing

Set the auto switch so that it is in contact with the switch block, and tighten the cross recessed round head screw (2).

* Proper tightening torque: 0.4 to 0.6 [N·m]

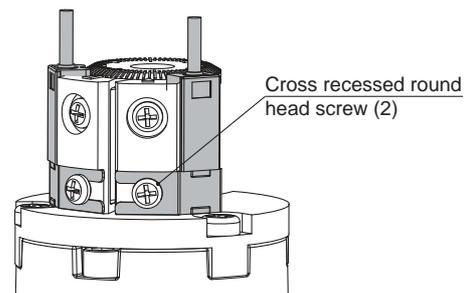

3. Switch holder securing

After the actuated position has been adjusted with the cross recessed round head screw (1), use the auto switch.

* Proper tightening torque: 0.4 to 0.6 [N·m]

CRB2

CRB2□WU

CRBU2

CRBU2WU

Simple Specials

Made to Order

Component Unit



Angle Adjustment Setting

Auto Switch Mounting

Auto Switch Adjustment

Rotation range of the output shaft with single flat (key for size 40 only) and auto switch mounting position
 <Applicable models/Size: 10, 15, 20, 30, 40>

<Single vane>

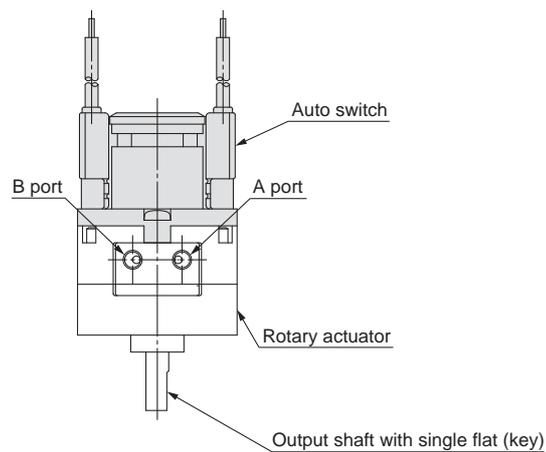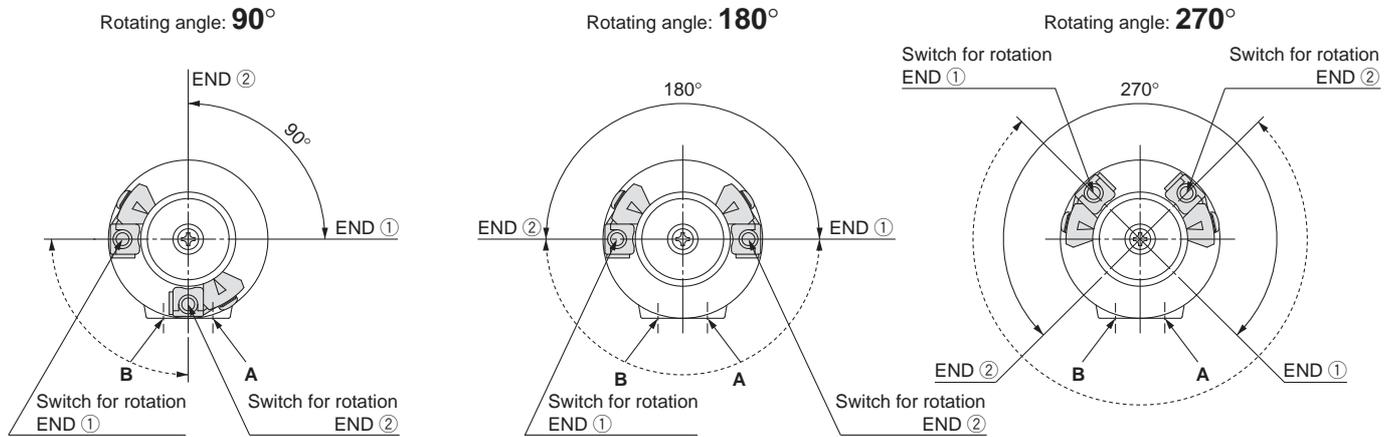

Size: 10 to 40

* The above figure shows the CRB2 series.

- * Solid-lined curves indicate the rotation range of the output shaft with single flat (key). When the single flat (key) is pointing to the END ① direction, the switch for rotation END ① will operate, and when the single flat (key) is pointing to the END ② direction, the switch for rotation END ② will operate.
- * Broken-lined curves indicate the rotation range of the built-in magnet. Operating angle of the switch can be decreased by either moving the switch for rotation END ① clockwise or moving the switch for rotation END ② counterclockwise. Auto switch in the figures above is at the most sensitive position.
- * Each auto switch unit comes with one right-hand and one left-hand switch.

Auto Switch Mounting	CRBU2	CRB2□WU	CRBU2	CRBU2WU	Simple Specials	Made to Order	Component Unit	Angle Adjustment Setting
----------------------	-------	---------	-------	---------	-----------------	---------------	----------------	--------------------------

Safety Instructions

These safety instructions are intended to prevent hazardous situations and/or equipment damage. These instructions indicate the level of potential hazard with the labels of “Caution,” “Warning” or “Danger.” They are all important notes for safety and must be followed in addition to International Standards (ISO/IEC)*1), and other safety regulations.

-  **Caution:** Caution indicates a hazard with a low level of risk which, if not avoided, could result in minor or moderate injury.
-  **Warning:** Warning indicates a hazard with a medium level of risk which, if not avoided, could result in death or serious injury.
-  **Danger:** Danger indicates a hazard with a high level of risk which, if not avoided, will result in death or serious injury.

- *1) ISO 4414: Pneumatic fluid power – General rules relating to systems.
- ISO 4413: Hydraulic fluid power – General rules relating to systems.
- IEC 60204-1: Safety of machinery – Electrical equipment of machines. (Part 1: General requirements)
- ISO 10218-1: Manipulating industrial robots - Safety. etc.

Warning

1. The compatibility of the product is the responsibility of the person who designs the equipment or decides its specifications.

Since the product specified here is used under various operating conditions, its compatibility with specific equipment must be decided by the person who designs the equipment or decides its specifications based on necessary analysis and test results. The expected performance and safety assurance of the equipment will be the responsibility of the person who has determined its compatibility with the product. This person should also continuously review all specifications of the product referring to its latest catalogue information, with a view to giving due consideration to any possibility of equipment failure when configuring the equipment.

2. Only personnel with appropriate training should operate machinery and equipment.

The product specified here may become unsafe if handled incorrectly. The assembly, operation and maintenance of machines or equipment including our products must be performed by an operator who is appropriately trained and experienced.

3. Do not service or attempt to remove product and machinery/equipment until safety is confirmed.

1. The inspection and maintenance of machinery/equipment should only be performed after measures to prevent falling or runaway of the driven objects have been confirmed.
2. When the product is to be removed, confirm that the safety measures as mentioned above are implemented and the power from any appropriate source is cut, and read and understand the specific product precautions of all relevant products carefully.
3. Before machinery/equipment is restarted, take measures to prevent unexpected operation and malfunction.

4. Contact SMC beforehand and take special consideration of safety measures if the product is to be used in any of the following conditions.

1. Conditions and environments outside of the given specifications, or use outdoors or in a place exposed to direct sunlight.
2. Installation on equipment in conjunction with atomic energy, railways, air navigation, space, shipping, vehicles, military, medical treatment, combustion and recreation, or equipment in contact with food and beverages, emergency stop circuits, clutch and brake circuits in press applications, safety equipment or other applications unsuitable for the standard specifications described in the product catalogue.
3. An application which could have negative effects on people, property, or animals requiring special safety analysis.
4. Use in an interlock circuit, which requires the provision of double interlock for possible failure by using a mechanical protective function, and periodical checks to confirm proper operation.

Limited warranty and Disclaimer/ Compliance Requirements

The product used is subject to the following “Limited warranty and Disclaimer” and “Compliance Requirements”. Read and accept them before using the product.

Limited warranty and Disclaimer

1. The warranty period of the product is 1 year in service or 1.5 years after the product is delivered, whichever is first.*2) Also, the product may have specified durability, running distance or replacement parts. Please consult your nearest sales branch.
2. For any failure or damage reported within the warranty period which is clearly our responsibility, a replacement product or necessary parts will be provided. This limited warranty applies only to our product independently, and not to any other damage incurred due to the failure of the product.
3. Prior to using SMC products, please read and understand the warranty terms and disclaimers noted in the specified catalogue for the particular products.

*2) Vacuum pads are excluded from this 1 year warranty.

A vacuum pad is a consumable part, so it is warranted for a year after it is delivered. Also, even within the warranty period, the wear of a product due to the use of the vacuum pad or failure due to the deterioration of rubber material are not covered by the limited warranty.

Compliance Requirements

1. The use of SMC products with production equipment for the manufacture of weapons of mass destruction (WMD) or any other weapon is strictly prohibited.
2. The exports of SMC products or technology from one country to another are governed by the relevant security laws and regulations of the countries involved in the transaction. Prior to the shipment of a SMC product to another country, assure that all local rules governing that export are known and followed.

Caution

1. The product is provided for use in manufacturing industries.

The product herein described is basically provided for peaceful use in manufacturing industries.

If considering using the product in other industries, consult SMC beforehand and exchange specifications or a contract if necessary.

If anything is unclear, contact your nearest sales branch.

Caution

SMC products are not intended for use as instruments for legal metrology.

Measurement instruments that SMC manufactures or sells have not been qualified by type approval tests relevant to the metrology (measurement) laws of each country. Therefore, SMC products cannot be used for business or certification ordained by the metrology (measurement) laws of each country.

Safety Instructions

Be sure to read “Handling Precautions for SMC Products” (M-E03-3) before using.

SMC Corporation (Europe)

Austria	☎ +43 (0)2262622800	www.smc.at	office@smc.at
Belgium	☎ +32 (0)33551464	www.smcpcneumatics.be	info@smcpcneumatics.be
Bulgaria	☎ +359 (0)2807670	www.smc.bg	office@smc.bg
Croatia	☎ +385 (0)13707288	www.smc.hr	office@smc.hr
Czech Republic	☎ +420 541424611	www.smc.cz	office@smc.cz
Denmark	☎ +45 70252900	www.smc.dk.com	smc@smc.dk.com
Estonia	☎ +372 6510370	www.smcpcneumatics.ee	smc@smcpcneumatics.ee
Finland	☎ +358 207513513	www.smc.fi	smc@smc.fi
France	☎ +33 (0)164761000	www.smc-france.fr	info@smc-france.fr
Germany	☎ +49 (0)61034020	www.smc.de	info@smc.de
Greece	☎ +30 210 2717265	www.smcchellas.gr	sales@smcchellas.gr
Hungary	☎ +36 23511390	www.smc.hu	office@smc.hu
Ireland	☎ +353 (0)14039000	www.smcpcneumatics.ie	sales@smcpcneumatics.ie
Italy	☎ +39 0292711	www.smcitalia.it	mailbox@smcitalia.it
Latvia	☎ +371 67817700	www.smc.lv	info@smc.lv

Lithuania	☎ +370 5 2308118	www.smclt.lt	info@smclt.lt
Netherlands	☎ +31 (0)205318888	www.smcpcneumatics.nl	info@smcpcneumatics.nl
Norway	☎ +47 67129020	www.smc-norge.no	post@smc-norge.no
Poland	☎ +48 222119600	www.smc.pl	office@smc.pl
Portugal	☎ +351 226166570	www.smc.eu	postpt@smc.smces.es
Romania	☎ +40 213205111	www.smcromania.ro	smcromania@smcromania.ro
Russia	☎ +7 8127185445	www.smc-pneumatik.ru	info@smc-pneumatik.ru
Slovakia	☎ +421 (0)413213212	www.smc.sk	office@smc.sk
Slovenia	☎ +386 (0)73885412	www.smc.si	office@smc.si
Spain	☎ +34 902184100	www.smc.eu	smcromania@smcromania.es
Sweden	☎ +46 (0)86031200	www.smc.nu	post@smc.nu
Switzerland	☎ +41 (0)523963131	www.smc.ch	info@smc.ch
Turkey	☎ +90 212 489 0 440	www.smcpcneumatik.com.tr	info@smcpcneumatik.com.tr
UK	☎ +44 (0)845 121 5122	www.smcpcneumatics.co.uk	sales@smcpcneumatics.co.uk

SMC CORPORATION Akihabara UDX 15F, 4-14-1, Sotokanda, Chiyoda-ku, Tokyo 101-0021, JAPAN Phone: 03-5207-8249 FAX: 03-5298-5362