




NSK24

Material **Nitrile** LENGTH 14 in. / 350mm

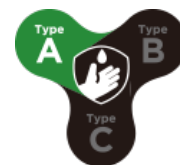

CHEMICAL PERMEATION

CHEMICAL NAME	CAS NUMBER	BDT
		TTL EN374
Formaldehyde 37%	50-00-0	>480
Carbon Tet	56-23-5	>60
1,2-Propanediol	57-55-6	>480
Diethyl Ether	60-29-7	1-5
Aminobenzene	62-53-3	1-5
Ethanol	64-17-5	>120
Acetic Acid 50%	64-19-7	>240
Acetic Acid 84%	64-19-7	>60
Acetic Acid 99%	64-19-7	>30
Methanol	67-56-1	>10
2-Propanol	67-63-0	>480
2-Propanone	67-64-1	1-5
Chloroform	67-66-3	1-5
Dimethylsulfoxide (DMSO)	67-68-5	>60
Dimethyl Formamide	68-12-2	>10
n-Propanol	71-23-8	>120
Butanol	71-36-3	>480
Alcohol, Amyl	71-41-0	>120
Benzene	71-43-2	1-5
1,1,1-Trichloroethane	71-55-6	6-10
Iodide, Methyl	74-88-4	<1
ETHYLAMINE	75-04-7	<1
Acetonitrile	75-05-8	6-10
Acetaldehyde	75-07-0	1-5
Chloride, Methylene	75-09-2	1-5
Bromoform	75-25-2	<1

1,1-Dichloroethene	75-35-4	<1
Acetyl Chloride	75-36-5	1-5
Nitromethane	75-52-5	<1
1,2-Epoxypropane	75-56-9	1-5
Dimethyl Sulfate	77-78-1	1-5
2-Butanol	78-83-1	>480
Dichloropropane, 1,2-	78-87-5	>10
2-Butanone	78-93-3	1-5
Ethylene, Trichloride	79-01-6	1-5
Acetate, Methyl	79-20-9	<1
Vinyl Pyrrolidinone	88-12-0	6-10
Dichlorobenzene O-	95-50-1	1-5
2-Aminotoluene	95-53-4	>30
Pseudocumene	95-63-6	>30
Butanone Oxime	96-29-7	>480
2-Ethylbutyl alcohol	97-95-0	>480
2-Furaldehyde	98-01-1	1-5
(1-Methylethyl)benzene	98-82-8	>10
Nitrobenzene	98-95-3	1-5
Benzene, Ethyl	100-41-4	>10
Benzene, Vinyl	100-42-5	6-10
Alcohol, Benzyl	100-51-6	>10
Benzaldehyde	100-52-7	1-5
2,2',2''-Nitrilotriethanol	102-71-6	>30
1,2-Dichloroethane	107-06-2	<1
Acrylonitrile	107-13-1	6-10
1,2-Diaminoethane	107-15-3	6-10
2-Propen-1-ol	107-18-6	>30
Methyl Propyl Ketone	107-87-9	6-10
1-methoxy-2-propanol	107-98-2	>120
Acetate, Vinyl	108-05-4	1-5
2-Pentanone, Methyl-	108-10-1	>10
Acetate, Isopropyl	108-21-4	6-10
PROPYLENE GLYCOL MONOMETHYL ETHER ACETATE	108-65-6	>60
2,6-Dimethyl-4-Heptanone	108-83-8	>60
Benzene, Methyl	108-88-3	6-10
Benzene Chloride	108-90-7	1-5

Cyclohexanol	108-93-0	>480
Cyclohexanone	108-94-1	>10
Carbolic Acid	108-95-2	>30
Carbolic Acid 10%	108-95-2	6-10
Carbolic Acid 89%	108-95-2	6-10
Dimethyl Propaneamide, N,N'-	109-55-7	1-5
Pentane	109-66-0	>480
1-Aminobutane	109-73-9	1-5
DEA	109-89-7	>10
Diethylene Oxide	109-99-9	1-5
Hexane	110-54-3	>480
Cyclohexane	110-82-7	>480
PYRIDINE	110-86-1	1-5
Diethylene oximide	110-91-8	<1
1,5-Pentanedial 50%	111-30-8	>30
2,2-iminodiethanol	111-42-2	>60
2-Butoxyethanol	111-76-2	>240
n-Octanol	111-87-5	>480
1,2,4-Trichlorobenzene	120-82-1	<1
TRIETHYLAMINE	121-44-8	>30
4-Hydroxy-4-methyl-2-pentanone	123-42-2	>30
3-Methyl-1-butanol	123-51-3	>120
Butyl Acetate	123-86-4	>10
1,4-Dioxane	123-91-1	1-5
3-Methylbutyl Ethanoate	123-92-2	1-5
PERC	127-18-4	>60
Dimethylacetamide N,N-	127-19-5	6-10
Butyl Acrylate	141-32-2	>30
2-Aminoethanol	141-43-5	>30
Ethyl Acetate	141-78-6	6-10
Heptane	142-82-5	>480
Butoxytriglycol	143-22-6	>30
Trimethyl Phosphate	512-56-1	6-10
2,2,4-Trimethyl Pentane	540-84-1	>480
3-Methyl-2-Butanone	563-80-4	1-5
Amyl Acetate	628-63-7	>30
Methyl Pyrrolidone, N-	872-50-4	>30

2-Bromoethyl Acetate	927-68-4	<1
Hexamethyldisilazane	999-97-3	>480
Caustic Potash 10%	1310-58-3	>480
Caustic Potash 99%	1310-58-3	>480
Caustic Potash 45%	1310-58-3	>480
Caustic Soda 40%	1310-73-2	>480
Caustic Soda 10%	1310-73-2	>480
Caustic Soda 98%	1310-73-2	>480
Caustic Soda 50%	1310-73-2	>480
Cresols	1319-77-3	>10
Divinyl Benzene	1321-74-0	<1
dimethyl benzene	1330-20-7	>10
Ammonia Solution 29%	1336-21-6	>60
Ammonia Solution 25%	1336-21-6	>60
Methyl-Tert-Butyl Ether	1634-04-4	>10
Butoxypropanol	5131-66-8	>480
D-Limonene	5989-27-5	>10
Hydrochloric Acid 37%	7647-01-0	>480
Muriatic Acid 20%	7647-01-0	>480
Hydrochloric Acid 10%	7647-01-0	>480
Muriatic Acid 32%	7647-01-0	>480
Phosphoric Acid 85%	7664-38-2	>480
Hydrofluoric Acid 48%	7664-39-3	>60
Battery Acid 70%	7664-93-9	>480
Battery Acid 96%	7664-93-9	>60
Battery Acid 47%	7664-93-9	>480
Battery Acid 10%	7664-93-9	>480
Battery Acid 25%	7664-93-9	>480
Battery Acid 50%	7664-93-9	>480
Nitric Acid 50%	7697-37-2	>240
Nitric Acid 10%	7697-37-2	>480
Nitric Acid 23%	7697-37-2	>480
Nitric Acid 70%	7697-37-2	>30
Nitric Acid 65%	7697-37-2	>30
Hydrogen Peroxide 30%	7722-84-1	>480
Chlorine (Gas)	7782-50-5	>480
Fir Oil	8006-64-2	>240

Ligroin	8032-32-4	>30
Dry Cleaning Mineral Spirits	8052-41-3	>480
Tetrachloropropene	10436-39-2	>30
2-Chloro-2-Oxoethyl Acetate	13831-31-7	1-5
Kerosene (hydrosulfurized)	64742-81-0	>480
Diesel Oil	68334-30-5	>480

BDT=BREAKTHROUGH DETECTION TIME

THE LEVEL (0 TO 6) INDICATES THE TIME REQUIRED FOR DIFFERENT CHEMICALS TO PERMEATE THROUGH THE GLOVE.

TTL : TOTAL IMMERSION CHEMICAL PERMEATION BREAKTHROUGH TIME.

INT : INTERMITTENT CONTACT CHEMICAL PERMEATION BREAKTHROUGH TIME, ONE MINUTE IMMERSION OUT OF EVERY TEN, REPEATEDLY.

Warranty Limitations and Disclaimer Use

This information is provided solely as a convenience to help you evaluate our gloves in the end-user's particular application. It is the responsibility of the purchaser and/or user to determine the level of toxicity of the materials to be handled and to select the proper glove suitable for a particular application. The information provided reflects laboratory performance of gloves under carefully controlled conditions. SHOWA makes no guarantee of results and assumes no obligation or liability in connection with this information.