

5 Port Solenoid Valve



Metal Seal Rubber Seal

Compact and large flow capacity

VQC4000 Possible to drive cylinders up to \varnothing 160

VQC5000 Possible to drive cylinders up to \varnothing 180 * When the average speed is 200 mm/s. Refer to page 5 for actual conditions.



VQC4000: 25 mm pitch


Q [l/min (ANR)]: 1958*

VQC5000: 41 mm pitch

Q [l/min (ANR)]: 4350*

* 2-position single, rubber seal: 4/2 → 5/3 (A/B → R1/R2)

Connector type manifold

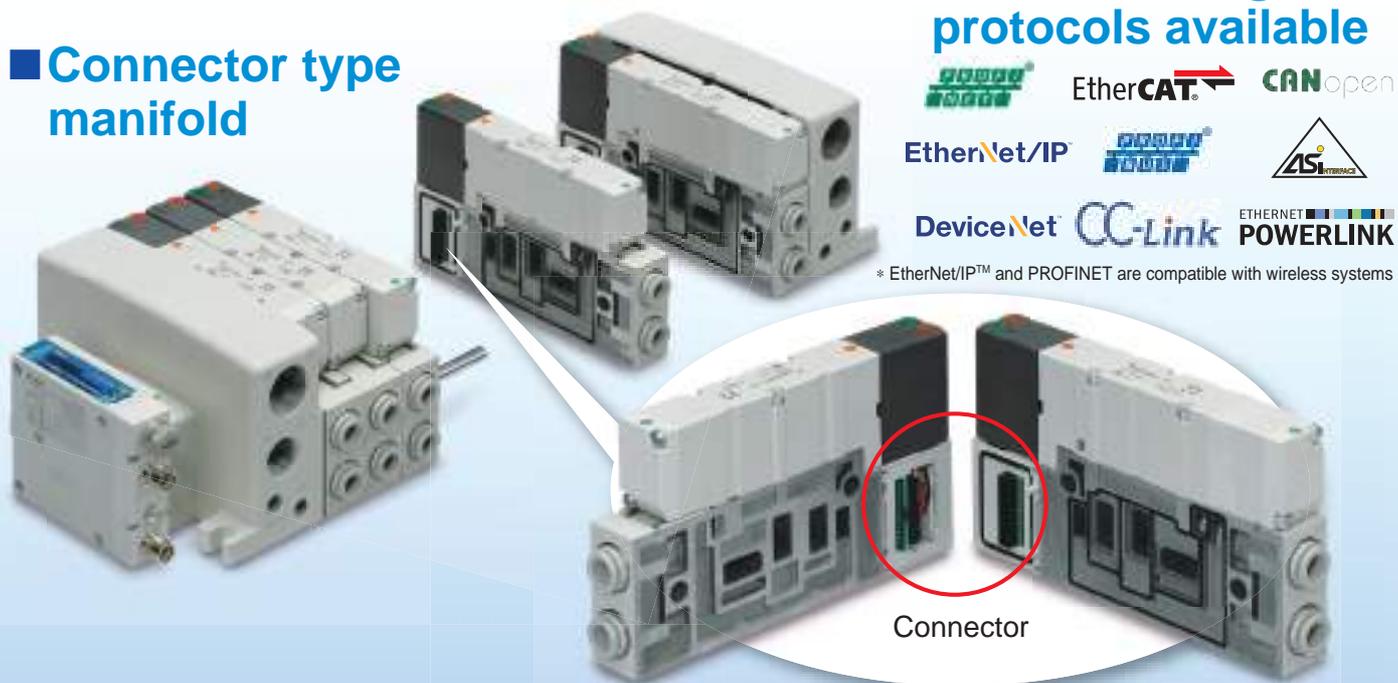

Extensive range of protocols available

ETHERCAT EtherCAT CANopen

EtherNet/IP PROFINET ZS

DeviceNet CC-Link ETHERNET POWERLINK

* EtherNet/IP™ and PROFINET are compatible with wireless systems

Power saving

	Power consumption [W]	Maximum operating pressure [MPa]
Current product	0.5 (1.0)	0.7
New VQC	0.4 (0.95)	1.0

* Low wattage type (): Standard

Long service life **100 million cycles**

* According to SMC life test conditions

Enclosure IP67 compliant

* Except F and P kits



Series **VQC4000/5000**



CAT.EUS11-108Aa-UK

■ Compact and large flow

Model (Series)	Valve pitch [mm]	Flow-rate characteristics ^{Note 1)}							
		Metal seal				Rubber seal			
		C [dm ³ /(s·bar)]	b	Cv	Q [l/min (ANR)] ^{Note 2)}	C [dm ³ /(s·bar)]	b	Cv	Q [l/min (ANR)] ^{Note 2)}
VQC4000	25	6.9	0.17	1.7	1625	7.3	0.38	2.0	1958
VQC5000	41	14	0.18	3.4	3316	17	0.31	4.7	4350

Note 1) Flow-rate characteristics: 2-position single, 4/2 → 5/3 (A/B → R1/R2)

Note 2) These values have been calculated according to ISO 6358 and indicate the flow rate under standard conditions with an inlet pressure of 0.6 MPa (relative pressure) and a pressure drop of 0.1 MPa.

■ Applicable to EX600 (Input/Output) serial transmission system (Fieldbus system)

Compatible Protocols




Reduction in wiring time with SPEEDCON (Phoenix Contact).
Just insert and make 1/2 rotation!



Handheld Terminal

Self diagnosis function

It is possible to ascertain the maintenance period and identify the parts that require maintenance, by an input/output open circuit detection function and an input/output signal ON/OFF counter function. Also, the monitoring of input and output signals and the setting of parameters can be performed with a Handheld Terminal.

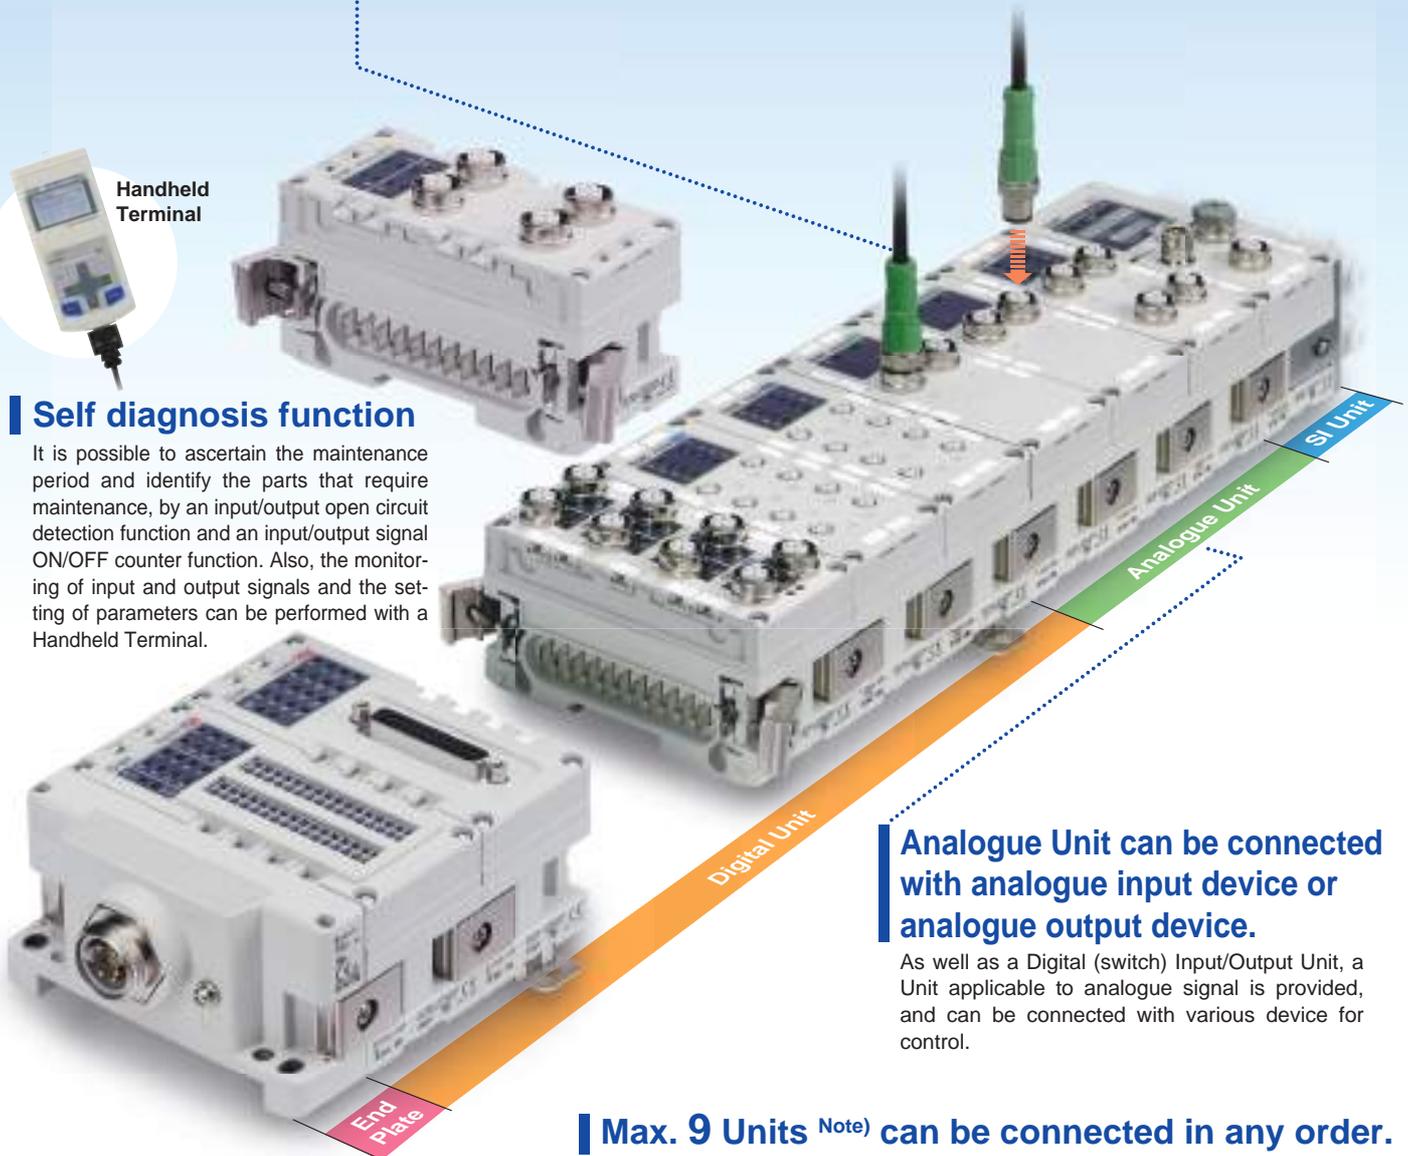

Analogue Unit can be connected with analogue input device or analogue output device.

As well as a Digital (switch) Input/Output Unit, a Unit applicable to analogue signal is provided, and can be connected with various device for control.

Max. 9 Units ^{Note)} can be connected in any order.

The Input Unit to connect input device such as an auto switch, pressure switch and flow switch, and the Output Unit to connect output device such as a solenoid valve, relay and indicator light can be connected in any order.

Note) Except SI Unit

EX260 (Output device for driving 5 port solenoid valves)

Compatible Protocols



DeviceNet

EtherNet/IP

ETHERNET
POWERLINK

CC-Link

EtherCAT



Compact
28 mm

Number of outputs	Each 32/16 digital output type available in the series
Output polarity	Each negative common (PNP)/positive common (NPN) type available in the series
Enclosure	IP67 (For Units with D-sub connector, and when connected with S0700 manifolds, it is IP40.)
Internal terminating resistor	ON/OFF switching is possible with an internal terminating resistor for communication. (Only for Units compatible with M12 PROFIBUS DP, CC-Link communication connectors)


A wide variety of prepackaged wiring configurations

S Kit (Serial transmission) IP67 enclosure compliant	F Kit (D-sub connector) 25 pins IP40 enclosure compliant	P Kit (Flat ribbon cable) 26 pins 20 pins IP40 enclosure compliant	T Kit (Terminal block box) IP67 enclosure compliant	L Kit (Lead wire) 25 core cable IP67 enclosure compliant	M Kit (Circular connector) 26 pins IP67 enclosure compliant
---	--	---	--	--	---

- The six standard wiring packages bring a world of ease to wiring and maintenance work, while the protective enclosures of four of them conform to IP67 standards.
- The S kit is compatible with a combined I/O Unit. (Not applicable to Gateway Unit)


Connector type manifold

- The use of multi-pin connectors to replace wiring inside manifold blocks provides flexibility when adding stations or changing manifold configuration.
- All kits use multi-pin connectors, so switching from the F kit (D-sub connector) to the S kit (serial transmission) can be done simply by changing the kit section.

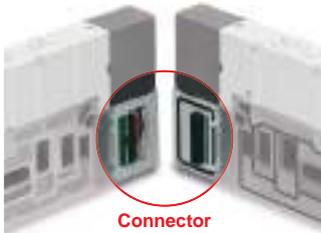


Connector

(Refer to the connector wiring diagram.) Printed circuit board patterns between connectors are shifted at every station. This allows for viable connections to take place without necessarily specifying whether the manifold station is double, single, or mixed wiring.

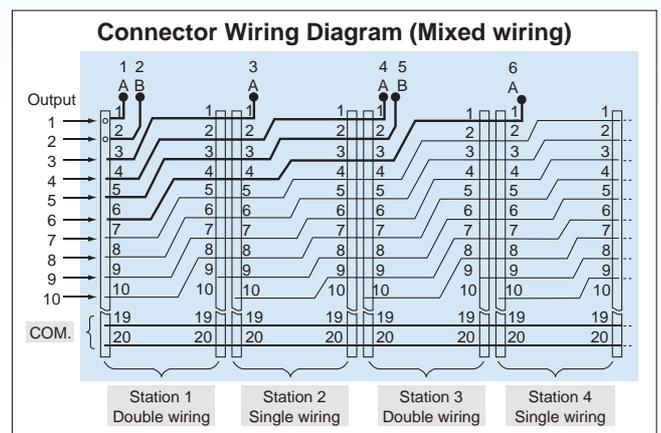

Connector entry direction can be changed with a single push. (F/P kit)

The connector entry direction can be changed from the top to the side by simply pressing the manual release button. It is not necessary to use the manual release button when switching from the side to the top.

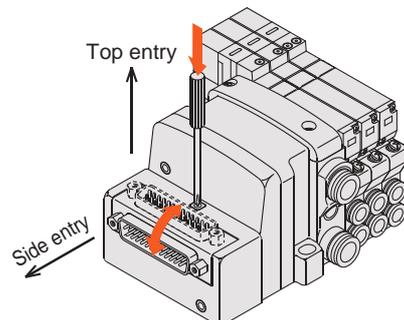


Series VQC4000/5000

Sub-plate/Base Mounted: Variations








Sub-plate

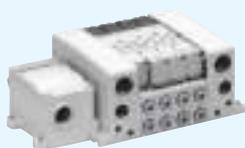

Base mounted

Flow rate characteristics Q [l/min (ANR)] (Values: CYL → EXH (4/2 → 5/3))	S Kit						
	Serial transmission						
	SI Unit series	EX600	EX500	EX260	EX250	EX126	
Single/Double 3-position (Closed centre)	Compatible Protocol	PROFINET	●	●	●		
		EtherCAT®	●		●		
		EtherNet/IP™	●	●	●	●	
		PROFIBUS DP	●	●	●	●	
		DeviceNet™	●	●	●	●	
		CC-Link	●		●	●	●
		AS-Interface				●	
		CANopen				●	
		EtherNet POWERLINK			●		
				I/O Serial Unit: EX600 IP67 compliant	Decentralised serial wiring Gateway application requires a Gateway Unit and communication cable separately. Please contact SMC for more details. Serial Unit: EX500 IP67 compliant	Output Serial Unit: EX260 IP40 compliant IP67 compliant	I/O Serial Unit: EX250 IP67 compliant


	Series VQC	Seal	Flow rate characteristics		EX600	EX500	EX260	EX250	EX126	
			Q [l/min (ANR)]	Q [l/min (ANR)]						
Sub-plate	Series VQC 4000	Metal seal	VQC4□00	1625	1492					
		Rubber seal	VQC4□01	1958	1767					
	Series VQC 5000	Metal seal	VQC5□00	3316	2681	—	—	—	—	—
		Rubber seal	VQC5□01	4350	3462					
Base Mounted	Series VQC 4000	Metal seal	VQC4□00	1625	1492	●	●	●	●	●
		Rubber seal	VQC4□01	1958	1767	Page 11				
	Series VQC 5000	Metal seal	VQC5□00	3316	2681	●	●	●	●	●
		Rubber seal	VQC5□01	4350	3462	Page 47				

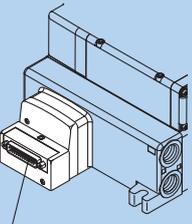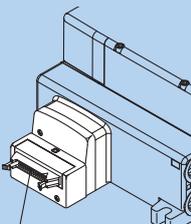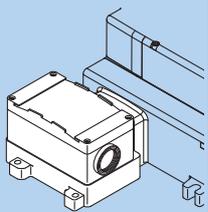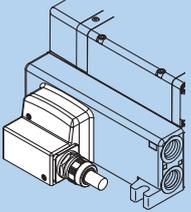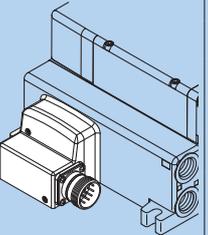	F Kit	P Kit	T Kit	L Kit	M Kit	Port size	
	D-sub connector	Flat ribbon cable	Terminal block box	Electrical entry	Circular connector	SUP EXH port	Cylinder port
	D-sub connector (Compatible with D-sub connector that complies with MIL standard.)  25 pins IP40 compliant	Flat ribbon cable (Compatible with flat ribbon cable connector that complies with MIL standard.)  26 pins/20 pins IP40 compliant	Terminal block box (Terminal blocks) Terminals are concentrated in compact clusters within the terminal block box.  IP67 compliant	Lead wire (IP67 enclosure with use of multiple wire cable with sheath and waterproof connector)  IP67 compliant	Circular connector (IP67 enclosure with use of waterproof multiple connector)  IP67 compliant	1, 3 (P, R)	2, 4 (A, B)
	—	—	—	—	—	1/4 3/8 (Rc, NPT, NPTF, G)	1/4 3/8 (Rc, NPT, NPTF, G)
						1/2 (Rc, NPT, NPTF, G)	1/2 (Rc, NPT, NPTF, G)
	 Page 21	 Page 23	 Page 25	 Page 27	 Page 29	<SUP port> 1/2 (Rc, NPT, NPTF, G)	C6 (for Ø 6) C8 (for Ø 8) C10 (for Ø 10) C12 (for Ø 12) N7 (Ø 1/4") N9 (Ø 5/16") N11 (Ø 3/8")
						<EXH port> 3/4 (Rc, NPT, NPTF, G)	1/4 3/8 1/4 (Bottom ported) (Rc, NPT, NPTF, G)
	 Page 57	 Page 59	 Page 61	 Page 63	 Page 65	<SUP port> D side 1/2 (Rc, NPT, NPTF, G) U side 3/8 (Rc, NPT, NPTF, G)	3/8 1/2 1/2 (Bottom ported) (Rc, NPT, NPTF, G)
						<EXH port> D side 1/2 (Rc, NPT, NPTF, G) U side 3/8 (Rc, NPT, NPTF, G)	

Cylinder Speed Chart

VQC4000

This chart is provided as guidelines only.
For performance under various conditions, use SMC's Model Selection Software before making a judgment.

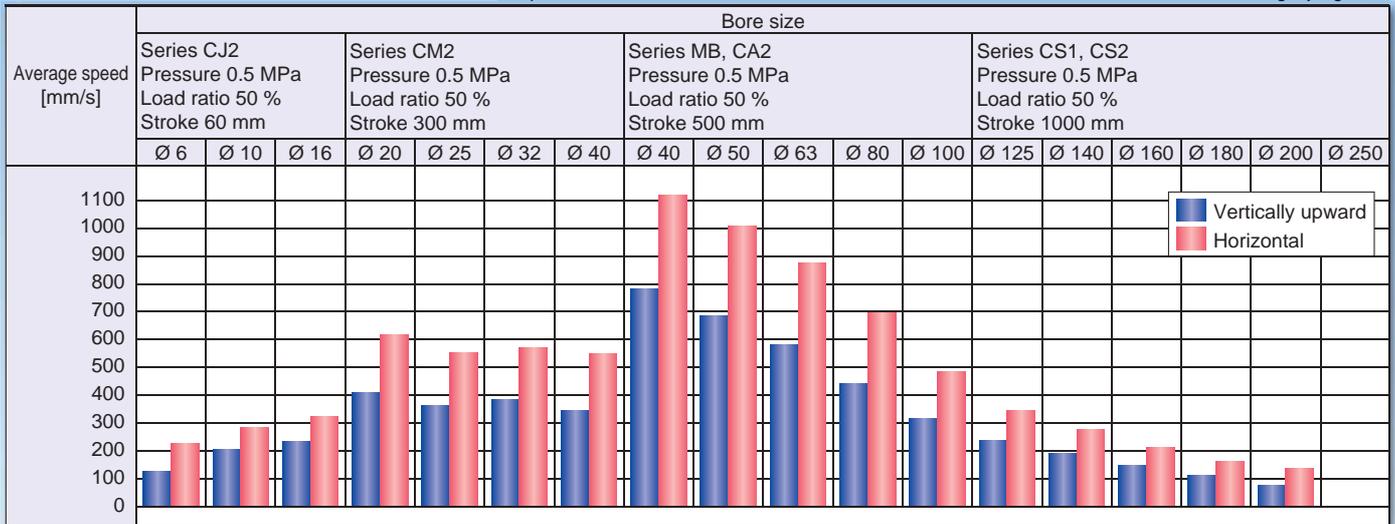

- * Values at extension of a directly coupled cylinder when meter-out speed controllers are used with the needle full open.
- * The average speed of the cylinder is obtained by dividing the stroke by the total stroke time.
- * The load ratio is obtained by the following formula: $((\text{Load mass} \times 9.8) / \text{Theoretical output}) \times 100 \%$

Conditions


Base mounted	Series CJ2	Series CM2	Series MB, CA2	Series CS1, CS2
Tube x Length	T0604 x 1 m	T1075 x 1 m	T1209 x 1 m	
Speed controller	AS3002F-06	AS4002F-10	AS4002F-12	
Silencer	AN40-04			AN40-04

Conditions [With SGP (Steel Pipe)]

Body ported	Series MB, CA2	Series CS1, CS2
Tube x Length	SGP10A x 1 m	
Speed controller	AS420-03	
Silencer	AN40-04	

VQC5000

This chart is provided as guidelines only.
For performance under various conditions, use SMC's Model Selection Software before making a judgment.

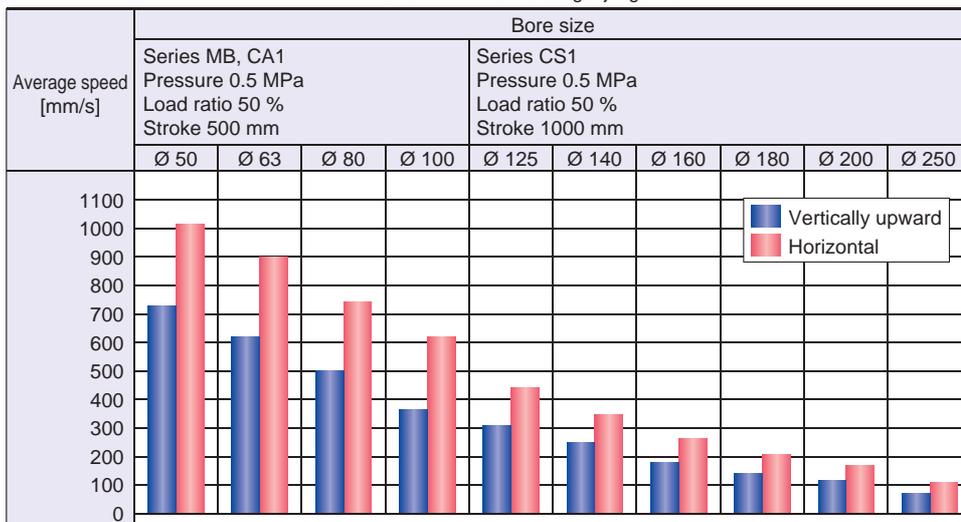

- * Values at extension of a directly coupled cylinder when meter-out speed controllers are used with the needle full open.
- * The average speed of the cylinder is obtained by dividing the stroke by the total stroke time.
- * The load ratio is obtained by the following formula: $((\text{Load mass} \times 9.8) / \text{Theoretical output}) \times 100 \%$


Conditions

Speed controller	Silencer	SPG (Steel pipe) dia. x Length
AS420-04	AN40-04	10A x 1 m

INDEX


Sub-plate/Base Mounted: Variations	Page 3
Cylinder Speed Chart	Page 5

Series VQC4000

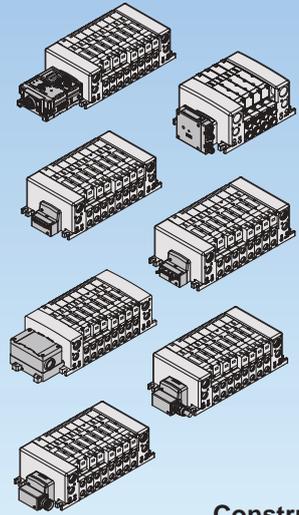

Plug-in: Single Unit	Page 7
Plug-in Unit: Manifold	Page 11
S Kit (Serial transmission kit): EX600 [IP67]/ EX500 [IP67]/EX260 [IP40/IP67]/ EX250 [IP67]/EX126 [IP67]	Page 15
F Kit (D-sub connector kit) [IP40]	Page 21
P Kit (Flat ribbon cable kit) [IP40]	Page 23
T Kit (Terminal block box kit) [IP67]	Page 25
L Kit (Lead wire kit) [IP67]	Page 27
M Kit (Circular connector kit) [IP67]	Page 29
Construction	Page 31
Exploded View of Manifold	Page 32
Specific Product Precautions	Page 37

Series VQC5000

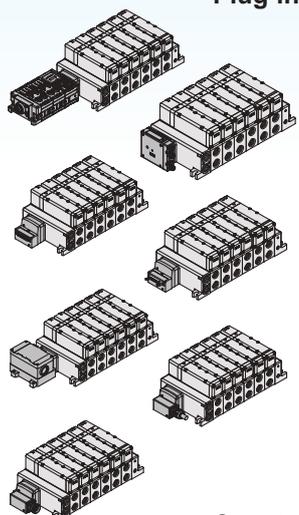

Plug-in: Single Unit	Page 43
Plug-in Unit: Manifold	Page 47
S Kit (Serial transmission kit): EX600 [IP67]/ EX500 [IP67]/EX260 [IP40/IP67]/ EX250 [IP67]/EX126 [IP67]	Page 51
F Kit (D-sub connector kit) [IP40]	Page 57
P Kit (Flat ribbon cable kit) [IP40]	Page 59
T Kit (Terminal block box kit) [IP67]	Page 61
L Kit (Lead wire kit) [IP67]	Page 63
M Kit (Circular connector kit) [IP67]	Page 65
Construction	Page 67
Exploded View of Manifold	Page 68
Specific Product Precautions	Page 73

VQC4000

Single Unit

Manifold

Construction

Exploded View of Manifold

Specific Product Precautions

VQC5000

Single Unit

Manifold

Construction

Exploded View of Manifold

Specific Product Precautions

Base Mounted


Plug-in: Single Unit

Series VQC4000 $\text{C} \text{ } \text{€}$

Model


Series	Configuration	Model	Port size	Flow-rate characteristics								Response time [ms]		Weight [kg]		
				1 → 4/2 (P → A/B)				4/2 → 5/3 (A/B → EA/EB)				Standard: 0.95 W	Low wattage type: 0.4 W			
				C [dm ³ /(s-bar)]	b	Cv	Q [l/min (ANR)] Note 4)	C [dm ³ /(s-bar)]	b	Cv	Q [l/min (ANR)] Note 4)					
VQC4000	2-position	Single	Metal seal	VQC4100	3/8	6.2	0.19	1.5	1477	6.9	0.17	1.7	1625	20	22	0.23
			Rubber seal	VQC4101		7.2	0.43	2.1	2002	7.3	0.38	2.0	1958	25	27	
		Double	Metal seal	VQC4200		6.2	0.19	1.5	1477	6.9	0.17	1.7	1625	12	16	0.26
			Rubber seal	VQC4201		7.2	0.43	2.1	2002	7.3	0.38	2.0	1858	15	17	
	3-position	Closed centre	Metal seal	VQC4300		5.9	0.23	1.5	1438	6.3	0.18	1.6	1492	45	47	0.28
			Rubber seal	VQC4301		7.0	0.34	1.9	1827	6.4	0.42	1.9	1767	50	52	
		Exhaust centre	Metal seal	VQC4400		6.2	0.18	1.5	1469	6.9	0.17	1.7	1625	45	47	0.28
			Rubber seal	VQC4401		7.0	0.38	1.9	1877	7.3	0.38	2.0	1958	50	52	
		Pressure centre	Metal seal	VQC4500		6.2	0.18	1.6	1469	6.4	0.18	1.6	1516	45	47	0.28
			Rubber seal	VQC4501		7.0	0.38	1.9	1877	7.1	0.38	2.0	1904	50	52	
		Double check	Metal seal	VQC4600		2.7	—	—	584	3.7	—	—	800	55	57	0.50
			Rubber seal	VQC4601		2.8	—	—	606	3.9	—	—	844	62	64	

Note 1) Cylinder port 3/8: Value for valve on sub-plate
 Note 2) Based on JIS B 8375-1981. (Supply pressure: 0.5 MPa, with indicator light and surge voltage suppressor, clean air. This will change depending on pressure and air quality.) The value when ON for the double type.
 Note 3) Table: Without sub-plate, With sub-plate: Add 0.41 kg.
 Note 4) These values have been calculated according to ISO 6358 and indicate the flow rate under standard conditions with an inlet pressure of 0.6 MPa (relative pressure) and a pressure drop of 0.1 MPa.

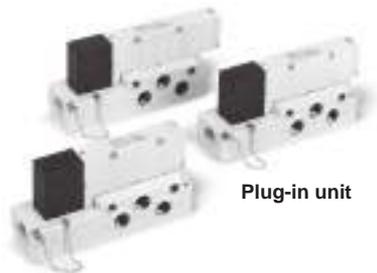

Plug-in unit

Symbol

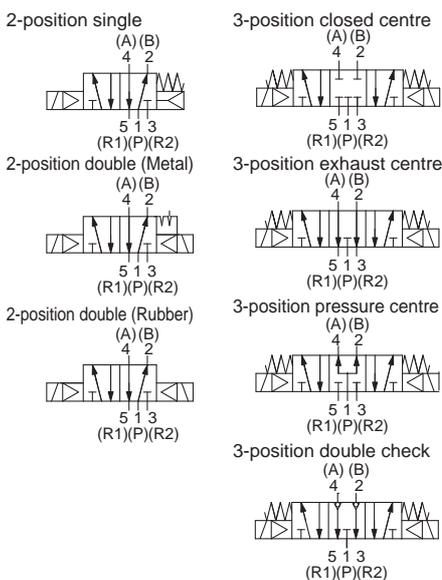

Standard Specifications

Valve specifications	Valve construction		Metal seal	Rubber seal
	Fluid	Air/Inert gas		
Max. operating pressure	Standard (DC and AC)	1.0 MPa		
	Low wattage type (DC)	1.0 MPa		
Min. operating pressure	Single	0.15 MPa	0.20 MPa	
	Double	0.15 MPa		
	3-position	0.15 MPa	0.20 MPa	
Proof pressure	1.5 MPa			
Ambient and fluid temperature	-10 to 50 °C Note 1)			
Lubrication	Not required			
Manual override	Push type/Locking type (Tool required)/Locking type (Manual)			
Impact/Vibration resistance	150/30 m/s ² Note 2)			
Enclosure	Dust-tight (IP67 compatible) Note 3)			
Electrical specifications	Coil rated voltage	12, 24 V DC		
	Allowable voltage fluctuation	±10 % of rated voltage		
	Coil insulation type	Class B or equivalent		
	Power consumption [W]	24 V DC	0.95, (0.4 low voltage type)	
12 V DC		0.95, (0.4 low voltage type)		

Note 1) Use dry air to prevent condensation when operating at low temperatures.
 Note 2) Impact resistance: No malfunction occurred when it is tested with a drop tester in the axial direction and at the right angles to the main valve and armature in both energised and de-energised states every once for each condition. (Values at the initial period)
 Vibration resistance: No malfunction occurred in a one-sweep test between 45 and 2000 Hz. Test was performed at both energised and de-energised states in the axial direction and at the right angles to the main valve and armature. (Values at the initial period)
 Note 3) Only applicable to S, T, L and M kits



How to Order Valves

Plug-in **VQC4** **1** **0** **0** **-** **-** **-** **-** **1** **-** **-** **-**

Type of actuation

1	2-position single (A)(B) 4 2 	3	3-position closed centre (A)(B) 4 2
	2-position double (A)(B) 4 2 		3-position exhaust centre (A)(B) 4 2
2	Metal 2-position double (A)(B) 4 2 	4	3-position pressure centre (A)(B) 4 2
	Rubber 2-position double (A)(B) 4 2 		5
		Note) 6	3-position double check (A)(B) 4 2

Note) For double check type, refer to the catalogue of the VQ4000/5000 series on website www.smc.eu

Body

0: Plug-in sub-plate

Seal

0	Metal seal
1	Rubber seal

Function

— Note 1)	Standard (0.95 W)
Y	Low wattage type (0.4 W)
R Note 2)	External pilot

Note 1) When the power is energised continuously, refer to "Specific Product Precautions 1" on page 37.
 Note 2) For details about external pilot type, refer to the catalogue of the VQ4000/5000 series on website www.smc.eu. In addition, external pilot type cannot be combined with a double check spacer.
 Note 3) When multiple symbols are specified, indicate them alphabetically.

Thread type

—	Rc
N	NPT
T	NPTF
F	G

Port size

—	Without sub-plate (For manifold)
02	1/4
03	3/8

Porting specifications

—	Side ported
B	Bottom ported

Manual override

—: Non-locking push type (Tool required)	B: Locking type (Tool required)	C: Locking type (Manual)
--	---------------------------------	--------------------------

Light/Surge voltage suppressor

—	Yes
E	Without light, with surge voltage suppressor

Coil voltage

5	24 V DC
6	12 V DC

VQC4000 Single Unit Manifold Construction Exploded View of Manifold Specific Product Precautions

VQC5000 Single Unit Manifold Construction Exploded View of Manifold Specific Product Precautions

How to Order Sub-plates



VQ4000 - PW - **02** **- Q**

Porting specifications

—	Side ported
B	Bottom ported

Port size

02	1/4
03	3/8

Thread type

—	Rc
N	NPT
T	NPTF
F	G


Replacement of pilot valve assembly (Voltage)
 Refer to page 35 for pilot valve assembly part numbers.
 Refer to page 38 for replacement method.

Series VQC4000

Dimensions: Plug-in Type



Conduit terminal

2-position single: VQC410⁰-□

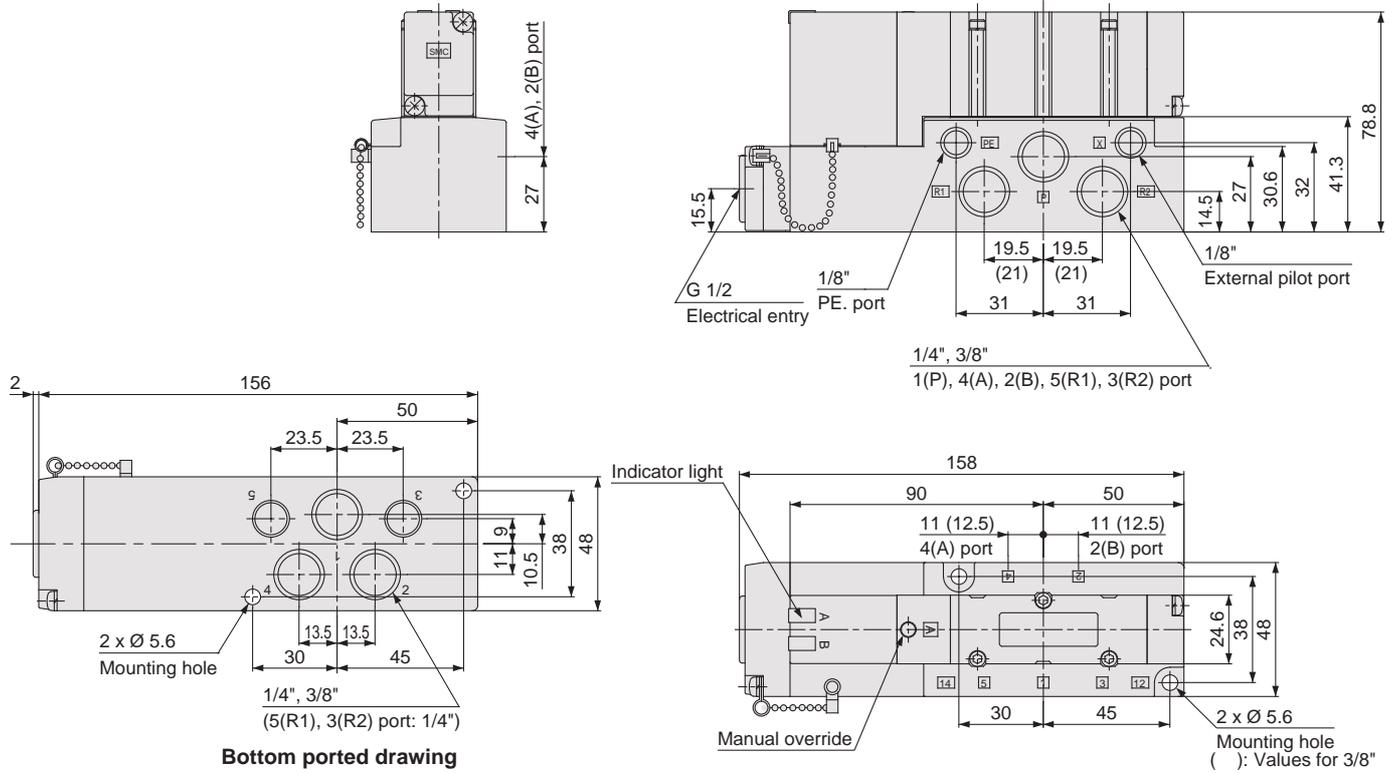

- 2-position double: VQC420⁰-□
- 3-position closed centre: VQC430⁰-□
- 3-position exhaust centre: VQC440⁰-□
- 3-position pressure centre: VQC450⁰-□

3-position double check: VQC460⁰-□

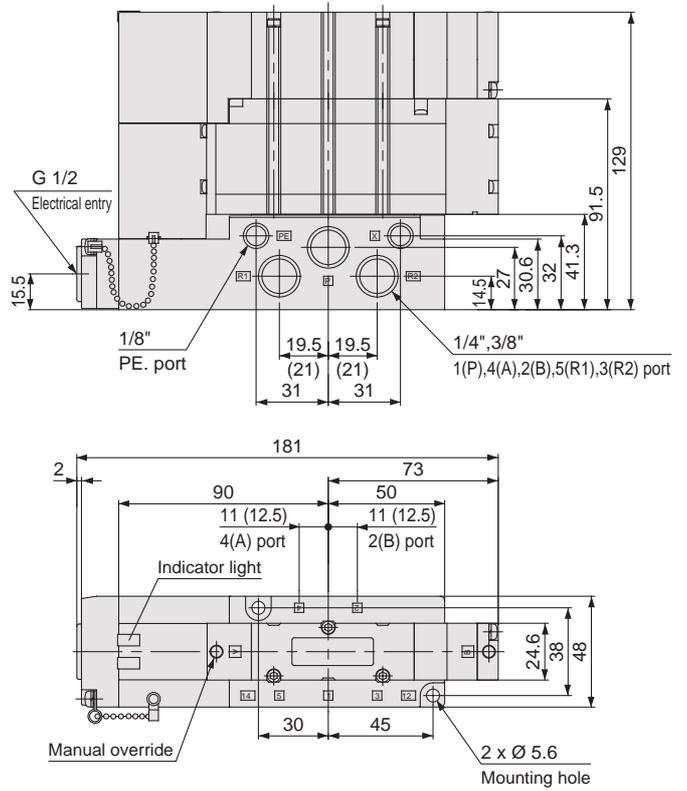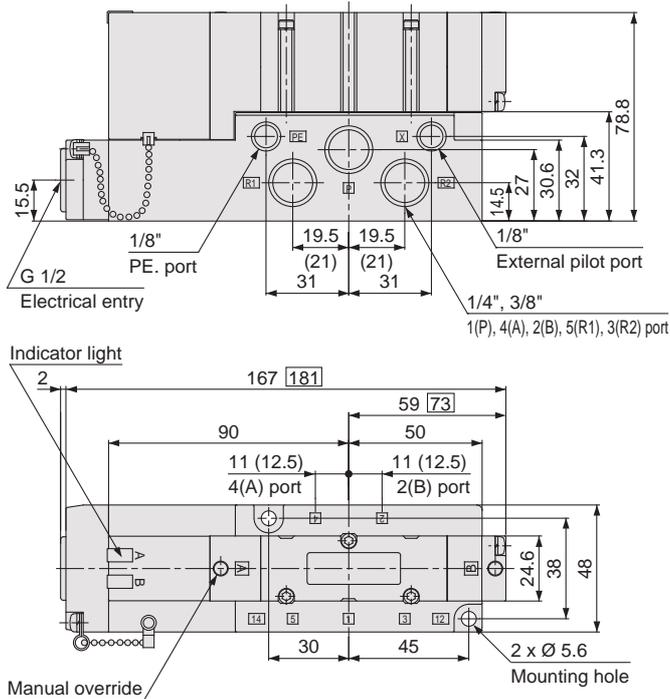

□: Values for 3-position
(): Values for 3/8"

Precauzioni
specifiche
del prodotto

Esploso del
manifold

Costruzione

Manifold

Unità singola

VQC5000

Precauzioni
specifiche
del prodotto

Esploso del
manifold

Costruzione

Manifold

Unità singola


VQC4000

Base Mounted

Plug-in Unit

Series VQC4000 $\text{C}\ \text{E}$

How to Order Manifold

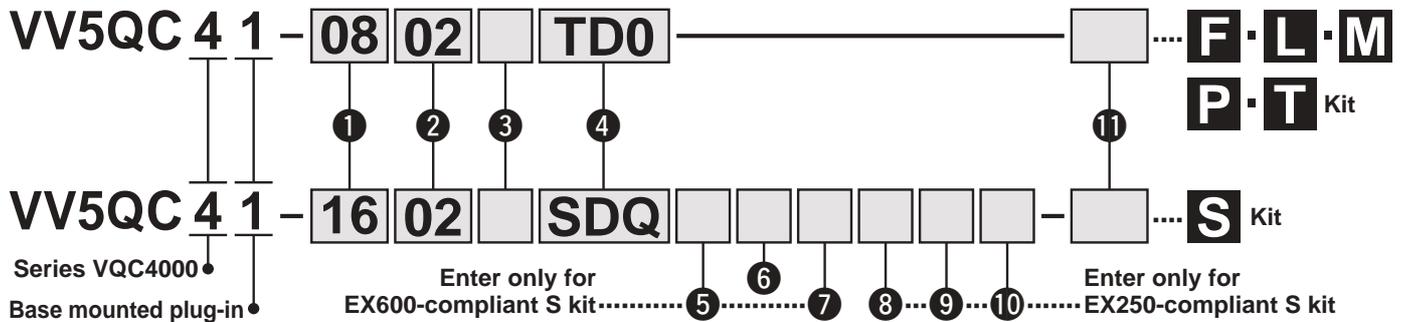


1 Stations

01	1 station
⋮	⋮
16	16 stations

The minimum or maximum number of stations differs depending on the electrical entry. (Refer to 1)
 Note) In the case of compatibility with the S kit/As-Interface, the maximum number of solenoids is as shown below, so please be careful of the number of stations.

8 in/8 out: Maximum 8 solenoids
 4 in/4 out: Maximum 4 solenoids

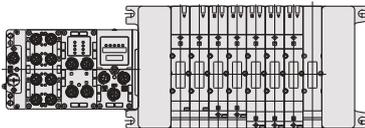

D side Stations--1--2--3--4--5--6--7--8--n U side

* Stations are counted from station 1 on the D-side.

2 Cylinder port size

C6	With \varnothing 6 One-touch fitting
C8	With \varnothing 8 One-touch fitting
C10	With \varnothing 10 One-touch fitting
C12	With \varnothing 12 One-touch fitting
N7	For \varnothing 1/4"
N9	For \varnothing 5/16"
N11	For \varnothing 3/8"
O2	1/4
O3	3/8
B	Bottom ported 1/4
CM	Mixed

3 Thread type

—	Rc
F	G
N	NPT
T	NPTF

10 Input block COM

(Enter only for S kit compliant with EX250.)

—	PNP sensor input or without input block
N	NPN sensor input

6 SI Unit output polarity

SI Unit output polarity		EX250 integrated-type (for I/O) serial transmission system				
		DeviceNet™	PROFIBUS DP	AS-Interface	CANopen	EtherNet/IP™
Nil	+ COM	—	—	—	—	—
N	- COM	○	○	○	○	○

SI Unit output polarity		EX260 integrated-type (for output) serial transmission system							
		DeviceNet™	PROFIBUS DP	CC-Link	EtherCAT	PROFINET	EtherNet/IP™	Ethernet POWERLINK	IO-Link
Nil	+ COM	○	○	○	○	○	○	—	—
N	- COM	○	○	○	○	○	○	○	○

SI Unit output polarity		EX500 Gateway Decentralized System 2 (128 points)		EX500 Gateway Decentralized System (64 points)		
		EtherNet/IP™	PROFINET	DeviceNet™	PROFIBUS DP	EtherNet/IP™
Nil	+ COM	—	—	○	○	○
N	- COM	○	○	○	○	○

SI Unit output polarity		EX600 integrated-type (for I/O) serial transmission system (Fieldbus system)							
		DeviceNet™	PROFIBUS DP	CC-Link	EtherNet/IP™	EtherCAT	PROFINET	EtherNet/IP™ compatible wireless base	PROFINET compatible wireless base
Nil	+ COM	○	○	○	○	○	○	○	○
N	- COM	○	○	○	○	○	○	○	○

* Leave the box blank for without SI Unit (SD0□, SD60).

5 End plate type

(Enter only for EX600-compliant S kit.)

Without end plate	
2	M12 power supply connector, B-coded
3	7/8 inch power supply connector
4	M12 power supply connector IN/OUT, A-coded, Pin arrangement 1
5	M12 power supply connector IN/OUT, A-coded, Pin arrangement 2

Note) Without SI Unit, the symbol is —.

* The pin layout for "4" and "5" pin connector is different.

7 I/O Unit stations

(Enter only for EX600-compliant S kit.)

—	None
1	1 station
⋮	⋮
9	9 stations

Note 1) Without SI Unit, the symbol is —.

Note 2) SI Unit is not included in I/O Unit stations.

Note 3) When I/O Unit is selected, it is shipped separately, and assembled by customer. Refer to the attached operation manual for mounting method.

Note 4) Refer to page 41 for details about the enclosure.

8 Input block type

(Enter only for S kit compliant with EX250.)

Symbol	Number of blocks
—	Without SI Unit (SD0)
0	Without input block
1	With 1 input block
⋮	⋮
4	With 4 input blocks
⋮	⋮
8	With 8 input blocks

9 Number of input blocks

(Enter only for S kit compliant with EX250.)

—	Without input block
1	M12, 2 inputs
2	M12, 4 inputs
3	M8, 4 inputs

11 Option

—	None
K	Special wiring specifications (except for double wiring)
N	With name plate (available for T kit only)
S ^{Note)}	Direct EXH outlet with built-in silencer


Note) The silencer is built into the R port passage of the end plate and the silenced air is exhausted from the R port.

* When two or more symbols are specified, indicate them alphabetically. Example: -KN5

4 Kit type/Electrical entry/Cable length

* Numbers in parentheses represent the maximum number of solenoids in the case of mixed single and double wiring. The total number of solenoids determines the maximum number of stations. When ordering mixed wiring, please add the option symbol "-K".


S Kit (Serial transmission kit (Fieldbus system) : EX600 integrated-type (for I/O))

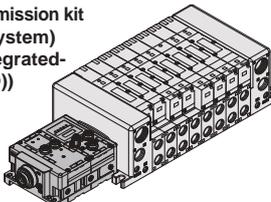

SI Unit: **EX600**
IP67 compliant

SD60	Serial kit without SI Unit	1 to 12 stations (16 stations, 24 points)
SD6Q	DeviceNet™	
SD6N	PROFIBUS-DP	
SD6V	CC-LINK	
SD6ZE	EtherNet/IP™ (1 port)	
SD6EA	EtherNet/IP™ (2 port)	
SD6D	EtherCAT®	
SD6F	PROFINET	
SD6WE	EtherNet/IP™ compatible wireless base <small>Note 5)</small>	
SD6WF	PROFINET compatible wireless base <small>Note 5)</small>	
SD6WS	Wireless remote <small>Note 5)</small>	


S Kit (Serial transmission kit: EX500 gateway-type)

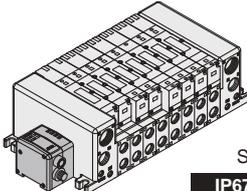

SI Unit: **EX500**
IP67 compliant

SD0A	Serial kit without SI Unit	—	—
SDA2	EX500 Gateway Decentralised system (64 points) DeviceNet™, PROFIBUS DP, EtherNet/IP™	16 Outputs	1 to 8 stations (16 stations, 16 points)
SDA3	EX500 Gateway Decentralised system 2(128 points) PROFINET, EtherNet/IP™	<small>Note 1)</small> 32 Outputs	1 to 12 stations (16 stations, 24 points)


S Kit (Serial transmission kit: EX260 integrated-type (for output))

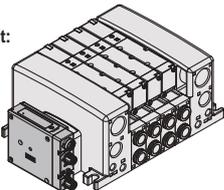

SI Unit: **EX260**
IP40 compliant
IP67 compliant

Symbol	Protocol	Number of outputs	Communication connector	Stations
SD0A Serial kit without SI Unit				
SQA	DeviceNet™	32	M12	1 to 16 stations (16 stations, 24 points)
SQB	DeviceNet™	16		1 to 8 stations (16 stations, 16 points)
SNA	PROFIBUS DP	32	M12	1 to 12 stations (16 stations, 24 points)
SNB		16		1 to 8 stations (16 stations, 16 points)
SNC		32	D-sub <small>Note 2)</small>	1 to 12 stations (16 stations, 24 points)
SND		16		1 to 8 stations (16 stations, 16 points)
SVA	CC-Link	32	M12	1 to 12 stations (16 stations, 24 points)
SVB		16		1 to 8 stations (16 stations, 16 points)
SDA	EtherCAT®	32	M12	1 to 12 stations (16 stations, 24 points)
SDB		16		1 to 8 stations (16 stations, 16 points)
SFA	PROFINET	32	M12	1 to 12 stations (16 stations, 24 points)
SFB		16		1 to 8 stations (16 stations, 16 points)
SEA	EtherNet/IP™	32	M12	1 to 12 stations (16 stations, 24 points)
SEB		16		1 to 8 stations (16 stations, 16 points)
SGA	EtherNet	32	M12	1 to 12 stations (16 stations, 24 points)
SGB		16		1 to 8 stations (16 stations, 16 points)


S Kit (Serial transmission kit: EX250 integrated-type (for I/O))

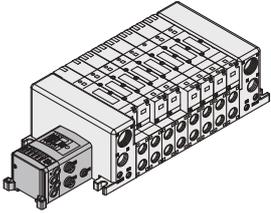

SI Unit: **EX250**
IP67 compliant

SD0	Serial kit without SI Unit	1 to 12 stations (16 stations, 24 points)	
SDQ	DeviceNet™		
SDN	PROFIBUS-DP		
SDV	CC-LINK		
SDTA	AS-Interface, 8 in/out, 31 slave modes, 2 power supply systems		1 to 4 stations (8 stations, 8 points)
SDTB	AS-Interface, 4 in/out, 31 slave modes, 2 power supply systems		1 to 2 stations (4 stations, 4 points)
SDTC <small>Note 1)</small>	AS-Interface, 8 in/out, 31 slave modes, 1 power supply system		1 to 4 stations (8 stations, 8 points)
SDTD <small>Note 1)</small>	AS-Interface, 4 in/out, 31 slave modes, 1 power supply system		1 to 2 stations (4 stations, 4 points)
SDY	CANopen		1 to 12 stations (16 stations, 24 points)
SDZEN	EtherNet/IP™		


S Kit (Serial transmission kit: EX126 integrated-type (for output))

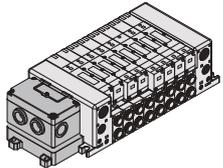

SI Unit: **EX126**
IP67 compliant

SDVB	Serial kit for CC-LINK	1 to 8 stations (16 stations, 16 points)
-------------	------------------------	---

P Kit (Flat ribbon cable kit)

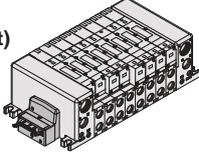


IP40 compliant

Note) For a 20P flat ribbon cable, the cable assembly must be ordered separately.

PD0	Flat ribbon cable kit (26P) without cable	1 to 12 stations (16 stations, 24 points)
PD1	Flat ribbon cable kit (26P) with 1.5 m cable	
PD2	Flat ribbon cable kit (26P) with 3.0 m cable	
PD3	Flat ribbon cable kit (26P) with 5.0 m cable	
PDC	Flat ribbon cable kit (20P) without cable <small>Note)</small>	1 to 8 stations (16 stations, 16 points)


F Kit (D-sub connector kit)

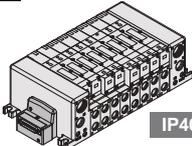

IP40 compliant

FD0	D-sub connector kit (25P) without cable	1 to 12 stations (16 stations, 24 points)
FD1	D-sub connector kit (25P) with 1.5 m cable	
FD2	D-sub connector kit (25P) with 3.0 m cable	
FD3	D-sub connector kit (25P) with 5.0 m cable	


M Kit (Circular connector kit)

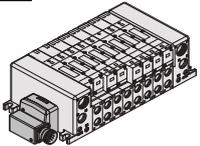

IP67 compliant

MD0	Circular connector kit (26P) without cable	1 to 12 stations (16 stations, 24 points)
MD1	Circular connector kit (26P) with 1.5 m cable	
MD2	Circular connector kit (26P) with 3.0 m cable	
MD3	Circular connector kit (26P) with 5.0 m cable	


T Kit (Terminal block box kit)

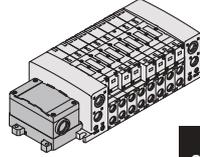

IP67 compliant

TD0	Terminal block box kit	1 to 10 stations (16 stations, 20 points)
------------	------------------------	--

L Kit (Lead wire kit)

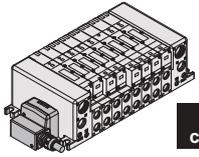

IP67 compliant

LD0	Lead wire kit, 0.6 m lead wire	1 to 12 stations (16 stations, 24 points)
LD1	Lead wire kit, 1.5 m lead wire	
LD2	Lead wire kit, 3.0 m lead wire	

* The maximum number of solenoids displayed in parentheses is applied to the special wiring specification (Option "-K").
 Note 1) When using the II Unit with 32 outputs use the GW Unit compatible with the EX500 Gateway Decentralised System 2 (128 points).
 Note 2) When selecting SI Units with SDTC or SDTD specifications, there are limits to the supply current from the SI Unit to the input block or valve. For details, refer to the catalogue on the website www.smc.eu.
 Note 3) When selecting D-sub S kit specifications only, IP40 is compatible. (All other SI Units are IP67 compliant.)
 Note 4) For the SI Unit part no., refer to page 14.
 Note 5) The wireless system is suitable for use only in a country where it is in accordance with the Radio Act and regulations of that country.

How to Order Valves

VQC4 **1** **0** **0** **□** - **5** **□** **□** **1**

Series VQC4000 • **0** **1** **2** **3** **4** **5**

0 Type of actuation

1	2-position single (A) (B) 4, 2 5 1'3' (R1)(P)(R2)	4	3-position exhaust centre (A) (B) 4, 2 5 1'3' (R1)(P)(R2)
	2-position double (Metal) (A) (B) 4, 2 5 1'3' (R1)(P)(R2)		3-position pressure centre (A) (B) 4, 2 5 1'3' (R1)(P)(R2)
2	2-position double (Rubber) (A) (B) 4, 2 5 1'3' (R1)(P)(R2)	6	3-position double check (A) (B) 4, 2 5 1'3' (R1)(P)(R2)
	3-position closed centre (A) (B) 4, 2 5 1'3' (R1)(P)(R2)		

1 Seal type

0	Metal seal
1	Rubber seal

2 Function

— Note 1)	Standard (0.95 W)
Y	Low wattage type (0.4 W)
R Note 2)	External pilot

Note 1) When the power is energised continuously, refer to "Specific Product Precautions 1" on page 37.

Note 2) For details about external pilot type, refer to the catalogue of the VQ4000/5000 series on the website www.smc.eu. In addition, external pilot type cannot be combined with a double check spacer.

Note 3) When multiple symbols are specified, indicate them alphabetically.

3 Coil voltage

5	24 V DC Note)
6	12 V DC


Note) S kit is only available for 24 V DC.

4 Light/Surge voltage suppressor


—	Yes
E	Without light, with surge voltage suppressor

5 Manual override


—: Non-locking push type (Tool required)

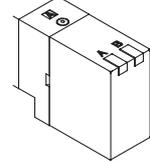

B: Locking type (Tool required)

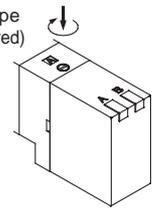


C: Locking type (Manual)

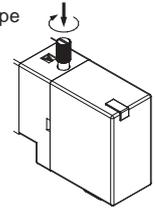

How to Order Manifold Assembly

Example (VV5QC41-□SD6□)

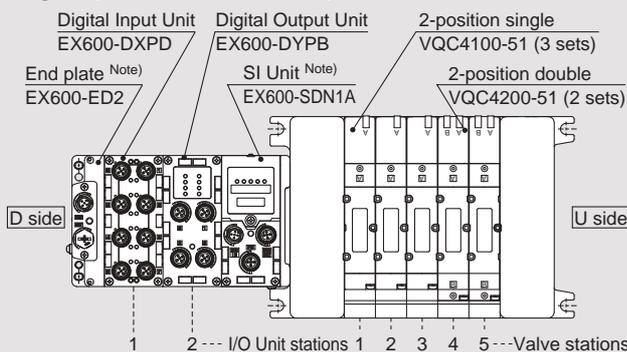

VV5QC41-0502SD6Q2N2...1 set (S kit 5-station manifold base part number)

*VQC4100-51.....3 sets (2-position single part number)

*VQC4200-51.....2 sets (2-position double part number)

*EX600-DXPD.....1 set I/O Unit part number (Station 1)

*EX600-DYPB.....1 set I/O Unit part number (Station 2)

* The asterisk denotes the symbol for assembly.

* Prefix it to the part numbers of the valve etc.

- The valve arrangement is numbered as the 1st station from the D side.
- Under the manifold part number, state the valves to be mounted, then the I/O Units in order from the 1st station as shown in the figure above. If the arrangement becomes complicated, specify on a manifold specification sheet.

Note) Do not enter the SI Unit part number and the end plate part number together.

Manifold Specifications

Series	Base model	Connection type	Piping specifications		Note 2) Applicable stations	Applicable solenoid valve	5-station weight [g]	
			Port direction	Port size Note 1)				
				1, 3 (P, R)				2, 4 (A, B)
VQC4000	VV5QC41-□□□□	■ F kit: D-sub connector ■ P kit: Flat ribbon cable ■ T kit: Terminal block box ■ S kit: Serial transmission ■ L kit: Lead wire ■ M kit: Circular connector	Side	P: 1/2 (Rc, G, NPT/NPTF) R: 3/4 (Rc, G, NPT/NPTF)	C6 (for Ø 6) C8 (for Ø 8) C10 (for Ø 10) C12 (for Ø 12) 1/4 (Rc, G, NPT/NPTF) 3/8 (Rc, G, NPT/NPTF)	(F, L, M, P kit) (1 to 16 stations) (T kit) (1 to 16 stations) (S kit) (1 to 16 stations: EX250) (1 to 16 stations: EX500)	VQC4□□00-51 VQC4□□01-51	4150 · S kit (Without Unit) · Not including valve weight.
			Bottom		1/4 (Rc, G, NPT/NPTF)			

Note 1) One-touch fittings in inch sizes are also available.

Note 2) An optional specification for special wiring is available to increase the maximum number of stations.

SI Unit Part Number Table

EX600 Integrated type (For Input/Output)

Symbol	Applicable protocol	SI Unit part no.		Page
		Negative common (PNP)	Positive common (NPN)	
SD6Q	DeviceNet™	EX600-SDN1A	EX600-SDN2A	33
SD6N	CC-Link	EX600-SMJ1	EX600-SMJ2	
SD6V	PROFIBUS DP	EX600-SPR1A	EX600-SPR2A	
SD6ZE	EtherNet/IP™ (1 port)	EX600-SEN1	EX600-SEN2	
SD6EA	EtherNet/IP™ (2 port)	EX600-SEN3	EX600-SEN4	
SD6D	EtherCAT®	EX600-SEC1	EX600-SEC2	
SD6F	PROFINET	EX600-SPN1	EX600-SPN2	
SD6WE	EtherNet/IP™, compatible wireless base <small>Note</small>	EX600-WEN1	EX600-WEN2	
SD6WF	PROFINET, compatible wireless base <small>Note</small>	EX600-WPN1	EX600-WPN2	
SD6WS	Wireless remote <small>Note</small>	EX600-WSN1	EX600-WSN2	

Note) The wireless system is suitable for use only in a country where it is in accordance with the Radio Act and regulations of that country.

EX260 Integrated type (For Output)

Symbol	Applicable protocol	Number of outputs	SI Unit part no.		Communication connector	Page	
			Negative common (PNP)	Positive common (NPN)			
SQA	DeviceNet™	32	EX260-SDN1	EX260-SDN2	M12	33	
SQB		16	EX260-SDN3	EX260-SDN4			
SNA	PROFIBUS DP	32	EX260-SPR1	EX260-SPR2			D-sub
SNB		16	EX260-SPR3	EX260-SPR4			
SNC		32	EX260-SPR5	EX260-SPR6			
SND		16	EX260-SPR7	EX260-SPR8			
SVA	CC-Link	32	EX260-SMJ1	EX260-SMJ2	M12		
SVB		16	EX260-SMJ3	EX260-SMJ4			
SDA	EtherCAT®	32	EX260-SEC1	EX260-SEC2	M12		
SDB		16	EX260-SEC3	EX260-SEC4			
SFA	PROFINET	32	EX260-SPN1	EX260-SPN2	M12		
SFB		16	EX260-SPN3	EX260-SPN4			
SEA	EtherNet/IP™	32	EX260-SEN1	EX260-SEN2	M12		
SEB		16	EX260-SEN3	EX260-SEN4			
SGA	EtherNet	32	EX260-SPL1	—	M12		
SGB		POWERLINK	16	EX260-SPL3		—	

EX126 Integrated type (For Output)

Symbol	Applicable protocol	SI Unit part no.	Page
SDVB	CC-Link, Positive common (NPN)	EX126D-SMJ1	34

EX500 Gateway Decentralised System 2 (128 points)

Symbol	Applicable protocol	SI Unit part no.		Page
		Negative common (PNP)	Positive common (NPN)	
SDA3	EtherNet/IP™	EX500-S103		33
	PROFINET			

EX500 Gateway Decentralised System (64 points)

Symbol	Applicable protocol	SI Unit part no.		Page
		Positive common (NPN)	Negative common (PNP)	
SDA2	DeviceNet™	EX500-Q001	EX500-Q101	33
	PROFIBUS DP			
	EtherNet/IP™			

EX250 Integrated type (For Input/Output)


Symbol	Applicable protocol	SI Unit part no.	Page
SDQ	DeviceNet™, Negative common (PNP)	EX250-SDN1	34
SDN	PROFIBUS DP, Negative common (PNP)	EX250-SPR1	
SDV	CC-Link, Positive common (NPN)	EX250-SMJ2	
SDTA	AS-Interface, Negative common (PNP), (8 in/8 out, 31 slave modes, 2 power supply systems)	EX250-SAS3	
SDTB	AS-Interface, Negative common (PNP), (4 in/4 out, 31 slave modes, 2 power supply systems)	EX250-SAS5	
SDTC	AS-Interface, Negative common (PNP), (8 in/8 out, 31 slave modes, 1 power supply system)	EX250-SAS7	
SDTD	AS-Interface, Negative common (PNP), (4 in/4 out, 31 slave modes, 1 power supply system)	EX250-SAS9	
SDY	CANopen, Negative common (PNP)	EX250-SCA1A	
SDZEN	EtherNet/IP™, Negative common (PNP)	EX250-SEN1	

For details about the EX series refer to their catalogues on the website www.smc.eu and the Operation Manual. Please download the Operation Manual via SMC website, <http://www.smc.eu>


Manifold Options

For details about options, refer to the catalogue of the VQ4000/5000 series on www.smc.eu.


Blanking plate assembly
VVQ4000-10A-1

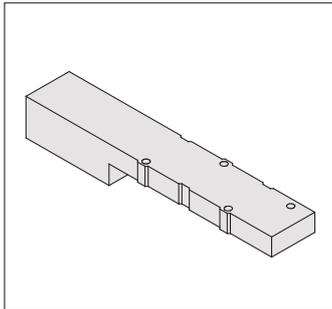


Individual SUP spacer
VVQ4000-P-1-⁰²/₀₃

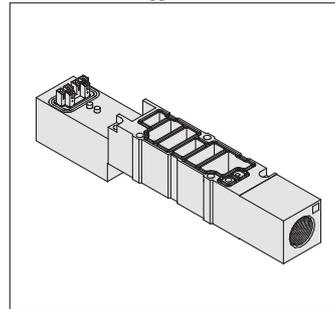


Individual EXH spacer
VVQ4000-R-1-⁰²/₀₃

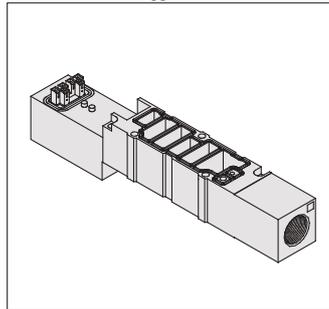


SUP/EXH block plate
VVQ4000-16A

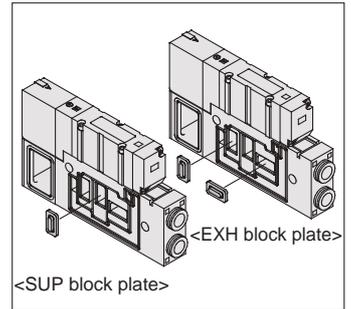


Restrictor spacer
VVQ4000-20A-1

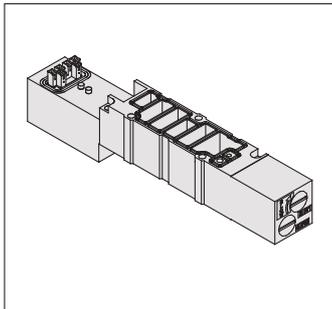


Double check spacer with residual pressure exhaust
VVQ4000-25A-1 Note

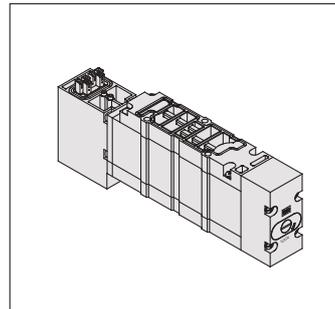

SUP stop valve spacer
VVQ4000-37A-1

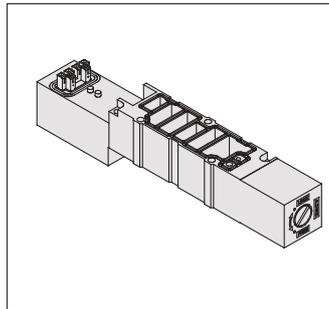

Interface regulator (P, A, B port regulation)
ARBQ4000-00-^A/_B-1

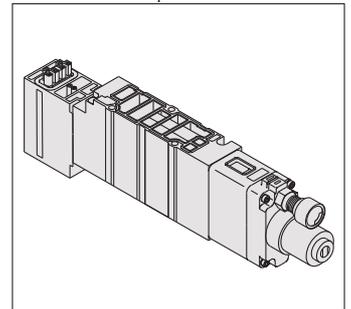

Note) The double check spacer with residual pressure release valve cannot be combined with external pilot type.

For replacement parts, refer to page 35.

VQC4000
Single Unit
Manifold
Construction
Exploded View of Manifold
Specific Product Precautions
VQC5000
Single Unit
Manifold
Construction
Exploded View of Manifold
Specific Product Precautions

Series VQC4000


S VQC4000

Kit (Serial transmission kit): For EX600 Integrated-type (I/O) Serial Transmission System **IP67 compliant**

VV5QC41

S kit (Serial transmission kit: EX600)

Power supply with M12 connector

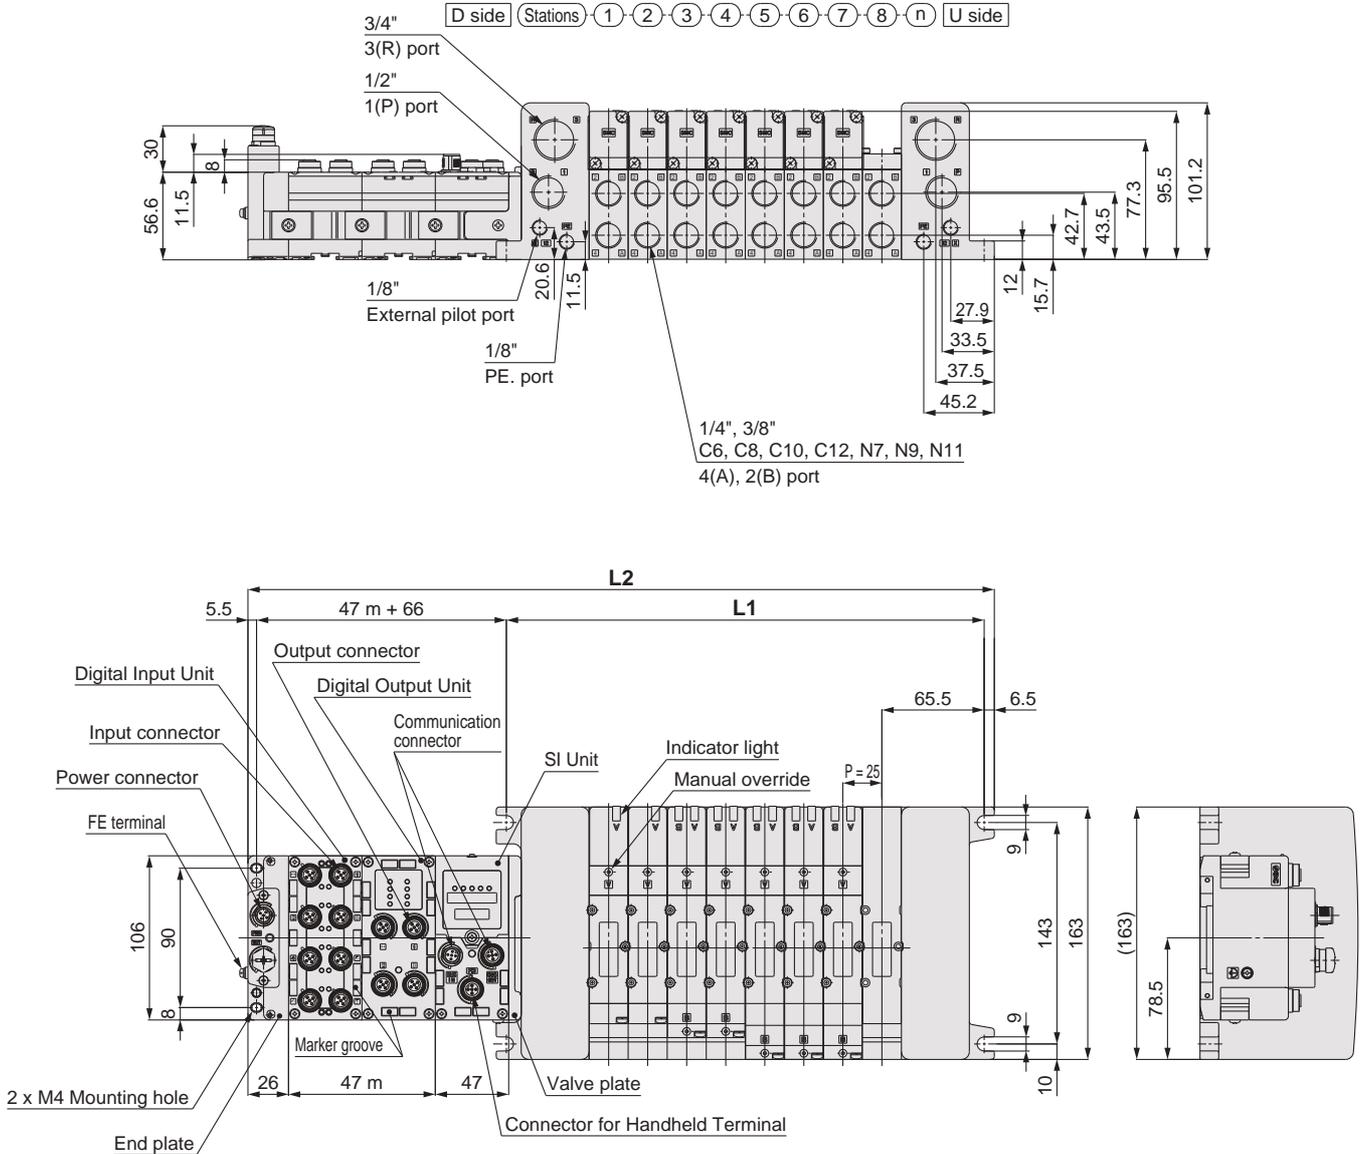

Dimensions

L \ n	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16
L1	131	156	181	206	231	256	281	306	331	356	381	406	431	456	481	506
L2	209	234	259	284	309	334	359	384	409	434	459	484	509	534	559	584

Formula: L1 = 25n + 106, L2 = 25n + 184 * L2 is the dimension without I/O Unit. Add 47 mm for each additional I/O Units. * "m" is number of I/O Units. n: Stations (Maximum 16 stations)


S VQC4000

Kit (Serial transmission kit): For EX600 Integrated-type (I/O) Serial Transmission System **IP67 compliant**

VV5QC41

S kit (Serial transmission kit: EX600)

Power supply with 7/8 inch connector

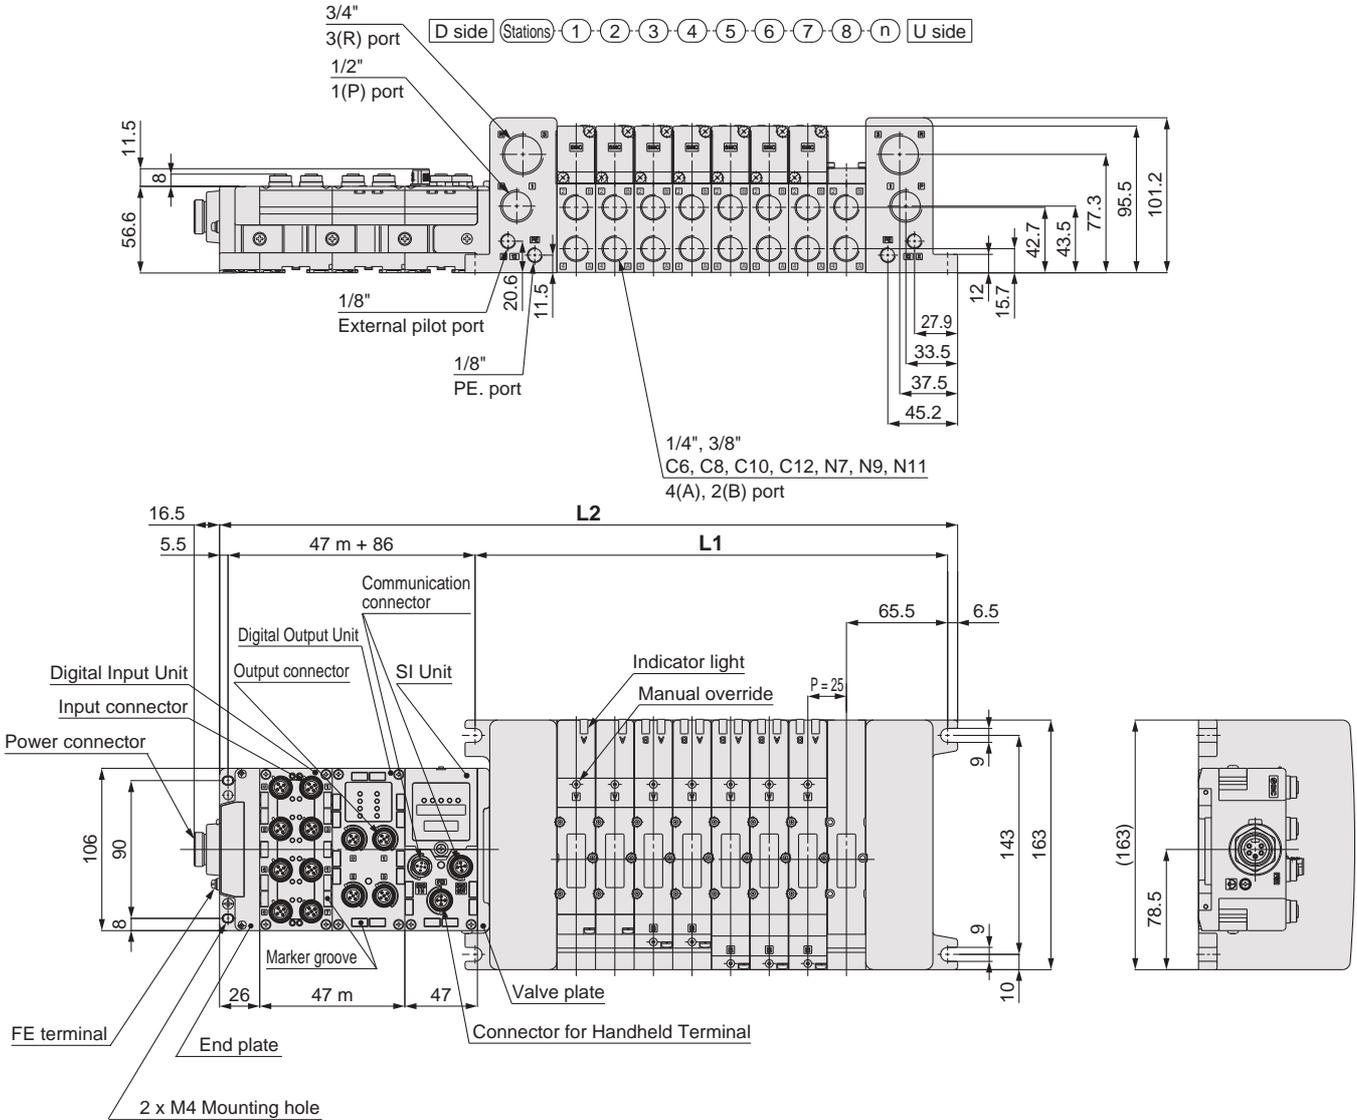

Dimensions

L \ n	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16
L1	131	156	181	206	231	256	281	306	331	356	381	406	431	456	481	506
L2	209	234	259	284	309	334	359	384	409	434	459	484	509	534	559	584

Formula: L1 = 25n + 106, L2 = 25n + 184 * L2 is the dimension without I/O Unit. Add 47 mm for each additional I/O Units. * "m" is number of I/O Units. n: Stations (Maximum 16 stations)

VQC4000

Single Unit

Manifold

Construction

Exploded View of Manifold

Specific Product Precautions

VQC5000

Single Unit

Manifold

Construction

Exploded View of Manifold

Specific Product Precautions


Series VQC4000

S VQC4000

Kit (Serial transmission kit): For EX500 Gateway-type Serial Transmission System **IP67 compliant**

VV5QC41

S kit (Serial transmission kit: EX500)

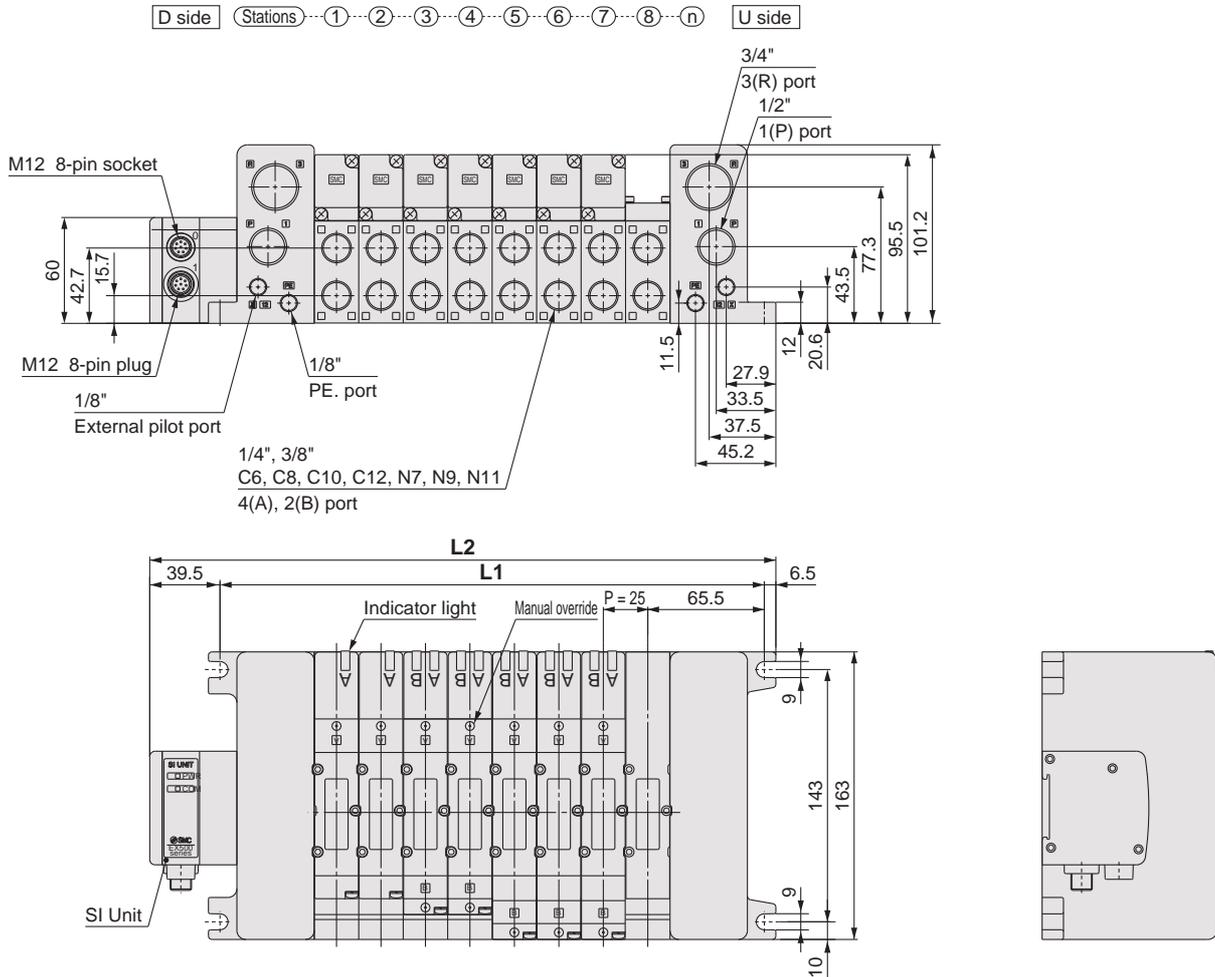

Dimensions

[mm]

L \ n	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16
L1	131	156	181	206	231	256	281	306	331	356	381	406	431	456	481	506
L2	177	202	227	252	277	302	327	352	377	402	427	452	477	502	527	552

Formula: L1 = 25n + 106, L2 = 25n + 152 n: Stations (Maximum 16 stations)

S **VQC4000**


Kit (Serial transmission kit): For EX260 Integrated-type (Output) Serial Transmission System

IP40 compliant

IP67 compliant

VV5QC41

S kit (Serial transmission kit: EX260)

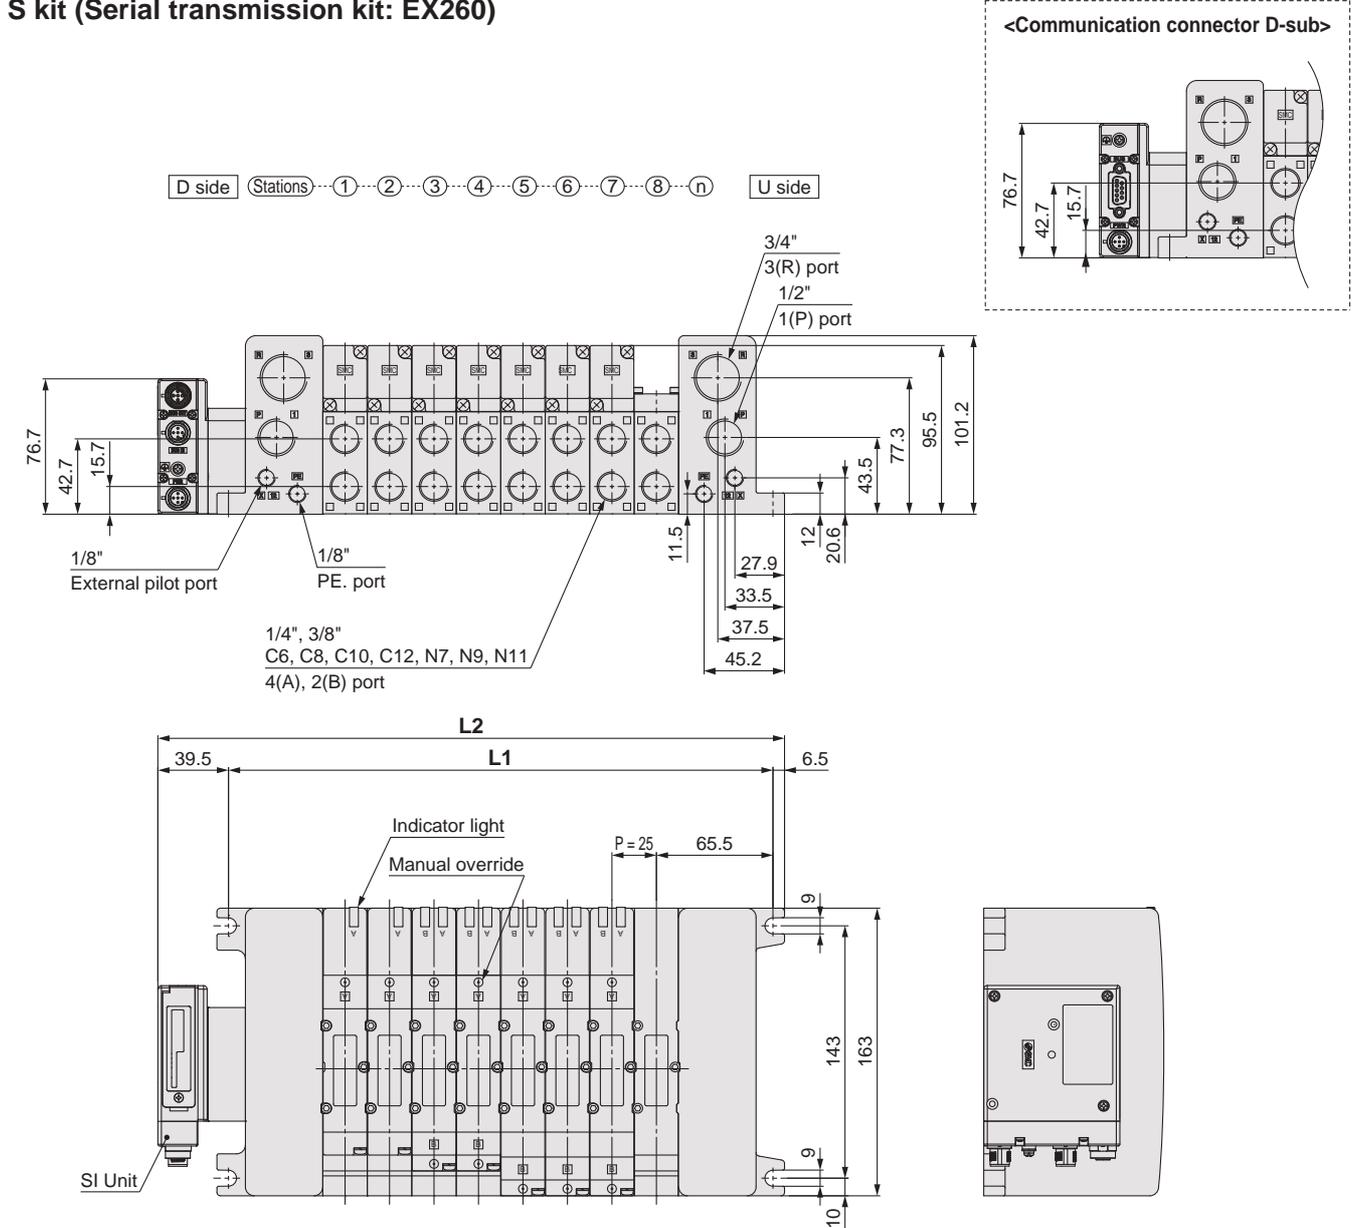

Dimensions

L \ n	[mm]															
	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16
L1	131	156	181	206	231	256	281	306	331	356	381	406	431	456	481	506
L2	177	202	227	252	277	302	327	352	377	402	427	452	477	502	527	552

n: Stations (Maximum 16 stations)

VQC4000

Single Unit

Manifold

Construction

Exploded View of Manifold

Specific Product Precautions

VQC5000

Single Unit

Manifold

Construction

Exploded View of Manifold


Specific Product Precautions

S VQC4000

Kit (Serial transmission kit): For EX126 Integrated-type (Output) Serial Transmission System **IP67 compliant**

VV5QC41

S kit (Serial transmission kit: EX126)

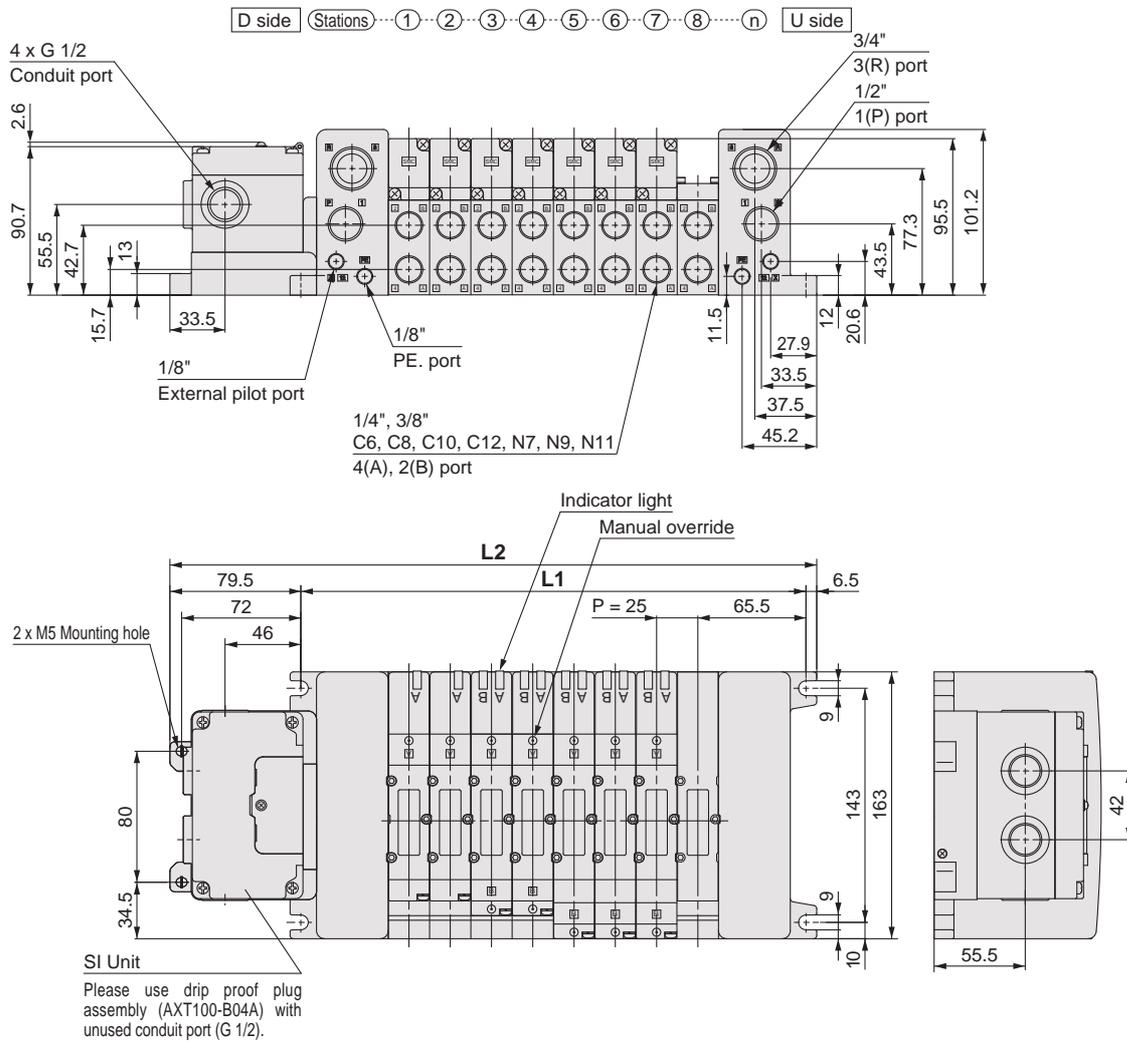

Dimensions


L \ n	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16
L1	131	156	181	206	231	256	281	306	331	356	381	406	431	456	481	506
L2	217	242	267	292	317	342	367	392	417	442	467	492	517	542	567	592

Formula: L1 = 25n + 106, L2 = 25n + 192 n: Stations (Maximum 16 stations)

Series VQC4000


F VQC4000 Kit (D-sub connector kit) IP40 compliant

- Using our D-sub connector for electrical connections greatly reduces labour, while it also minimises wiring and saves space.
- We use a D-sub connector (25P) that conforms to MIL standards and is therefore widely compatible with many standard commercial models.
- Top or side entry for the connector can be changed freely, allowing for changes even after mounting, to meet any changing needs for space.

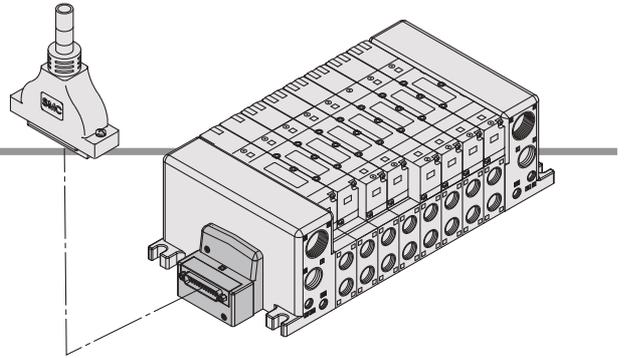

Electrical Wiring Specifications

D-sub connector

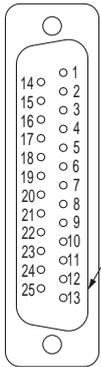

If alignment is not specified, the internal wiring is double wiring (connected to SOL. a and SOL. b) regardless of number of stations, valve and option types.


Connector terminal no.

Station	Lead wire no.	Polarity	Terminal no.	Lead wire colour	Dot marking
Station 1	SOL. a	1 (-) (+)	1	Black	None
	SOL. b	14 (-) (+)	14	Yellow	Black
Station 2	SOL. a	2 (-) (+)	2	Brown	None
	SOL. b	15 (-) (+)	15	Orange	None
Station 3	SOL. a	3 (-) (+)	3	Red	None
	SOL. b	16 (-) (+)	16	Yellow	White
Station 4	SOL. a	4 (-) (+)	4	Orange	None
	SOL. b	17 (-) (+)	17	White	Black
Station 5	SOL. a	5 (-) (+)	5	Yellow	None
	SOL. b	18 (-) (+)	18	Pink	Black
Station 6	SOL. a	6 (-) (+)	6	Blue	None
	SOL. b	19 (-) (+)	19	Purple	White
Station 7	SOL. a	7 (-) (+)	7	Grey	Black
	SOL. b	20 (-) (+)	8	White	Red
Station 8	SOL. a	8 (-) (+)	8	Yellow	Red
	SOL. b	21 (-) (+)	9	Orange	Red
Station 9	SOL. a	9 (-) (+)	9	Yellow	Black
	SOL. b	22 (-) (+)	10	Pink	Black
Station 10	SOL. a	10 (-) (+)	10	Yellow	White
	SOL. b	23 (-) (+)	11	White	None
Station 11	SOL. a	11 (-) (+)	11	Grey	None
	SOL. b	24 (-) (+)	12	Orange	Black
Station 12	SOL. a	12 (-) (+)	12	Red	White
	SOL. b	25 (-) (+)	13	Brown	White
COM.	13 (+) (-)	13	Pink	Red	
			23	Grey	Red
			24	Black	White
			25	White	None

* When using a valve with no polarity, either positive common or negative common can be used.

Specified Layout

(25 pins)

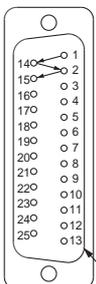

Mixed wiring of single and double wiring can be specified on the manifold specification sheet. The maximum number of stations is determined according to the number of solenoids. The total number of solenoids should be 24 or less. 1 solenoid is required for 2-position single, and 2 solenoids for 2-position double, 3-position and 4-position.

COM.

Connector Cable


GVVZS3000-21A-□ [IP40]

D-sub connector/cable

Cable length (L)	Assembly part no.	Note
1 m	GVVZS3000-21A-160	60°angled
3 m	GVVZS3000-21A-260	60°angled
5 m	GVVZS3000-21A-360	60°angled
8 m	GVVZS3000-21A-460	60°angled
3 m	GVVZS3000-21A-2	Standard
5 m	GVVZS3000-21A-3	Standard
8 m	GVVZS3000-21A-4	Standard

Shielded cable

Cable length (L)	Assembly part no.	Note
1 m	GVVZS3000-21A-1S	Shielded
3 m	GVVZS3000-21A-2S	Shielded
5 m	GVVZS3000-21A-3S	Shielded
8 m	GVVZS3000-21A-4S	Shielded
20 m	GVVZS3000-21A-5S	Made to order

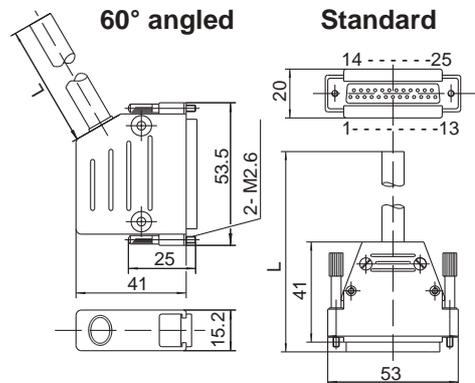

Electrical characteristics

Item	Property
Conductor resistance Ω/km, 20 °C	Max. 57
Voltage limit V, 5 minute, AC	1500
Insulation resistance MΩ/km, 20 °C	20

Standard


D-Sub connector cable assembly (option)

AXT100-DS25- ⁰¹⁵ ₀₃₀ ⁰¹⁵ ₀₅₀ (According to MIL-C24308)

* Please contact SMC for details.

F VQC4000
Kit (D-sub connector kit) IP40 compliant

VV5QC41

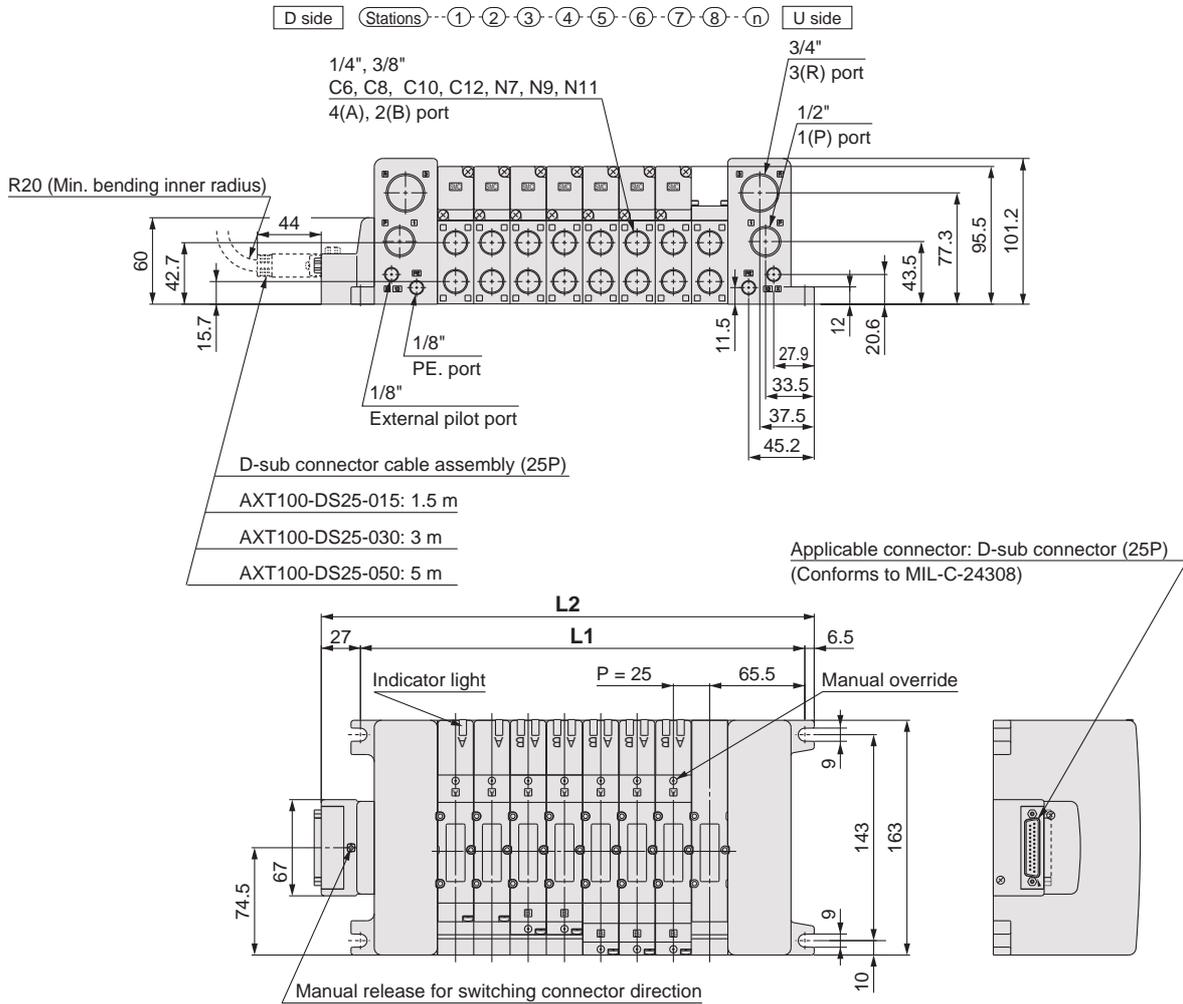

Dimensions

L \ n	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16
L1	131	156	181	206	231	256	281	306	331	356	381	406	431	456	481	506
L2	164.5	189.5	214.5	239.5	264.5	289.5	314.5	339.5	364.5	389.5	414.5	439.5	464.5	489.5	514.5	539.5

Formula: L1= 25n + 106, L2 = 25n + 139.5 n: Stations (Maximum 16 stations)

VQC4000

Single Unit

Manifold

Construction

Exploded View of Manifold

Specific Product Precautions

VQC5000

Single Unit

Manifold

Construction


Exploded View of Manifold

Specific Product Precautions

Series VQC4000

P VQC4000 Kit (Flat ribbon cable kit) IP40 compliant

- Using our flat ribbon cable for electrical connections greatly reduces labour, while it also minimises wiring and saves space.
- We use flat ribbon cables whose connectors (26P and 20P) conform to MIL standards, and are therefore widely compatible with many standard commercial models.
- Top or side entry for the connector can be changed freely, allowing for changes even after mounting, to meet any changing needs for space.

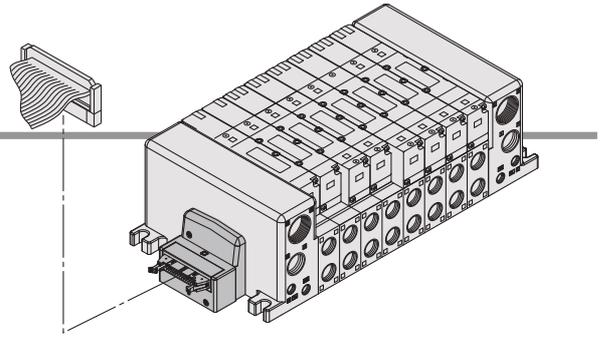

Electrical Wiring Specifications

Flat ribbon cable connector

Double wiring (connected to SOL. A and SOL. B) is used for the internal wiring of each station regardless of valve and option types. Mixed single and double wiring are available as options. Refer to special wiring specifications (options) below.

Connector terminal number

Triangle mark indicator position

<26P>

<20P>

Cable Assembly

AXT100-FC²⁰₂₆¹₂³

(Type 26P flat ribbon cable connector assemblies can be ordered with manifolds. Refer to manifold ordering.)

Flat ribbon cable connector assemblies

Cable length (L)	Part no.	
	26P	20P
1.5 m	AXT100-FC26-1	AXT100-FC20-1
3 m	AXT100-FC26-2	AXT100-FC20-2
5 m	AXT100-FC26-3	AXT100-FC20-3

- * When using a standard commercial connector, use a type 26P connector conforming to MIL-C-83503 or a type 20P with strain relief.
- * Cannot be used for transfer wiring.
- * Lengths other than the above is also available. Please contact SMC for details.

Connector Manufacturers Example

- Hirose Electric Co., Ltd.
- Sumitomo/3M Limited
- Fujitsu, Ltd.
- Japan Aviation Electronics Industry, Ltd.
- J.S.T. Mfg. Co., Ltd.
- Oki Electric Cable Co., Ltd.


Special Wiring Specifications (Option)

Mixed single and double wiring are available as options. The maximum number of manifold stations is determined by the number of solenoids. Count one point for a single solenoid type and two points for a double solenoid type. The total number of solenoids (points) must not exceed 24.

(For 26P) (For 20P)

P **VQC4000**
Kit (Flat ribbon cable kit) **IP40 compliant**

VV5QC41

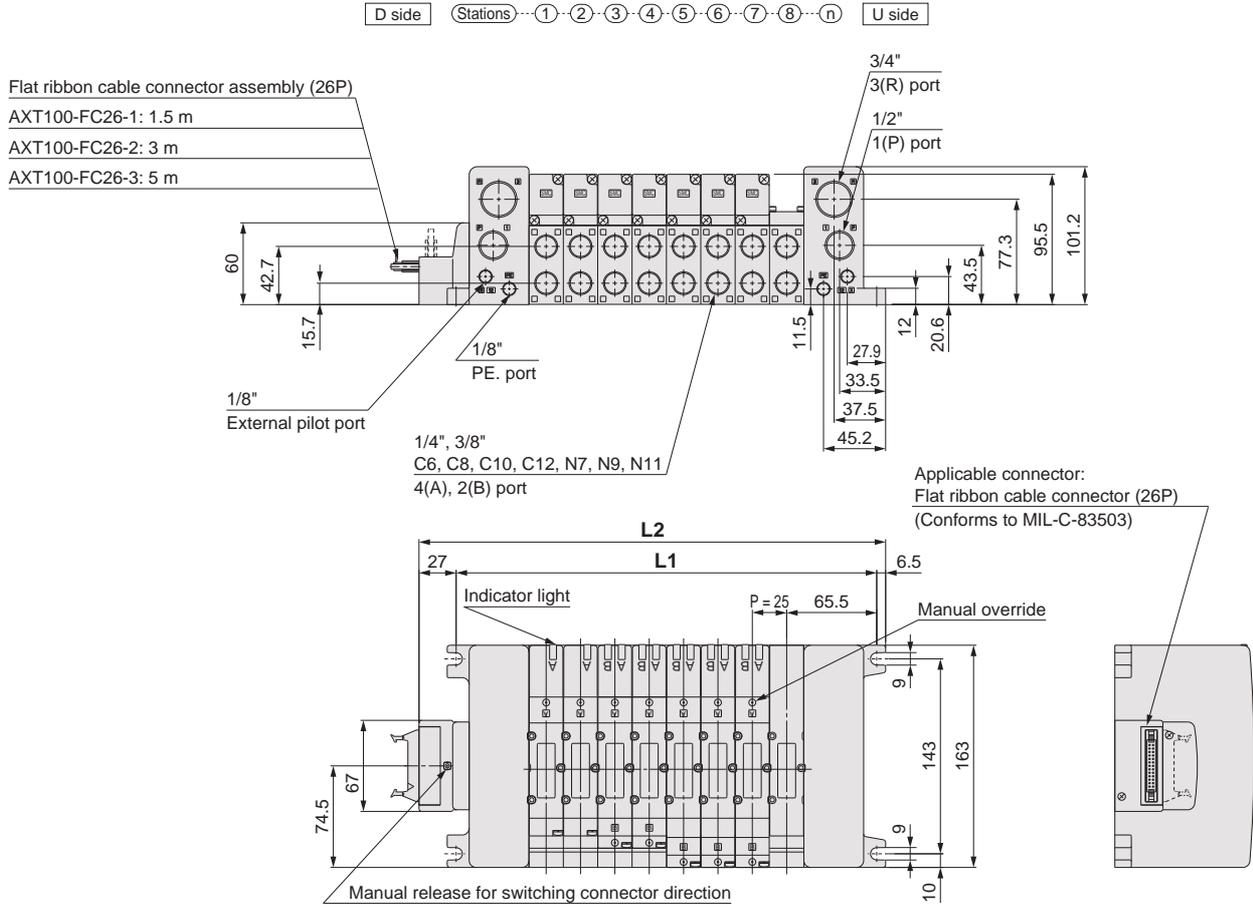

Dimensions

L \ n	[mm]															
	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16
L1	131	156	181	206	231	256	281	306	331	356	381	406	431	456	481	506
L2	164.5	189.5	214.5	239.5	264.5	289.5	314.5	339.5	364.5	389.5	414.5	439.5	464.5	489.5	514.5	539.5

Formula: L1 = 25n + 106, L2 = 25n + 139.5 n: Stations (Maximum 16 stations)

VQC4000

Single Unit

Manifold

Construction

Exploded View of Manifold

Specific Product Precautions

VQC5000

Single Unit

Manifold


Construction

Exploded View of Manifold

Specific Product Precautions

Series VQC4000

T VQC4000 Kit (Terminal block box kit) IP67 compliant

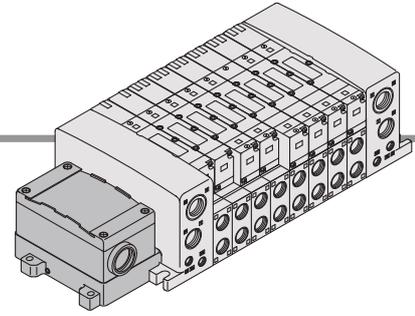


- This kit has a small terminal block inside a junction box. The provision of a G 3/4 electrical entry allows connection of conduit fittings.

Terminal Block Connection

Step 1. How to remove terminal block cover

Loosen the 4 mounting screws (M4) and remove the terminal block cover.

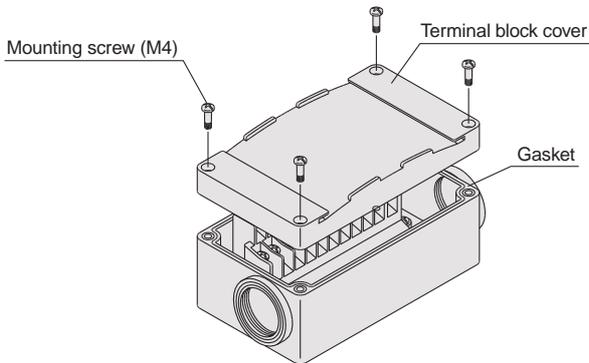

Step 3. How to replace the terminal block cover

Securely tighten the screws to the torque shown in the table below, after confirming that the gasket is installed correctly.


Proper tightening torque [N·m]
0.7 to 1.2

- Applicable crimped terminal: 1.25-3S, 1.25Y-3, 1.25Y-3N, 1.25Y-3.5
- Name plate: VVQ5000-N-T
- Drip proof plug assembly (for G 3/4): AXT100-B06A


Step 2. The diagram below shows the terminal block wiring.

All stations are provided with double wiring regardless of the valves which are mounted.

Connect each wire to the power supply side, according to the markings provided inside the terminal block.

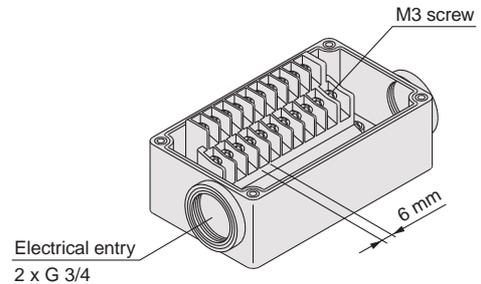


Electrical Wiring Specifications (Conforms to IP67)

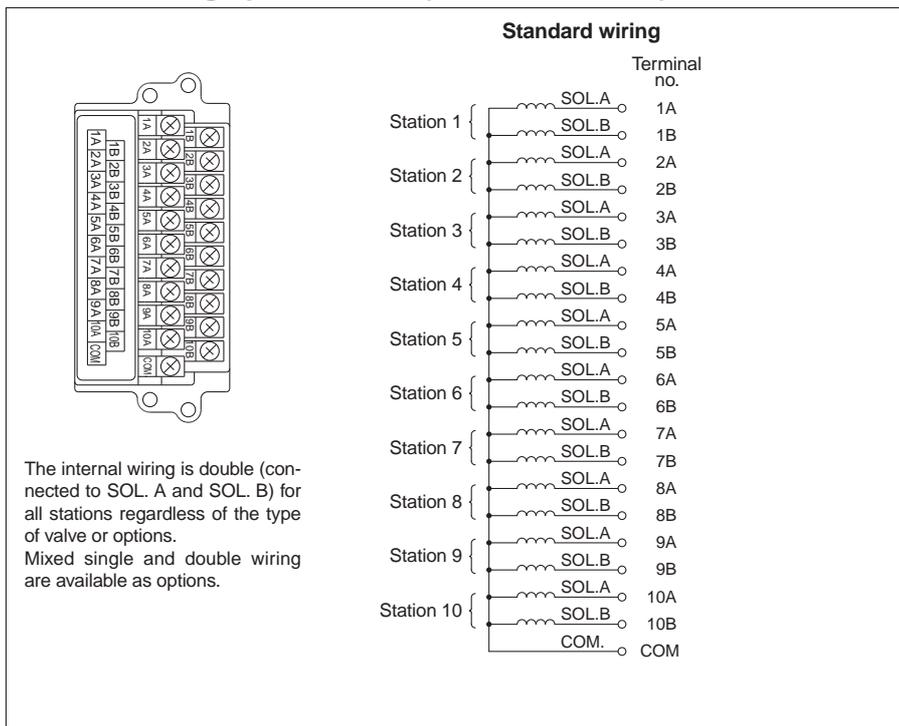

T **VQC4000**
 Kit (Terminal block box kit) **IP67 compliant**

VV5QC41

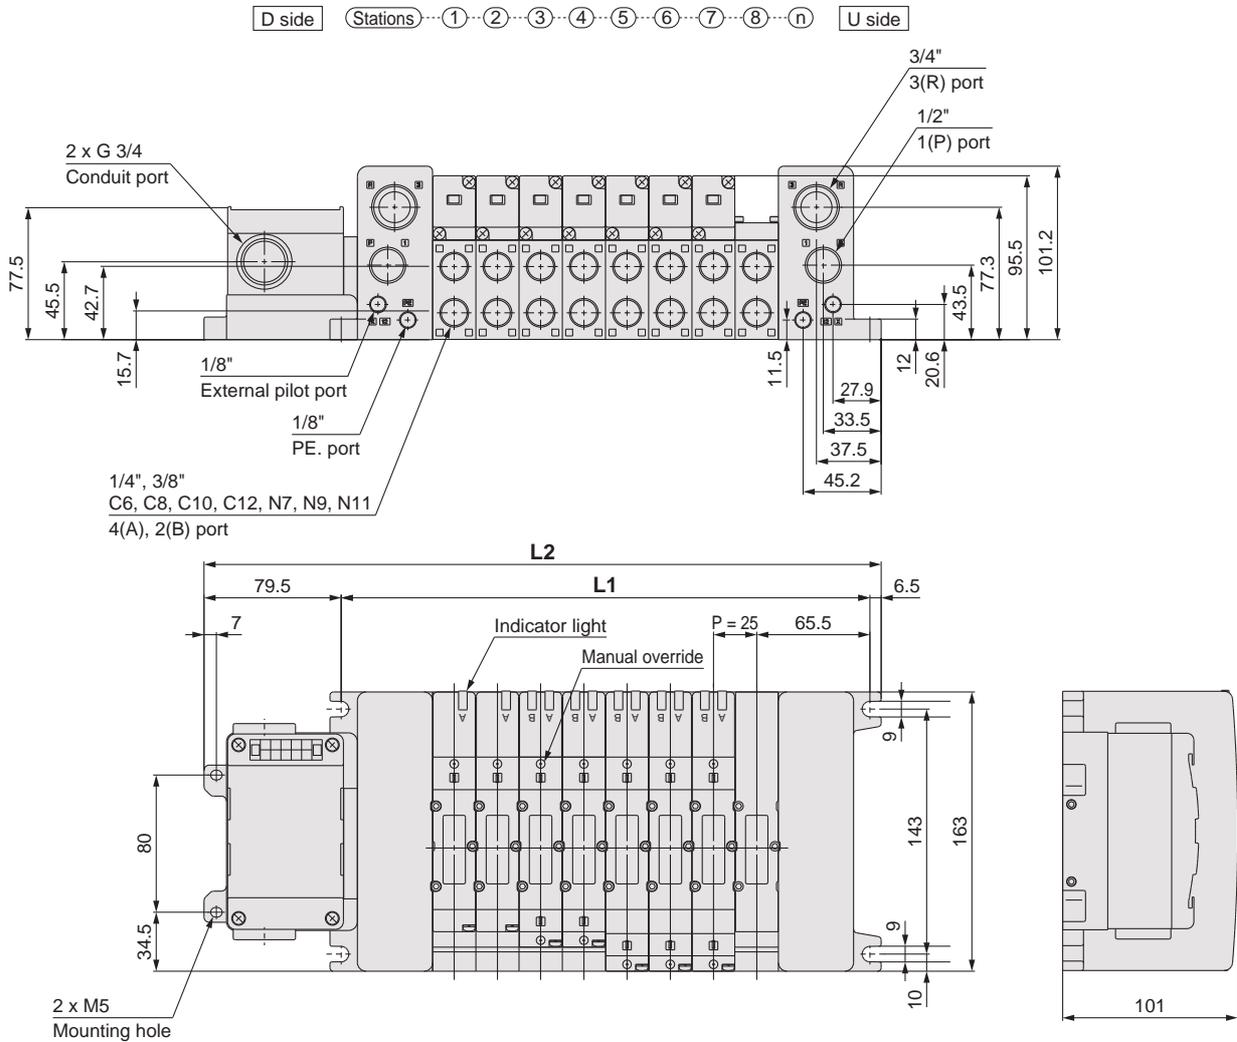

Dimensions

L \ n	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16
L1	131	156	181	206	231	256	281	306	331	356	381	406	431	456	481	506
L2	217	242	267	292	317	342	367	392	417	442	467	492	517	542	567	592

Formula: L1 = 25n + 106, L2 = 25n + 192 n: Stations (Maximum 16 stations)

VQC4000

Single Unit

Manifold

Construction

Exploded View of Manifold

Specific Product Precautions

VQC5000

Single Unit

Manifold


Construction

Exploded View of Manifold

Specific Product Precautions

Series VQC4000

VQC4000 Kit (Lead wire kit) IP67 compliant

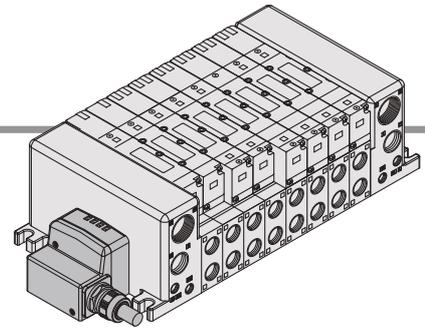


- Direct electrical entry type
- IP67 enclosure is available with use of cables with sheath and waterproof connectors.

Electrical Wiring Specifications

Lead wire specifications

Lead wire
0.3 mm² x 25 cores

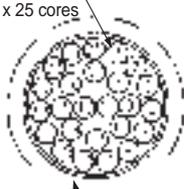

Sheath
Colour: Urban white

As the standard electrical wiring specification used is for 12 stations or less, double wiring (connected to SOL. A and SOL. B) is used for the internal wiring of each station regardless of valve and option types. Mixed single and double wiring are available as options. Refer to special wiring specifications (options) below.

	Terminal no.	Lead wire colour	Dot marking
Station 1	SOL.A 1	Black	None
	SOL.B 14	Yellow	Black
Station 2	SOL.A 2	Brown	None
	SOL.B 15	Pink	Black
Station 3	SOL.A 3	Red	None
	SOL.B 16	Blue	White
Station 4	SOL.A 4	Orange	None
	SOL.B 17	Purple	None
Station 5	SOL.A 5	Yellow	None
	SOL.B 18	Grey	None
Station 6	SOL.A 6	Pink	None
	SOL.B 19	Orange	Black
Station 7	SOL.A 7	Blue	None
	SOL.B 20	Red	White
Station 8	SOL.A 8	Purple	White
	SOL.B 21	Brown	White
Station 9	SOL.A 9	Grey	Black
	SOL.B 22	Pink	Red
Station 10	SOL.A 10	White	Black
	SOL.B 23	Grey	Red
Station 11	SOL.A 11	White	Red
	SOL.B 24	Black	White
Station 12	SOL.A 12	Yellow	Red
	SOL.B 25	White	None
	COM. 13	Orange	Red

Lead wire length

VV5QC41-08 C12 LD 0

Lead wire length

0	0.6 m
1	1.5 m
2	3.0 m

Electrical characteristics

Item	Characteristic
Conductor resistance Ω/km, 20 °C	65 or less
Withstand pressure V, 1 minute, AC	1000
Insulation resistance MΩ/km, 20 °C	5 or more


Note) Cannot be used for transfer wiring.
The minimum bending radius for cables is 20 mm.

Special Wiring Specifications (Option)

Mixed single and double wiring are available as options. The maximum number of manifold stations is determined by the number of solenoids. Count one point for a single solenoid type and two points for a double solenoid type. The total number of solenoids (points) must not exceed 24.

L VQC4000
Kit (Lead wire kit) IP67 compliant

VV5QC41

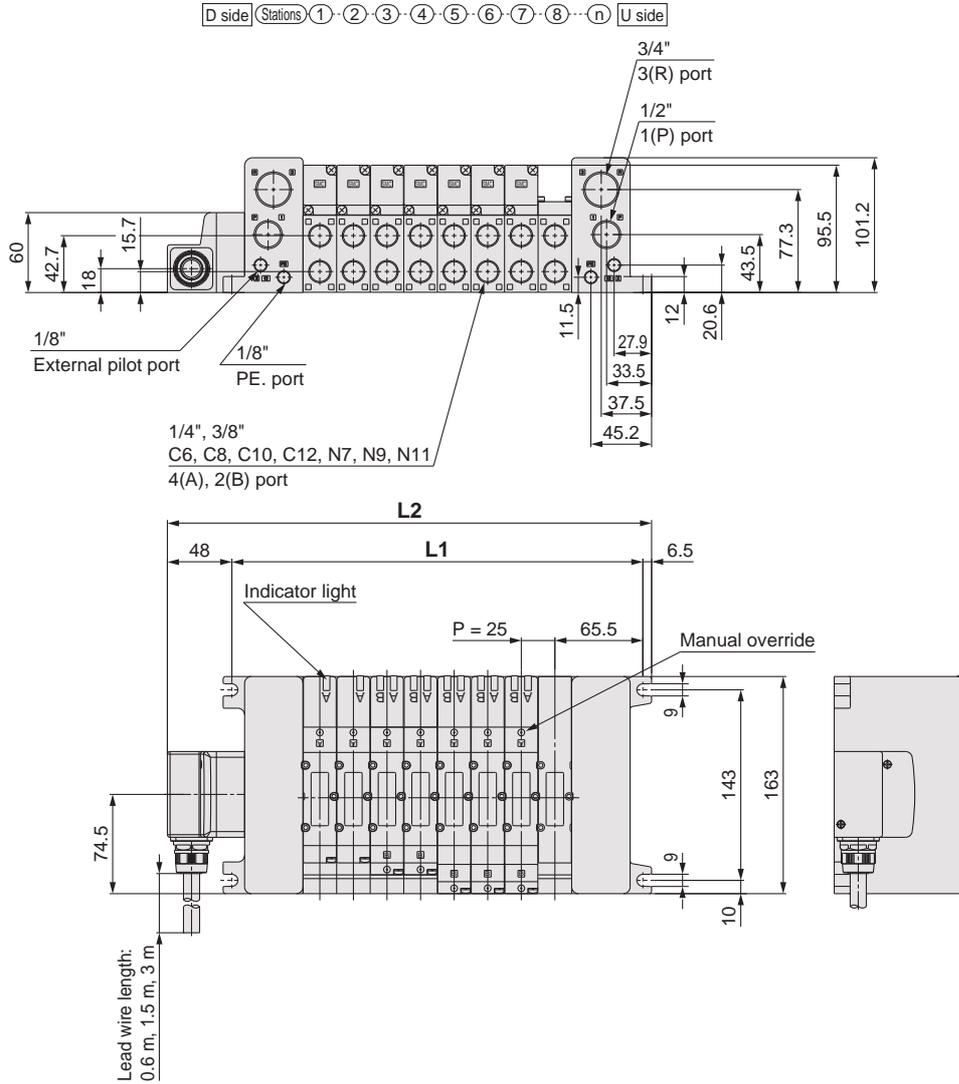

Dimensions

L \ n	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16
L1	131	156	181	206	231	256	281	306	331	356	381	406	431	456	481	506
L2	185.5	210.5	235.5	260.5	285.5	310.5	335.5	360.5	385.5	410.5	435.5	460.5	485.5	510.5	535.5	560.5

Formula: L1 = 25n + 106, L2 = 25n + 160.5 n: Stations (Maximum 16 stations)

VQC4000

Single Unit

Manifold

Construction

Exploded View of Manifold

Specific Product Precautions

VQC5000

Single Unit

Manifold


Construction

Exploded View of Manifold

Specific Product Precautions

Series VQC4000

M VQC4000 Kit (Circular connector kit) IP67 compliant

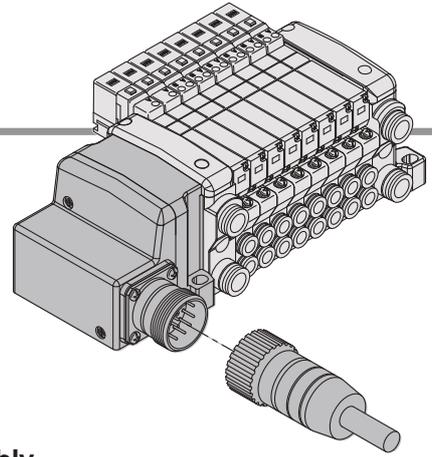


- Use of circular connectors helps streamline wiring procedure to save labour.
- IP67 enclosure is available with use of waterproof multiple connectors.

Electrical Wiring Specifications

Multiple connector



Double wiring (connected to SOL.A and SOL.B) is used for the internal wiring of each station regardless of valve and option types. Mixed single and double wiring are available as options. Refer to special wiring specifications (options) below.

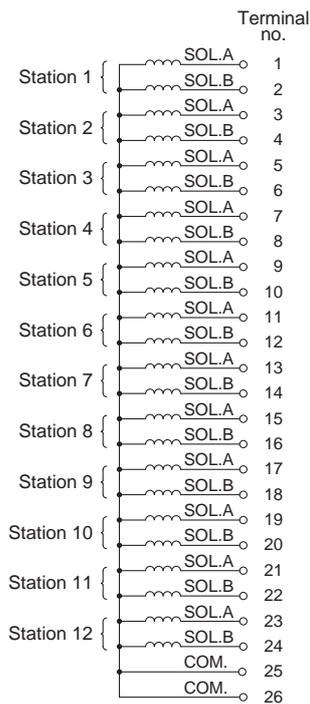



Special Wiring Specifications (Option)

Mixed single and double wiring are available as an option. The maximum number of manifold stations is determined by the number of solenoids. Count one point for a single solenoid type and two points for a double solenoid type. The total number of solenoids (points) must not exceed 24.

Cable Assembly

GAXT100-MC26-⁰¹⁵030 (According to DIN47100)
050

(Type 26P circular connector cable assemblies can be ordered with manifolds. Refer to manifolds ordering.)

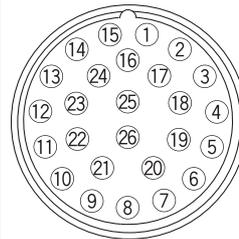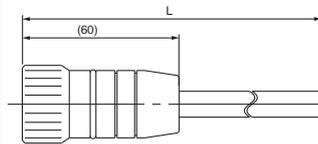

Terminal no.	Lead wire colour	Dot marking
1	White	None
2	Brown	None
3	Green	None
4	Yellow	None
5	Grey	None
6	Pink	None
7	Blue	None
8	Red	None
9	Black	None
10	Violet	None
11	Grey	Pink
12	Red	Blue
13	White	Green
14	Brown	Green
15	White	Yellow
16	Yellow	Brown
17	White	Grey
18	Grey	Brown
19	White	Pink
20	Pink	Brown
21	White	Blue
22	Brown	Blue
23	White	Red
24	Brown	Red
25	White	Black

Electric characteristics

Item	Property
Conductor resistance Ω/km , 20 °C	Max. 57
Voltage limit V, 5 minutes, AC	1500
Insulation resistance $M\Omega/\text{km}$, 20 °C	20

* Terminal No. 26 is connected to 25 inside the connector.

Circular connector cable assemblies

Cable length (L)	Assembly part no.
	26P
1.5 m	GAXT100-MC26-015
3 m	GAXT100-MC26-030
5 m	GAXT100-MC26-050


Circular connector cable assembly (option)

AXT100-MC26-⁰¹⁵030 (According to MIL-C24308)
050

* Please contact SMC for details.

M **VQC4000**
 Kit (Circular connector kit) **IP67 compliant**

VV5QC41

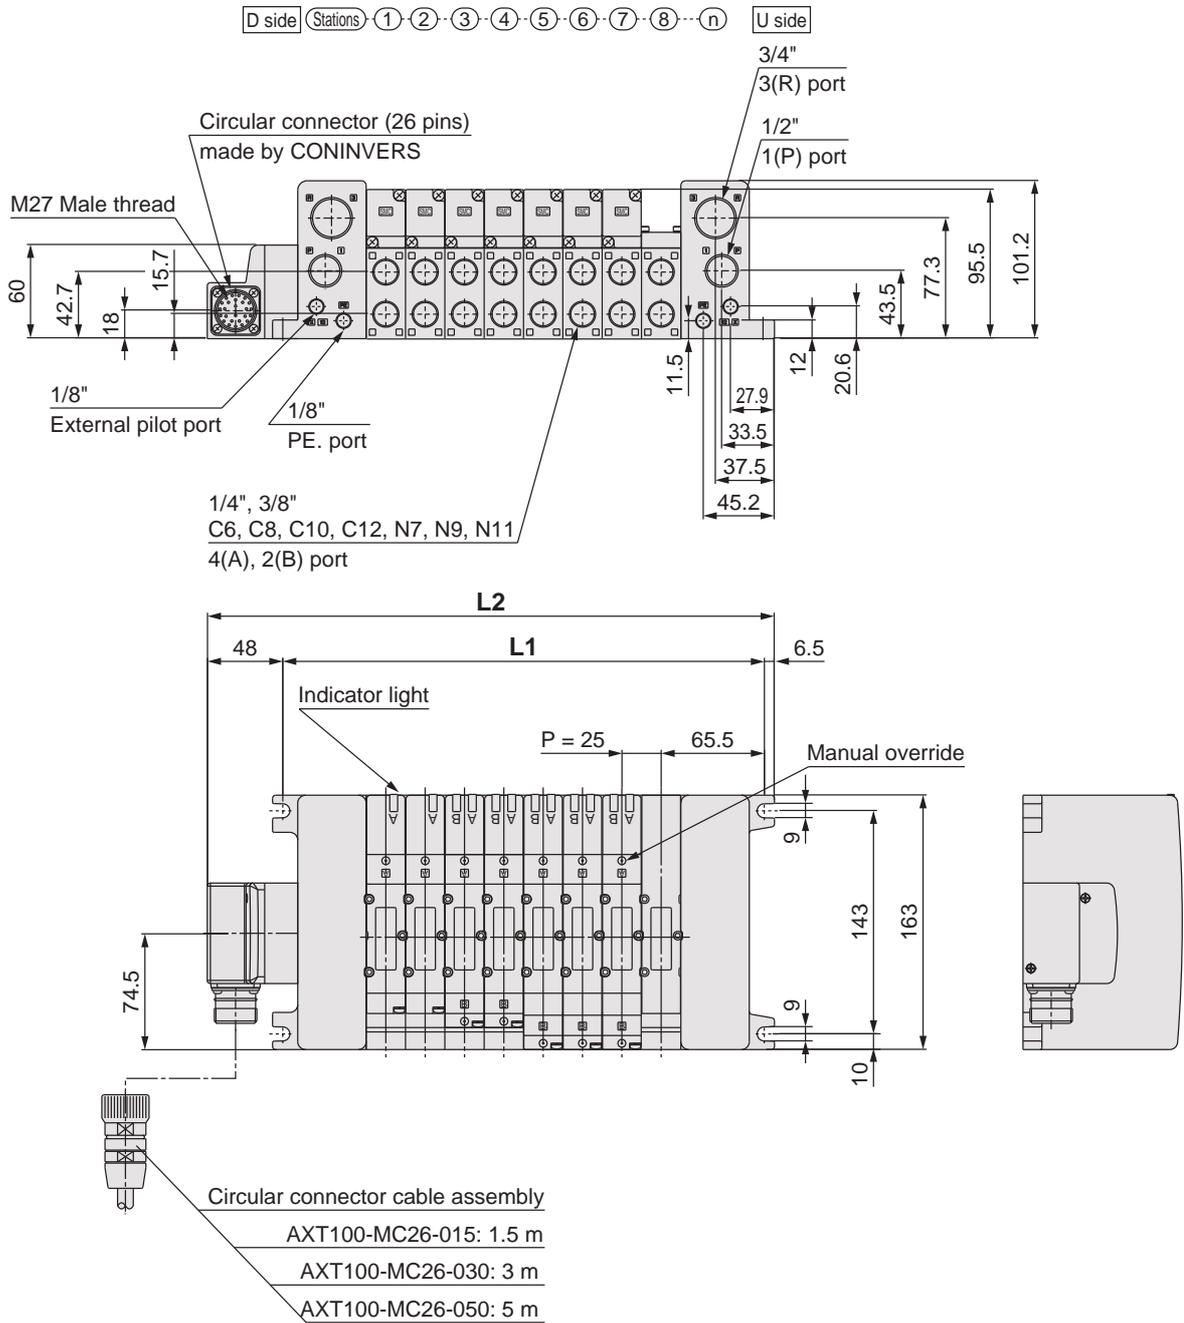

Dimensions

L \ n	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16
L1	131	156	181	206	231	256	281	306	331	356	381	406	431	456	481	506
L2	185.5	210.5	235.5	260.5	285.5	310.5	335.5	360.5	385.5	410.5	435.5	460.5	485.5	510.5	535.5	560.5

Formula: L1 = 25n + 106, L2 = 25n + 150.5 n: Stations (Maximum 16 stations)

VQC4000

Single Unit

Manifold

Construction

Exploded View of Manifold

Specific Product Precautions

VQC5000

Single Unit

Manifold

Construction


Exploded View of Manifold

Specific Product Precautions


Series VQC4000 Construction

Plug-in Unit

Metal seal type

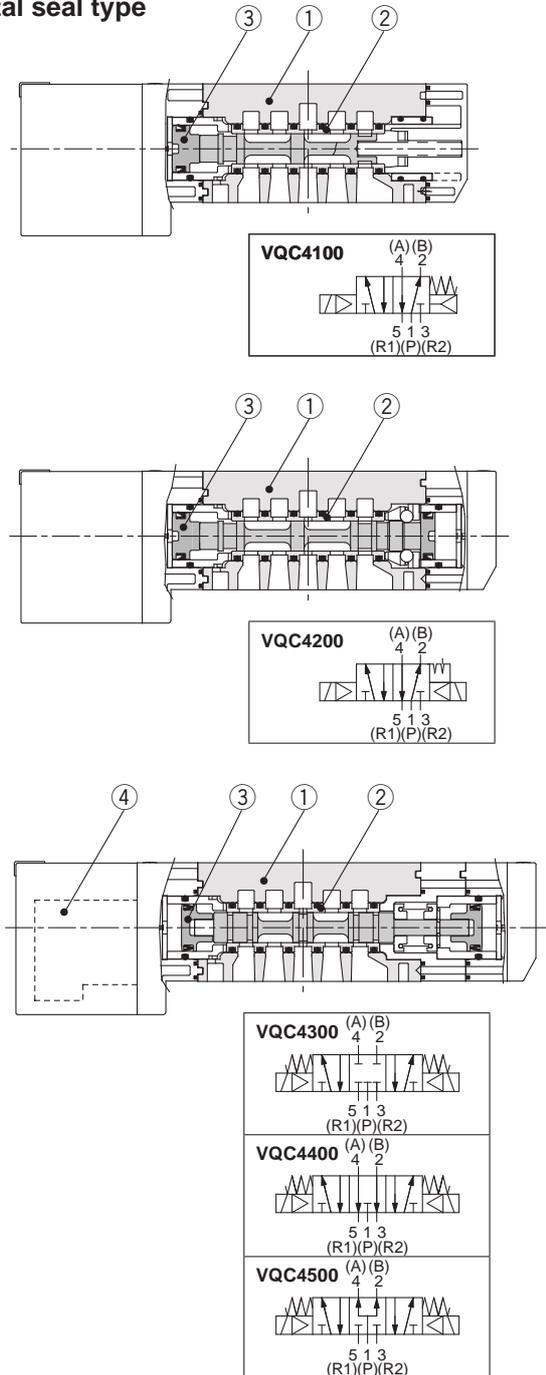

Rubber seal type

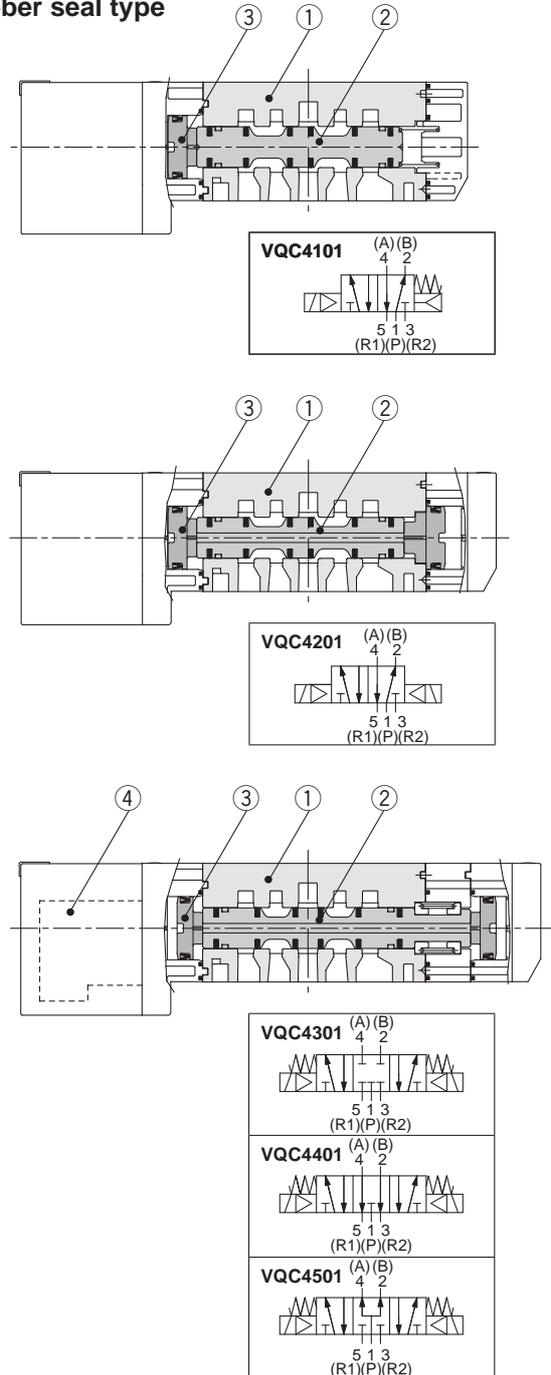

Component Parts

No.	Description	Material	Note
1	Body	Aluminium die-casted	
2	Spool/Sleeve	Stainless steel	
3	Piston	Resin	

Replacement Parts

4	Pilot valve assembly	<p>V118 □ □ □ A B E</p> <p>□: Coil rated voltage Example) 24 V DC: 5</p> <p>A: Single/With light B: Double, 3-position/With light E: Single, Double, 3-position/ Without light</p> <p>•Coil type</p> <table border="1"> <tr> <td>—</td> <td>Standard (0.95 W)</td> </tr> <tr> <td>Y</td> <td>Low wattage type (0.4 W)</td> </tr> </table>	—	Standard (0.95 W)	Y	Low wattage type (0.4 W)
—	Standard (0.95 W)					
Y	Low wattage type (0.4 W)					

Component Parts


No.	Description	Material	Note
1	Body	Aluminium die-casted	
2	Spool valve	Aluminium, HNBR	
3	Piston	Resin	

Replacement Parts

4	Pilot valve assembly	<p>V118 □ □ □ A B E</p> <p>□: Coil rated voltage Example) 24 V DC: 5</p> <p>A: Single/With light B: Double, 3-position/With light E: Single, Double, 3-position/ Without light</p> <p>•Coil type</p> <table border="1"> <tr> <td>—</td> <td>Standard (0.95 W)</td> </tr> <tr> <td>Y</td> <td>Low wattage type (0.4 W)</td> </tr> </table>	—	Standard (0.95 W)	Y	Low wattage type (0.4 W)
—	Standard (0.95 W)					
Y	Low wattage type (0.4 W)					

Series VQC4000

Exploded View of Manifold

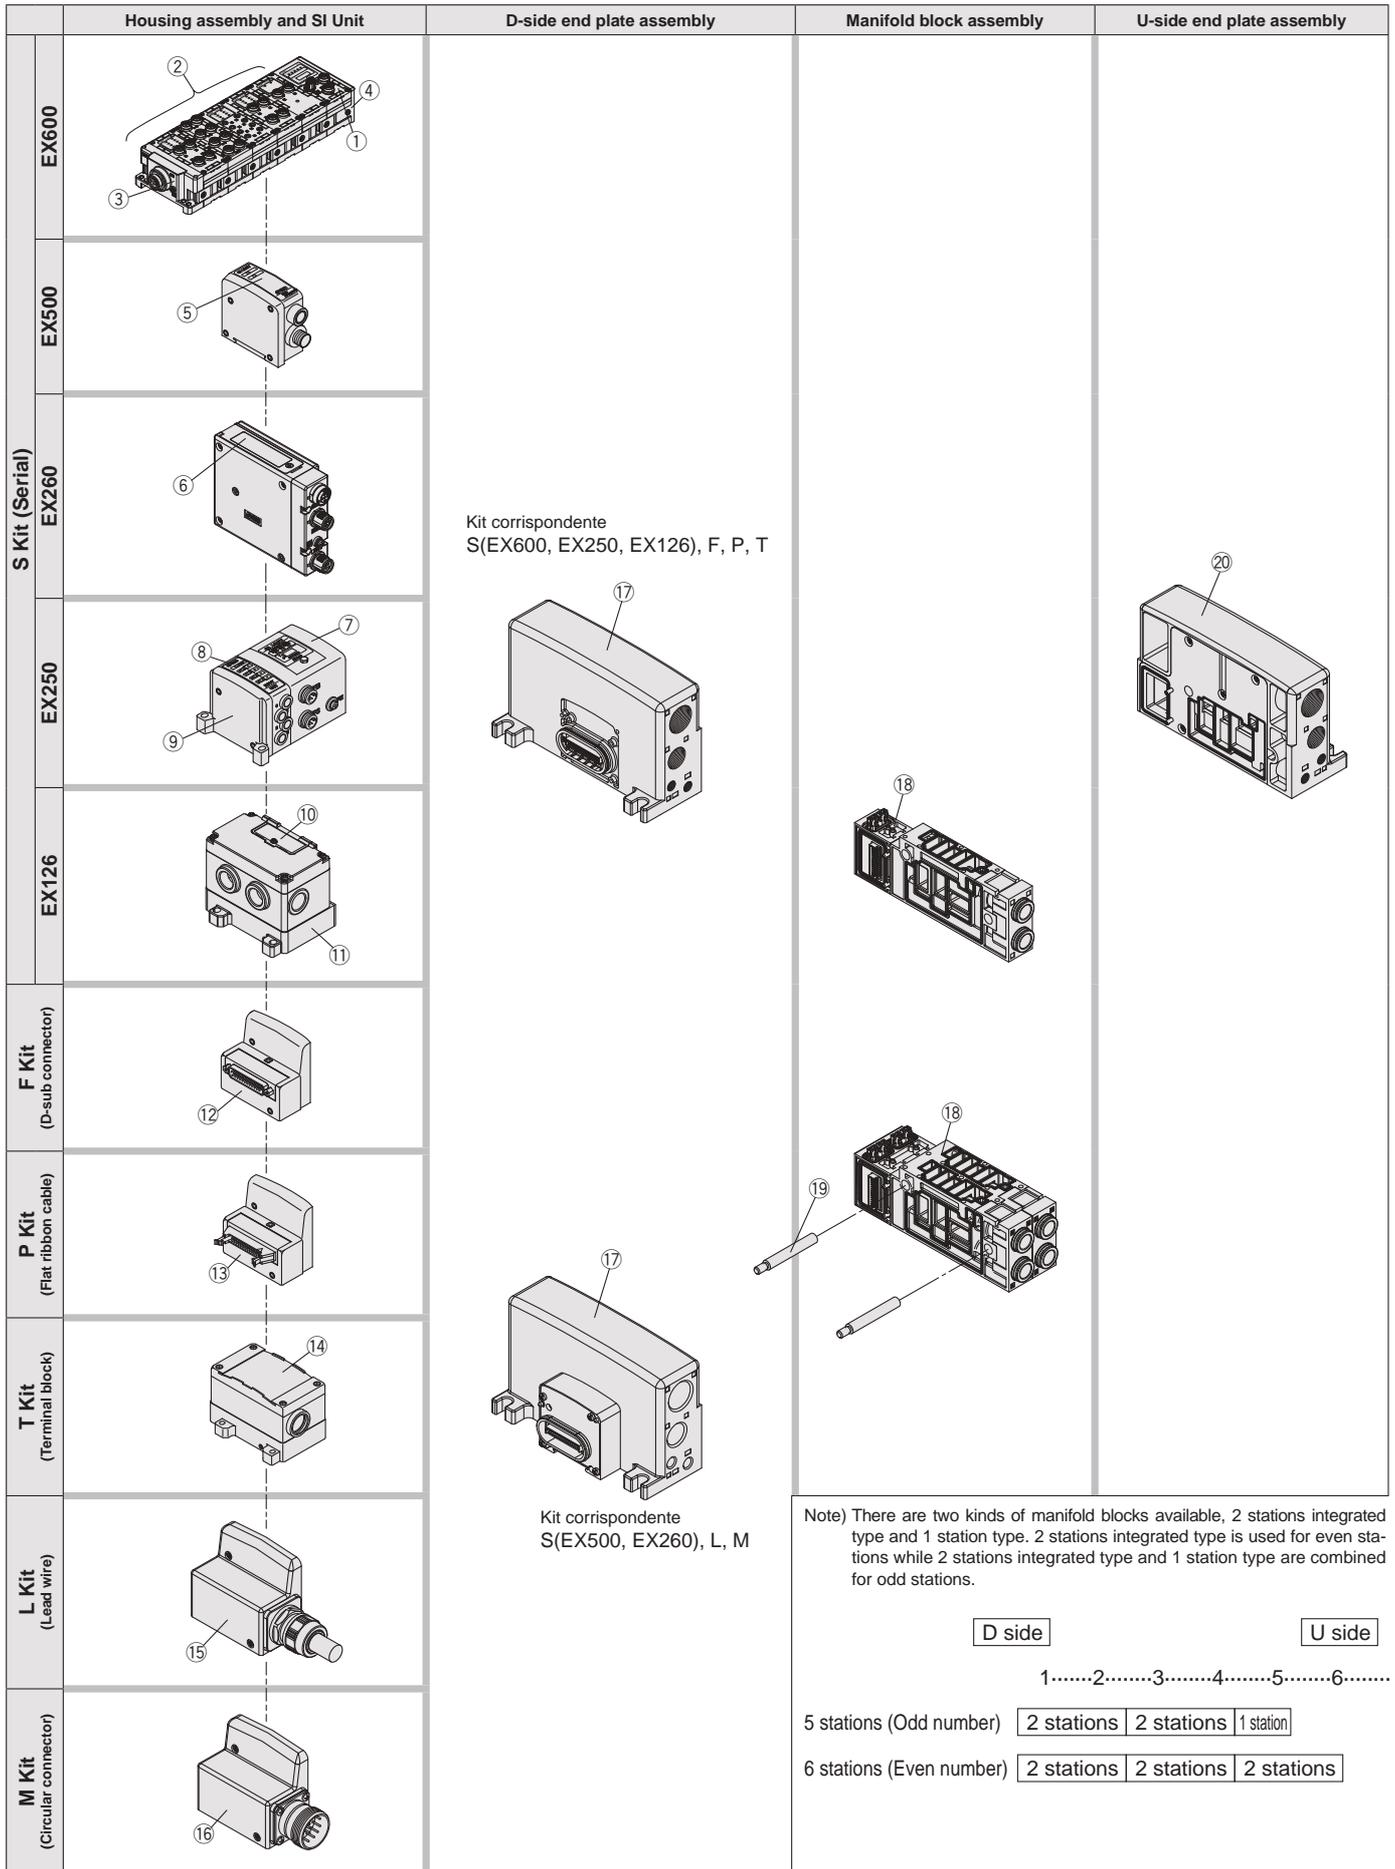

VQC4000

Unità singola

Manifold

Costruzione

Esploso del manifold

Precauzioni specifiche del prodotto

VQC5000

Unità singola

Manifold

Costruzione

Esploso del manifold

Precauzioni specifiche del prodotto

Manifold Assembly Part No.

Housing Assembly and SI Unit/Input Block

No.	Description	Part no.	Note	
1	SI Unit	EX600-SDN1A	DeviceNet™, Negative common (PNP)	
		EX600-SDN2A	DeviceNet™, Positive common (NPN)	
		EX600-SMJ1	CC-Link, Negative common (PNP)	
		EX600-SMJ2	CC-Link, Positive common (NPN)	
		EX600-SPR1A	PROFIBUS DP, Negative common (PNP)	
		EX600-SPR2A	PROFIBUS DP, Positive common (NPN)	
		EX600-SEN1	EtherNet/IP™ (1 port), Negative common (PNP)	
		EX600-SEN2	EtherNet/IP™ (1 port), Positive common (NPN)	
		EX600-SEN3	EtherNet/IP™ (2 port), Negative common (PNP)	
		EX600-SEN4	EtherNet/IP™ (2 port), Positive common (NPN)	
		EX600-SEC1	EtherCAT®, Negative common (PNP)	
		EX600-SEC2	EtherCAT®, Positive common (NPN)	
		EX600-SPN1	PROFINET, Negative common (PNP)	
		EX600-SPN2	PROFINET, Positive common (NPN)	
		EX600-WEN1 <small>Note)</small>	Base module EtherNet/IP™, Negative common (PNP)	
		EX600-WEN2 <small>Note)</small>	Base module EtherNet/IP™, Positive common (NPN))	
		EX600-WPN1 <small>Note)</small>	Base module PROFINET, Negative common (PNP)	
		EX600-WPN2 <small>Note)</small>	Base module PROFINET, Positive common (NPN)	
		EX600-WSV1 <small>Note)</small>	Remote module, Negative common (PNP)	
		EX600-WSV2 <small>Note)</small>	Remote module, Positive common (NPN)	
2	Digital Input Unit	EX600-DXNB	NPN input, M12 connector, 5 pins (4 pcs.), 8 inputs	
		EX600-DXPB	PNP input, M12 connector, 5 pins (4 pcs.), 8 inputs	
		EX600-DXNC	NPN input, M8 connector, 3 pins (8 pcs.), 8 inputs	
		EX600-DXNC1	NPN input, M8 connector, 3 pins (8 pcs.), 8 inputs, with open circuit detection	
		EX600-DXPC	PNP input, M8 connector, 3 pins (8 pcs.), 8 inputs	
		EX600-DXPC1	PNP input, M8 connector, 3 pins (8 pcs.), 8 inputs, with open circuit detection	
		EX600-DXND	NPN input, M12 connector, 5 pins (8 pcs.), 16 inputs	
		EX600-DXPD	PNP input, M12 connector, 5 pins (8 pcs.), 16 inputs	
		EX600-DXNE	NPN input, D-sub connector, 25 pins, 16 inputs	
		EX600-DXPE	PNP input, D-sub connector, 25 pins, 16 inputs	
		EX600-DXNF	NPN input, Spring type terminal box, 32 pins, 16 inputs	
		EX600-DXPF	PNP input, Spring type terminal box, 32 pins, 16 inputs	
	Digital Output Unit	EX600-DYNB	NPN output, M12 connector, 5 pins (4 pcs.), 8 outputs	
		EX600-DYPB	PNP output, M12 connector, 5 pins (4 pcs.), 8 outputs	
		EX600-DYNE	NPN output, D-sub connector, 25 pins, 16 outputs	
		EX600-DYPE	PNP output, D-sub connector, 25 pins, 16 outputs	
		EX600-DYNF	NPN output, Spring type terminal box, 32 pins, 16 outputs	
		EX600-DYPF	PNP output, Spring type terminal box, 32 pins, 16 outputs	
	Digital Input/Output Unit	EX600-DMNE	NPN input/output, D-sub connector, 25 pins, 8 inputs/outputs	
		EX600-DMPE	PNP input/output, D-sub connector, 25 pins, 8 inputs/outputs	
		EX600-DMNF	NPN input/output, Spring type terminal box, 32 pins, 8 inputs/outputs	
		EX600-DMPF	PNP input/output, Spring type terminal box, 32 pins, 8 inputs/outputs	
	Analogue Input Unit	EX600-AXA	M12 connector, 5 pins (2 pcs.), 2-channel input	
	Analogue Output Unit	EX600-AYA	M12 connector, 5 pins (2 pcs.), 2-channel output	
	Analogue Input/Output Unit	EX600-AMB	M12 connector, 5 pins (4 pcs.), 2-channel input/output	
	3	End plate	EX600-ED2	M12 power supply connector, B-coded
			EX600-ED2-2	M12 connector, 5 pins, Max. supply current 2 A, with DIN rail mounting bracket
EX600-ED3			7/8 inch power supply connector	
EX600-ED3-2			7/8 inch connector, 5 pins, Max. supply current 8 A, with DIN rail mounting bracket	
EX600-ED4			M12 power supply connector IN/OUT, A-coded, Pin arrangement 1	
EX600-ED4-2			M12 connector, (4 pins/5 pins) IN/OUT, with DIN rail mounting bracket	
EX600-ED5			M12 power supply connector IN/OUT, A-coded, Pin arrangement 2	
EX600-ED5-2			M12 connector, (4 pins/5 pins) IN/OUT, with DIN rail mounting bracket	
4	Valve plate	EX600-ZMV1	Enclosed parts: Round head screws (M4 x 6) 2 pcs., Round head screws (M3 x 8) 4 pcs.	
5	SI Unit	EX500-S103	EtherNet/IP™, PROFINET, Negative common (PNP)	
		EX500-Q001	DeviceNet™, PROFIBUS DP, EtherNet/IP™, Positive common (NPN)	
		EX500-Q101	DeviceNet™, PROFIBUS DP, EtherNet/IP™, Negative common (PNP)	

Note) The wireless system is suitable for use only in a country where it is in accordance with the Radio Act and regulations of that country.

Manifold Assembly Part No.

Housing Assembly and SI Unit/Input Block

No.	Description	Part no.	Note
6	SI Unit	EX260-SDN1	DeviceNet™, M12 connector, 32 outputs, Negative common (PNP)
		EX260-SDN2	DeviceNet™, M12 connector, 32 outputs, Positive common (NPN)
		EX260-SDN3	DeviceNet™, M12 connector, 16 outputs, Negative common (PNP)
		EX260-SDN4	DeviceNet™, M12 connector, 16 outputs, Positive common (NPN)
		EX260-SRP1	PROFIBUS DP, M12 connector, 32 outputs, Negative common (PNP)
		EX260-SRP2	PROFIBUS DP, M12 connector, 32 outputs, Positive common (NPN)
		EX260-SRP3	PROFIBUS DP, M12 connector, 16 outputs, Negative common (PNP)
		EX260-SRP4	PROFIBUS DP, M12 connector, 16 outputs, Positive common (NPN)
		EX260-SRP5	PROFIBUS DP, D-sub connector, 32 outputs, Negative common (PNP)
		EX260-SRP6	PROFIBUS DP, D-sub connector, 32 outputs, Positive common (NPN)
		EX260-SRP7	PROFIBUS DP, D-sub connector, 16 outputs, Negative common (PNP)
		EX260-SRP8	PROFIBUS DP, D-sub connector, 16 outputs, Positive common (NPN)
		EX260-SMJ1	CC-Link, M12 connector, 32 outputs, Negative common (PNP)
		EX260-SMJ2	CC-Link, M12 connector, 32 outputs, Positive common (NPN)
		EX260-SMJ3	CC-Link, M12 connector, 16 outputs, Negative common (PNP)
		EX260-SMJ4	CC-Link, M12 connector, 16 outputs, Positive common (NPN)
		EX260-SEC1	EtherCAT®, M12 connector, 32 outputs, Negative common (PNP)
		EX260-SEC2	EtherCAT®, M12 connector, 32 outputs, Positive common (NPN)
		EX260-SEC3	EtherCAT®, M12 connector, 16 outputs, Negative common (PNP)
		EX260-SEC4	EtherCAT®, M12 connector, 16 outputs, Positive common (NPN)
		EX260-SPN1	PROFINET, M12 connector, 32 outputs, Negative common (PNP)
		EX260-SPN2	PROFINET, M12 connector, 32 outputs, Positive common (NPN)
		EX260-SPN3	PROFINET, M12 connector, 16 outputs, Negative common (PNP)
		EX260-SPN4	PROFINET, M12 connector, 16 outputs, Positive common (NPN)
		EX260-SEN1	EtherNet/IP™, M12 connector, 32 outputs, Negative common (PNP)
		EX260-SEN2	EtherNet/IP™, M12 connector, 32 outputs, Positive common (NPN)
		EX260-SEN3	EtherNet/IP™, M12 connector, 16 outputs, Negative common (PNP)
		EX260-SEN4	EtherNet/IP™, M12 connector, 16 outputs, Positive common (NPN)
EX260-SPL1	EtherNet POWERLINK, M12 connector, 32 outputs, Negative common (PNP)		
EX260-SPL3	EtherNet POWERLINK, M12 connector, 16 outputs, Negative common (PNP)		
7	SI Unit	EX250-SPR1	PROFIBUS DP, Negative common (PNP)
		EX250-SMJ2	CC-Link, Positive common (NPN)
		EX250-SAS3	AS-Interface, 8 in/8 out, 31 slave modes, 2 power supply systems, Negative common (PNP)
		EX250-SAS5	AS-Interface, 4 in/4 out, 31 slave modes, 2 power supply systems, Negative common (PNP)
		EX250-SAS7	AS-Interface, 8 in/8 out, 31 slave modes, 1 power supply system, Negative common (PNP)
		EX250-SAS9	AS-Interface, 4 in/4 out, 31 slave modes, 1 power supply system, Negative common (PNP)
		EX250-SCA1A	CANopen, Negative common (PNP)
		EX250-SDN1	DeviceNet™, Negative common (PNP)
		EX250-SEN1	EtherNet/IP™, Negative common (PNP)
8	Input block	EX250-IE1	M12, 2 inputs
		EX250-IE2	M12, 4 inputs
		EX250-IE3	M8, 4 inputs
9	End plate assembly	EX250-EA1	Direct mounting
		EX250-EA2	DIN rail mounting
10	SII Unit	EX126D-SMJ1	CC-Link, Positive common (NPN)
11	Terminal block plate	VVQC1000-74A-2	For EX126 SI Unit mounting
12	D-sub connector housing assembly	VVQC1000-F25-1	F kit, 25 pins
13	Flat ribbon cable housing assembly	VVQC1000-P26-1	P kit, 26 pins
		VVQC1000-P20-1	P kit, 20 pins
14	Terminal block box housing assembly	VVQC1000-T0-1	T kit
15	Lead wire housing assembly	VVQC1000-L25-0-1	L kit with 0.6 m lead wire
		VVQC1000-L25-1-1	L kit with 1.5 m lead wire
		VVQC1000-L25-2-1	L kit with 3.0 m lead wire
16	Circular connector housing assembly	VVQC1000-M26-1	M kit, 26 pins

VQC4000

Single Unit

Manifold

Construction

Exploded View of Manifold

Specific Product Precautions

VQC5000

Single Unit

Manifold

Construction

Exploded View of Manifold

Specific Product Precautions

Series VQC4000

Manifold Assembly Part No.

D-side end plate assembly

⑰ D-side end plate assembly part no.

VVQC4000-3A-2-□-□

• **Option**

—	Standard
S	Built-in silencer, Direct exhaust

• **Thread type**

—	Rc
F	G
T	NPTF
N	NPT

• **Kit type**

2	F, P, T, S (EX126, EX250, EX600) kit
3	L, M, S (EX260, EX500) kit

U-side end plate assembly

⑳ U-side end plate assembly part no.

VVQC4000-2A-1-□-□

• **Option**

—	Standard
S	Built-in silencer, Direct exhaust

• **Thread type**

—	Rc
F	G
T	NPTF
N	NPT

Manifold block assembly

⑱ Manifold block assembly part no.

VVQC4000-1 A-D-C6-□

• **Type**

A	For 1 station
C	For 2 stations <small>Note 2)</small>

Note 1) Tie-rods (2 pcs.) for additional stations included.
 Note 2) Bottom ported type is available only for 1 station.

• **Thread type (Thread port only)**

—	Rc
F	G
T	NPTF
N	NPT

• **Port size**

Symbol	Port size
C6	∅ 6
C8	∅ 8
C10	∅ 10
C12	∅ 12
N7	∅ 1/4"
N9	∅ 5/16"
N11	∅ 3/8"
02	1/4"
03	3/8"
B	1/4" bottom ported

• **Wiring specifications**

D	Double wiring
S	Single wiring <small>Note 3)</small>

Note 3) Single wiring is available only for 1 station.

Replacement Parts



VQC4000	Pilot valve assembly	<p>V118-□-□-□</p> <p>• Coil type</p> <table border="1"> <tr> <td>—</td> <td>Standard (0.95 W)</td> </tr> <tr> <td>Y</td> <td>Low wattage type (0.4 W)</td> </tr> </table>	—	Standard (0.95 W)	Y	Low wattage type (0.4 W)	<p>□: Coil rated voltage Example) 24 V DC: 5</p> <p>A: Single/With light B: Double, 3-position/With light E: Single, Double, 3-position/Without light</p>
—	Standard (0.95 W)						
Y	Low wattage type (0.4 W)						

⑲ Tie-rod assembly part no. (2 units)

VQC4000	VVQC4000-TR-□
---------	---------------

Note 1) Please order when reducing the number of manifold stations. When increasing the number of stations, additional orders are not required since they are included in the manifold block assembly.
 Note 2) Number of stations, 02 to 16

List of Valves, Options, and Mounting Bolts

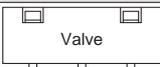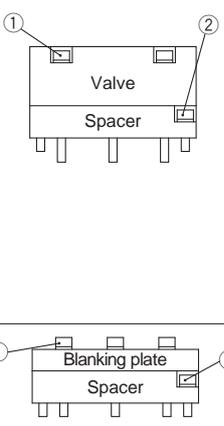Number of options	Valve and options	Bolt part no.	Qty (pcs.)	Note	Option mounting diagram
0	Single valve	AXT632-17-4 (M3 x 37)	3		
	Blanking plate (VVQ4000-10A- $\frac{1}{5}$)	AXT632-38-1 (M3 x 14)	4	For manifold	
1	Valve + Individual SUP spacer (VVQ4000-P- $\frac{1}{5}$ - $\frac{02}{03}$)	① AXT632-17-10 (M3 x 62)	3	For manifold	
		② AXT632-17-19 (M3 x 26)	2		
	Valve + Individual EXH spacer (VVQ4000-R- $\frac{1}{5}$ - $\frac{02}{03}$)	① AXT632-17-10 (M3 x 62)	3	For manifold	
		② AXT632-17-19 (M3 x 26)	2		
	Valve + Restrictor spacer (VVQ4000-20A- $\frac{1}{5}$)	① AXT632-17-10 (M3 x 62)	3	Not necessary when mounting the sub-plate.	
		② AXT632-17-19 (M3 x 26)	2		
	Valve + Release valve spacer (VVQ4000-24A- $\frac{1}{5}$ D)	① AXT632-17-10 (M3 x 62)	3	For manifold	
		② AXT632-17-19 (M3 x 26)	2		
	Valve + SUP stop valve spacer (VVQ4000-37A- $\frac{1}{5}$)	① AXT632-17-10 (M3 x 62)	3	Not necessary when mounting the sub-plate.	
		② AXT632-17-19 (M3 x 26)	2		
	Valve + Double check spacer with residual pressure exhaust (VVQ4000-25A- $\frac{1}{5}$)	① AXT632-17-11 (M3 x 87)	3	Not necessary when mounting the sub-plate.	
		② AXT632-41-1 (M3 x 54)	2		
	Valve + Interface regulator (ARBQ4000-00 $\frac{A}{B}$ - $\frac{1}{5}$)	① AXT632-17-11 (M3 x 87)	3	Not necessary when mounting the sub-plate.	
		② AXT632-17-8 (M3 x 52)	2		
Blanking plate + SUP stop valve (Top) (Bottom)	① AXT632-41-4 (M3 x 42)	3	For manifold		
	② AXT632-17-19 (M3 x 26)	2			
2	Valve + Individual SUP + Individual EXH (Top) (Bottom) (Bottom) (Top)	① AXT632-17-11 (M3 x 87)	3	For manifold	
		② AXT632-17-8 (M3 x 52)	2		
	Valve + Restrictor + Individual SUP or Individual EXH (Top) (Bottom) (Top) (Bottom)	① AXT632-17-11 (M3 x 87)	3	For manifold The individual EXH cannot be mounted on the top.	
		② AXT632-17-8 (M3 x 52)	2		
	Valve + SUP stop valve + Individual SUP, Individual EXH or Restrictor (Top) (Bottom)	① AXT632-17-11 (M3 x 87)	3	For manifold	
		② AXT632-17-8 (M3 x 52)	2		
	Valve + Double check spacer with residual pressure exhaust + Individual SUP or Individual EXH (Top) (Bottom)	① AXT632-17-14 (M3 x 112)	3	For manifold	
		② AXT632-41-2 (M3 x 78)	2		
	Valve + Interface regulator + Individual SUP, Individual EXH or Restrictor (Top) (Bottom)	① AXT632-17-14 (M3 x 112)	3	For manifold The individual EXH and restrictor can be mounted on the top.	
		② AXT632-41-2 (M3 x 78)	2		
Valve + Restrictor + Double check spacer with residual pressure exhaust (Top) (Bottom)	① AXT632-17-14 (M3 x 112)	3	For manifold		
	② AXT632-41-2 (M3 x 78)	2			
Valve + Double check spacer with residual pressure exhaust + Interface regulator (Bottom) (Top)	① AXT632-17-16 (M3 x 137)	3	For manifold		
	② AXT632-41-3 (M3 x 103)	2			
Blanking plate + SUP stop valve + Individual SUP (Top) (Bottom)	① AXT632-17-17 (M3 x 66)	3	For manifold		
	② AXT632-17-8 (M3 x 52)	2			
3	Valve + SUP stop valve (Top) + Individual SUP (Middle, Bottom) + Individual EXH (Middle, Bottom)	① AXT632-17-14 (M3 x 112)	3	For manifold	
		② AXT632-17-13 (M3 x 77)	2		
	Valve + Double check spacer with residual pressure exhaust (Top) + Individual SUP (Middle, Bottom) + Individual EXH (Middle, Bottom)	① AXT632-17-16 (M3 x 137)	3	For manifold	
		② AXT632-41-3 (M3 x 103)	2		
	Valve + Spacer (Top): Interface regulator Spacer (Middle): "Individual SUP or Individual EXH"/"Restrictor" Spacer (Bottom): "Restrictor"/"Individual SUP or Individual EXH"	① AXT632-17-16 (M3 x 137)	3	For manifold The individual EXH and restrictor can be mounted on the top.	
		② AXT632-41-3 (M3 x 103)	2		
	Valve + Double check spacer with residual pressure exhaust (Top) + SUP stop valve (Middle) + Individual SUP (EXH) (Bottom)	① AXT632-17-16 (M3 x 137)	3	For manifold	
		② AXT632-41-3 (M3 x 103)	2		
Valve + Interface regulator (Top) + Double check spacer with residual pressure exhaust (Middle) + Individual SUP (EXH) (Bottom)	① AXT632-17-20 (M3 x 162)	3	For manifold available as special order		
	② AXT632-41-5 (M3 x 128)	2			

Note) When the SUP stop valve and individual SUP are mounted, the stop valve is mounted on the top of the individual SUP.

VQC4000
 Single Unit
 Manifold
 Construction
 Exploded View of Manifold
 Specific Product Precautions
VQC5000
 Single Unit
 Manifold
 Construction
 Exploded View of Manifold
 Specific Product Precautions



Series VQC4000

Specific Product Precautions 1

Be sure to read this before handling. Refer to the back cover for Safety Instructions. For 3/4/5 Port Solenoid Valve Precautions, refer to "Handling Precautions for SMC Products" and the Operation Manual on the SMC website, <http://www.smc.eu>

Continuous Duty

Warning

When the product is continuously energised for a long period of time (10 minutes or longer), select the low wattage type (DC specification). The AC type cannot be continuously energised for 10 minutes or longer. If anything is unclear, please contact SMC.


Manual Override

Warning

Since connected equipment will operate when the manual override is activated, confirm that conditions are safe prior to activation.


■ VQC4000

Push type (Tool required)

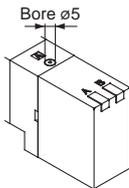


Push down the manual override button with a small screwdriver, etc., until it stops. The manual override will return when released.


Locking type (Tool required)

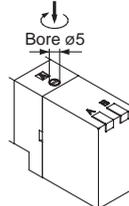


Push down the manual override button with a small flat head screwdriver until it stops, and turn it clockwise 90° to lock it. Turn it counterclockwise to release it.

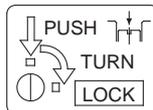

Locking type (Manual)

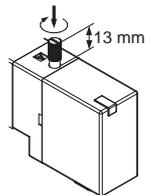

Push down the manual override button with a small flat head screwdriver or with your finger until it stops, and turn it clockwise 90° to lock it. Turn it counterclockwise to release it.

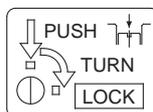

Caution

Do not apply excessive torque when turning the locking type manual override. (0.1 N·m or less)


Valve Mounting

Caution

After confirming that the gasket is installed correctly, securely tighten the mounting screws according to the tightening torque shown below.

Proper tightening torque [N·m]

0.8 to 1.2

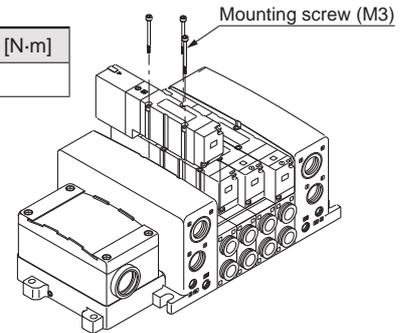


Replacement of One-touch Fittings

Caution

Cylinder port fittings are available in cassette type and can be replaced easily. Fittings are secured with a retaining clip that is inserted from the top side of the valve. After removing the valve, remove the clip with a flat head screwdriver to replace the fittings. To mount a fitting, insert the fitting assembly until it stops and reinsert the retaining clip to its designated position.

Applicable tube O.D.	Fitting assembly part no.
	VQC4000
Ø 6	VVQ4000-50B-C6
Ø 8	VVQ4000-50B-C8
Ø 10	VVQ4000-50B-C10
Ø 12	VVQ4000-50B-C12
Ø 1/4"	VVQ4000-50B-N7
Ø 5/16"	VVQ4000-50B-N9
Ø 3/8"	VVQ4000-50B-N11

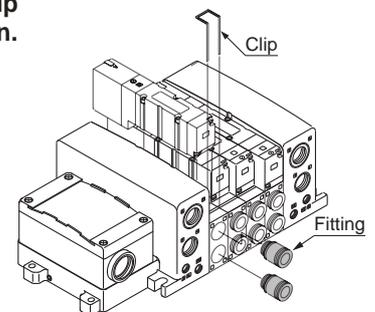

Installation and Removal of Light Cover

Caution


Installation/Removal of light cover

• Removal

Open the cover by inserting a small flat head screwdriver into the slot on the side of the pilot assembly (see drawing below), lift the cover out about 1 mm and then pull off. If it is pulled off at an angle, the pilot valve may be damaged or the protective O-ring may be scratched.

• Installation

Place the cover straight over the pilot assembly so that the pilot valve is not touched, and push it until the cover hook locks without twisting the protective O-ring. (When pushed in, the hook opens and locks automatically.)

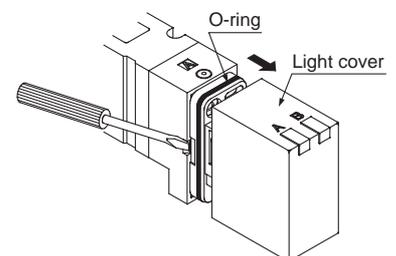



Series VQC4000

Specific Product Precautions 2

Be sure to read this before handling. Refer to the back cover for Safety Instructions. For 3/4/5 Port Solenoid Valve Precautions, refer to "Handling Precautions for SMC Products" and the Operation Manual on the SMC website, <http://www.smc.eu>

Replacement of Pilot Valve


Caution

• Removal

- 1) Remove the mounting screw that holds the pilot valve using a small screwdriver.

• Installation

- 1) After confirming the gasket is correctly placed under the valve, securely tighten the bolts with the proper torque shown in the table below.

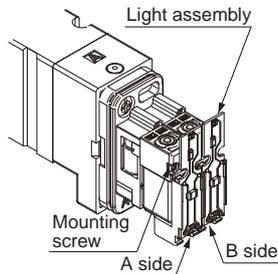


* Refer to page 31 for pilot valve assembly part number.

Proper tightening torque [N·m]


0.1 to 0.13

Note) The light circuit boards: A side is orange and the B side is green. It must be mounted on the pilot valve in accordance with the mounting indicators.

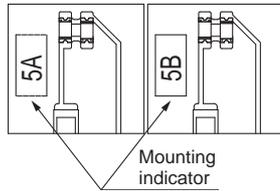


Internal Wiring Specifications

Caution

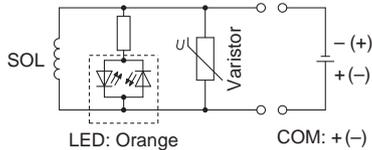

DC: Single

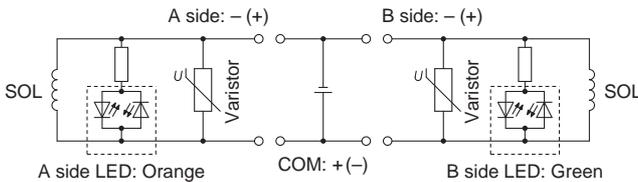

DC: Double

Note) Coil surge voltage generated when OFF is about -60 V. Please contact SMC separately for further suppression of the coil surge voltage.

How to Calculate the Flow Rate

For obtaining the flow rate, consult SMC.



Series VQC4000

Specific Product Precautions 3

Be sure to read this before handling. Refer to the back cover for Safety Instructions. For 3/4/5 Port Solenoid Valve Precautions, refer to “Handling Precautions for SMC Products” and the Operation Manual on the SMC website, <http://www.smc.eu>

Serial Wiring EX500/EX260/EX250/EX126 Precautions

Warning

1. These products are intended for use in general factory automation equipment.
Avoid using these products in machinery/equipment which affects human safety, and in cases where malfunction or failure can result in extensive damage.
2. Do not use in explosive environments, in the presence of inflammable gases, or in corrosive environments. This can cause injury or fire.
3. Work such as transporting, installing, piping, wiring, operation, control and maintenance should be performed by knowledgeable and qualified personnel only. As handling involves the risk of a danger of electrocution, injury or fire.
4. Install an external emergency stop circuit that can promptly stop operation and shut off the power supply.
5. Do not modify these products. Modifications done to these products carry the risk of injury and damage.

Caution

1. Read the Operation Manual carefully, strictly observe the precautions and operate within the range of the specifications.
2. Do not drop these products or submit them to strong impacts. This can cause damage, failure or malfunction.
3. In locations with poor electrical conditions, take steps to ensure a steady flow of the rated power supply. Use of a voltage outside of the specifications can cause a malfunction, damage to the Unit, electrocution or fire.
4. Do not touch connector terminals or internal circuit elements when current is being supplied. There is a danger of malfunction, damage to the Unit or electrocution if connector terminals or internal circuit elements are touched when current is being supplied. Be sure that the power supply is OFF when adding or removing manifold valves or input blocks or when connecting or disconnecting connectors.
5. Operate at an ambient temperature that is within the specifications. Even when the ambient temperature range is within the specifications, do not use in locations where there are rapid temperature changes.
6. Keep wire scraps and other extraneous materials from getting inside these products. This can cause fire, failure or malfunction.
7. Give consideration to the operating environment depending on the type of enclosure being used.
To achieve IP67 protection, provide appropriate wiring between all Units using electrical wiring cables, communication connectors and cables with M12 connectors. Also, provide waterproof caps when there are unused ports, and perform proper mounting of Input Units, input blocks, SI Units and manifold valves. Provide a cover or other protection for applications in which there is constant exposure to water.
8. Use the proper tightening torques.
There is a possibility of damaging threads if tightening exceeds the tightening torque range.
9. Provide adequate protection when operating in locations such as the following:
 - Where noise is generated by static electricity
 - Where there is a strong electric field
 - Where there is a danger of exposure to radiation
 - When in close proximity to power supply lines

Caution

10. When these products are installed in equipment, provide adequate protection against noise by using noise filters.
11. Since these products are components whose end usage is obtained after installation in other equipment, the customer should confirm conformity to EMC directives for the finished product.
12. Do not remove the name plate.
13. Perform periodic inspections and confirm normal operation, otherwise it may be impossible to guarantee safety due to unexpected malfunction or erroneous operation.
14. Take great care since the SI Unit side surface of the EX260-SPN□ may become hot, causing burn hazard.
15. Do not use in places where there are cyclic temperature changes.
In case that the cyclic temperature is beyond normal temperature changes, the inside product unit is likely to be adversely effected.
16. Do not use in direct sunlight.
Do not use in direct sunlight. It may cause malfunction or damage.
17. Do not use in places where there is radiated heat around it.
Such a place is likely to cause malfunction.

Power Supply Safety Instructions

Caution

1. Operation is possible with a single power supply or a separate power supply. However, be sure to provide two wiring systems (one for solenoid valves, and one for Input and Control Units). When it is UL compliant, use a class 2 power supply unit in accordance with UL1310 for a combined direct current power supply.
2. Select the proper type of enclosure according to the environment of operation.
IP65/67 protection class is achieved when the following conditions are met.
 - 1) The Units are connected properly with wiring cable for power supply, communication connector, and cable with M12 connector.
 - 2) Suitable mounting of each Unit and manifold valve.
 - 3) Be sure to mount a seal cap on any unused connectors.If using in an environment that is exposed to water splashes, please take measures such as using a cover.
For IP40 protection class, do not use in atmospheres with corrosive gas, chemicals, sea water, water, steam, or where there is direct contact with any of these.
When EX260-SPR5/6/7/8 are connected, the enclosure of the manifold should be IP40.

Cable Safety Instructions

Caution

1. Avoid miswiring, as this can cause a malfunction, damage and fire in the Unit.
2. To prevent noise and surge in signal lines, keep all wiring separate from power lines and high voltage lines. Otherwise, this can cause a malfunction.
3. Check wiring insulation, as defective insulation can cause damage to the Unit when excessive voltage or current is applied.
4. Do not bend or pull cables repeatedly, and do not place heavy objects on them or allow them to be pinched. This can cause broken lines.



Series VQC4000

Specific Product Precautions 4

Be sure to read this before handling. Refer to the back cover for Safety Instructions. For 3/4/5 Port Solenoid Valve Precautions, refer to “Handling Precautions for SMC Products” and the Operation Manual on the SMC website, <http://www.smc.eu>

EX600 Precautions


Design / Selection

Warning

- Do not use beyond the specification range.**
Using beyond the specification range can cause a fire, malfunction, or damage to the system. Check the specifications before operation.
- When using for an interlock circuit:**
 - Provide a multiple interlock system which is operated by another system (such as mechanical protection function).
 - Perform an inspection to confirm that it is working properly.
Otherwise, this may cause possible injuries due to malfunction.

Caution

- When applicable to UL, use a Class 2 power supply unit conforming to UL1310 for direct current power supply.
- Use within the specified voltage range.
Using beyond the specified voltage range is likely to cause the product to be damaged or to malfunction.
- The power supply for the unit should be 0 V as the standard for both power supply for output as well as power supply for control/input.

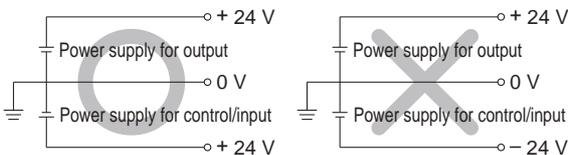

- Do not install in places where it can be used as a foothold.
Applying any excessive load such as stepping on the product by mistake or placing a foot on it, will cause it to break.
- Keep the surrounding space free for maintenance.
When designing a system, take into consideration the amount of free space needed for performing maintenance.
- Do not remove the name plate.
Improper maintenance or incorrect use of Operation Manual can cause equipment failure or malfunction. Also, there is a risk of losing conformity with safety standards.
- Beware of inrush current when the power supply is turned on.
Some connected loads can apply an initial charge current which will trigger the over current protection function, causing the Unit to malfunction.

Mounting

Caution

- When handling and assembling Units:
 - Do not touch the sharp metal parts of the connector or plug.
 - Do not apply excessive force to the Unit when disassembling.
The connecting portions of the Unit are firmly joined with seals.
 - When joining Units, take care not to get fingers caught between Units.
Injury can result.
- Do not drop, bump, or apply excessive impact.
Otherwise, this can cause damage, equipment failure or malfunction.
- Observe the tightening torque range.
Tightening outside of the allowable torque range will likely damage the screw.
IP67 cannot be guaranteed if the screws are not tightened to the specified torque.
- When lifting a large size Manifold Solenoid Valve Unit, take care to avoid causing stress to the valve connection joint.
The connection joint with the Unit may be damaged. Because the product may be heavy, carrying and installation should be performed by more than one operator to avoid strain or injury.
- When placing a manifold, mount it on a flat surface.
Torsion in the whole manifold can lead to trouble such as air leakage or contact failure.

Wiring

Caution

- Provide the grounding to maintain the safety of the reduced wiring system and to improve the noise immunity.
Provide a specific grounding as close to the Unit as possible to minimise the distance to grounding.
- Avoid repeatedly bending or stretching the cable and applying a heavy object or force to it.
Wiring applying repeated bending and tensile stress to the cable can break the circuit.
- Avoid miswiring.
If miswired, there is a danger of malfunction or damage to the reduced wiring system.

VQC4000

Single Unit

Manifold

Construction

Exploded View of Manifold

Specific Product Precautions

VQC5000

Single Unit

Manifold

Construction

Exploded View of Manifold

Specific Product Precautions



Series VQC4000

Specific Product Precautions 5

Be sure to read this before handling. Refer to the back cover for Safety Instructions. For 3/4/5 Port Solenoid Valve Precautions, refer to "Handling Precautions for SMC Products" and the Operation Manual on the SMC website, <http://www.smc.eu>

EX600 Precautions

Wiring

Caution

- 4. Do not wire while energising the product.**
There is a danger of malfunction or damage to the reduced wiring system or input/output device.
- 5. Avoid wiring the power line and high pressure line in parallel.**
Noise or surge produced by signal line resulting from the power line or high pressure line could cause a malfunction. Wiring of the reduced wiring system or input/output device and the power line or high pressure line should be separated from each other.
- 6. Check for the wiring insulation.**
Defective insulation (contact with other circuits, improper insulation between terminals, etc.) may cause damage to the reduced wiring system or input/output device due to excessive voltage or current.
- 7. When the reduced wiring system is installed in machinery/equipment, provide adequate protection against noise by using noise filters etc.**
Noise in signal lines may cause a malfunction.
- 8. When connecting wires of input/output device or Handheld Terminal, prevent water, solvent or oil from entering inside from the connector section.**
Otherwise, this can cause damage, equipment failure or malfunction.
- 9. Avoid wiring patterns in which excessive stress is applied to the connector.**
This may cause equipment failure or malfunction due to contact failure.

Operating Environment

Warning

- 1. Do not use in an atmosphere containing an inflammable gas or explosive gas.**
Use in such an atmosphere is likely to cause a fire or explosion. This system is not explosion-proof.

Caution

- 1. Select the proper type of enclosure according to the environment of operation.**
IP65/67 is achieved when the following conditions are met.
 - 1) Provide appropriate wiring between Units using electrical wiring cables, communication connectors and cables with M12 connectors.
 - 2) Suitable mounting of each Unit and manifold valve.
 - 3) Be sure to mount a seal cap on any unused connectors.If using in an environment that is exposed to water splashes, please take measures such as using a cover. When the enclosure is IP40, do not use in an operating environment or atmosphere where it may come in contact with corrosive gas, chemical agents, seawater, water, or water vapor. When connected to the EX600-D□□E or EX600-D□□F, manifold enclosure is IP40. Also, the Handheld Terminal conforms to IP20, so prevent foreign matter from entering inside, and water, solvent or oil from coming in direct contact with it.

Operating Environment

Caution

- 2. Provide adequate protection when operating in locations such as the following.**
Failure to do so may cause a malfunction or equipment failure. The effect of countermeasures should be checked in individual equipment and machine.
 - 1) Where noise is generated by static electricity etc.
 - 2) Where there is a strong electric field
 - 3) Where there is a danger of exposure to radiation
 - 4) When in close proximity to power supply lines
- 3. Do not use in an environment where oil and chemicals are used.**
Operating in environments with coolants, cleaning solvents, various oils or chemicals may cause adverse effects (damage, malfunction) to the Unit even in a short period of time.
- 4. Do not use in an environment where the product could be exposed to corrosive gas or liquid.**
This may damage the Unit and cause it to malfunction.
- 5. Do not use in locations with sources of surge generation.**
Installation of the Unit in an area around the equipment (electromagnetic lifters, high frequency induction furnaces, welding machine, motors, etc.), which generates the large surge voltage could cause to deteriorate an internal circuitry element of the Unit or result in damage. Implement countermeasures against the surge from the generating source, and avoid touching the lines with each other.
- 6. Use the product type that has an integrated surge absorption element when directly driving a load which generates surge voltage by relay, solenoid valves or lamp.**
When a surge generating load is directly driven, the Unit may be damaged.
- 7. The product is CE marked, but not immune to lightning strikes. Take measures against lightning strikes in your system.**
- 8. Keep dust, wire scraps and other foreign matter from entering inside the product.**
This may cause equipment failure or malfunction.
- 9. Mount the Unit in such locations, where no vibration or shock is affected.**
This may cause equipment failure or malfunction.
- 10. Do not use in places where there are cyclic temperature changes.**
In case that the cyclic temperature is beyond normal temperature changes, the internal Unit is likely to be adversely affected.
- 11. Do not use in direct sunlight.**
This may cause equipment failure or malfunction.
- 12. Observe the ambient temperature range.**
This may cause a malfunction.
- 13. Do not use in places where there is radiated heat around it.**
Such places are likely to cause a malfunction.



Series VQC4000

Specific Product Precautions 6

Be sure to read this before handling. Refer to the back cover for Safety Instructions. For 3/4/5 Port Solenoid Valve Precautions, refer to "Handling Precautions for SMC Products" and the Operation Manual on the SMC website, <http://www.smc.eu>

EX600 Precautions

Adjustment / Operation

Warning

1. Do not perform operation or setting with wet hands.
There is a risk of electrical shock.

<Handheld Terminal>

2. Do not apply pressure to the LCD.
There is a possibility of the crack of LCD and injuring.
3. The forced input/output function is used to change the signal status forcibly. When operating this function, be sure to check the safety of the surroundings and installation.
This may cause, injuries or equipment damage.
4. Incorrect setting of parameters can cause a malfunction. Be sure to check the settings before use.
This may cause injuries or equipment damage.


Caution

1. Use a watchmakers' screwdriver with thin blade for the setting of each switch of the SI Unit. When setting the switch, do not touch other unrelated parts.
This may cause parts damage or malfunction due to a short circuit.
2. Provide adequate setting for the operating conditions.
Failure to do so could result in malfunction. Refer to the Operation Manual for setting of the switches.
3. For details on programming and address setting, refer to the manual from the PLC manufacturer.
The content of programming related to protocol is designed by the manufacturer of the PLC used.

<Handheld Terminal>

4. Do not press the setting buttons with a sharp pointed object.
This may cause damage or equipment failure.
5. Do not apply excessive load and impact to the setting buttons.
This may cause damage, equipment failure or malfunction.

When the order does not include the SI Unit, a valve plate which connects the manifold and SI Unit, is not mounted. Use attached valve holding screws and mount the valve plate.
(Tightening torque: 0.6 to 0.7 N·m)

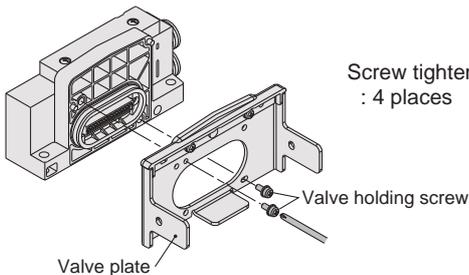

Maintenance

Warning

1. Do not disassemble, modify (including circuit board replacement) or repair this product.
Such actions are likely to cause injuries or equipment failure.
2. When an inspection is performed,
 - Turn off the power supply.
 - Stop the air supply, exhaust the residual pressure in piping and verify that the air is released before performing maintenance work.
 Unexpected malfunction of system components and injury can result.

Caution

1. When handling and replacing Units:
 - Do not touch the sharp metal parts of the connector or plug.
 - Do not apply excessive force to the Unit when disassembling.
The connecting portions of the Unit are firmly joined with seals.
 - When joining Units, take care not to get fingers caught between Units.
Injury can result.
2. Perform periodic inspection.
Unexpected malfunction in the system composition devices is likely to occur due to malfunction of machinery or equipment.
3. After maintenance, make sure to perform an appropriate functionality inspection.
In cases of abnormality such as faulty operation, stop operation. Unexpected malfunction in the system composition devices is likely to occur.
4. Do not use benzine and thinner for cleaning Units.
Damage to the surface or erasure of the display can result. Wipe off any stains with a soft cloth. If the stain is persistent, wipe off with a cloth soaked in a dilute solution of neutral detergent and wrung out tightly, and then finish with a dry cloth.

Other

Caution

1. Refer to the catalogue of each series for Common Precautions and Specific Product Precautions on manifold solenoid valves.

Trademark

DeviceNet™ is a trademark of ODVA.
EtherNet/IP™ is a trademark of ODVA.
EtherCAT® is registered trademark and patented technology, licensed by Beckhoff Automation GmbH, Germany.

Base Mounted

Plug-in: Single Unit

Series VQC5000

Model

Series	Configuration	Model	Port size	Flow-rate characteristics								Response time [ms]		Weight [kg]		
				1 → 4/2 (P → A/B)				4/2 → 5/3 (A/B → EA/EB)				Standard: 0.95 W	Low wattage type: 0.4 W			
				C [dm ³ /(s·bar)]	b	Cv	Q [l/min (ANR)] Note 5)	C [dm ³ /(s·bar)]	b	Cv	Q [l/min (ANR)] Note 5)					
VQC5000	2-position	Single	Metal seal	VQC5100	1/2	12	0.14	2.9	2782	14	0.18	3.4	3316	35	38	0.59
			Rubber seal	VQC5101		16	0.33	4.4	4148	17	0.31	4.7	4350	40	43	0.58
		Double	Metal seal	VQC5200		12	0.14	2.9	2782	14	0.18	3.4	3316	20	23	0.62
			Rubber seal	VQC5201		16	0.33	4.4	4148	17	0.31	4.7	4350	25	28	0.60
	3-position	Closed centre	Metal seal	VQC5300		11	0.24	2.6	2696	11	0.23	2.8	2681	50	53	0.65
			Rubber seal	VQC5301		12	0.33	3.4	3111	13	0.37	3.7	3462	60	63	0.58
		Exhaust centre	Metal seal	VQC5400		12	0.13	2.9	2767	14	0.18	3.4	3316	50	53	0.65
			Rubber seal	VQC5401		14	0.39	3.9	3781	16	0.35	4.5	4203	60	63	0.58
		Pressure centre	Metal seal	VQC5500		12	0.23	2.9	3824	13	0.24	3.3	3187	50	53	0.65
			Rubber seal	VQC5501		13	0.32	3.4	3348	14	0.40	3.9	3808	60	63	0.58
		Double check	Metal seal	VQC5600		8.0	—	—	1731	8.5	—	—	1839	62	65	1.17
			Rubber seal	VQC5601		8.3	—	—	1796	9.0	—	—	1947	75	78	1.10


Note 1) Value for valve on sub-plate

Note 2) Cylinder port 1/2: Value for valve on sub-plate

Note 3) Based on JIS B 8375-1981. (Supply pressure: 0.5 MPa [5.1 kgf/cm²], with indicator light and surge voltage suppressor, clean air. This will change depending on pressure and air quality.) The value when ON for the double type.

Note 4) Table: Without sub-plate, With sub-plate: Add 0.65 kg.

Note 5) These values have been calculated according to ISO 6358 and indicate the flow rate under standard conditions with an inlet pressure of 0.6 MPa (relative pressure) and a pressure drop of 0.1 MPa.

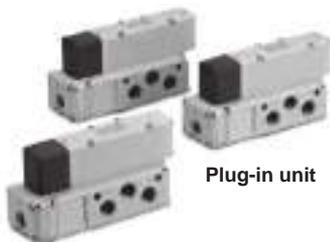


Plug-in unit


Standard Specifications

Symbol


2-position single

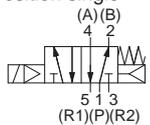


2-position double (Metal)

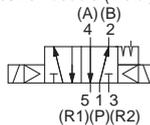


2-position double (Rubber)

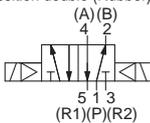


3-position closed centre

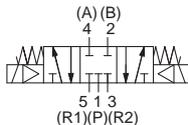


3-position exhaust centre

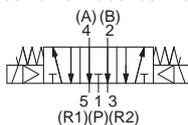

3-position pressure centre

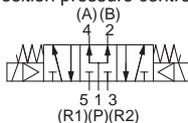

3-position double check

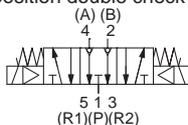

Valve specifications	Valve construction		Metal seal	Rubber seal
	Fluid	Air/Inert gas		
Max. operating pressure	Standard (DC and AC)	1.0 MPa		
		Low wattage type (DC)	1.0 MPa	
	Min. operating pressure	Single	0.10 MPa	0.20 MPa
	Double	0.10 MPa	0.15 MPa	
	3-position	0.15 MPa	0.20 MPa	
Proof pressure	1.5 MPa			
Ambient and fluid temperature	-5 to 50 °C Note 1)			
Lubrication	Not required			
Manual override	Push type/Locking type (Tool required) Option/Locking type (Manual)			
Impact/Vibration resistance	150/30 m/s ² Note 2)			
Enclosure	Dust-tight (IP67 compatible) Note 3)			
Electrical specifications	Coil rated voltage		12, 24 V DC	
	Allowable voltage fluctuation		±10 % of rated voltage	
	Coil insulation type		Class B or equivalent	
	Power consumption [W]	24 V DC	0.95, (0.4 low voltage type)	
		12 V DC	0.95, (0.4 low voltage type)	

Note 1) Use dry air to prevent condensation when operating at low temperatures.

Note 2) Impact resistance: No malfunction occurred when it is tested with a drop tester in the axial direction and at the right angles to the main valve and armature in both energised and de-energised states every once for each condition. (Values at the initial period)

Vibration resistance: No malfunction occurred in a one-sweep test between 45 and 2000 Hz. Test was performed at both energised and de-energised states in the axial direction and at the right angles to the main valve and armature. (Values at the initial period)


Note 3) Only applicable to S, T, L and M kits



How to Order Valves

Plug-in

VQC5 1 0 0 - 5 1 -

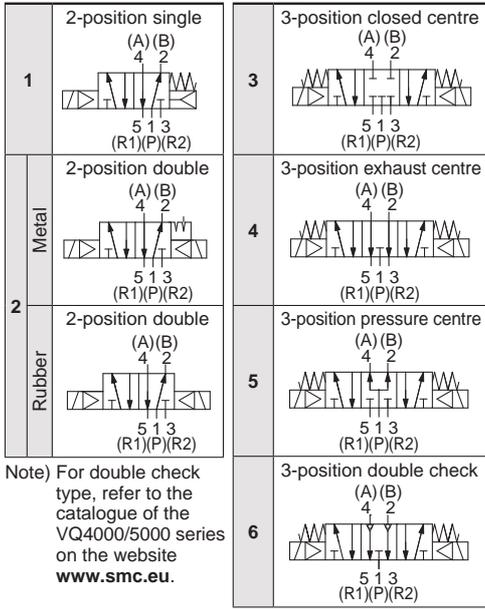

• Thread type

—	Rc
N	NPT
T	NPTF
F	G


• Port size

—	Without sub-plate (For manifold)
04	1/2


• Porting specifications

—	Side ported
B	Bottom ported

• Manual override

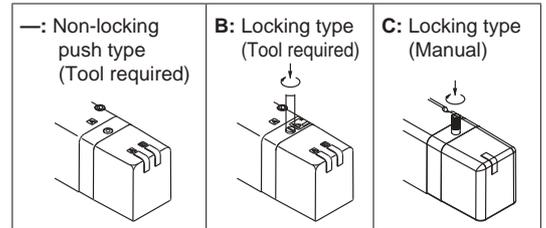

• Body

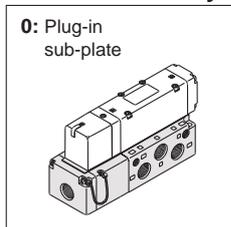

• Seal

0	Metal seal
1	Rubber seal

• Function

— Note 1)	Standard (0.95 W)
Y	Low wattage type (0.4 W)
R Note 2)	External pilot

Note 1) When the power is energised continuously, refer to "Specific Product Precautions 1" on page 73.

Note 2) For details about external pilot type, refer to the catalogue of the VQ4000/5000 series on the website www.smc.eu. In addition, external pilot type cannot be combined with a double check spacer.

Note 3) When multiple symbols are specified, indicate them alphabetically.

• Light/Surge voltage suppressor

—	Yes
E	Without light, with surge voltage suppressor

• Coil voltage

5	24 V DC
6	12 V DC

How to Order Sub-plates



VQ5000 - PW - 04 - Q

• Porting specifications

—	Side ported
B	Bottom ported

• Thread type

—	Rc
N	NPT
T	NPTF
F	G

• Port size

04	1/2
----	-----

Replacement of pilot valve assembly (Voltage)

Refer to page 71 for pilot valve assembly part numbers.
Refer to page 74 for replacement method.

VQC4000 Single Unit Manifold Construction Exploded View of Manifold Specific Product Precautions


VQC5000 Single Unit Manifold Construction Exploded View of Manifold Specific Product Precautions

Series VQC5000




Plug-in Type

Conduit terminal

2-position single: VQC510⁰

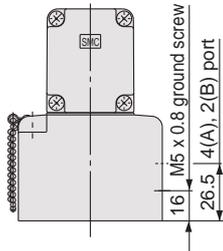

Bottom ported drawing

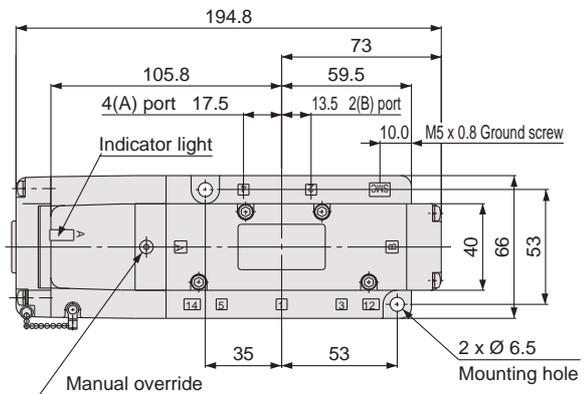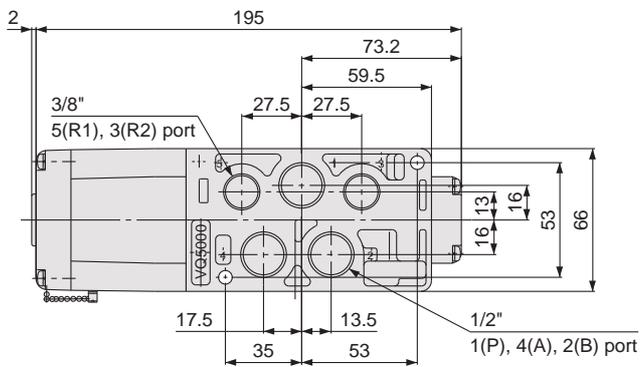
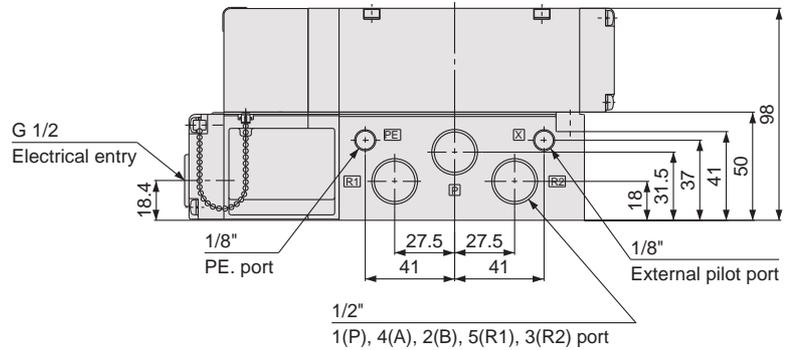


2-position double: VQC520⁰

3-position closed centre: VQC530⁰



3-position exhaust centre: VQC540⁰

3-position pressure centre: VQC550⁰

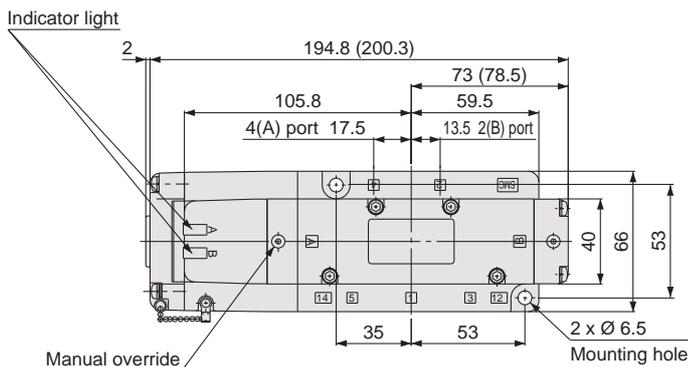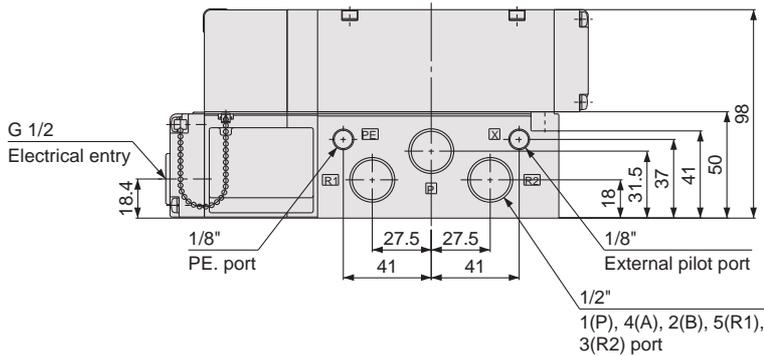

Numbers inside () are for metal seal 3-position type.

3-position double check: VQC560⁰

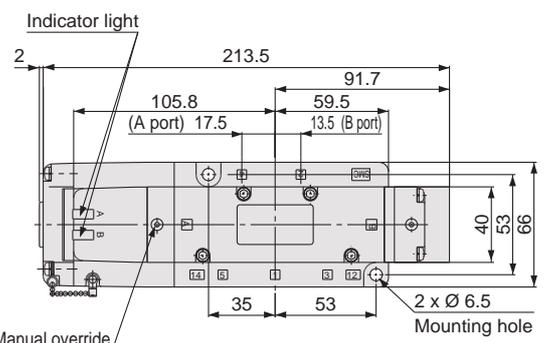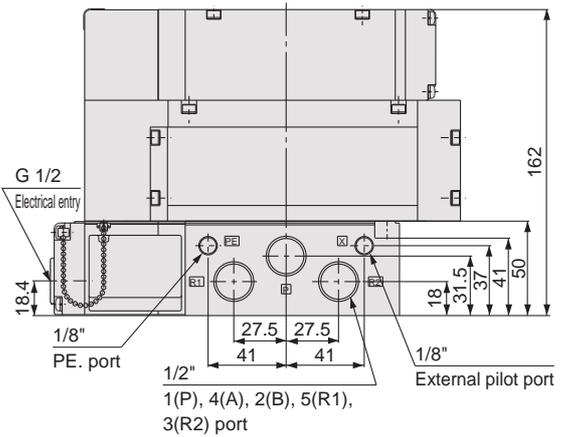

Precauzioni
specifiche
del prodotto

Esploso del
manifold

Costruzione

Manifold

Unità singola

VQC5000

Precauzioni
specifiche
del prodotto

Esploso del
manifold

Costruzione

Manifold

Unità singola


VQC4000

Base Mounted

Plug-in Unit

Series VQC5000 $\text{C} \text{€}$

How to Order Manifold

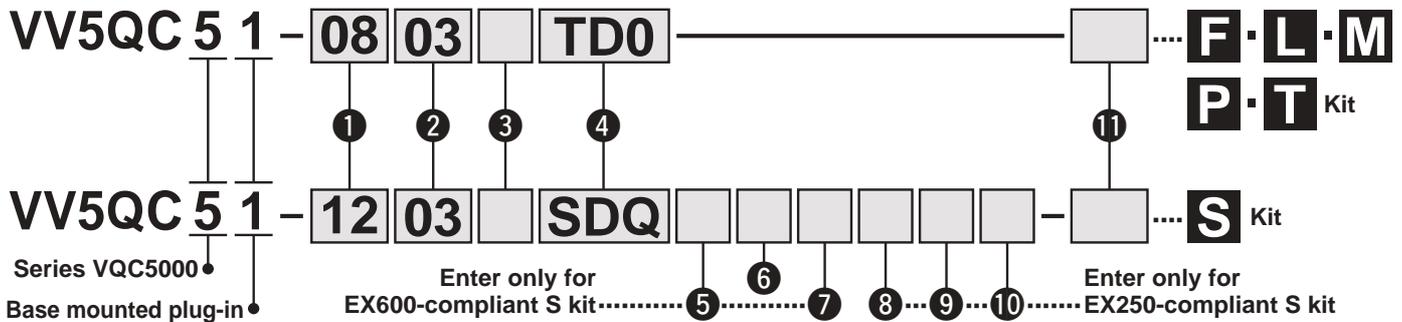

1 Stations


01	1 station
⋮	⋮
12	12 stations

The minimum or maximum number of stations differs depending on the electrical entry. (Refer to 4)

Note) In the case of compatibility with the S kit/As-Interface, the maximum number of solenoids is as shown below, so please be careful of the number of stations.

8 in/8 out: Maximum 8 solenoids

4 in/4 out: Maximum 4 solenoids

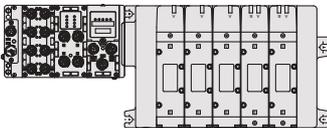

D side Stations 1 2 3 4 5 n U side

* Stations are counted from station 1 on the D-side.

2 Cylinder port size

03	3/8
04	1/2
B	Bottom ported 1/2
CM	Mixed

3 Thread type

—	Rc
F	G
N	NPT
T	NPTF

5 End plate type

(Enter only for EX600-compliant S kit.)

—	Without end plate
2	M12 power supply connector, B-coded
3	7/8 inch power supply connector
4	M12 power supply connector IN/OUT, A-coded, Pin arrangement 1
5	M12 power supply connector IN/OUT, A-coded, Pin arrangement 2

Note) Without SI Unit, the symbol is —.

* The pin layout for "4" and "5" pin connector is different.

6 SI Unit output polarity

SI Unit output polarity	EX250 integrated-type (for I/O) serial transmission system				
	DeviceNet™	PROFIBUS DP	AS-Interface	CANopen	EtherNet/IP™
Nil + COM	—	—	—	—	—
N - COM	○	○	○	○	○

SI Unit output polarity	EX260 integrated-type (for output) serial transmission system							
	DeviceNet™	PROFIBUS DP	CC-Link	EtherCAT	PROFINET	EtherNet/IP™	Ethernet POWERLINK	IO-Link
Nil + COM	○	○	○	○	○	○	—	—
N - COM	○	○	○	○	○	○	○	○

SI Unit output polarity	EX500 Gateway Decentralized System 2 (128 points)		EX500 Gateway Decentralized System (64 points)		
	EtherNet/IP™	PROFINET	DeviceNet™	PROFIBUS DP	EtherNet/IP™
Nil + COM	—	—	○	○	○
N - COM	○	○	○	○	○

SI Unit output polarity	EX600 integrated-type (for I/O) serial transmission system (Fieldbus system)								
	DeviceNet™	PROFIBUS DP	CC-Link	EtherNet/IP™	EtherCAT	PROFINET	EtherNet/IP™ compatible wireless base	PROFINET compatible wireless base	Wireless remote
Nil + COM	○	○	○	○	○	○	○	○	○
N - COM	○	○	○	○	○	○	○	○	○

* Leave the box blank for without SI Unit (SD0□, SD60).

7 I/O Unit stations

(Enter only for EX600-compliant S kit.)

—	None
1	1 station
⋮	⋮
9	9 stations

Note 1) Without SI Unit, the symbol is —.

Note 2) SI Unit is not included in I/O Unit stations.

Note 3) When I/O Unit is selected, it is shipped separately, and assembled by customer. Refer to the attached operation manual for mounting method.

Note 4) Refer to page 41 for details about the enclosure.

9 Input block type

(Enter only for S kit compliant with EX250.)

—	Without input block
1	M12, 2 inputs
2	M12, 4 inputs
3	M8, 4 inputs

10 Input block COM

(Enter only for S kit compliant with EX250.)

—	PNP sensor input or without input block
N	NPN sensor input

8 Number of input blocks

(Enter only for S kit compliant with EX250.)

Symbol	No. of blocks
—	Without SI Unit (SD0)
0	Without input block
1	With 1 input block
⋮	⋮
4	With 4 input blocks
⋮	⋮
8	With 8 input blocks


11 Option

—	None
K	Special wiring specifications (except for double wiring)
N	With name plate (available for T kit only)

4 Kit type/Electrical entry/Cable length

* Numbers in parentheses represent the maximum number of solenoids in the case of mixed single and double wiring. The total number of solenoids determines the maximum number of stations. When ordering mixed wiring, please add the option symbol "-K".


S Kit (Serial transmission kit (Fieldbus system) : EX600 integrated-type (for I/O))

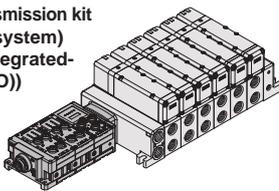

SI Unit: **EX600**
IP67 compliant

SD60	Serial kit without SI Unit	1 to 12 stations (16 stations, 24 points)
SD6Q	DeviceNet™	
SD6N	PROFIBUS-DP	
SD6V	CC-LINK	
SD6ZE	EtherNet/IP™ (1 port)	
SD6EA	EtherNet/IP™ (2 port)	
SD6D	EtherCAT®	
SD6F	PROFINET	
SD6WE	EtherNet/IP™ compatible wireless base <small>Note 5)</small>	
SD6WF	PROFINET compatible wireless base <small>Note 5)</small>	
SD6WS	Wireless remote <small>Note 5)</small>	


S Kit (Serial transmission kit: EX500 gateway-type)

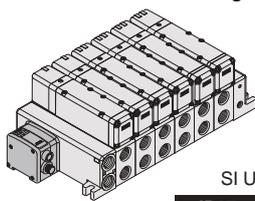

SI Unit: **EX500**
IP67 compliant

SD0A	Serial kit without SI Unit	—	—
SDA2	EX500 Gateway Decentralised system (64 points) DeviceNet™, PROFIBUS DP, EtherNet/IP™	16 Outputs	1 to 8 stations (16 stations, 16 points)
SDA3	EX500 Gateway Decentralised system 2(128 points) PROFINET, EtherNet/IP™	<small>Note 1)</small> 32 Outputs	1 to 12 stations (16 stations, 24 points)


S Kit (Serial transmission kit: EX260 integrated-type (for output))

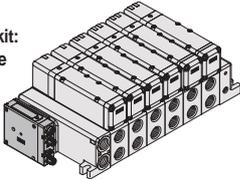

SI Unit: **EX260**
IP40 compliant
IP67 compliant

Symbol	Protocol	Number of outputs	Communication connector	Stations	
SD0A Serial kit without SI Unit					
SQA	DeviceNet™	32	M12	1 to 16 stations (16 stations, 24 points)	
SQB		16		1 to 8 stations (16 stations, 16 points)	
SNA	PROFIBUS DP	32	M12	1 to 12 stations (16 stations, 24 points)	
SNB		16		1 to 8 stations (16 stations, 16 points)	
SNC		32		D-sub <small>Note 2)</small>	1 to 12 stations (16 stations, 24 points)
SND		16			1 to 8 stations (16 stations, 16 points)
SVA	CC-Link	32	M12	1 to 12 stations (16 stations, 24 points)	
SVB		16		1 to 8 stations (16 stations, 16 points)	
SDA	EtherCAT®	32	M12	1 to 12 stations (16 stations, 24 points)	
SDB		16		1 to 8 stations (16 stations, 16 points)	
SFA	PROFINET	32	M12	1 to 12 stations (16 stations, 24 points)	
SFB		16		1 to 8 stations (16 stations, 16 points)	
SEA	EtherNet/IP™	32	M12	1 to 12 stations (16 stations, 24 points)	
SEB		16		1 to 8 stations (16 stations, 16 points)	
SGA	EtherNet	32	M12	1 to 12 stations (16 stations, 24 points)	
SGB		16		1 to 8 stations (16 stations, 16 points)	


S Kit (Serial transmission kit: EX250 integrated-type (for I/O))

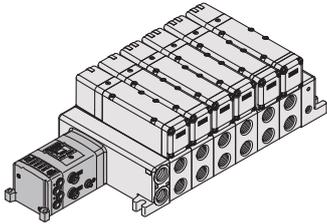

SI Unit: **EX250**
IP67 compliant


SD0	Serial kit without SI Unit	1 to 12 stations (16 stations, 24 points)	
SDQ	DeviceNet™		
SDN	PROFIBUS-DP		
SDV	CC-LINK		
SDTA	AS-Interface, 8 in/out, 31 slave modes, 2 power supply systems		1 to 4 stations (8 stations, 8 points)
SDTB	AS-Interface, 4 in/out, 31 slave modes, 2 power supply systems		1 to 2 stations (4 stations, 4 points)
SDTC	AS-Interface, 8 in/out, 31 slave modes, 1 power supply system		1 to 4 stations (8 stations, 8 points)
SDTD	AS-Interface, 4 in/out, 31 slave modes, 1 power supply system		1 to 2 stations (4 stations, 4 points)
SDY	CANopen		1 to 12 stations (16 stations, 24 points)
SDZEN	EtherNet/IP™		

S Kit (Serial transmission kit: EX126 integrated-type (for output))

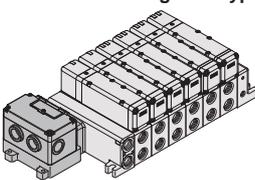

SI Unit: **EX126**
IP67 compliant

P Kit (Flat ribbon cable kit)

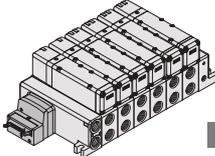


IP40 compliant

Note) For a 20P flat ribbon cable, the cable assembly must be ordered separately.

PD0	Flat ribbon cable kit (26P) without cable	1 to 12 stations (16 stations, 24 points)
PD1	Flat ribbon cable kit (26P) with 1.5 m cable	
PD2	Flat ribbon cable kit (26P) with 3.0 m cable	
PD3	Flat ribbon cable kit (26P) with 5.0 m cable	
PDC	Flat ribbon cable kit (20P) without cable <small>Note)</small>	1 to 8 stations (16 stations, 16 points)


F Kit (D-sub connector kit)

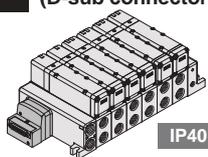

IP40 compliant

FD0	D-sub connector kit (25P) without cable	1 to 12 stations (16 stations, 24 points)
FD1	D-sub connector kit (25P) with 1.5 m cable	
FD2	D-sub connector kit (25P) with 3.0 m cable	
FD3	D-sub connector kit (25P) with 5.0 m cable	


M Kit (Circular connector kit)

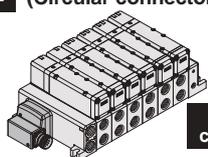

IP67 compliant

MD0	Circular connector kit (26P) without cable	1 to 12 stations (16 stations, 24 points)
MD1	Circular connector kit (26P) with 1.5 m cable	
MD2	Circular connector kit (26P) with 3.0 m cable	
MD3	Circular connector kit (26P) with 5.0 m cable	


T Kit (Terminal block box kit)

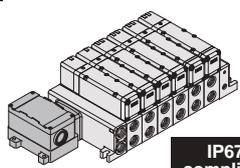

IP67 compliant

TD0	Terminal block box kit	1 to 10 stations (16 stations, 20 points)
------------	------------------------	--

L Kit (Lead wire kit)

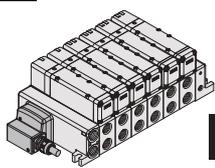

IP67 compliant

LD0	Lead wire kit, 0.6 m lead wire	1 to 12 stations (16 stations, 24 points)
LD1	Lead wire kit, 1.5 m lead wire	
LD2	Lead wire kit, 3.0 m lead wire	

* The maximum number of solenoids displayed in parentheses is applied to the special wiring specification (Option "-K").
 Note 1) When using the II Unit with 32 outputs use the GW Unit compatible with the EX500 Gateway Decentralised System 2 (128 points).
 Note 2) When selecting SI Units with SDTC or SDTD specifications, there are limits to the supply current from the SI Unit to the input block or valve. For details, refer to the catalogue on the website www.smc.eu.
 Note 3) When selecting D-sub S kit specifications only, IP40 is compatible. (All other SI Units are IP67 compliant.)
 Note 4) For the SI Unit part no., refer to page 50.
 Note 5) The wireless system is suitable for use only in a country where it is in accordance with the Radio Act and regulations of that country.

How to Order Valves

VQC5 1 0 0 - 5 1

Series VQC5000 0 1 2 3 4 5

0 Type of actuation

1	2-position single (A) (B) 4 2 5 1 3 (R1) (P) (R2)	4	3-position exhaust centre (A) (B) 4 2 5 1 3 (R1) (P) (R2)
	2-position double (Metal) (A) (B) 4 2 5 1 3 (R1) (P) (R2)		3-position pressure centre (A) (B) 4 2 5 1 3 (R1) (P) (R2)
2	2-position double (Rubber) (A) (B) 4 2 5 1 3 (R1) (P) (R2)	6	3-position double check (A) (B) 4 2 5 1 3 (R1) (P) (R2)
	3-position closed centre (A) (B) 4 2 5 1 3 (R1) (P) (R2)		

1 Seal type

0	Metal seal
1	Rubber seal

2 Function

—	Standard (0.95 W)
Y	Low wattage type (0.4 W)
R	External pilot

Note 1) When the power is energised continuously, refer to "Specific Product Precautions 1" on page 73.

Note 2) For details about external pilot type, refer to the catalogue of the VQ4000/5000 series on the website www.smc.eu. In addition, external pilot type cannot be combined with a double check spacer.

Note 3) When multiple symbols are specified, indicate them alphabetically.

3 Coil voltage

5	24 V DC (Note)
6	12 V DC

Note) S kit is only available for 24 V DC.

4 Light/Surge voltage suppressor


—	Yes
E	Without light, with surge voltage suppressor

5 Manual override

—	Non-locking push type (Tool required)
B	Locking type (Tool required)
C	Locking type (Manual)

How to Order Manifold Assembly

Example (VV5QC51-□SD6□)

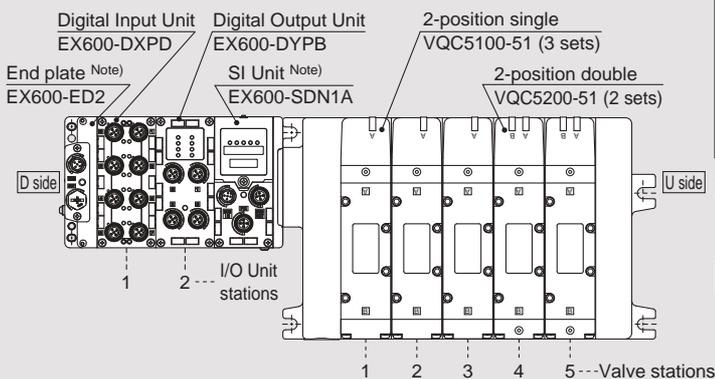

VV5QC51-0503SD6Q2N2...1 set (S kit 5-station manifold base part number)
 *VQC5100-51.....3 sets (2-position single part number)
 *VQC5200-51.....2 sets (2-position double part number)
 *EX600-DXP.....1 set I/O Unit part number (Station 1)
 *EX600-DYPB.....1 set I/O Unit part number (Station 2)

* The asterisk denotes the symbol for assembly.
 * Prefix it to the part numbers of the valve etc.

The valve arrangement is numbered as the 1st station from the D side.
 Under the manifold part number, state the valves to be mounted, then the I/O Units in order from the 1st station as shown in the figure above. If the arrangement becomes complicated, specify on a manifold specification sheet.

Note) Do not enter the SI Unit part number and the end plate part number together.

Manifold Specifications

Series	Base model	Connection type	Piping specifications		Note 2) Applicable stations	Applicable solenoid valve	5-station weight [g]	
			Port direction	Port size Note 1)				
VQC5000	VV5QC51-□□□□	■ F kit: D-sub connector ■ P kit: Flat ribbon cable ■ T kit: Terminal block box ■ S kit: Serial transmission ■ L kit: Lead wire ■ M kit: Circular connector	Side	D side P: 1/2 R: 1/2 (Rc, G, NPT/NPTF) U side P: 3/8 R: 3/8 (Rc, G, NPT/NPTF)	3/8, 1/2	(F, L, M, P kit 1 to 12 stations) (T kit 1 to 12 stations) (S kit 1 to 12 stations: EX250, EX260 1 to 12 stations: EX500, EX600)	VQC5□00-51 VQC5□01-51	4150 · S kit (Without Unit) · Not including valve weight.
			Bottom		1/2 (Rc, G, NPT/NPTF)			

Note 1) One-touch fittings in inch sizes are also available.

Note 2) As an optional specification, the maximum number of stations can be increased by special wiring specifications.

SI Unit Part Number Table

EX600 Integrated type (For Input/Output)

Symbol	Applicable protocol	SI Unit part no.		Page
		Negative common (PNP)	Positive common (NPN)	
SD6Q	DeviceNet™	EX600-SDN1A	EX600-SDN2A	33
SD6N	CC-Link	EX600-SMJ1	EX600-SMJ2	
SD6V	PROFIBUS DP	EX600-SPR1A	EX600-SPR2A	
SD6ZE	EtherNet/IP™ (1 port)	EX600-SEN1	EX600-SEN2	
SD6EA	EtherNet/IP™ (2 port)	EX600-SEN3	EX600-SEN4	
SD6D	EtherCAT®	EX600-SEC1	EX600-SEC2	
SD6F	PROFINET	EX600-SPN1	EX600-SPN2	
SD6WE	EtherNet/IP™, compatible wireless base <small>Note)</small>	EX600-WEN1	EX600-WEN2	
SD6WF	PROFINET, compatible wireless base <small>Note)</small>	EX600-WPN1	EX600-WPN2	
SD6WS	Wireless remote <small>Note)</small>	EX600-WSN1	EX600-WSN2	

Note) The wireless system is suitable for use only in a country where it is in accordance with the Radio Act and regulations of that country.

EX260

Symbol	Applicable protocol	Number of outputs	SI Unit part no.		Communication connector	Page
			Negative common (PNP)	Positive common (NPN)		
SQA	DeviceNet™	32	EX260-SDN1	EX260-SDN2	M12	33
SQB		16	EX260-SDN3	EX260-SDN4		
SNA	PROFIBUS DP	32	EX260-SPR1	EX260-SPR2		
SNB		16	EX260-SPR3	EX260-SPR4		
SNC		32	EX260-SPR5	EX260-SPR6		
SND		16	EX260-SPR7	EX260-SPR8		
SVA	CC-Link	32	EX260-SMJ1	EX260-SMJ2	M12	
SVB		16	EX260-SMJ3	EX260-SMJ4		
SDA	EtherCAT®	32	EX260-SEC1	EX260-SEC2	M12	
SDB		16	EX260-SEC3	EX260-SEC4		
SFA	PROFINET	32	EX260-SPN1	EX260-SPN2	M12	
SFB		16	EX260-SPN3	EX260-SPN4		
SEA	EtherNet/IP™	32	EX260-SEN1	EX260-SEN2	M12	
SEB		16	EX260-SEN3	EX260-SEN4		
SGA	EtherNet	32	EX260-SPL1	—	M12	
SGB	POWERLINK	16	EX260-SPL3	—		

EX126

Symbol	Applicable protocol	SI Unit part no.	Page
SDVB	CC-Link, Positive common (NPN)	EX126D-SMJ1	34

EX500 Gateway Decentralised System 2 (128 points)

Symbol	Applicable protocol	SI Unit part no.		Page
		Negative common (PNP)		
SDA3	EtherNet/IP™	EX500-S103		33
	PROFINET			

EX500 Gateway Decentralised System (64 points)

Symbol	Applicable protocol	SI Unit part no.		Page
		Positive common (NPN)	Negative common (PNP)	
SDA2	DeviceNet™	EX500-Q001	EX500-Q101	33
	PROFIBUS DP			
	EtherNet/IP™			










EX250 Integrated type (For Input/Output)

Symbol	Applicable protocol	SI Unit part no.	Page
SDQ	DeviceNet™, Negative common (PNP)	EX250-SDN1	34
SDN	PROFIBUS DP, Negative common (PNP)	EX250-SPR1	
SDV	CC-Link, Positive common (NPN)	EX250-SMJ2	
SDTA	AS-Interface, Negative common (PNP), (8 in/8 out, 31 slave modes, 2 power supply systems)	EX250-SAS3	
SDTB	AS-Interface, Negative common (PNP), (4 in/4 out, 31 slave modes, 2 power supply systems)	EX250-SAS5	
SDTC	AS-Interface, Negative common (PNP), (8 in/8 out, 31 slave modes, 1 power supply system)	EX250-SAS7	
SDTD	AS-Interface, Negative common (PNP), (4 in/4 out, 31 slave modes, 1 power supply system)	EX250-SAS9	
SDY	CANopen, Negative common (PNP)	EX250-SCA1A	
SDZEN	EtherNet/IP™, Negative common (PNP)	EX250-SEN1	

For details about the EX series refer to their catalogues on the website www.smc.eu and the Operation Manual. Please download the Operation Manual via SMC website, <http://www.smc.eu>

Manifold Options

For details about options, refer to the catalogue of the VQ4000/5000 series on the website www.smc.eu.

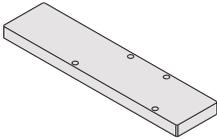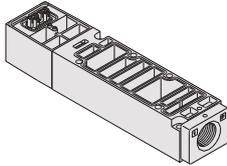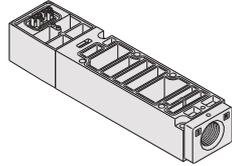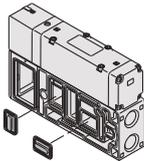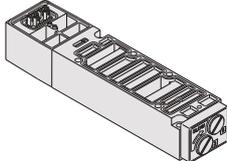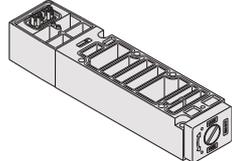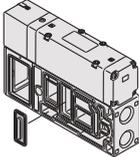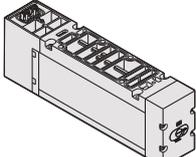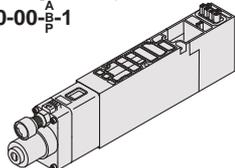Blanking plate assembly VVQ5000-10A-1 	Individual SUP spacer VVQ5000-P-1-⁰³/₀₄ 	Individual EXH spacer VVQ5000-R-1-⁰³/₀₄ 
EXH block plate VVQ5000-16A-2 	Restrictor spacer VVQ5000-20A-1 	SUP stop valve spacer VVQ5000-37A-1 
SUP block plate VVQ5000-16A-1 	Double check spacer with residual pressure exhaust VVQ5000-25A-1 	Interface regulator (P, A, B port regulation) ARBQ5000-00-^A/_B-1 

For replacement parts, refer to page 71.

Series VQC5000


S VQC5000

Kit (Serial transmission kit): For EX600 Integrated-type (I/O) Serial Transmission System **IP67 compliant**

VV5QC51

S kit (Serial transmission kit: EX600)

Power supply with M12 connector

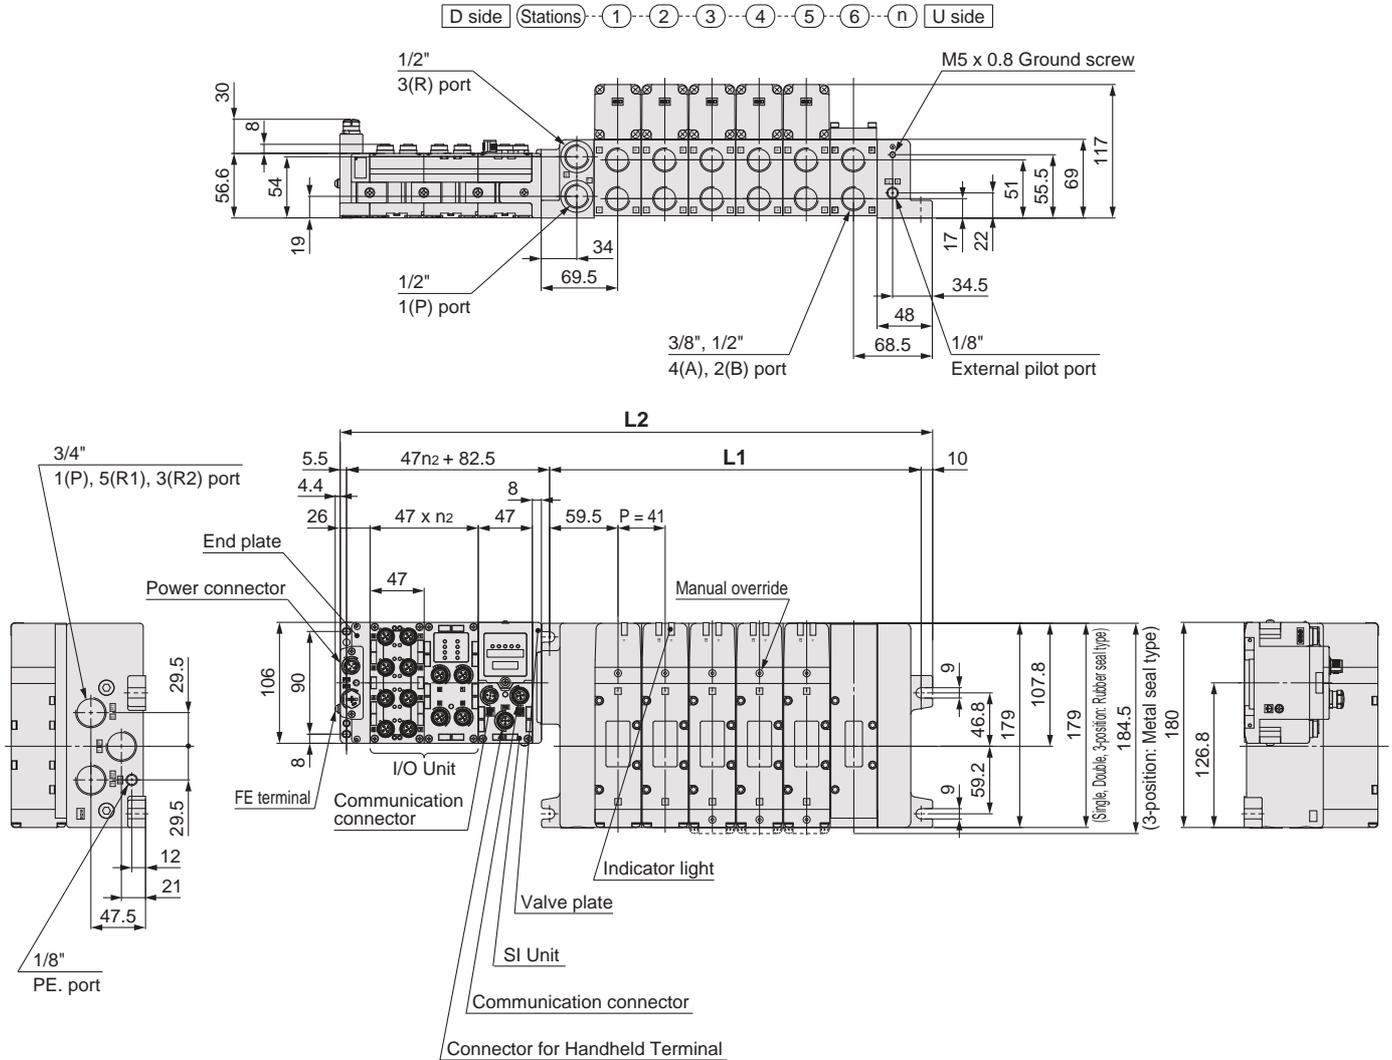

Dimensions

L \ n	1	2	3	4	5	6	7	8	9	10	11	12
L1	118	159	200	241	282	323	364	405	446	487	528	569
L2	216	257	298	339	380	421	462	503	544	585	626	667

Formula: L1 = 41n + 77, L2 = 41n + 175 * L2 is the dimension without I/O Unit. Add 47 mm for each additional I/O Units. * "n2" is number of I/O Units. n: Stations (Maximum 12 stations)


S VQC5000

Kit (Serial transmission kit): For EX600 Integrated-type (I/O) Serial Transmission System **IP67 compliant**

VV5QC51

S kit (Serial transmission kit: EX600)

Power supply with 7/8 inch connector

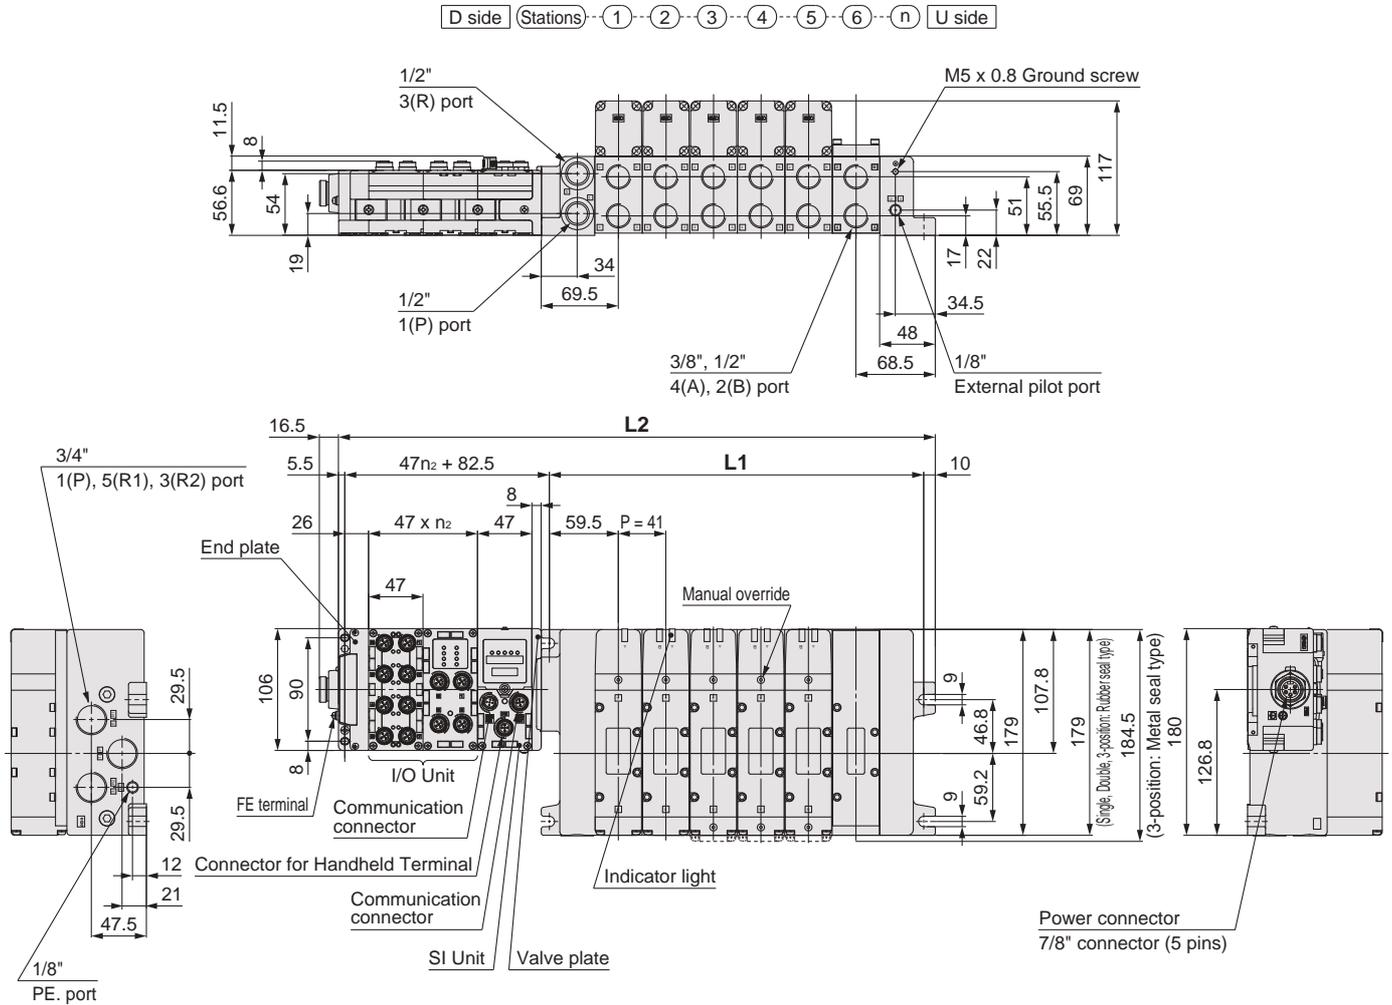

Dimensions

L \ n	1	2	3	4	5	6	7	8	9	10	11	12
L1	118	159	200	241	282	323	364	405	446	487	528	569
L2	216	257	298	339	380	421	462	503	544	585	626	667

Formula: L1 = 41n + 77, L2 = 41n + 175 * L2 is the dimension without I/O Unit. Add 47 mm for each additional I/O Units. * "n₂" is number of I/O Units. n: Stations (Maximum 12 stations)


Series VQC5000

S VQC5000

Kit (Serial transmission kit): For EX500 Gateway-type Serial Transmission System **IP67 compliant**

VV5QC51

S kit (Serial transmission kit: EX500)

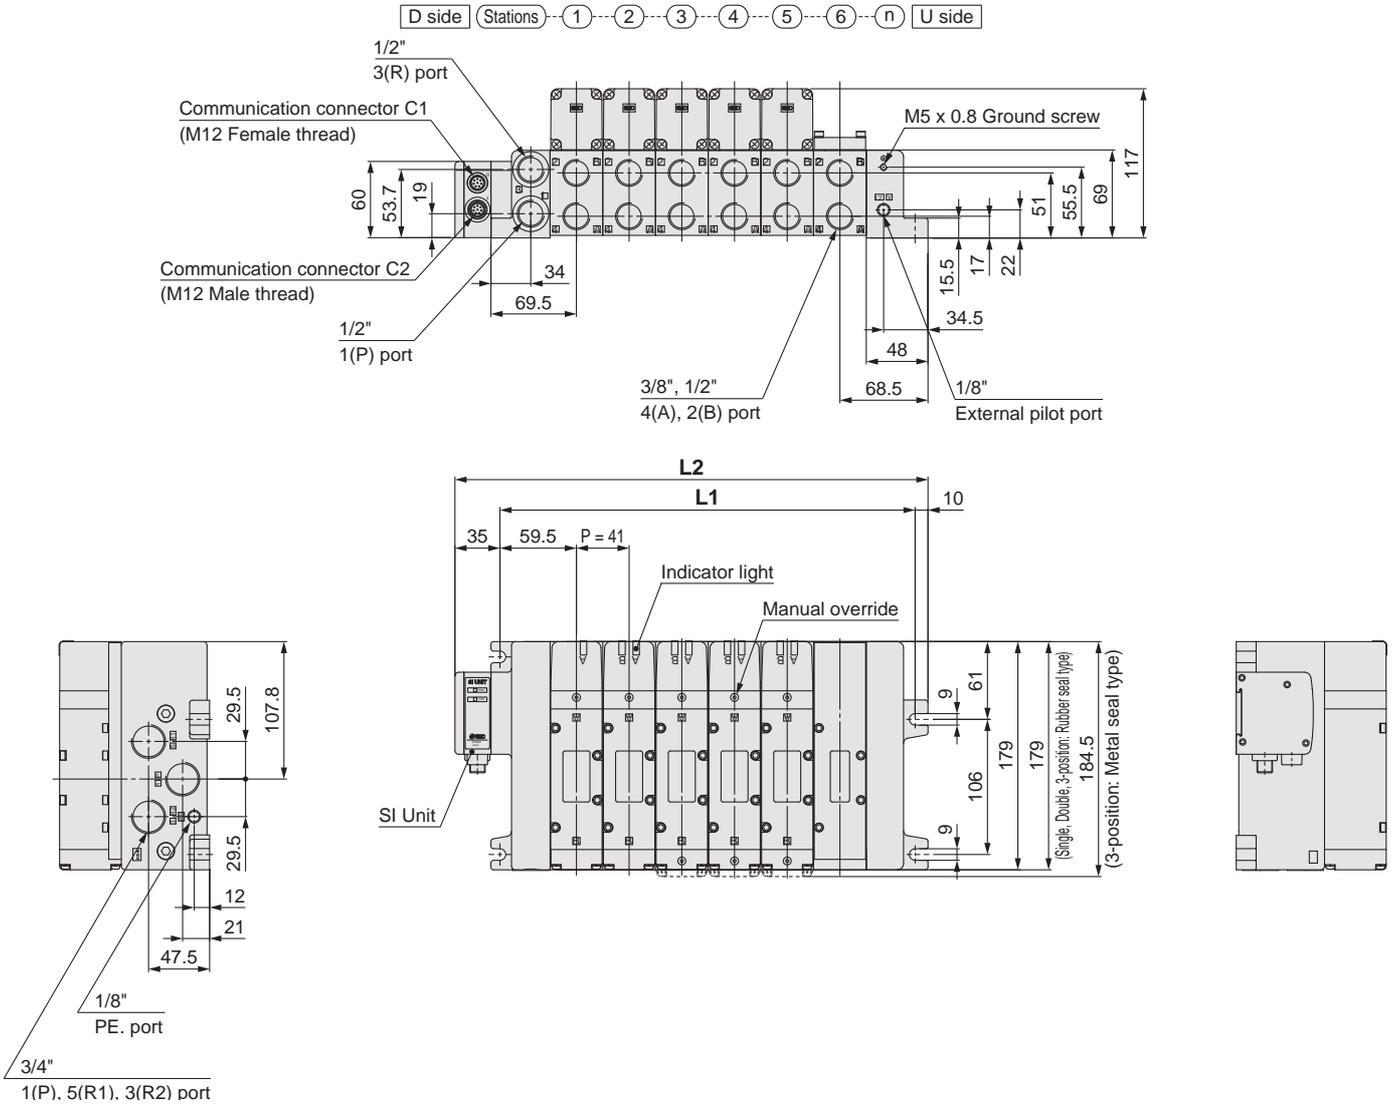

Dimensions

		[mm]											
L \ n	1	2	3	4	5	6	7	8	9	10	11	12	
L1	118	159	200	241	282	323	364	405	446	487	528	569	
L2	163	204	245	286	327	368	409	450	491	532	573	614	

Formula: $L1 = 41n + 77$, $L2 = 41n + 122$ n: Stations (Maximum 12 stations)

S **VQC5000**







Kit (Serial transmission kit): For EX260 Integrated-type (Output) Serial Transmission System

IP40 compliant

IP67 compliant

VV5QC51

S kit (Serial transmission kit: EX260)

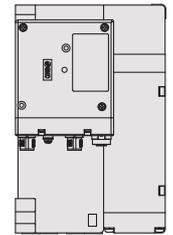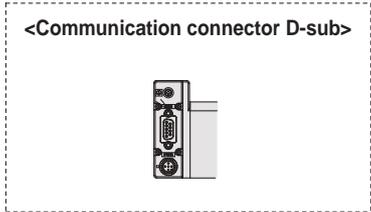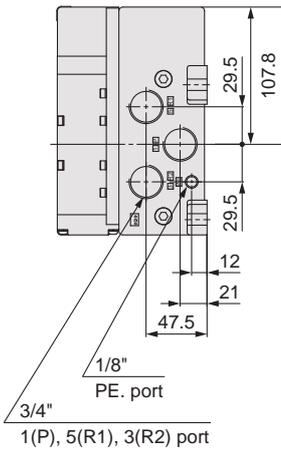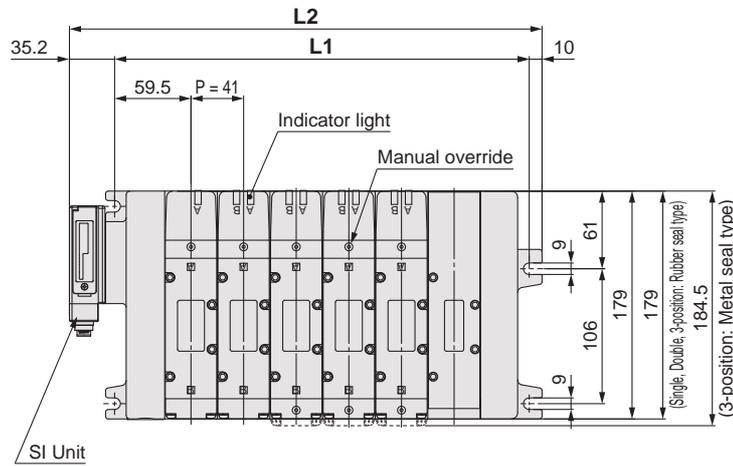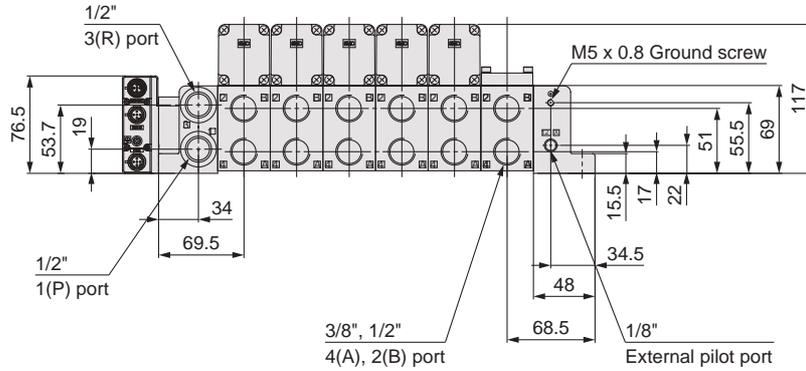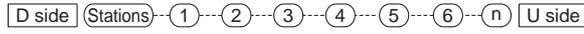

Dimensions

[mm]

L \ n	1	2	3	4	5	6	7	8	9	10	11	12
L1	118	159	200	241	282	323	364	405	446	487	528	569
L2	163.2	204.2	245.2	286.2	327.2	368.2	409.2	450.2	491.2	532.2	573.2	614.2

Formula: L1 = 41n + 77, L2 = 41n + 122.2 n: Stations (Maximum 12 stations)

VQC4000

Single Unit

Manifold

Construction

Exploded View of Manifold

Specific Product Precautions

VQC5000

Single Unit

Manifold

Construction

Exploded View of Manifold

Specific Product Precautions


Series VQC5000

S VQC5000

Kit (Serial transmission kit): For EX250 Integrated-type (I/O) Serial Transmission System **IP67 compliant**

VV5QC51

S kit (Serial transmission kit: EX250)

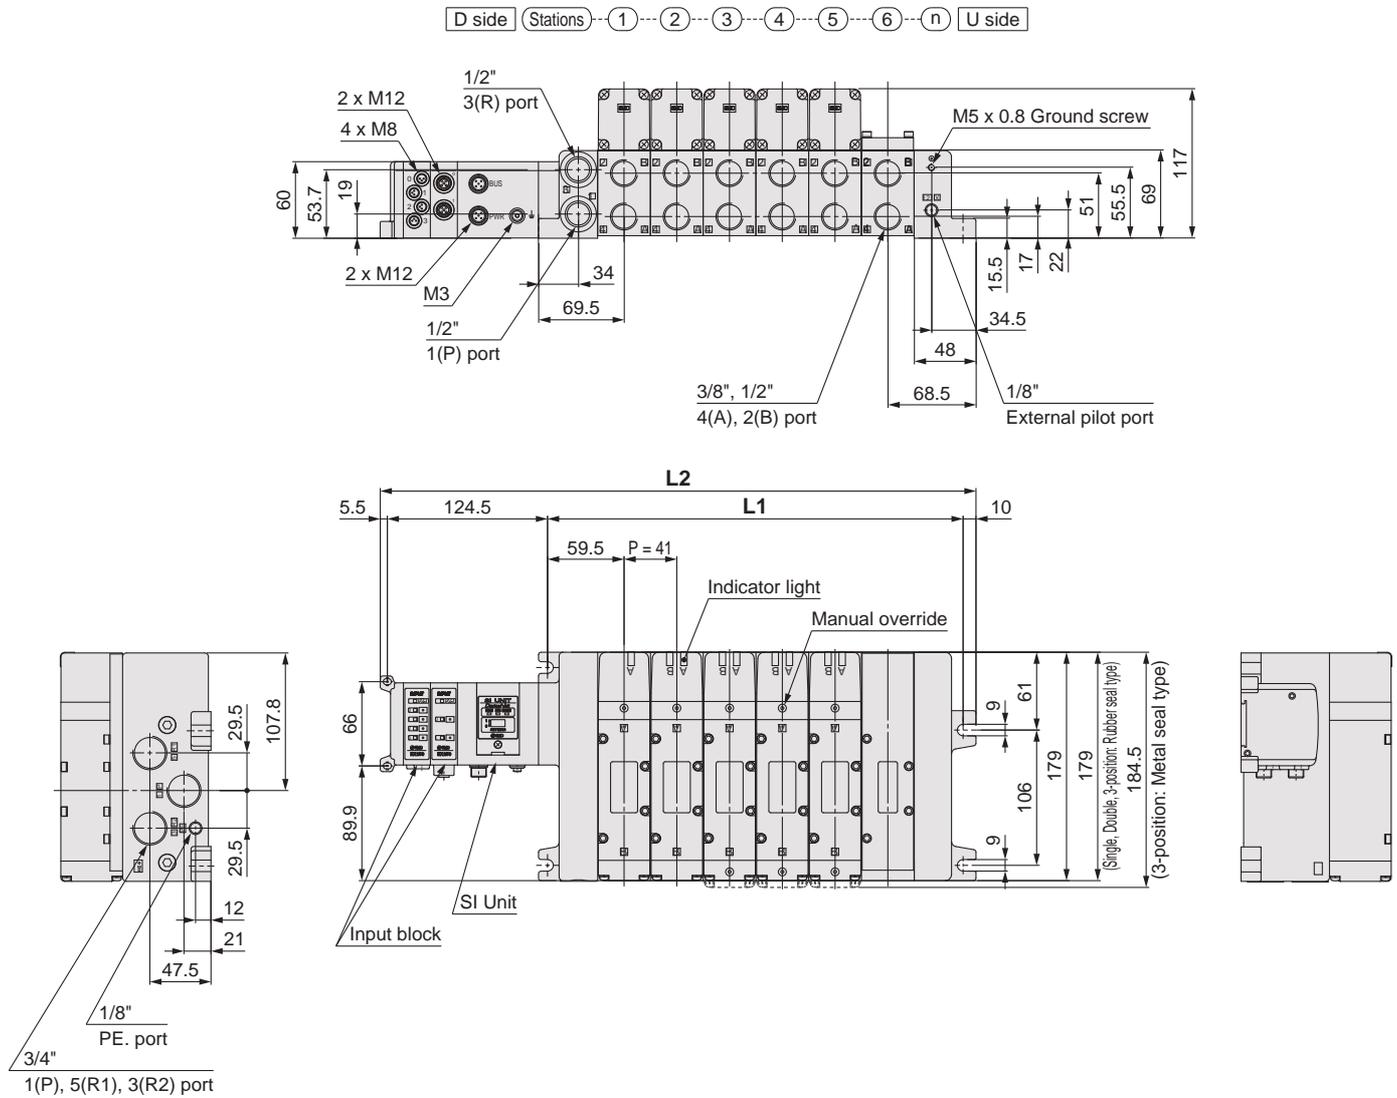

Dimensions

		[mm]											
L \ n	n	1	2	3	4	5	6	7	8	9	10	11	12
L1		118	159	200	241	282	323	364	405	446	487	528	569
L2		237	278	319	360	401	442	483	524	565	606	647	688


Formula: $L1 = 41n + 77$, $L2 = 41n + 196$ (For one input block. Add 21 mm for each additional input block.) n: Stations (Maximum 12 stations)

S VQC5000

Kit (Serial transmission kit): For EX126 Integrated-type (Output) Serial Transmission System **IP67 compliant**

VV5QC51

S kit (Serial transmission kit: EX126)

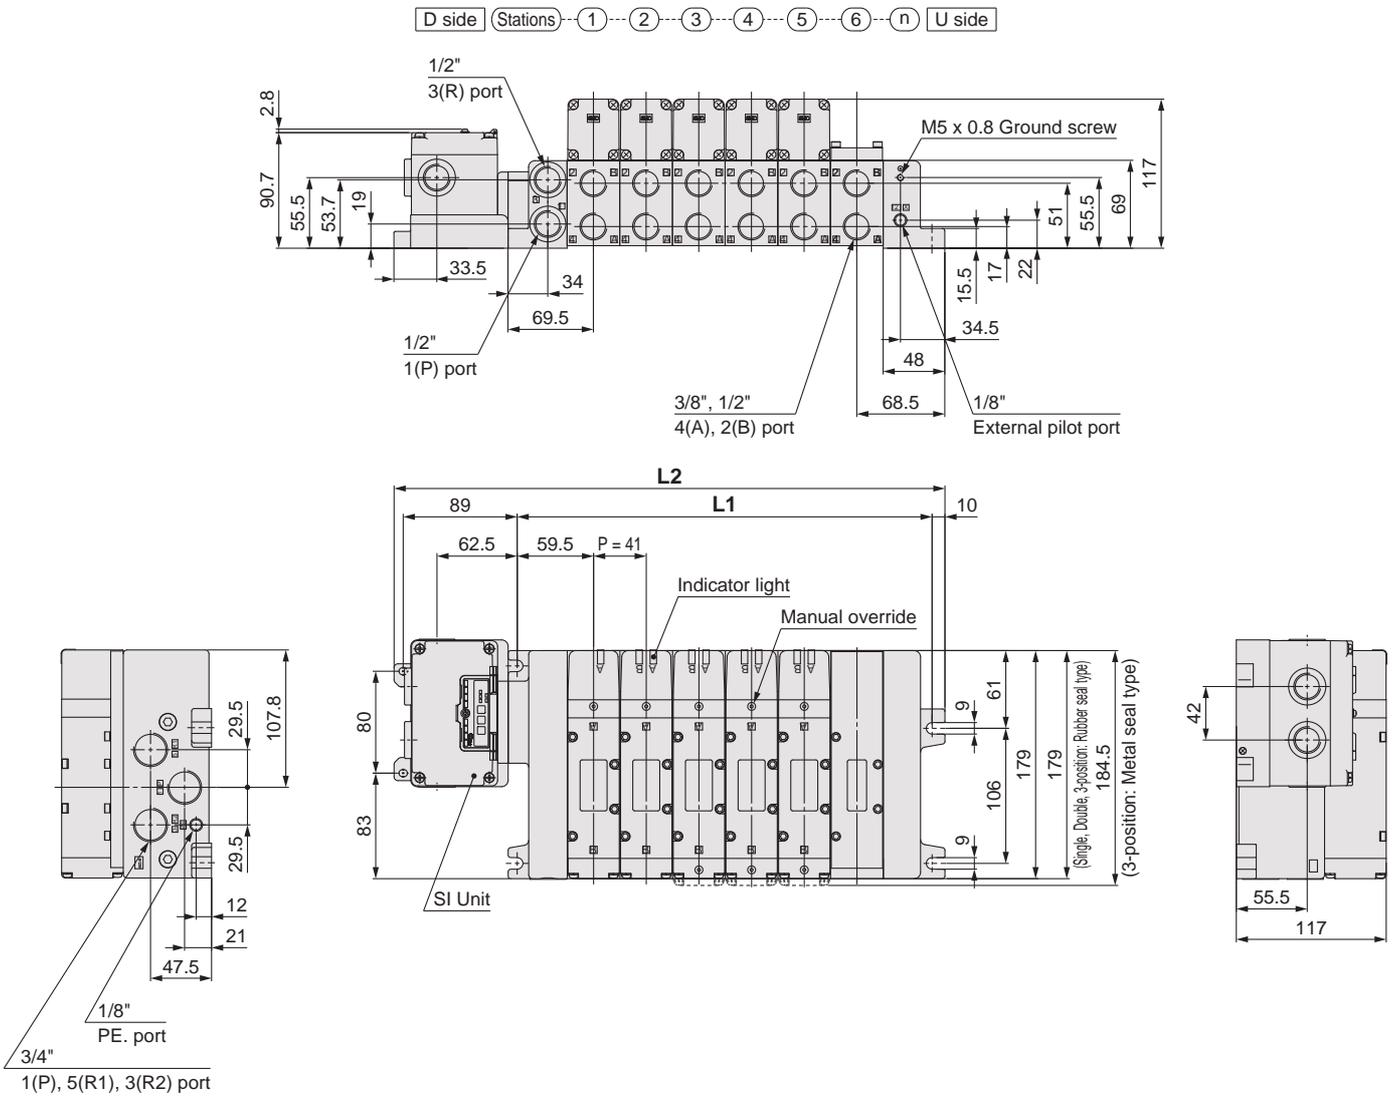

Dimensions

		[mm]											
L \ n		1	2	3	4	5	6	7	8	9	10	11	12
L1		118	159	200	241	282	323	364	405	446	487	528	569
L2		223.8	264.8	305.8	346.8	387.8	428.8	469.8	510.8	551.8	592.8	633.8	674.8

Formula: L1 = 41n + 77, L2 = 41n + 182.8 n: Stations (Maximum 12 stations)

VQC4000

Single Unit

Manifold

Construction

Exploded View of Manifold

Specific Product Precautions

VQC5000

Single Unit

Manifold


Construction

Exploded View of Manifold

Specific Product Precautions

Series VQC5000


F VQC5000 Kit (D-sub connector kit) IP40 compliant

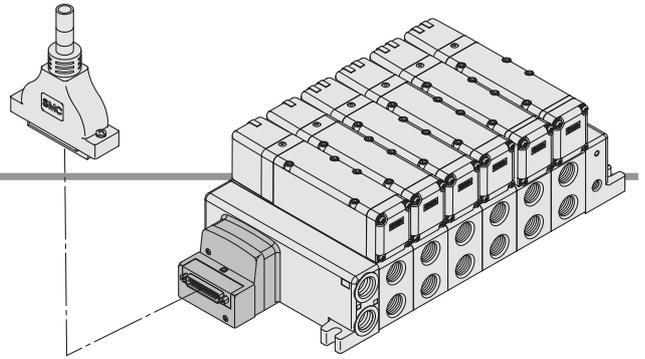

- Using our D-sub connector for electrical connections greatly reduces labour, while it also minimizes wiring and saves space.
- We use a D-sub connector (25P) that conforms to MIL standards and is therefore widely compatible with many standard commercial models.
- Top or side entry for the connector can be changed freely, allowing for changes even after mounting, to meet any changing needs for space.

Electrical Wiring Specifications

D-sub connector

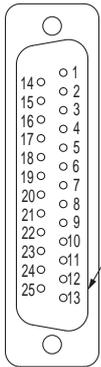

If alignment is not specified, the internal wiring is double wiring (connected to SOL. a and SOL. b) regardless of number of stations, valve and option types.

Connector terminal no.


Station	Lead wire no.	Polarity	Terminal no.	Lead wire colour	Dot marking
Station 1	SOL. a	1 (-) (+)	1	Black	None
	SOL. b	14 (-) (+)	14	Black	None
Station 2	SOL. a	2 (-) (+)	2	Brown	None
	SOL. b	15 (-) (+)	15	Brown	None
Station 3	SOL. a	3 (-) (+)	3	Red	None
	SOL. b	16 (-) (+)	16	Red	None
Station 4	SOL. a	4 (-) (+)	4	Orange	None
	SOL. b	17 (-) (+)	17	Orange	None
Station 5	SOL. a	5 (-) (+)	5	Yellow	None
	SOL. b	18 (-) (+)	18	Yellow	None
Station 6	SOL. a	6 (-) (+)	6	Pink	None
	SOL. b	19 (-) (+)	19	Pink	None
Station 7	SOL. a	7 (-) (+)	7	Blue	None
	SOL. b	20 (-) (+)	20	Blue	None
Station 8	SOL. a	8 (-) (+)	8	Purple	White
	SOL. b	21 (-) (+)	21	Purple	White
Station 9	SOL. a	9 (-) (+)	9	Grey	Black
	SOL. b	22 (-) (+)	22	Grey	Black
Station 10	SOL. a	10 (-) (+)	10	White	Black
	SOL. b	23 (-) (+)	23	White	Black
Station 11	SOL. a	11 (-) (+)	11	White	Red
	SOL. b	24 (-) (+)	24	White	Red
Station 12	SOL. a	12 (-) (+)	12	Yellow	Red
	SOL. b	25 (-) (+)	25	Yellow	Red
COM.	13 (+) (-)	13	Orange	Black	

* When using a valve with no polarity, either positive common or negative common can be used.

Terminal no.	Lead wire colour	Dot marking
1	Black	None
2	Brown	None
3	Red	None
4	Orange	None
5	Yellow	None
6	Pink	None
7	Blue	None
8	Purple	White
9	Grey	Black
10	White	Black
11	White	Red
12	Yellow	Red
13	Orange	Red
14	Yellow	Black
15	Pink	Black
16	Yellow	White
17	White	None
18	Grey	None
19	Orange	Black
20	Red	White
21	Brown	White
22	Pink	Red
23	Grey	Red
24	Black	White
25	White	None

Specified Layout

(25 pins)

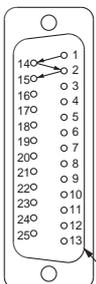

Mixed wiring of single and double wiring can be specified on the manifold specification sheet. The maximum number of stations is determined according to the number of solenoids. The total number of solenoids should be 24 or less. 1 solenoid is required for 2-position single, and 2 solenoids for 2-position double, 3-position and 4-position.

COM.

Connector Cable


GVVZS3000-21A-□ [IP40]

D-sub connector/cable

Cable length (L)	Assembly part no.	Note
1 m	GVVZS3000-21A-160	60°angled
3 m	GVVZS3000-21A-260	60°angled
5 m	GVVZS3000-21A-360	60°angled
8 m	GVVZS3000-21A-460	60°angled
3 m	GVVZS3000-21A-2	Standard
5 m	GVVZS3000-21A-3	Standard
8 m	GVVZS3000-21A-4	Standard

Shielded cable

Cable length (L)	Assembly part no.	Note
1 m	GVVZS3000-21A-1S	Shielded
3 m	GVVZS3000-21A-2S	Shielded
5 m	GVVZS3000-21A-3S	Shielded
8 m	GVVZS3000-21A-4S	Shielded
20 m	GVVZS3000-21A-5S	Made to order

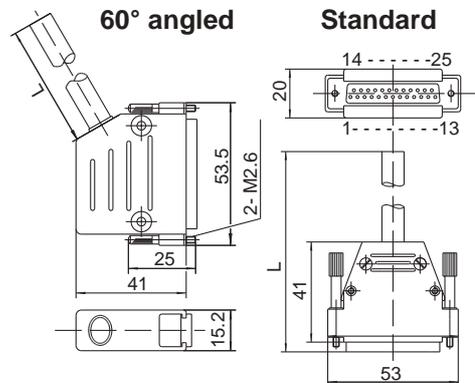

Electrical characteristics

Item	Property
Conductor resistance Ω/km, 20 °C	Max. 57
Voltage limit V, 5 minute, AC	1500
Insulation resistance MΩ/km, 20 °C	20

Standard


D-Sub connector cable assembly (option)

AXT100-DS25- ⁰¹⁵ ₀₃₀ ⁰⁵⁰ (According to MIL-C24308)

* Please contact SMC for details.

F **VQC5000**
Kit (D-sub connector kit) **IP40 compliant**

VV5QC51

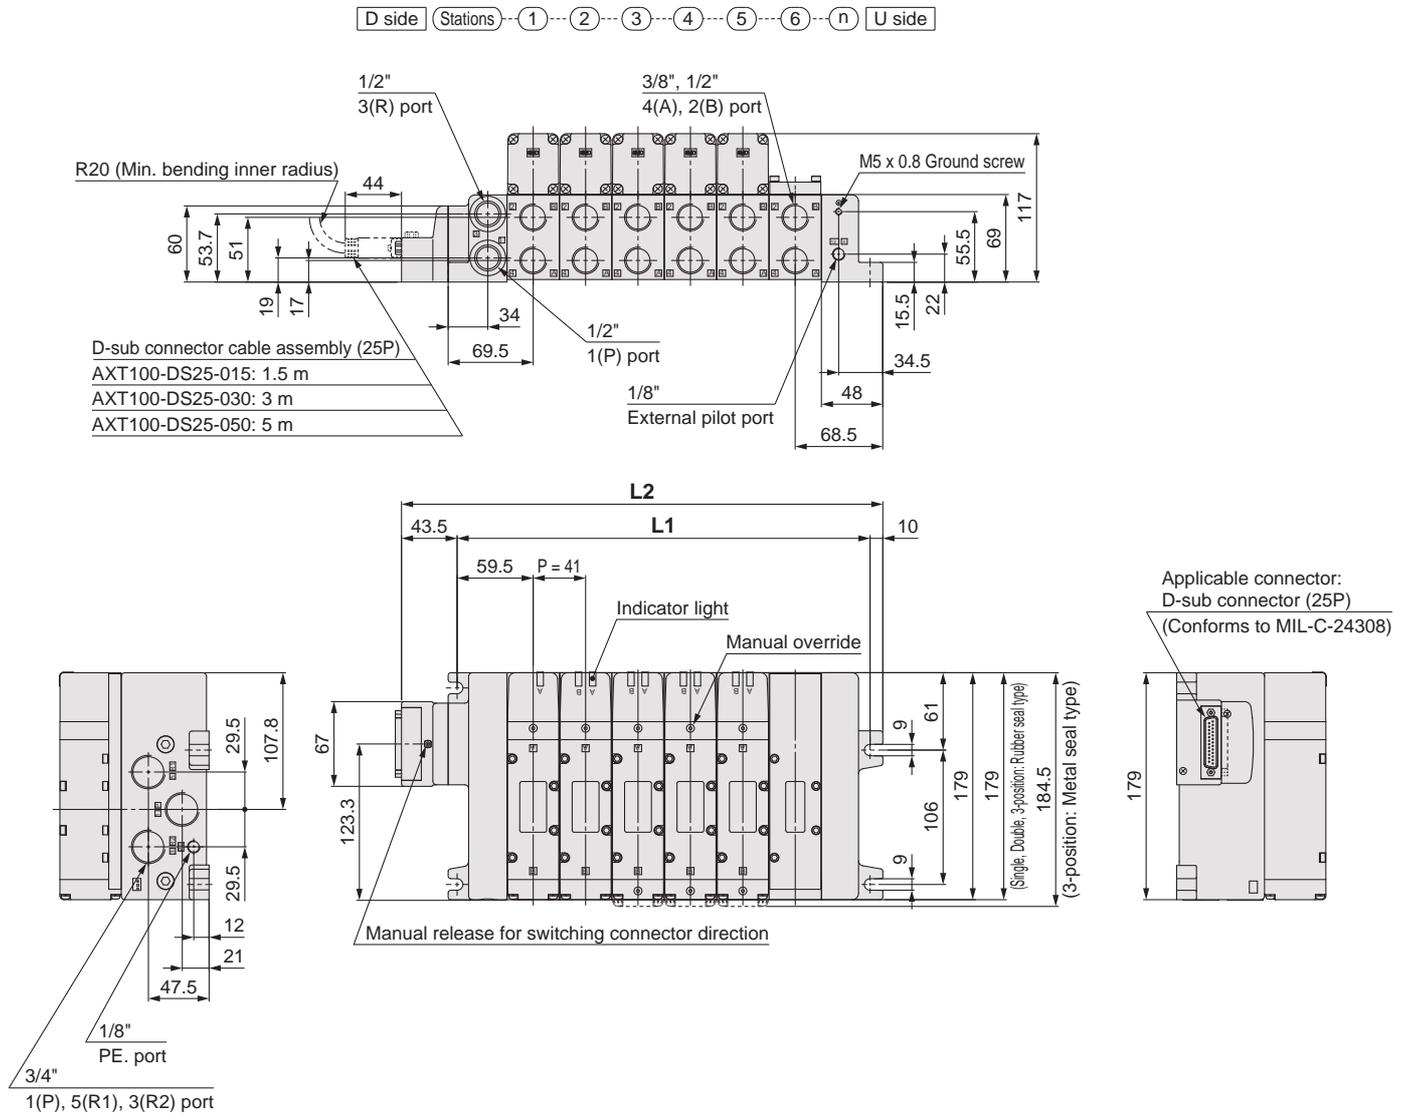

Dimensions

L \ n	1	2	3	4	5	6	7	8	9	10	11	12
L1	118	159	200	241	282	323	364	405	446	487	528	569
L2	171.5	212.5	253.5	294.5	335.5	376.5	417.5	458.5	499.5	540.5	581.5	622.5

Formula: L1 = 41n + 77, L2 = 41n + 130.5 n: Stations (Maximum 12 stations)

VQC4000

Single Unit

Manifold

Construction

Exploded View of Manifold

Specific Product Precautions

VQC5000

Single Unit

Manifold

Construction


Exploded View of Manifold

Specific Product Precautions

Series VQC5000

P VQC5000 Kit (Flat ribbon cable kit) IP40 compliant

- Using our flat ribbon cable for electrical connections greatly reduces labour, while it also minimizes wiring and saves space.
- We use flat ribbon cables whose connectors (26P and 20P) conform to MIL standards, and are therefore widely compatible with many standard commercial models.
- Top or side entry for the connector can be changed freely, allowing for changes even after mounting, to meet any changing needs for space.

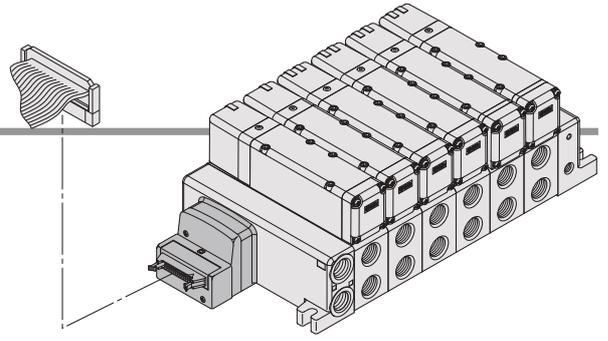

Electrical Wiring Specifications

Flat ribbon cable connector

Double wiring (connected to SOL. A and SOL. B) is used for the internal wiring of each station regardless of valve and option types. Mixed single and double wiring are available as options. Refer to special wiring specifications (options) below.

Connector terminal number

Triangle mark indicator position

<26P>

<20P>

Cable Assembly

AXT100-FC²⁰₂₆¹₂³

(Type 26P flat ribbon cable connector assemblies can be ordered with manifolds. Refer to manifold ordering.)

Flat ribbon cable connector assemblies

Cable length (L)	Part no.	
	26P	20P
1.5 m	AXT100-FC26-1	AXT100-FC20-1
3 m	AXT100-FC26-2	AXT100-FC20-2
5 m	AXT100-FC26-3	AXT100-FC20-3

- * When using a standard commercial connector, use a type 26P connector conforming to MIL-C-83503 or a type 20P with strain relief.
- * Cannot be used for transfer wiring.
- * Lengths other than the above is also available. Please contact SMC for details.

Connector Manufacturers Example

- Hirose Electric Co., Ltd.
- Sumitomo/3M Limited
- Fujitsu, Ltd.
- Japan Aviation Electronics Industry, Ltd.
- J.S.T. Mfg. Co., Ltd.
- Oki Electric Cable Co., Ltd.


Special Wiring Specifications (Option)

Mixed single and double wiring are available as options. The maximum number of manifold stations is determined by the number of solenoids. Count one point for a single solenoid type and two points for a double solenoid type. The total number of solenoids (points) must not exceed 24.

(For 26P) (For 20P)

P **VQC5000**
 Kit (Flat ribbon cable kit) **IP40 compliant**

VV5QC51

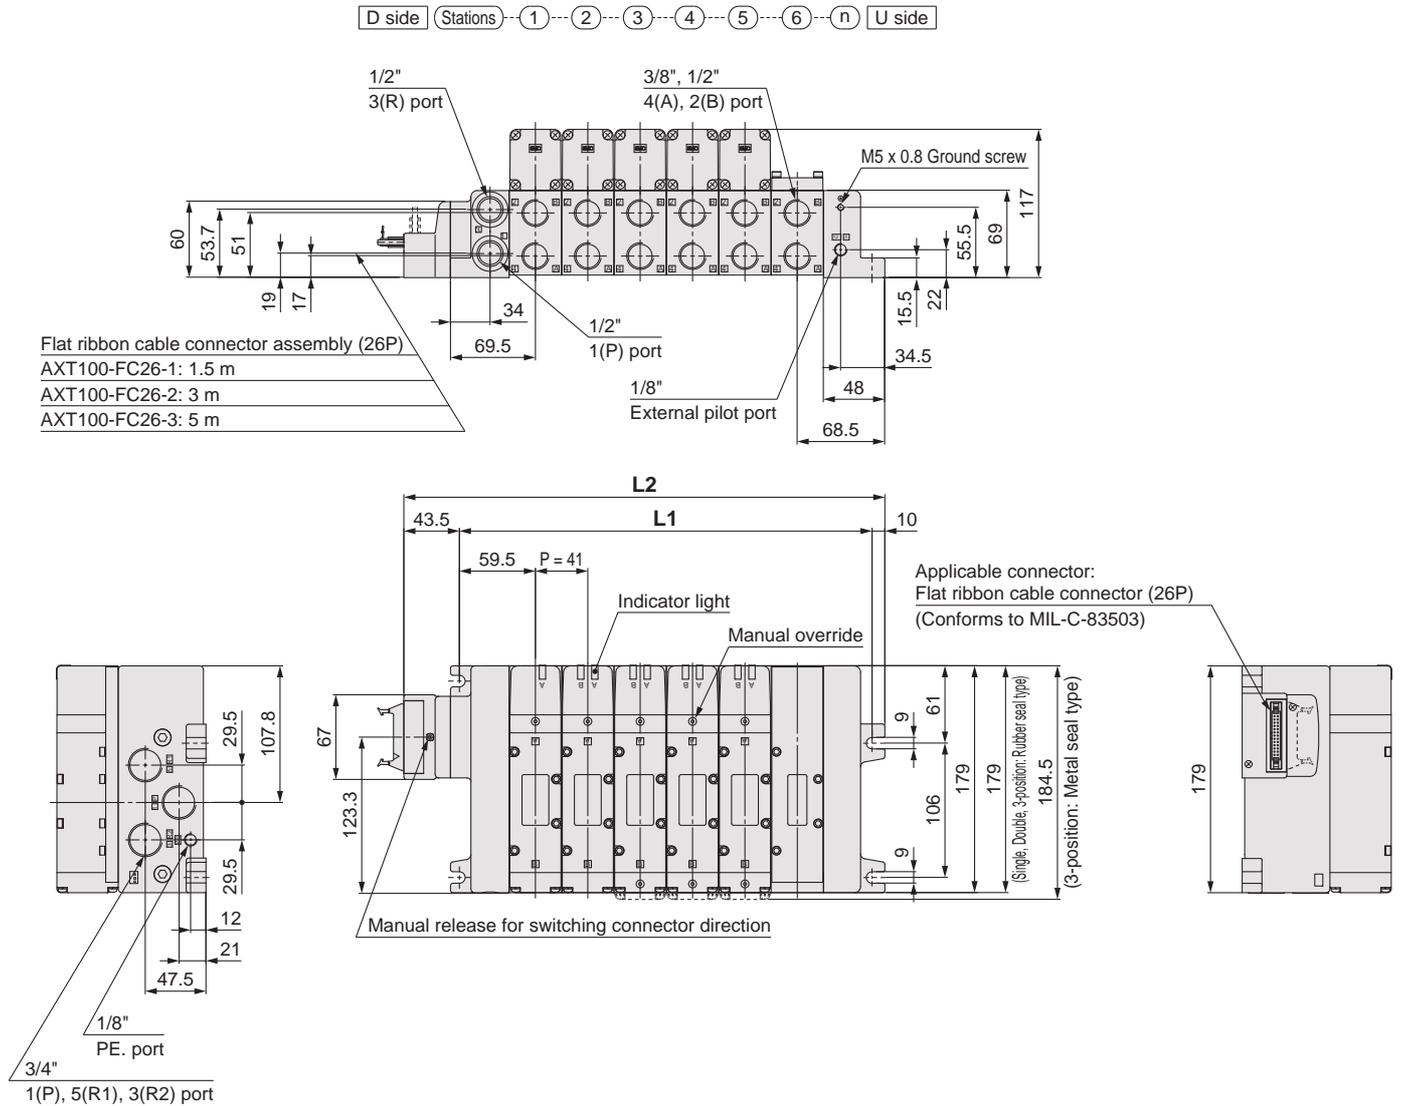

Dimensions

L \ n	1	2	3	4	5	6	7	8	9	10	11	12
L1	118	159	200	241	282	323	364	405	446	487	528	569
L2	171.5	212.5	253.5	294.5	335.5	376.5	417.5	458.5	499.5	540.5	581.5	622.5

Formula: L1 = 41n + 77, L2 = 41n + 130.5 n: Stations (Maximum 12 stations)

VQC4000

Single Unit

Manifold

Construction

Exploded View of Manifold

Specific Product Precautions

VQC5000

Single Unit

Manifold


Construction

Exploded View of Manifold

Specific Product Precautions

Series VQC5000

T VQC5000 Kit (Terminal block box kit) IP67 compliant

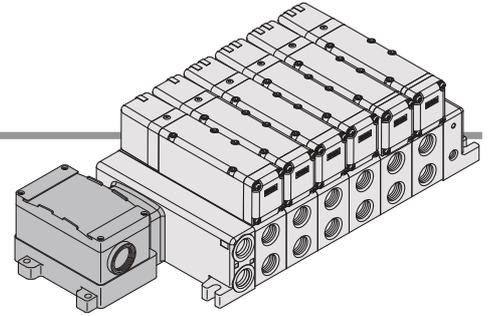


- This kit has a small terminal block inside a junction box. The provision of a G 3/4 electrical entry allows connection of conduit fittings.

Terminal Block Connection

Step 1. How to remove terminal block cover

Loosen the 4 mounting screws (M4) and remove the terminal block cover.

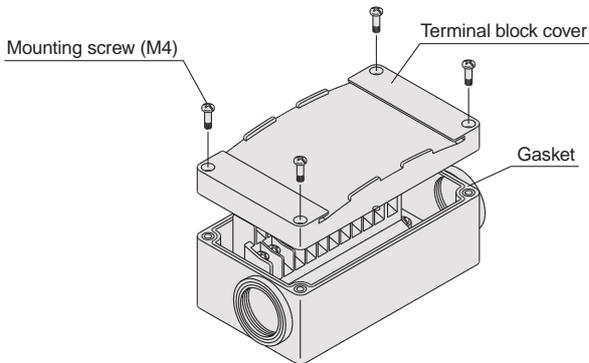

Step 3. How to replace the terminal block cover

Securely tighten the screws to the torque shown in the table below, after confirming that the gasket is installed correctly.


Proper tightening torque [N·m]
0.7 to 1.2

- Applicable crimped terminal: 1.25-3S, 1.25Y-3, 1.25Y-3N, 1.25Y-3.5
- Name plate: VVQ5000-N-T
- Drip proof plug assembly (for G 3/4): AXT100-B06A


Step 2. The diagram below shows the terminal block wiring.

All stations are provided with double wiring regardless of the valves which are mounted.

Connect each wire to the power supply side, according to the markings provided inside the terminal block.

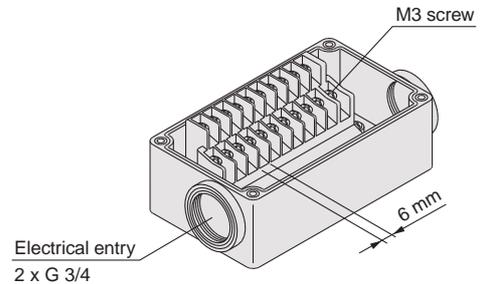


Electrical Wiring Specifications (Conforms to IP67)

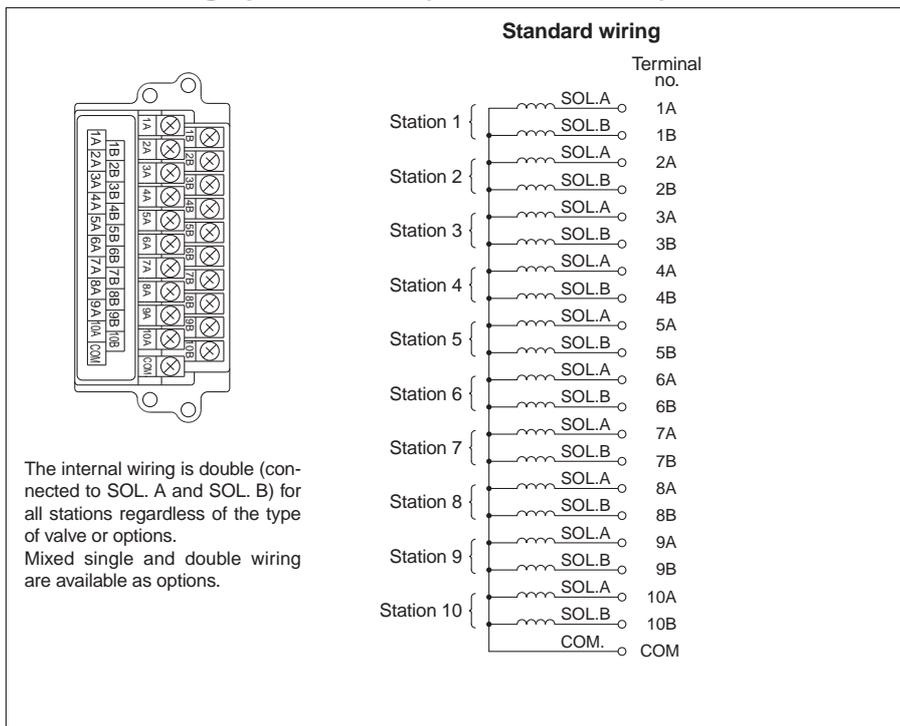

T VQC5000

Kit (Terminal block box kit) IP67 compliant

VV5QC51

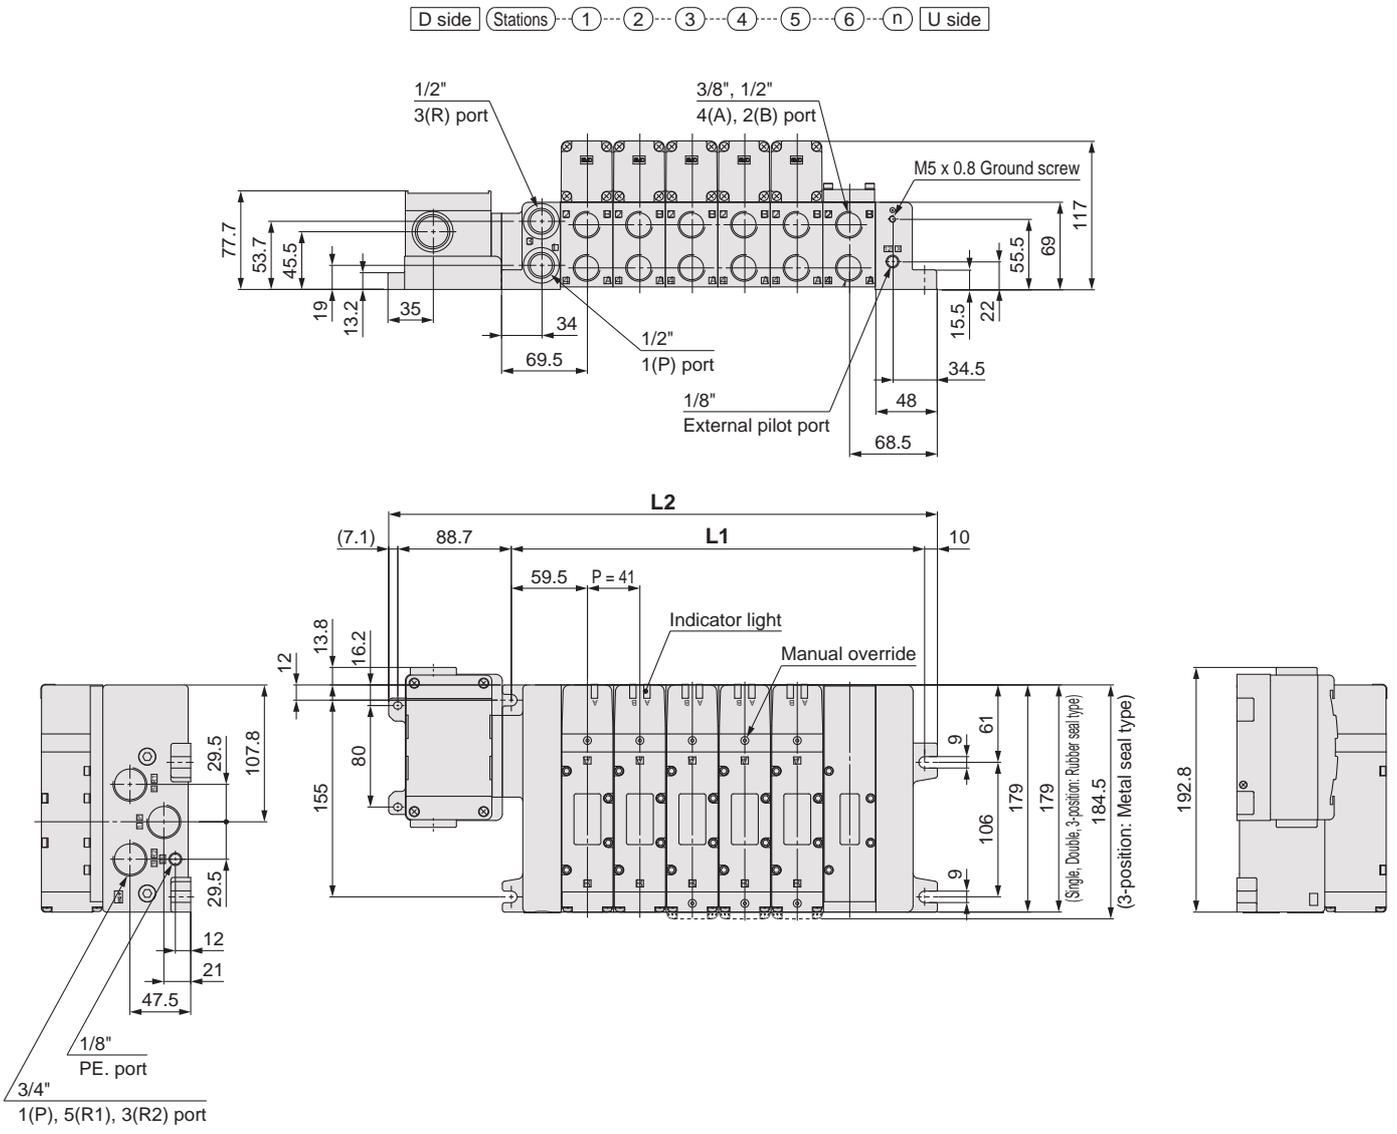

Dimensions

	n	1	2	3	4	5	6	7	8	9	10	11	12
L1		118	159	200	241	282	323	364	405	446	487	528	569
L2		223.8	264.8	305.8	346.8	387.8	428.8	469.8	510.8	551.8	592.8	633.8	674.8

Formula: L1 = 41n + 77, L2 = 41n + 182.8 n: Stations (Maximum 12 stations)

VQC4000

Single Unit

Manifold

Construction

Exploded View of Manifold

Specific Product Precautions

VQC5000

Single Unit

Manifold


Construction

Exploded View of Manifold

Specific Product Precautions

Series VQC5000

VQC5000 Kit (Lead wire kit) IP67 compliant

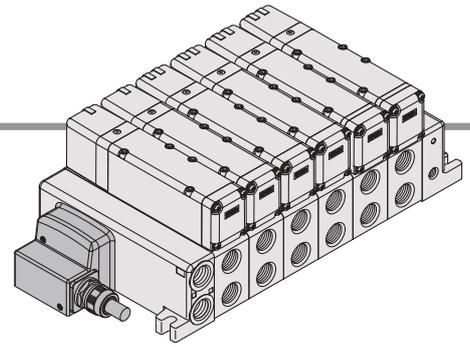


- Direct electrical entry type
- IP67 enclosure is available with use of cables with sheath and waterproof connectors.

Electrical Wiring Specifications

Lead wire specifications

Lead wire
0.3 mm² x 25 cores

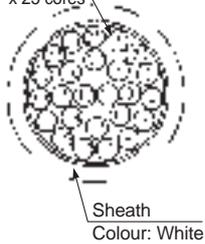

As the standard electrical wiring specification used is for 12 stations or less, double wiring (connected to SOL. A and SOL. B) is used for the internal wiring of each station regardless of valve and option types.

Mixed single and double wiring are available as options.

Refer to special wiring specifications (options) below.

Lead wire length

VV5QC51-08 C12 LD **0**

Lead wire length

0	0.6 m
1	1.5 m
2	3.0 m

Electrical characteristics

Item	Characteristic
Conductor resistance Ω/km, 20 °C	65 or less
Withstand pressure V, 1 minute, AC	1000
Insulation resistance MΩ/km, 20 °C	5 or more

Note) Cannot be used for transfer wiring.
The minimum bending radius for cables is 20 mm.


Station	Terminal no.	Lead wire colour	Dot marking
Station 1	SOL.A 1	Black	None
	SOL.B 14	Yellow	Black
Station 2	SOL.A 2	Brown	None
	SOL.B 15	Pink	Black
Station 3	SOL.A 3	Red	None
	SOL.B 16	Blue	White
Station 4	SOL.A 4	Orange	None
	SOL.B 17	Purple	None
Station 5	SOL.A 5	Yellow	None
	SOL.B 18	Grey	None
Station 6	SOL.A 6	Pink	None
	SOL.B 19	Orange	Black
Station 7	SOL.A 7	Blue	None
	SOL.B 20	Red	White
Station 8	SOL.A 8	Purple	White
	SOL.B 21	Brown	White
Station 9	SOL.A 9	Grey	Black
	SOL.B 22	Pink	Red
Station 10	SOL.A 10	White	Black
	SOL.B 23	Grey	Red
Station 11	SOL.A 11	White	Red
	SOL.B 24	Black	White
Station 12	SOL.A 12	Yellow	Red
	SOL.B 25	White	None
	COM. 13	Orange	Red

Special Wiring Specifications (Option)

Mixed single and double wiring are available as options. The maximum number of manifold stations is determined by the number of solenoids. Count one point for a single solenoid type and two points for a double solenoid type. The total number of solenoids (points) must not exceed 24.

L **VQC5000**
Kit (Lead wire kit) **IP67 compliant**

VV5QC51

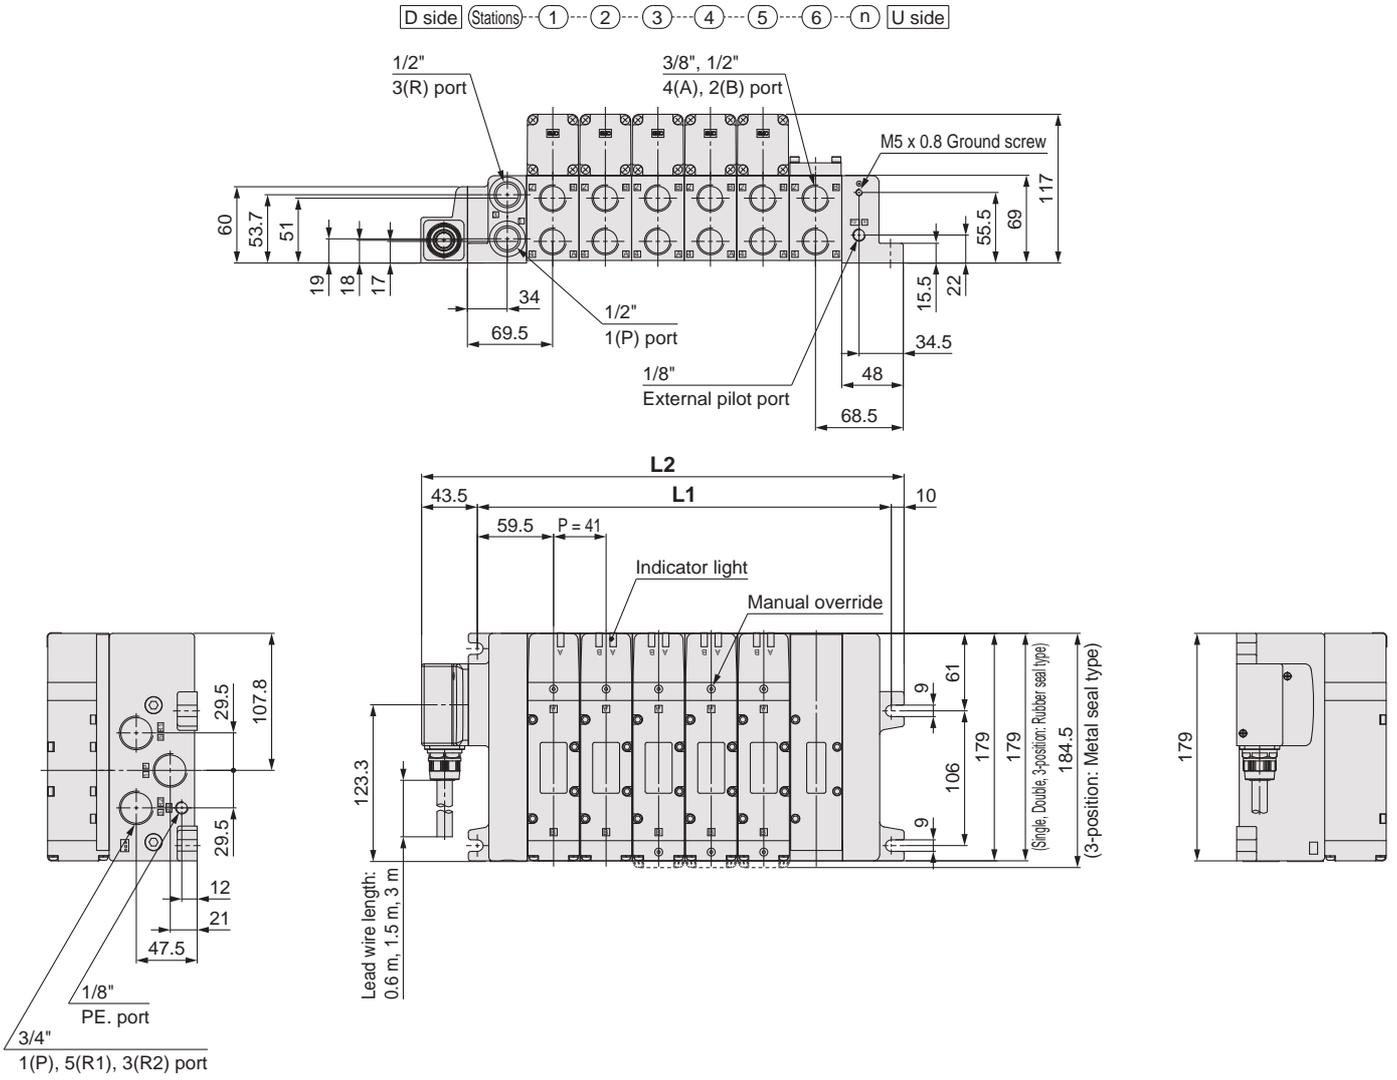

Dimensions [mm]

L \ n	1	2	3	4	5	6	7	8	9	10	11	12
L1	118	159	200	241	282	323	364	405	446	487	528	569
L2	171.5	212.5	253.5	294.5	335.5	376.5	417.5	458.5	499.5	540.5	581.5	622.5

Formula: L1 = 41n + 77, L2 = 41n + 130.5 n: Stations (Maximum 12 stations)


VQC4000
 Single Unit
 Manifold
 Construction
 Exploded View of Manifold
 Specific Product Precautions

VQC5000
 Single Unit
 Manifold
 Construction
 Exploded View of Manifold
 Specific Product Precautions

Series VQC5000


M VQC5000 Kit (Circular connector kit) IP67 compliant

- Use of circular connectors helps streamline wiring procedure to save labour.
- IP67 enclosure is available with use of waterproof multiple connectors.

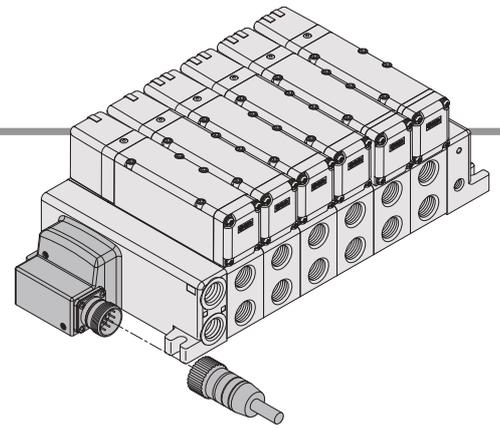


Electrical Wiring Specifications

Multiple connector

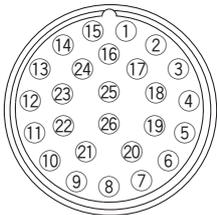

Double wiring (connected to SOL.A and SOL.B) is used for the internal wiring of each station regardless of valve and option types. Mixed single and double wiring are available as options. Refer to special wiring specifications (options) below.

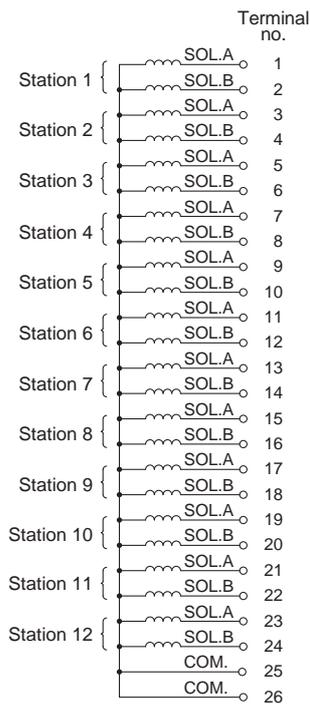



Special Wiring Specifications (Option)

Mixed single and double wiring are available as options. The maximum number of manifold stations is determined by the number of solenoids. Count one point for a single solenoid type and two points for a double solenoid type. The total number of solenoids (points) must not exceed 24.

Cable Assembly

GAXT100-MC26-⁰¹⁵030 (According to DIN47100)
050

(Type 26P circular connector cable assemblies can be ordered with manifolds. Refer to manifolds ordering.)

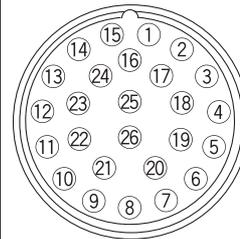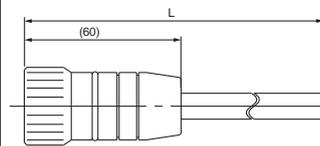

Terminal no.	Lead wire colour	Dot marking
1	White	None
2	Brown	None
3	Green	None
4	Yellow	None
5	Grey	None
6	Pink	None
7	Blue	None
8	Red	None
9	Black	None
10	Violet	None
11	Grey	Pink
12	Red	Blue
13	White	Green
14	Brown	Green
15	White	Yellow
16	Yellow	Brown
17	White	Grey
18	Grey	Brown
19	White	Pink
20	Pink	Brown
21	White	Blue
22	Brown	Blue
23	White	Red
24	Brown	Red
25	White	Black

Electric characteristics

Item	Property
Conductor resistance Ω/km, 20 °C	Max. 57
Voltage limit V, 5 minutes, AC	1500
Insulation resistance MΩ/km, 20 °C	20

* Terminal No. 26 is connected to 25 inside the connector.

Circular connector cable assemblies

Cable length (L)	Assembly part no.
	26P
1.5 m	GAXT100-MC26-015
3 m	GAXT100-MC26-030
5 m	GAXT100-MC26-050


Circular connector cable assembly (option)

AXT100-MC26-⁰¹⁵030 (According to MIL-C24308)
050

* Please contact SMC for details.

M VQC5000
Kit (Circular connector kit) IP67 compliant

VV5QC51

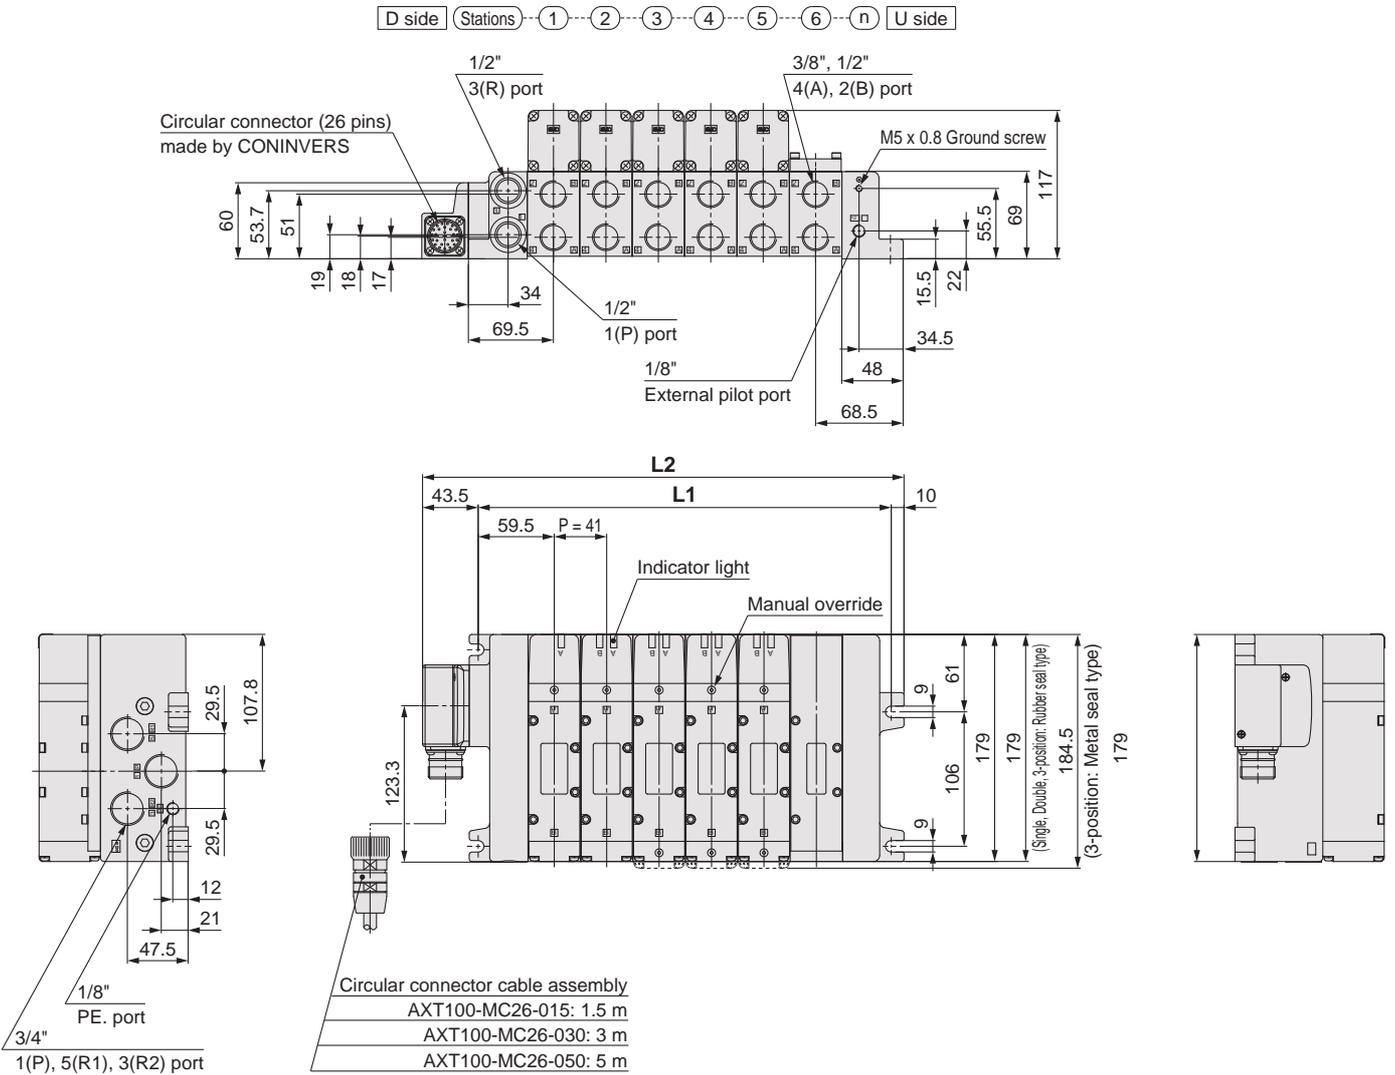

Dimensions

L \ n	1	2	3	4	5	6	7	8	9	10	11	12
L1	118	159	200	241	282	323	364	405	446	487	528	569
L2	171.5	212.5	253.5	294.5	335.5	376.5	417.5	458.5	499.5	540.5	581.5	622.5

Formula: L1 = 41n + 77, L2 = 41n + 130.5 n: Stations (Maximum 12 stations)

VQC4000

Single Unit

Manifold

Construction

Exploded View of Manifold

Specific Product Precautions

VQC5000

Single Unit

Manifold


Construction

Exploded View of Manifold

Specific Product Precautions

Series VQC5000

Exploded View of Manifold

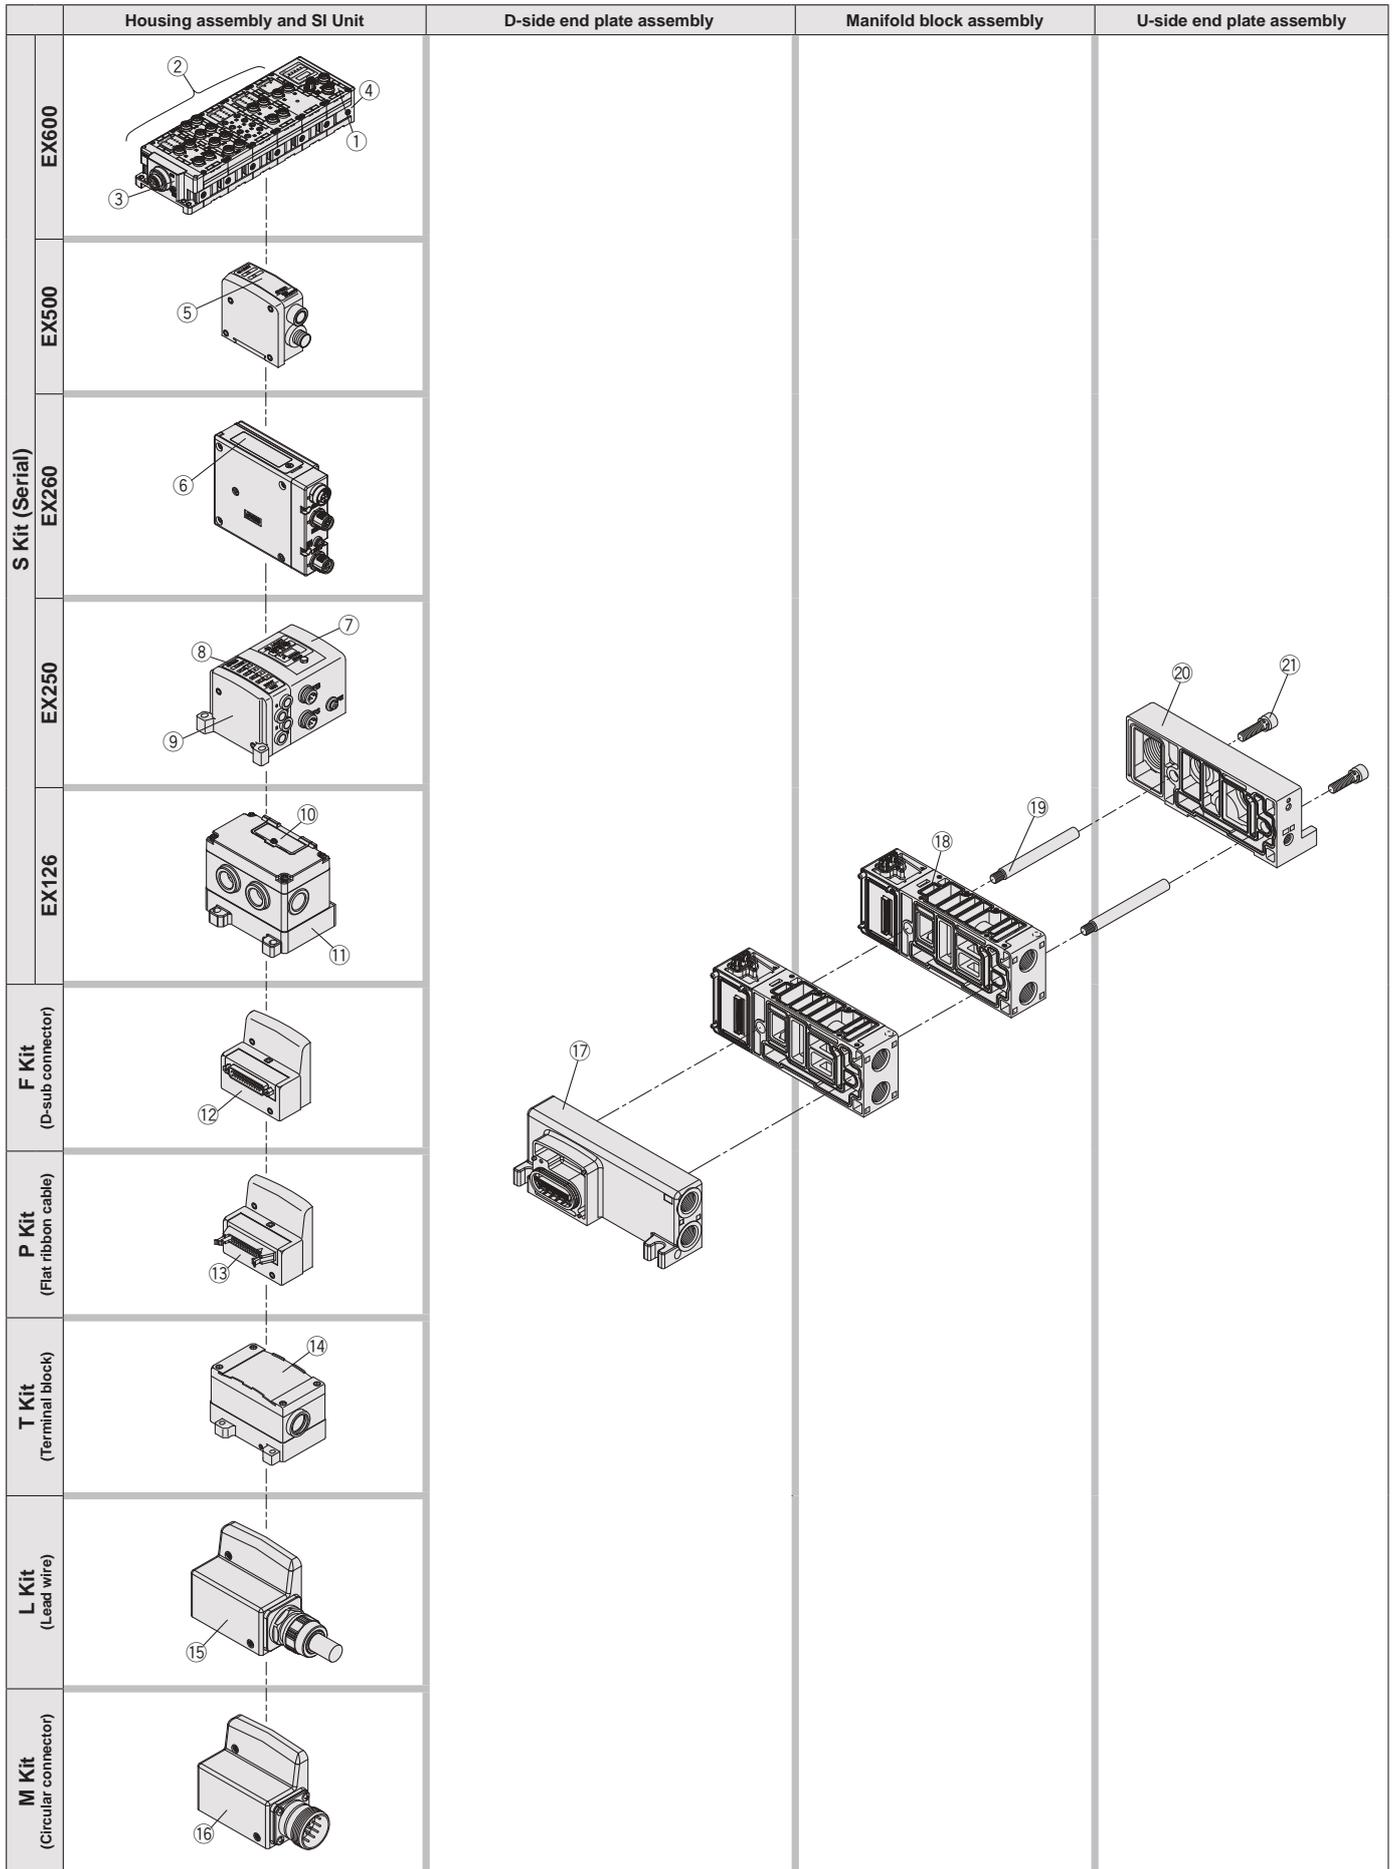

VQC4000

Single Unit

Manifold

Construction

Exploded View of Manifold

Specific Product Precautions

VQC5000

Single Unit

Manifold

Construction

Exploded View of Manifold

Specific Product Precautions

Manifold Assembly Part No.

Housing Assembly and SI Unit/Input Block

No.	Description	Part no.	Note	
1	SI Unit	EX600-SDN1A	DeviceNet™, Negative common (PNP)	
		EX600-SDN2A	DeviceNet™, Positive common (NPN)	
		EX600-SMJ1	CC-Link, Negative common (PNP)	
		EX600-SMJ2	CC-Link, Positive common (NPN)	
		EX600-SPR1A	PROFIBUS DP, Negative common (PNP)	
		EX600-SPR2A	PROFIBUS DP, Positive common (NPN)	
		EX600-SEN1	EtherNet/IP™ (1 port), Negative common (PNP)	
		EX600-SEN2	EtherNet/IP™ (1 port), Positive common (NPN)	
		EX600-SEN3	EtherNet/IP™ (2 port), Negative common (PNP)	
		EX600-SEN4	EtherNet/IP™ (2 port), Positive common (NPN)	
		EX600-SEC1	EtherCAT®, Negative common (PNP)	
		EX600-SEC2	EtherCAT®, Positive common (NPN)	
		EX600-SPN1	PROFINET, Negative common (PNP)	
		EX600-SPN2	PROFINET, Positive common (NPN)	
		EX600-WEN1 <small>Note)</small>	Base module EtherNet/IP™, Negative common (PNP)	
		EX600-WEN2 <small>Note)</small>	Base module EtherNet/IP™, Positive common (NPN))	
		EX600-WPN1 <small>Note)</small>	Base module PROFINET, Negative common (PNP)	
		EX600-WPN2 <small>Note)</small>	Base module PROFINET, Positive common (NPN)	
		EX600-WSV1 <small>Note)</small>	Remote module, Negative common (PNP)	
		EX600-WSV2 <small>Note)</small>	Remote module, Positive common (NPN)	
2	Digital Input Unit	EX600-DXNB	NPN input, M12 connector, 5 pins (4 pcs.), 8 inputs	
		EX600-DXPB	PNP input, M12 connector, 5 pins (4 pcs.), 8 inputs	
		EX600-DXNC	NPN input, M8 connector, 3 pins (8 pcs.), 8 inputs	
		EX600-DXNC1	NPN input, M8 connector, 3 pins (8 pcs.), 8 inputs, with open circuit detection	
		EX600-DXPC	PNP input, M8 connector, 3 pins (8 pcs.), 8 inputs	
		EX600-DXPC1	PNP input, M8 connector, 3 pins (8 pcs.), 8 inputs, with open circuit detection	
		EX600-DXND	NPN input, M12 connector, 5 pins (8 pcs.), 16 inputs	
		EX600-DXPD	PNP input, M12 connector, 5 pins (8 pcs.), 16 inputs	
		EX600-DXNE	NPN input, D-sub connector, 25 pins, 16 inputs	
		EX600-DXPE	PNP input, D-sub connector, 25 pins, 16 inputs	
		EX600-DXNF	NPN input, Spring type terminal box, 32 pins, 16 inputs	
		EX600-DXPF	PNP input, Spring type terminal box, 32 pins, 16 inputs	
	Digital Output Unit	EX600-DYNB	NPN output, M12 connector, 5 pins (4 pcs.), 8 outputs	
		EX600-DYPB	PNP output, M12 connector, 5 pins (4 pcs.), 8 outputs	
		EX600-DYNE	NPN output, D-sub connector, 25 pins, 16 outputs	
		EX600-DYPE	PNP output, D-sub connector, 25 pins, 16 outputs	
		EX600-DYNF	NPN output, Spring type terminal box, 32 pins, 16 outputs	
		EX600-DYPF	PNP output, Spring type terminal box, 32 pins, 16 outputs	
	Digital Input/Output Unit	EX600-DMNE	NPN input/output, D-sub connector, 25 pins, 8 inputs/outputs	
		EX600-DMPE	PNP input/output, D-sub connector, 25 pins, 8 inputs/outputs	
		EX600-DMNF	NPN input/output, Spring type terminal box, 32 pins, 8 inputs/outputs	
		EX600-DMPF	PNP input/output, Spring type terminal box, 32 pins, 8 inputs/outputs	
	Analogue Input Unit	EX600-AXA	M12 connector, 5 pins (2 pcs.), 2-channel input	
	Analogue Output Unit	EX600-AYA	M12 connector, 5 pins (2 pcs.), 2-channel output	
	Analogue Input/Output Unit	EX600-AMB	M12 connector, 5 pins (4 pcs.), 2-channel input/output	
	3	End plate	EX600-ED2	M12 power supply connector, B-coded
			EX600-ED2-2	M12 connector, 5 pins, Max. supply current 2 A, with DIN rail mounting bracket
EX600-ED3			7/8 inch power supply connector	
EX600-ED3-2			7/8 inch connector, 5 pins, Max. supply current 8 A, with DIN rail mounting bracket	
EX600-ED4			M12 power supply connector IN/OUT, A-coded, Pin arrangement 1	
EX600-ED4-2			M12 connector, (4 pins/5 pins) IN/OUT, with DIN rail mounting bracket	
EX600-ED5			M12 power supply connector IN/OUT, A-coded, Pin arrangement 2	
EX600-ED5-2			M12 connector, (4 pins/5 pins) IN/OUT, with DIN rail mounting bracket	
4	Valve plate	EX600-ZMV1	Enclosed parts: Round head screws (M4 x 6) 2 pcs., Round head screws (M3 x 8) 4 pcs.	
5	SI Unit	EX500-S103	EtherNet/IP™, PROFINET, Negative common (PNP)	
		EX500-Q001	DeviceNet™, PROFIBUS DP, EtherNet/IP™, Positive common (NPN)	
		EX500-Q101	DeviceNet™, PROFIBUS DP, EtherNet/IP™, Negative common (PNP)	

Note) The wireless system is suitable for use only in a country where it is in accordance with the Radio Act and regulations of that country.

Manifold Assembly Part No.

Housing Assembly and SI Unit/Input Block

No.	Description	Part no.	Note
6	SI Unit	EX260-SDN1	DeviceNet™, M12 connector, 32 outputs, Negative common (PNP)
		EX260-SDN2	DeviceNet™, M12 connector, 32 outputs, Positive common (NPN)
		EX260-SDN3	DeviceNet™, M12 connector, 16 outputs, Negative common (PNP)
		EX260-SDN4	DeviceNet™, M12 connector, 16 outputs, Positive common (NPN)
		EX260-SRP1	PROFIBUS DP, M12 connector, 32 outputs, Negative common (PNP)
		EX260-SRP2	PROFIBUS DP, M12 connector, 32 outputs, Positive common (NPN)
		EX260-SRP3	PROFIBUS DP, M12 connector, 16 outputs, Negative common (PNP)
		EX260-SRP4	PROFIBUS DP, M12 connector, 16 outputs, Positive common (NPN)
		EX260-SRP5	PROFIBUS DP, D-sub connector, 32 outputs, Negative common (PNP)
		EX260-SRP6	PROFIBUS DP, D-sub connector, 32 outputs, Positive common (NPN)
		EX260-SRP7	PROFIBUS DP, D-sub connector, 16 outputs, Negative common (PNP)
		EX260-SRP8	PROFIBUS DP, D-sub connector, 16 outputs, Positive common (NPN)
		EX260-SMJ1	CC-Link, M12 connector, 32 outputs, Negative common (PNP)
		EX260-SMJ2	CC-Link, M12 connector, 32 outputs, Positive common (NPN)
		EX260-SMJ3	CC-Link, M12 connector, 16 outputs, Negative common (PNP)
		EX260-SMJ4	CC-Link, M12 connector, 16 outputs, Positive common (NPN)
		EX260-SEC1	EtherCAT®, M12 connector, 32 outputs, Negative common (PNP)
		EX260-SEC2	EtherCAT®, M12 connector, 32 outputs, Positive common (NPN)
		EX260-SEC3	EtherCAT®, M12 connector, 16 outputs, Negative common (PNP)
		EX260-SEC4	EtherCAT®, M12 connector, 16 outputs, Positive common (NPN)
		EX260-SPN1	PROFINET, M12 connector, 32 outputs, Negative common (PNP)
		EX260-SPN2	PROFINET, M12 connector, 32 outputs, Positive common (NPN)
		EX260-SPN3	PROFINET, M12 connector, 16 outputs, Negative common (PNP)
		EX260-SPN4	PROFINET, M12 connector, 16 outputs, Positive common (NPN)
		EX260-SEN1	EtherNet/IP™, M12 connector, 32 outputs, Negative common (PNP)
		EX260-SEN2	EtherNet/IP™, M12 connector, 32 outputs, Positive common (NPN)
		EX260-SEN3	EtherNet/IP™, M12 connector, 16 outputs, Negative common (PNP)
		EX260-SEN4	EtherNet/IP™, M12 connector, 16 outputs, Positive common (NPN)
EX260-SPL1	EtherNet POWERLINK, M12 connector, 32 outputs, Negative common (PNP)		
EX260-SPL3	EtherNet POWERLINK, M12 connector, 16 outputs, Negative common (PNP)		
7	SI Unit	EX250-SPR1	PROFIBUS DP, Negative common (PNP)
		EX250-SMJ2	CC-Link, Positive common (NPN)
		EX250-SAS3	AS-Interface, 8 in/8 out, 31 slave modes, 2 power supply systems, Negative common (PNP)
		EX250-SAS5	AS-Interface, 4 in/4 out, 31 slave modes, 2 power supply systems, Negative common (PNP)
		EX250-SAS7	AS-Interface, 8 in/8 out, 31 slave modes, 1 power supply system, Negative common (PNP)
		EX250-SAS9	AS-Interface, 4 in/4 out, 31 slave modes, 1 power supply system, Negative common (PNP)
		EX250-SCA1A	CANopen, Negative common (PNP)
		EX250-SDN1	DeviceNet™, Negative common (PNP)
		EX250-SEN1	EtherNet/IP™, Negative common (PNP)
		8	Input block
EX250-IE2	M12, 4 inputs		
EX250-IE3	M8, 4 inputs		
9	End plate assembly	EX250-EA1	Direct mounting
		EX250-EA2	DIN rail mounting
10	SII Unit	EX126D-SMJ1	CC-Link, Positive common (NPN)
11	Terminal block plate	VVQC1000-74A-2	For EX126 SI Unit mounting
12	D-sub connector housing assembly	VVQC1000-F25-1	F kit, 25 pins
13	Flat ribbon cable housing assembly	VVQC1000-P26-1	P kit, 26 pins
		VVQC1000-P20-1	P kit, 20 pins
14	Terminal block box housing assembly	VVQC1000-T0-1	T kit
15	Lead wire housing assembly	VVQC1000-L25-0-1	L kit with 0.6 m lead wire
		VVQC1000-L25-1-1	L kit with 1.5 m lead wire
		VVQC1000-L25-2-1	L kit with 3.0 m lead wire
16	Circular connector housing assembly	VVQC1000-M26-1	M kit, 26 pins

VQC4000

Single Unit

Manifold

Construction

Exploded View of Manifold

Specific Product Precautions

VQC5000

Single Unit

Manifold

Construction

Exploded View of Manifold

Specific Product Precautions

Series VQC5000

Manifold Assembly Part No.

Housing Assembly and SI Unit/Input Block

Refer to pages 33 and 34 in this catalogue.

D-side end plate assembly

⑰ D-side end plate assembly part no.

VVQC5000-3A-2

• Thread type

—	Rc
F	G
T	NPTF
N	NPT

U-side end plate assembly

⑳ U-side end plate assembly part no.

VVQ5000-2A-1 -L-W

• Thread type

—	Rc
F	G
T	NPTF
N	NPT

Mounting screw – U-side

㉑ Screw part no.

AXT632-60-3	M8 x 30
-------------	---------

Manifold block assembly

⑱ Manifold block assembly part no.

VVQC5000-1 A-D-

• Type

A	For 1 station
---	---------------

Note) Tie-rods (2 pcs.) for additional stations included.

• Wiring specifications

D	Double wiring
S	Single wiring

• Thread type (Thread port only)

—	Rc
F	G
T	NPTF
N	NPT

• Port size

Symbol	Port size
03	3/8"
04	1/2"
B	1/2" bottom ported

Replacement Parts

VQC5000	Pilot valve assembly	<p>V118 □ □ □</p> <p>A B E</p> <p>• Coil type</p> <table border="1"> <tr> <td>—</td> <td>Standard (0.95 W)</td> </tr> <tr> <td>Y</td> <td>Low wattage type (0.4 W)</td> </tr> </table>	—	Standard (0.95 W)	Y	Low wattage type (0.4 W)	<p>□: Coil rated voltage Example) 24 V DC: 5</p> <p>A: Single/With light</p> <p>B: Double, 3-position/With light</p> <p>E: Single, Double, 3-position/Without light</p>
—	Standard (0.95 W)						
Y	Low wattage type (0.4 W)						





⑲ Tie-rod assembly part no. (2 units)

VQC5000	VVQC5000-TR-□
---------	---------------

Note 1) Please order when reducing the number of manifold stations. When increasing the number of stations, additional orders are not required since they are included in the manifold block assembly.

Note 2) Number of stations, 02 to 16

List of Valves, Options, and Mounting Bolts

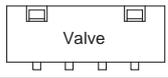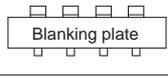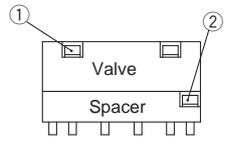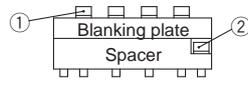Number of options	Valve and options	Bolt part no.	Q'ty (pcs.)	Note	Option mounting diagram
0	Single valve	AXT632-25-4 (M4 x 50)	4		
	Blanking plate (VVQ5000-10A- $\frac{1}{5}$)	AXT632-25-8 (M4 x 17)	4	For manifold	
1	Valve + Individual SUP spacer (VVQ5000-P- $\frac{1}{5}$ - $\frac{03}{04}$)	① AXT632-25-5 (M4 x 82)	4	For manifold	
		② AXT632-25-10 (M4 x 34)	2		
	Valve + Individual EXH spacer (VVQ5000-R- $\frac{1}{5}$ - $\frac{03}{04}$)	① AXT632-25-5 (M4 x 82)	4	For manifold	
		② AXT632-25-10 (M4 x 34)	2		
	Valve + Restrictor spacer (VVQ5000-20A- $\frac{1}{5}$)	① AXT632-25-5 (M4 x 82)	4	Not necessary when mounting the sub-plate.	
		② AXT632-25-10 (M4 x 34)	2		
	Valve + Release valve spacer (VVQ5000-24A- $\frac{1}{5}$ D)	① AXT632-25-5 (M4 x 82)	4	For manifold	
		② AXT632-25-10 (M4 x 34)	2		
	Valve + Double check spacer with residual pressure exhaust (VVQ5000-25A- $\frac{1}{5}$)	① AXT632-25-6 (M4 x 114)	4	Not necessary when mounting the sub-plate.	
		② AXT632-66-1 (M4 x 64)	2		
Valve + SUP stop valve spacer (VVQ5000-37A- $\frac{1}{5}$)	① AXT632-25-5 (M4 x 82)	4	Not necessary when mounting the sub-plate.		
	② AXT632-25-10 (M4 x 34)	2			
Valve + Interface regulator (ARBQ5000-00- $\frac{A}{B}$ - $\frac{1}{5}$)	① AXT632-25-6 (M4 x 114)	4	Not necessary when mounting the sub-plate.		
	② AXT632-66-1 (M4 x 64)	2			
Blanking plate + SUP stop valve (Top) (Bottom)	① AXT632-25-4 (M4 x 50)	4	For manifold		
	② AXT632-25-10 (M4 x 34)	2			
2	Valve + Individual SUP + Individual EXH (Top) (Bottom) (Bottom) (Top)	① AXT632-25-6 (M4 x 114)	4		For manifold
		② AXT632-25-11 (M4 x 66)	2		
	Valve + Restrictor + Individual SUP or Individual EXH (Top) (Bottom) (Top) (Bottom)	① AXT632-25-6 (M4 x 114)	4		For manifold * The individual EXH cannot be mounted on the top.
		② AXT632-25-11 (M4 x 66)	2		
	Valve + SUP stop valve + Individual SUP, Individual EXH or Restrictor (Top) (Bottom)	① AXT632-25-6 (M4 x 114)	4		For manifold
		② AXT632-25-11 (M4 x 66)	2		
	Valve + Double check spacer with + Individual SUP or residual pressure exhaust (Top) (Bottom)	① AXT632-25-7 (M4 x 146)	4		For manifold
② AXT632-66-2 (M4 x 96)		2			
Valve + Interface regulator + Double check spacer with residual pressure exhaust (Top) (Bottom)	① AXT632-25-14 (M4 x 178)	4	For manifold		
	② AXT632-66-3 (M4 x 128)	2			
Valve + Interface regulator + Individual SUP, Individual EXH or Restrictor (Top) (Bottom)	① AXT632-25-7 (M4 x 146)	4	For manifold * The individual EXH and restrictor cannot be mounted on the top.		
	② AXT632-66-2 (M4 x 96)	2			
Blanking plate + SUP stop valve + Individual SUP (Top) (Bottom)	① AXT632-25-5 (M4 x 82)	4	For manifold		
	② AXT632-25-11 (M4 x 66)	2			
3	Valve + SUP stop valve (Top) + Individual SUP (Middle, Bottom) + Individual EXH (Middle, Bottom)	① AXT632-25-7 (M4 x 146)	4	For manifold	
		② AXT632-25-12 (M4 x 98)	2		
	Valve + Double check spacer with residual pressure exhaust (Top) + Individual SUP (Middle, Bottom) + Individual EXH (Middle, Bottom)	① AXT632-25-14 (M4 x 178)	4	For manifold	
		② AXT632-66-3 (M4 x 128)	2		
	Valve + Spacer (Top): Interface regulator Spacer (Middle): "Individual SUP or Individual EXH"/"Restrictor" Spacer (Bottom): "Restrictor"/"Individual SUP or Individual EXH"	① AXT632-25-14 (M4 x 178)	4	For manifold * The individual EXH and restrictor cannot be mounted on the top.	
② AXT632-66-3 (M4 x 128)		2			

Note) When the SUP stop valve and individual SUP are mounted, the stop valve is mounted on the top of the individual SUP.



Series VQC5000 Specific Product Precautions 1

Be sure to read this before handling. Refer to the back cover for Safety Instructions. For 3/4/5 Port Solenoid Valve Precautions, refer to “Handling Precautions for SMC Products” and the Operation Manual on the SMC website, <http://www.smc.eu>

Continuous Duty

Warning

When the product is continuously energised for a long period of time (10 minutes or longer), select the low wattage type (DC specification). The AC type cannot be continuously energised for 10 minutes or longer. If anything is unclear, please contact SMC.


Manual Override

Warning

Since connected equipment will operate when the manual override is activated, confirm that conditions are safe prior to activation.


■ VQC5000

Push type (Tool required)

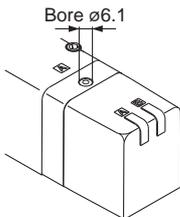


Push down the manual override button with a small screwdriver, etc., until it stops. The manual override will return when released.


Locking type (Tool required)

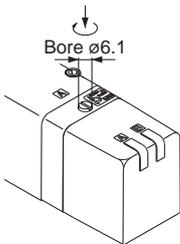


Push down the manual override button with a small flat head screwdriver until it stops, and turn it clockwise 90° to lock it. Turn it counterclockwise to release it.

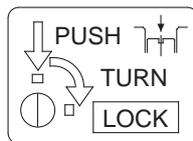

Locking type (Manual)

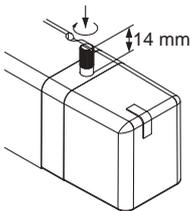

Push down the manual override button with a small flat head screwdriver or with your finger until it stops, and turn it clockwise 90° to lock it. Turn it counterclockwise to release it.

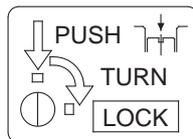

Caution

Do not apply excessive torque when turning the locking type manual override. (0.1 N·m or less)


Valve Mounting

Caution

After confirming that the gasket is installed correctly, securely tighten the mounting screws according to the tightening torque shown below.

Proper tightening torque [N·m]

1 to 1.8

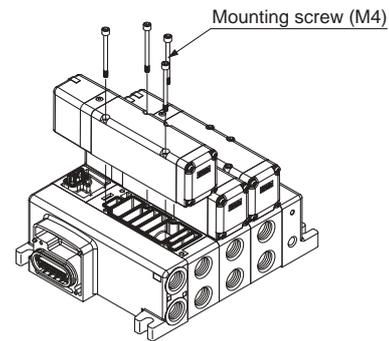


Lead Wire Connection

Caution

Plug-in sub-plate (With terminal block)

- If the junction cover ① of the sub-plate is removed, you can see the plug-in type terminal block ② mounted inside the sub-plate.

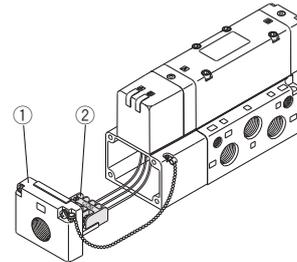

- The terminal block is marked as follows. Connect wiring to each of the power supply terminals.

Terminal block marking	A	COM	B	⎓
Model VQC510 ₁ ⁰	A side	COM	—	—
VQC520 ₁ ⁰	A side	COM	B side	—
VQC5 _{3 4 5} ₆ ^{0 1}	A side	COM	B side	—

Note 1) There is no polarity. It can also be used as -COM.

Note 2) The sub-plate is double wired even for the VQC510₁⁰.

- Applicable terminal: 1.25-3s, 1.25Y-3, 1.25Y-3N, 1.25Y-3.5

Safety Instructions

These safety instructions are intended to prevent hazardous situations and/or equipment damage. These instructions indicate the level of potential hazard with the labels of “Caution,” “Warning” or “Danger.” They are all important notes for safety and must be followed in addition to International Standards (ISO/IEC)*1), and other safety regulations.

-  **Caution:** Caution indicates a hazard with a low level of risk which, if not avoided, could result in minor or moderate injury.
-  **Warning:** Warning indicates a hazard with a medium level of risk which, if not avoided, could result in death or serious injury.
-  **Danger:** Danger indicates a hazard with a high level of risk which, if not avoided, will result in death or serious injury.

- *1) ISO 4414: Pneumatic fluid power – General rules relating to systems.
- ISO 4413: Hydraulic fluid power – General rules relating to systems.
- IEC 60204-1: Safety of machinery – Electrical equipment of machines. (Part 1: General requirements)
- ISO 10218-1: Manipulating industrial robots - Safety. etc.

Warning

1. The compatibility of the product is the responsibility of the person who designs the equipment or decides its specifications.

Since the product specified here is used under various operating conditions, its compatibility with specific equipment must be decided by the person who designs the equipment or decides its specifications based on necessary analysis and test results. The expected performance and safety assurance of the equipment will be the responsibility of the person who has determined its compatibility with the product. This person should also continuously review all specifications of the product referring to its latest catalogue information, with a view to giving due consideration to any possibility of equipment failure when configuring the equipment.

2. Only personnel with appropriate training should operate machinery and equipment.

The product specified here may become unsafe if handled incorrectly. The assembly, operation and maintenance of machines or equipment including our products must be performed by an operator who is appropriately trained and experienced.

3. Do not service or attempt to remove product and machinery/equipment until safety is confirmed.

1. The inspection and maintenance of machinery/equipment should only be performed after measures to prevent falling or runaway of the driven objects have been confirmed.
2. When the product is to be removed, confirm that the safety measures as mentioned above are implemented and the power from any appropriate source is cut, and read and understand the specific product precautions of all relevant products carefully.
3. Before machinery/equipment is restarted, take measures to prevent unexpected operation and malfunction.

4. Contact SMC beforehand and take special consideration of safety measures if the product is to be used in any of the following conditions.

1. Conditions and environments outside of the given specifications, or use outdoors or in a place exposed to direct sunlight.
2. Installation on equipment in conjunction with atomic energy, railways, air navigation, space, shipping, vehicles, military, medical treatment, combustion and recreation, or equipment in contact with food and beverages, emergency stop circuits, clutch and brake circuits in press applications, safety equipment or other applications unsuitable for the standard specifications described in the product catalogue.
3. An application which could have negative effects on people, property, or animals requiring special safety analysis.
4. Use in an interlock circuit, which requires the provision of double interlock for possible failure by using a mechanical protective function, and periodical checks to confirm proper operation.

Limited warranty and Disclaimer/ Compliance Requirements

The product used is subject to the following “Limited warranty and Disclaimer” and “Compliance Requirements”.

Read and accept them before using the product.

Limited warranty and Disclaimer

1. The warranty period of the product is 1 year in service or 1.5 years after the product is delivered, whichever is first.*2) Also, the product may have specified durability, running distance or replacement parts. Please consult your nearest sales branch.
2. For any failure or damage reported within the warranty period which is clearly our responsibility, a replacement product or necessary parts will be provided. This limited warranty applies only to our product independently, and not to any other damage incurred due to the failure of the product.
3. Prior to using SMC products, please read and understand the warranty terms and disclaimers noted in the specified catalogue for the particular products.

*2) Vacuum pads are excluded from this 1 year warranty.

A vacuum pad is a consumable part, so it is warranted for a year after it is delivered. Also, even within the warranty period, the wear of a product due to the use of the vacuum pad or failure due to the deterioration of rubber material are not covered by the limited warranty.

Compliance Requirements

1. The use of SMC products with production equipment for the manufacture of weapons of mass destruction (WMD) or any other weapon is strictly prohibited.
2. The exports of SMC products or technology from one country to another are governed by the relevant security laws and regulations of the countries involved in the transaction. Prior to the shipment of a SMC product to another country, assure that all local rules governing that export are known and followed.

Caution

1. The product is provided for use in manufacturing industries.

The product herein described is basically provided for peaceful use in manufacturing industries.

If considering using the product in other industries, consult SMC beforehand and exchange specifications or a contract if necessary.

If anything is unclear, contact your nearest sales branch.

Caution

SMC products are not intended for use as instruments for legal metrology.

Measurement instruments that SMC manufactures or sells have not been qualified by type approval tests relevant to the metrology (measurement) laws of each country. Therefore, SMC products cannot be used for business or certification ordained by the metrology (measurement) laws of each country.

Safety Instructions

Be sure to read “Handling Precautions for SMC Products” (M-E03-3) before using.

SMC Corporation (Europe)

Austria	☎+43 (0)2262622800	www.smc.at	office@smc.at	Lithuania	☎+370 5 2308118	www.smclt.lt	info@smclt.lt
Belgium	☎+32 (0)33551464	www.smc.be	info@smc.be	Netherlands	☎+31 (0)205318888	www.smc.nl	post@smc.nl
Bulgaria	☎+359 (0)2807670	www.smc.bg	office@smc.bg	Norway	☎+47 67129020	www.smc-norge.no	post@smc-norge.no
Croatia	☎+385 (0)13707288	www.smc.hr	office@smc.hr	Poland	☎+48 222119600	www.smc.pl	office@smc.pl
Czech Republic	☎+420 541424611	www.smc.cz	office@smc.cz	Portugal	☎+351 214724500	www.smc.eu	apoioclientept@smc.smces.es
Denmark	☎+45 70252900	www.smc.dk.com	smc@smcdk.com	Romania	☎+40 213205111	www.smcromania.ro	smcromania@smcromania.ro
Estonia	☎+372 6510370	www.smc-pneumatics.ee	smc@smcpneumatics.ee	Russia	☎+7 8127185445	www.smc-pneumatik.ru	info@smc-pneumatik.ru
Finland	☎+358 207513513	www.smc.fi	smc@smc.fi	Slovakia	☎+421 (0)413213212	www.smc.sk	office@smc.sk
France	☎+33 (0)164761000	www.smc-france.fr	info@smc-france.fr	Slovenia	☎+386 (0)73885412	www.smc.si	office@smc.si
Germany	☎+49 (0)61034020	www.smc.de	info@smc.de	Spain	☎+34 945184100	www.smc.eu	post@smc.smces.es
Greece	☎+30 210 2717265	www.smchellas.gr	sales@smchellas.gr	Sweden	☎+46 (0)86031200	www.smc.nu	post@smc.nu
Hungary	☎+36 23513000	www.smc.hu	office@smc.hu	Switzerland	☎+41 (0)523963131	www.smc.ch	info@smc.ch
Ireland	☎+353 (0)14039000	www.smc-pneumatics.ie	sales@smcpneumatics.ie	Turkey	☎+90 212 489 0 440	www.smc-pneumatik.com.tr	info@smcpneumatik.com.tr
Italy	☎+39 0292711	www.smccitalia.it	mailbox@smccitalia.it	UK	☎+44 (0)845 121 5122	www.smc.uk	sales@smc.uk
Latvia	☎+371 67817700	www.smc.lv	info@smc.lv				

SMC CORPORATION Akihbara UDX 15F, 4-14-1, Sotokanda, Chiyoda-ku, Tokyo 101-0021, JAPAN Phone: 03-5207-8249 FAX: 03-5298-5362